

CTH200

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar


GPL®

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
SCHEMATIC

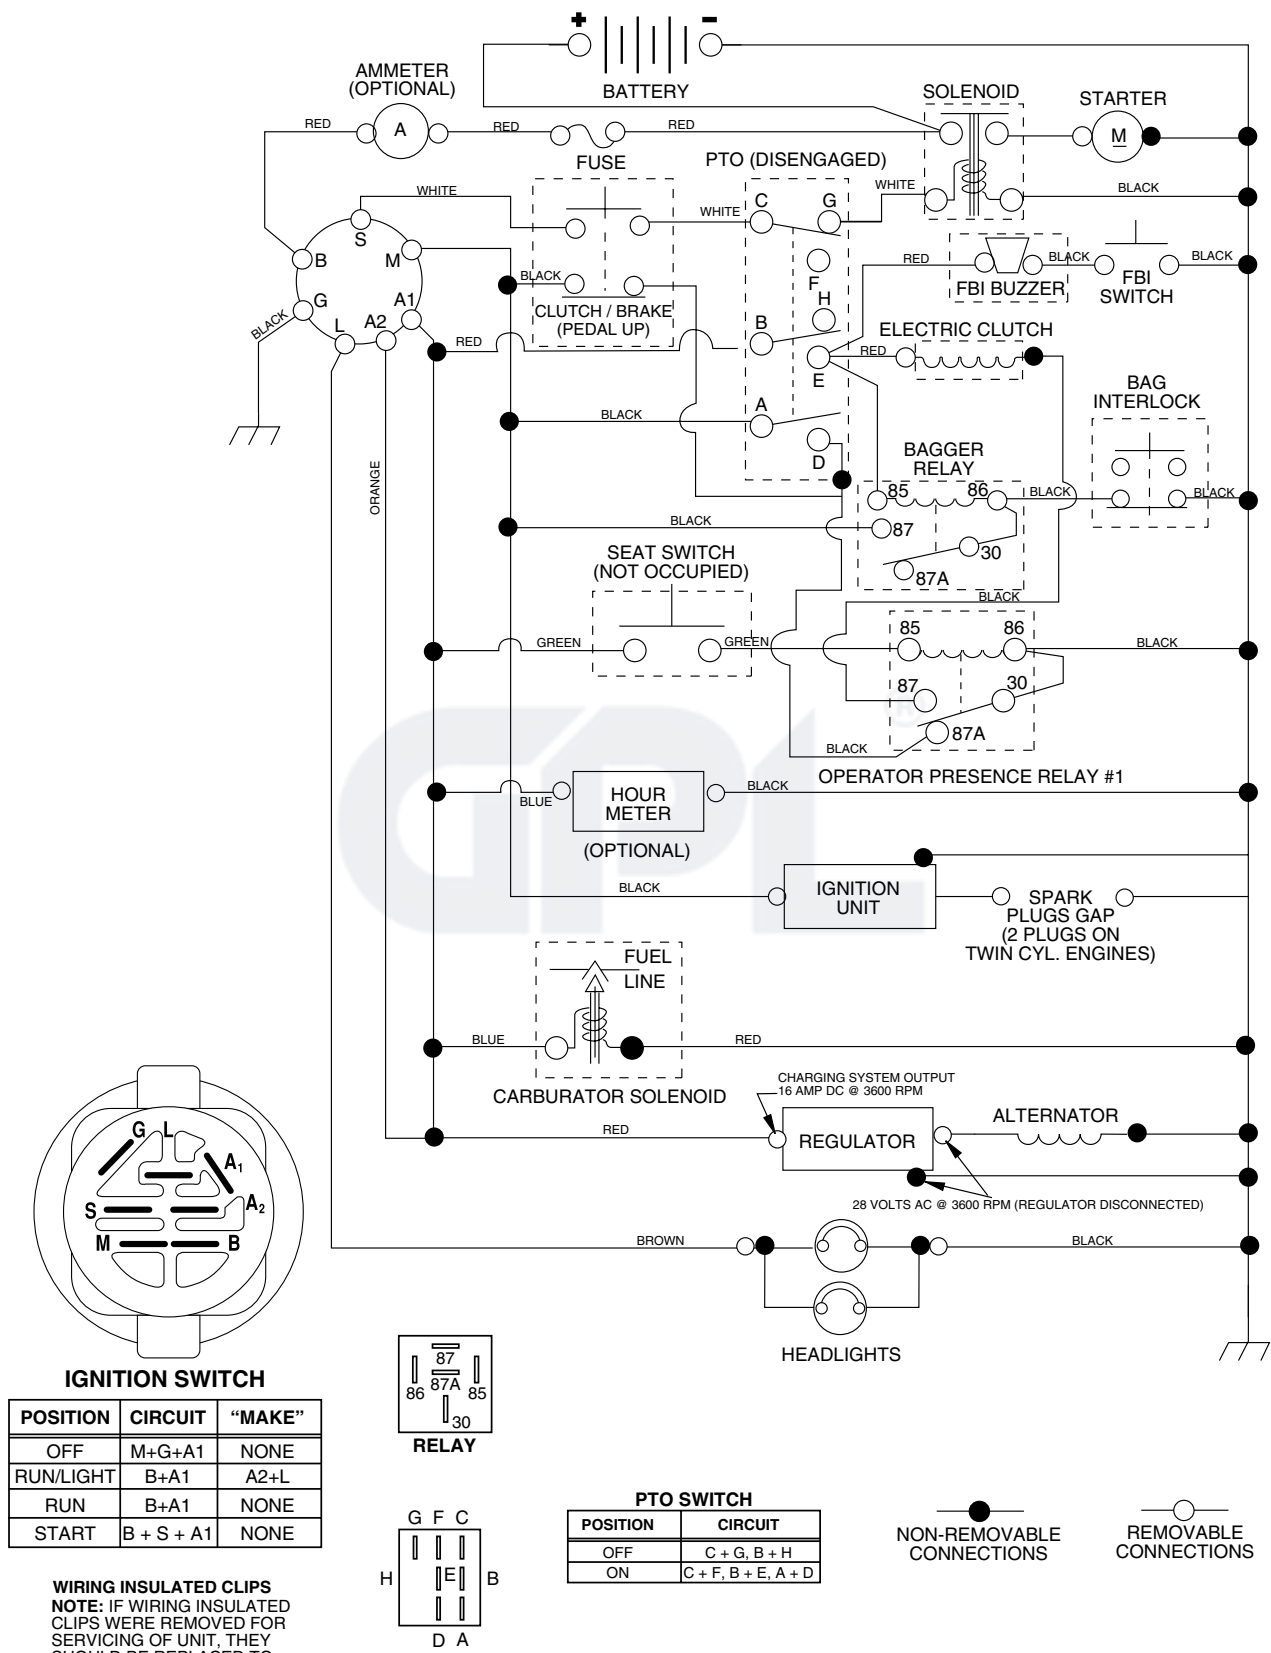

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
ELECTRICAL

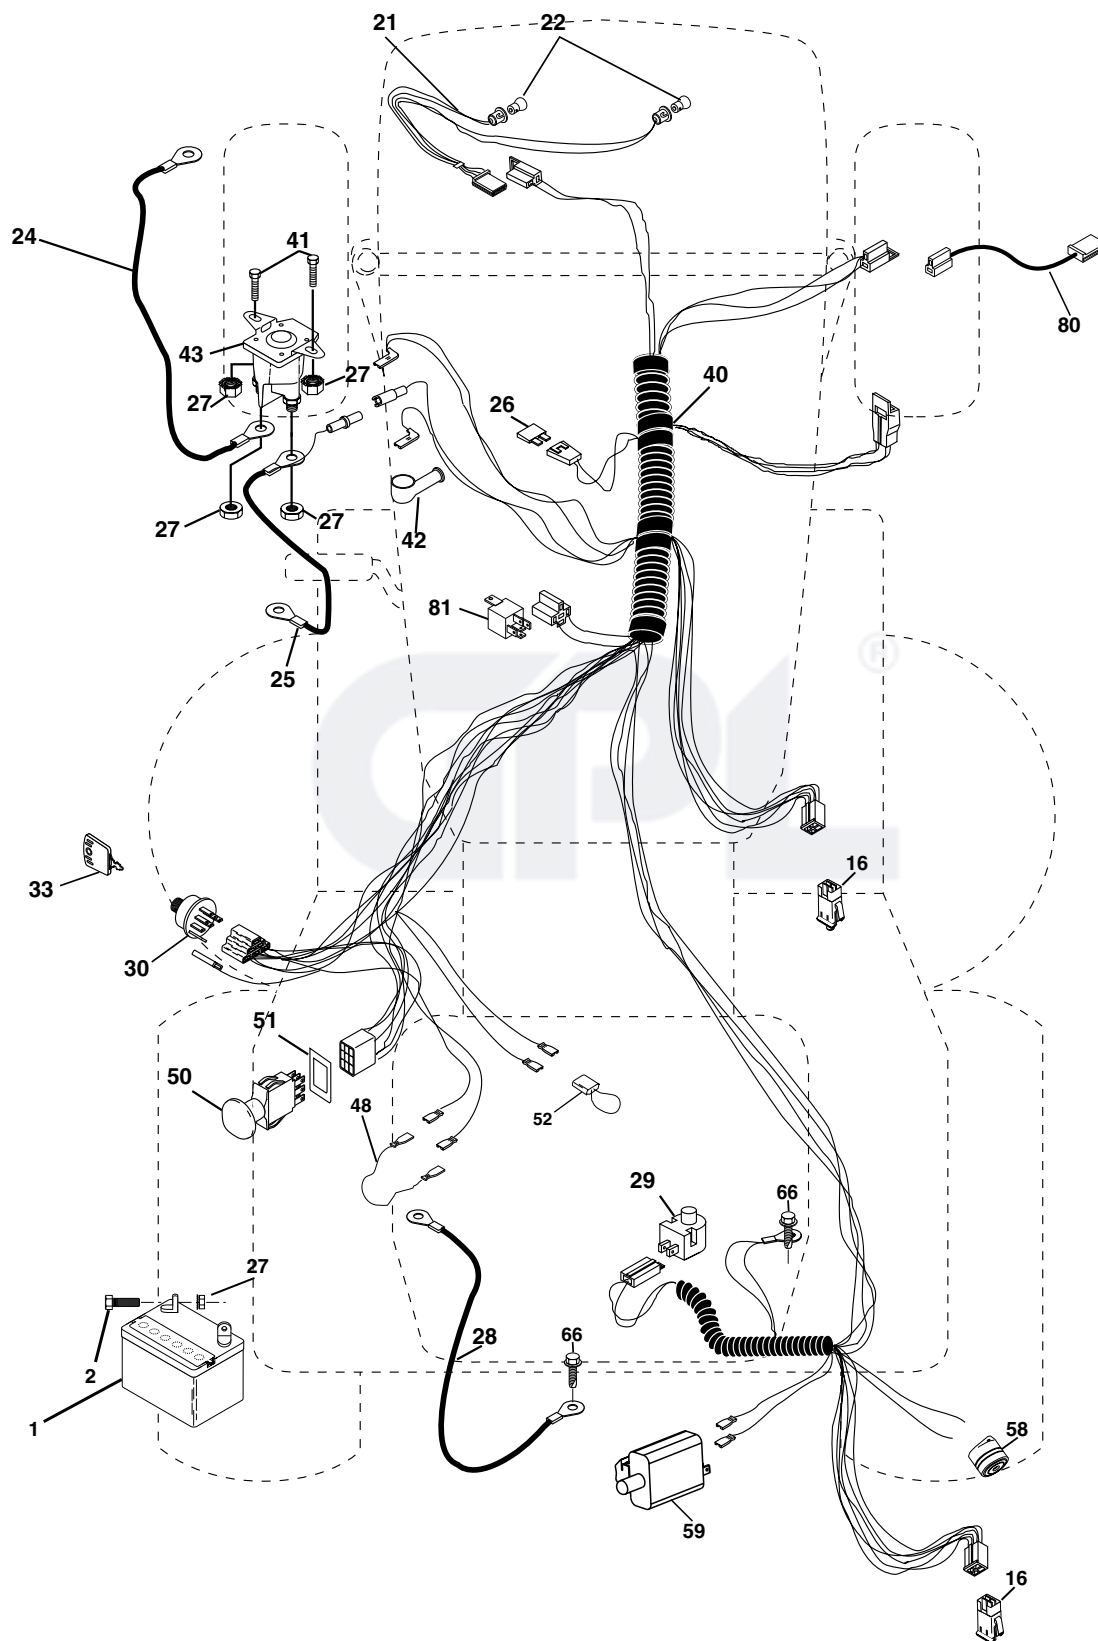

REPAIR PARTS


TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532 14 49-27	Battery
2	874 76 04-12	Bolt Hex Hd 1/4-20 Unc X 3/4
16	532 17 61-38	Switch Interlock
21	532 16 61-81	Harness Asm Light W/4152J
22	532 00 41-52	Bulb Light #1156
24	532 12 47-80	Cable Starter 6Ga 11" Red
25	532 16 59-87	Cable Battery Crd 56" Red
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 Unc
28	532 12 77-25	Cable Ground 6Ga 18" Black
29	532 16 07-84	Switch Plunger Normal Op Olive
30	532 17 55-66	Switch Ignition
33	532 14 04-01	Key Ign
40	532 17 97-27	Harness Ign
41	871 11 04-08	Bolt Flk Fin Hex 1/4-20 Unc X 1/2
42	532 13 15-63	Cover Terminal Red
43	532 17 88-61	Solenoid
48	532 14 08-44	Adapter Ammeter Rectangular
50	532 17 46-51	Switch PTO
51	532 14 04-05	Ring Retainer PTO
52	532 14 19-40	Protection Wire Loop
58	532 16 94-19	Buzzer Crd
59	532 18 03-79	Switch FBI CRD
66	817 49 06-08	Screw Thdrol 3/8-16 x 1/2 Ty-Tt
80	532 14 66-85	Harness Clutch EVX
81	532 10 97-48	Relay Asm

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
CHASSIS AND ENCLOSURES

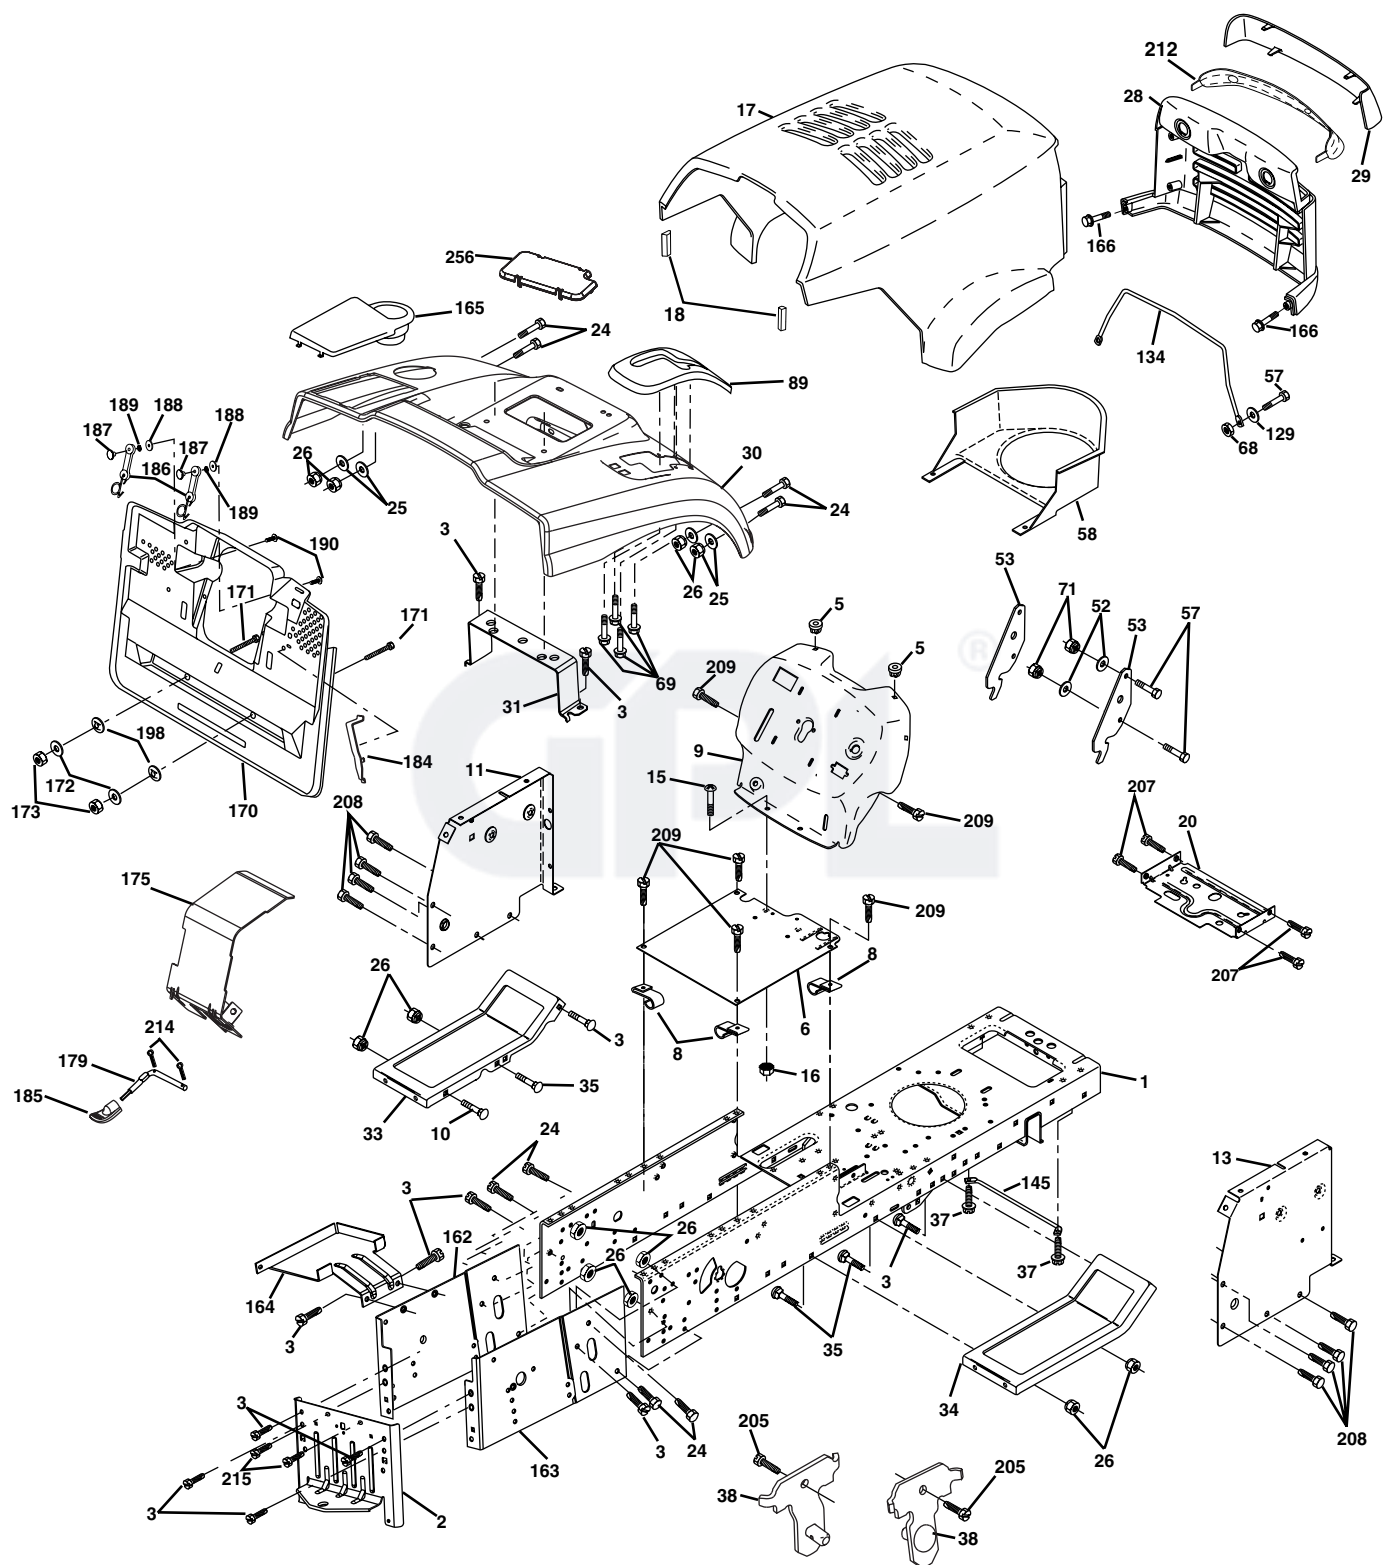

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532 17 46-20	Chassis
2	532 18 03-84	Drawbar
3	817 06 06-12	Screw 3/8-16 x 3/4
5	532 15 52-72	Bumper Hood/Dash
6	532 15 59-23	Saddle
8	532 12 64-71	Clip Insulator 13/32 Mtg. Hole
9	532 17 11-91	Dash
10	872 14 06-08	Bolt, Carriage 3/8-16 x 3/4
11	532 15 59-27	Panel, Dash, L.H.
13	532 17 21-08	Panel, Asm. Dash R.H.
15	874 18 05-12	Screw, Machine, Truss Head 5/16-18 UNC x 3/4
16	873 51 05-00	Nut
17	532 16 53-78	Hood
18	532 12 69-38	Bumper Hood
20	532 18 06-79	Plate Mtg Battery/Tank Fuel Fr.
24	874 78 06-16	Bolt
25	819 13 13-12	Washer 13/32 x 13/16 x 12 Gauge
26	873 80 06-00	Nut
28	532 16 53-79	Grille /Lens Asm
29	532 16 53-80	Lens, Grille
30	532 17 96-45	Fender
31	532 16 51-56	Bracket, Fender Support
33	532 18 10-57	Footrest, L.H.
34	532 18 10-58	Footrest, R.H.
35	872 11 06-06	Bolt
37	817 49 05-08	Screw Thdrol 5/16-18 x 1/2 TYT
38	532 17 57-10	Bracket Asm Pivot Mower Rear
52	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
53	532 15 00-67	Bracket Pick Off
57	874 78 04-12	Bolt Fin Hex 1/4-20 Unc x .75
58	532 17 49-30	Duct Air Engine
68	873 51 04-00	Nut Keps Hex 1/4-20 Unc
69	532 14 24-32	Screw Hex Wsh
71	873 68 04-00	Nut Crownlock 1/4-20 Unc

KEY NO.	PART NO.	DESCRIPTION
89	532 18 10-99	Console
129	819 09 10-16	Washer 9/32 x 5/8 x 16 Ga.
134	532 16 02-19	Rod Support Hood
145	532 15 65-24	Rod Pivot Chassis/Hood
162	532 18 03-82	Bracket Exten Chassis Lh CRD
163	532 18 03-83	Bracket Exten Chassis Rh CRD
164	532 16 56-05	Support Battery CRD
165	532 18 11-00	Cover Battery
166	532 16 48-63	Screw HwHd Hi-Lo #13-16 x 3/4
170	532 17 88-62	Backplate
171	872 14 06-20	Bolt Rdhd Sqnk 3/8-16 x 2-1/2 Gr. 5
172	819 13 20-16	Washer 13/32 x 1-1/4 x 16 Ga.
173	873 51 06-00	Nut, Keps Hex 3/8-16 UNC
175	532 18 03-10	Guard Trap
179	532 18 03-76	Rod Pivot FBI CRD
184	532 17 46-62	Bracket Actuator Bagger CRD
185	532 18 11-01	Knob Rod Brake Parking
186	532 16 07-93	Latch Asm Mulch/Bagger
187	532 12 50-04	Nut Weld
188	819 06 12-16	Washer #10
189	810 07 10-00	Washer Lock #10
190	871 08 10-10	Screw Pan Hd Phillip 10-24 x 5/8
198	532 16 89-37	Nut, Push
205	817 49 06-08	Screw Thdrol 3/8-16 x 1/2
207	817 67 05-08	Screw Thdrol 5/16-18 x 1/2
208	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
209	817 00 06-12	Screw Hex Wsh Thdrol 3/8-16
212	532 15 61-95	Insert Lens Reflective
214	532 12 47-88	Retainer Spring
215	817 06 05-08	Screw 5/16-18 x 1/2
256	532 18 08-10	Cover Fender Rack CRD
--	532 00 54-79	Plug, Button

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
DRIVE

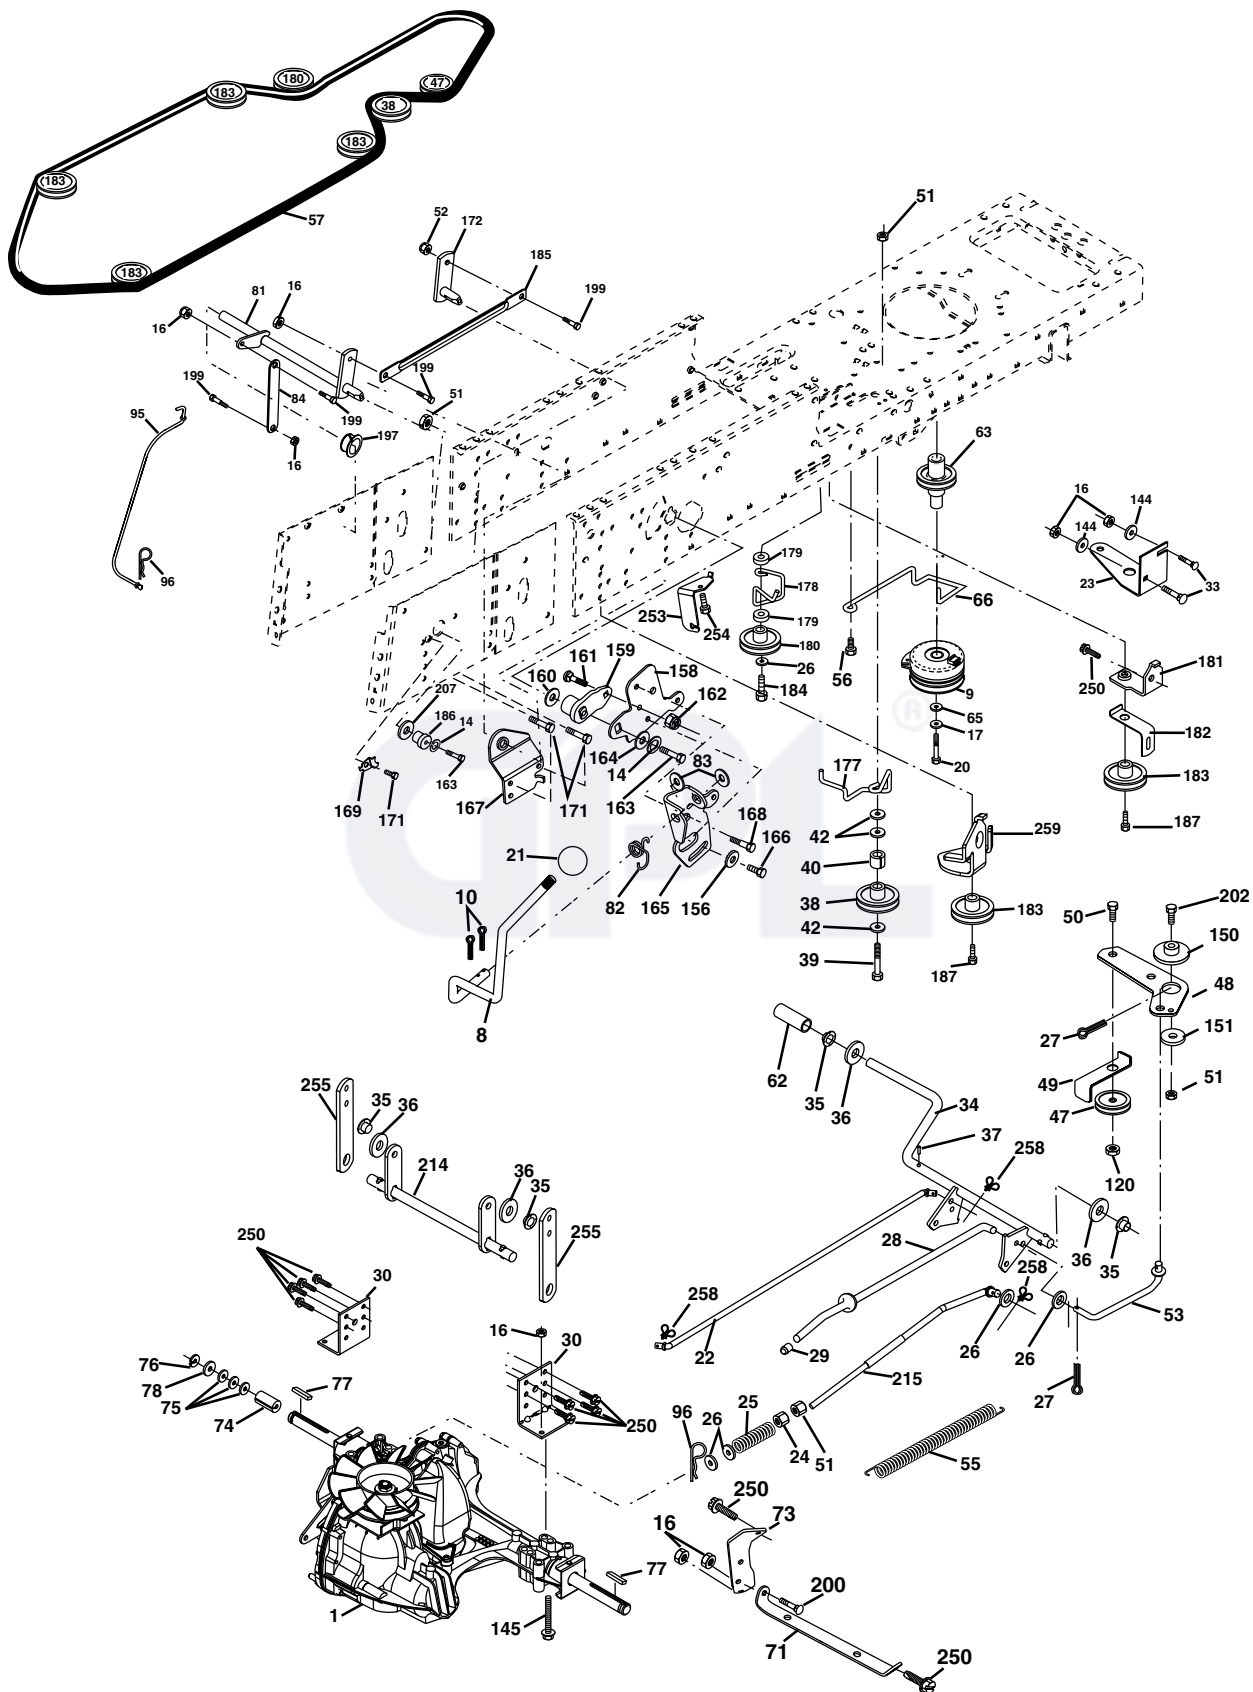

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle Hydro Gear 321-0510 (Order parts from transaxle manufacturer)
8	532 1656-19	Rod, Shift Fender Adjust Lt
9	532 1755-40	Clutch Ele GT200
10	8760204-16	Pin, Cotter 1/8 x 1
14	8100404-00	Washer, Lock Hvy Helical
16	8738005-00	Nut, Lock Hex w/lns 5/16-18 UNC
17	532 1261-97	Washer 1-1/2 x 15/32 x .250
20	871 1707-80	Bolt, Hex 7/16-20 x 5
21	532 1212-74	Knob Duckhead 1/4-13 Unc Blk
22	532 1756-07	Rod, Brake
23	532 1701-71	Bracket asm Anti-Rot
24	8733506-00	Nut
25	532 1068-88	Spring, Rod, Brake
26	8191313-16	Washer 13/32 x 7/8 x 16 Ga.
27	8760204-12	Pin, Cotter 1/8 x 3/4
28	532 1757-65	Rod, Parking Brake
29	532 0716-73	Cap, Parking Brake
30	532 1695-92	Bracket, Mfg. Transaxle
33	872 1405-06	Bolt Rdhd Sqnk 5/16-18 Unc x 3/4
34	532 1755-78	Shaft, Asm Pedal Foot CRD
35	532 1201-83	Bearing, Nylon
36	8192116-16	Washer 21/32 x 1 x 16 Ga.
37	532 1249-63	Pin, Roll 3/16 x 1"
38	532 1659-36	Pulley Flat Composite 3.06"
39	8747606-44	Bolt Fin Hex 3/8-16 Unc x 2-3/4
40	532 1249-65	Spacer, Split 395 x 59 Bzp
42	8191313-12	Washer 13/32 x 13/16 x 12 Ga.
47	532 1277-83	Pulley, Idler, V Groove Plasic
48	532 1544-07	Bellcrank Clutch Grnd Drv
49	532 1232-05	Retainer, Belt Style Spring
50	8747606-24	Bolt Hex Hd 3/8-16 UNC x 1-1/2
51	8736806-00	Nut, Crownlock 3/8-16 UNC
52	8736805-00	Nut Crownlock 5/16-18
53	532 1057-10	Link, Clutch 7.66
55	532 1057-09	Spring, Return, Clutch
56	8170606-20	Screw 3/8-16 x 1-1/4
57	532 1701-40	V-Belt Kev 112" 0650 CRD
62	532 1235-33	Cover, Pedal
63	532 1458-68	Pulley, Clutch elect EVX 1"
65	8100407-00	Washer
66	532 1547-78	Keeper, Belt Engine F-Proof
71	532 1691-83	Strap, Torque, Lh
73	532 1691-82	Strap, Torque, Rh
74	532 1370-57	Spacer, Split
75	532 1217-49	Washer 25/32 x 1-1/4 x 16 Ga.
76	8120000-01	Ring, E
77	532 1235-83	Key, Square
78	532 1217-48	Washer 25/32 x 1-5/8 x 16 Ga.
81	532 1700-06	Asm, Shaft
82	532 1657-11	Spring, Torsion

KEY NO.	PART NO.	DESCRIPTION
83	8191712-16	Washer 17/32 x 3/4 x 16 Ga.
84	532 1700-07	Link, Transaxle
95	532 1700-15	Control Asm Bypass Hydro
96	532 1247-88	Spring, Retainer 1"
120	8739006-00	Nut Lock Flg. 3/8-16 Unc
144	8191110-16	Washer 11/32 x 5/8 x 16 Ga.
145	8744905-44	Bolt Hex FGHD 5/16-18 x Gr 5
150	532 1658-50	Bushing, Bellcrank Grnd Dr
151	8191332-10	Washer 13/32 x 2 x 10 Ga.
156	532 1660-02	Washer Srrted 5/16ID x 1.125
158	532 1655-89	Bracket Shift Mount
159	532 1654-94	Hub Tapered Flange Shift Lt
160	8192920-16	Washer 29/32 x 1-1/4 x 16 Ga.
161	8721404-06	Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5
162	8736804-00	Nut Crownlock 1/4-20 Unc
163	8747804-16	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
164	8190910-10	Washer 5/8 x .281 x 10 Ga.
165	532 1656-23	Bracket Pivot Lever
166	532 1668-80	Screw 5/16-18 x 5/8
167	532 1655-88	Bracket Support Shift CRD
168	532 1654-92	Bolt Shoulder 5/16-18 x .561
169	532 1655-80	Plate Fastening Lt
171	8174906-08	Screw Thdrol 3/8-16 x 1/2 Ty-Tt
172	532 1702-71	Shaft Asm Shifter Frt CRD
177	532 1659-32	Keeper Flat Idler 3.06" CRD
178	532 1659-33	Keeper Belt Idler 1.88" CRD
179	532 1209-58	Washer Sintered
180	532 1656-30	Pulley, Idler, Flat 1.88"CRD
181	532 1802-11	Bracket Idler Ground Drive CRD
182	532 1656-34	Keeper Belt 2.5" Od V-Idler CRD
183	532 1790-50	Pulley V-Idler 2.50" Od CRD
184	8174906-44	Screw Hexwsh Thdrol 3/8-16 x 2-3/4
185	532 1700-08	Link Shift
186	532 1656-14	Hub Tapered Round CRD
187	8175805-20	Screw Thdrol 5/16-18 x 1.25
197	532 1696-13	Nyliner Snap-In 5/8
199	532 1696-12	Bolt Shoulder 5/16-18 Unc
200	8721405-08	Bolt RDHD SQNK 5/16-18 x 1
202	8721106-12	Bolt Carr. Sh. 3/8-16 x 1-1/2 Gr. 5
207	532 1698-45	Washer Nylon Rear
214	532 1756-09	Shaft Asm. Brake
215	532 1756-52	Rod Brake Hydro
250	8170606-12	Screw 3/8-16 x 3/4
253	532 1750-28	Bracket Cable Chassis
254	8170606-16	Screw 3/8-16 x 1
255	532 1756-08	Brace Shaft Brake Mtg.
258	532 1780-62	Clip Retainer
259	532 1802-12	Bracket Pulley IDL Hydro Grd. Dr.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
STEERING ASSEMBLY

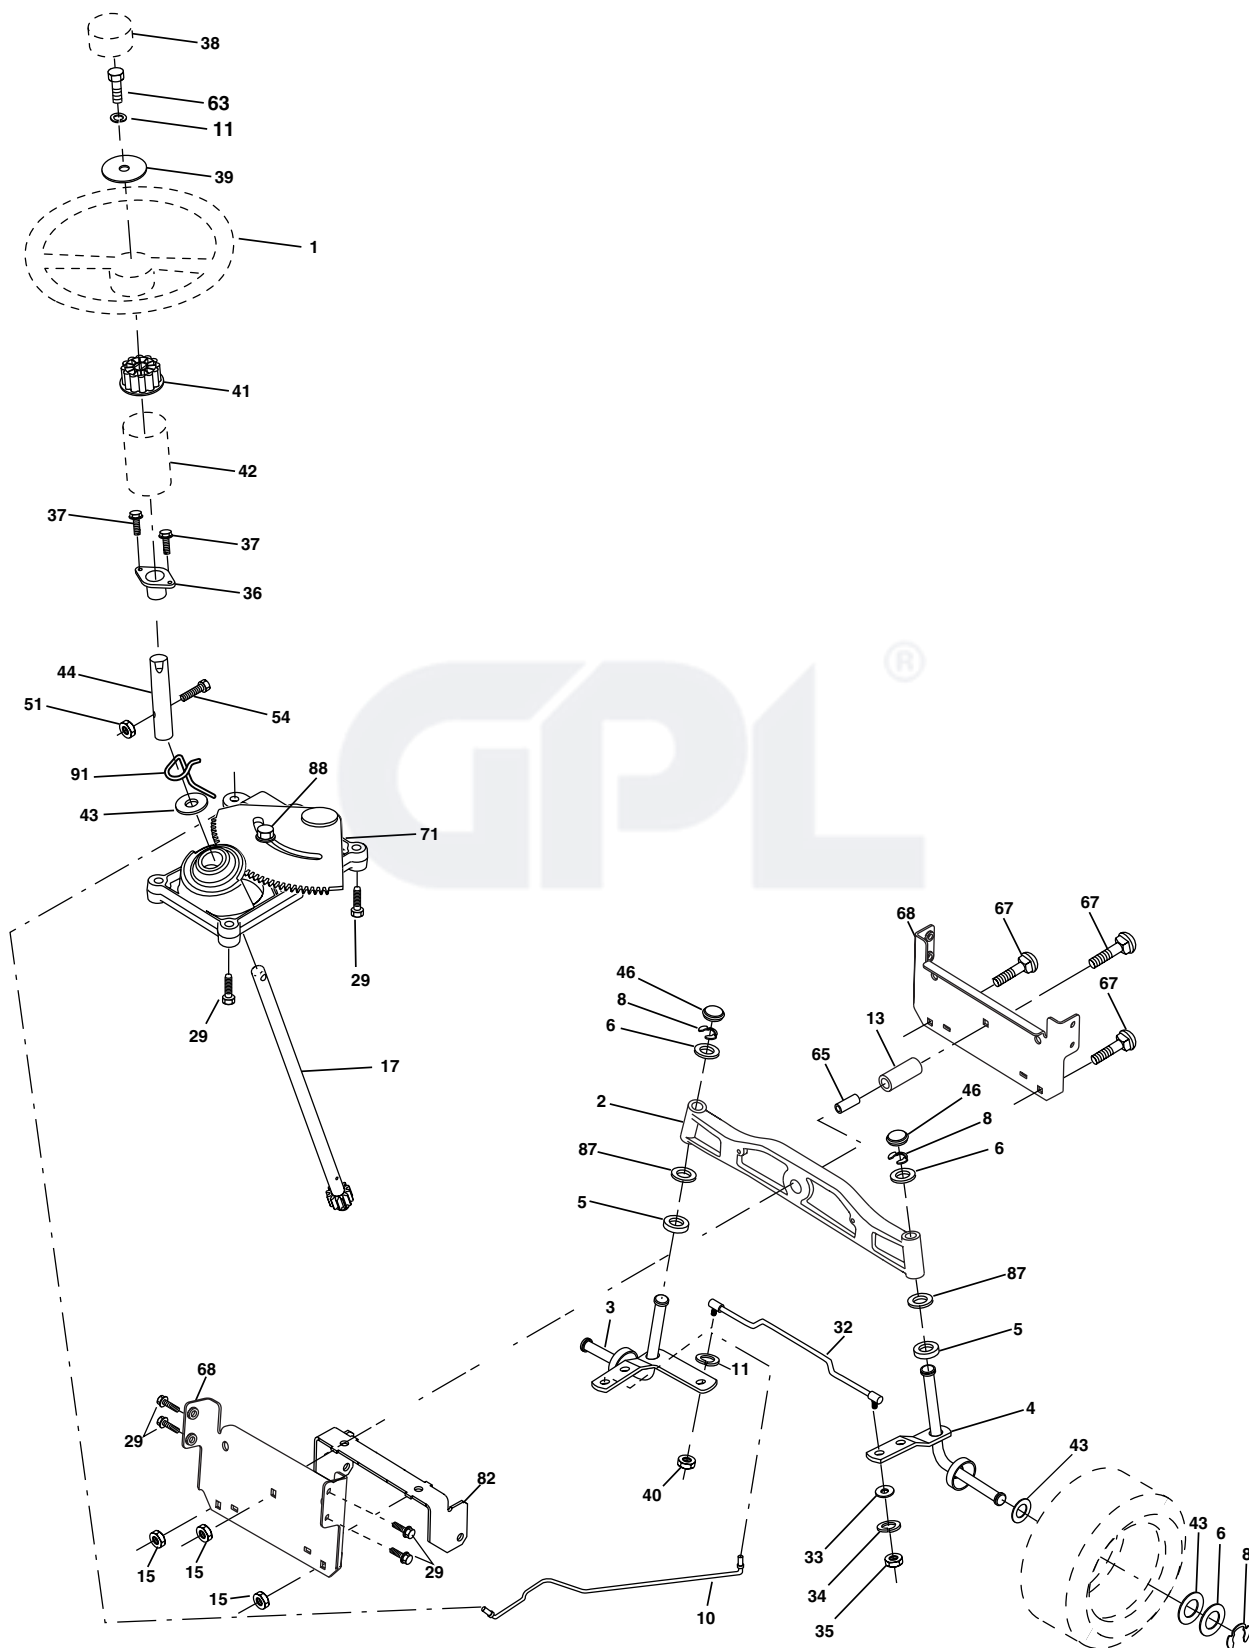

REPAIR PARTS


TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532 16 66-27	Steering Wheel
2	532 17 23-93	Front Axle Assembly
3	532 16 98-40	Spindle Assembly, L.H.
4	532 16 98-39	Spindle Assembly, R.H.
5	532 12 49-31	Bearing, Race, Thrust, Hardened
6	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Gauge
8	812 00 00-29	Ring, Klip
10	532 17 51-21	Link, Drag
11	810 04 06-00	Washer, Lock
13	532 13 65-18	Spacer Axle
15	532 14 52-12	Nut Hex Flange Lock
17	532 17 78-76	Shaft Assembly, Steering
29	817 06 06-12	Screw 3/8-16 x 3/4
32	532 17 01-62	Rod, Tie
33	819 11 12-16	Washer 11/32 x 3/4 x 16 Ga.
34	810 04 05-00	Washer Lock Hvy Hlcl Spr 5/16
35	873 54 05-00	Crownlock Nut 5/16-24 Unf
36	532 15 50-99	Bushing, Steering
37	532 15 29-27	Screw TT #10-32 x 5 x 3/8 Flange
38	532 16 66-26	Cap Wheel Steer
39	819 13 24-11	Washer 13/32 x 1-1/20 x 11 Gauge
40	532 12 47-01	Nut Lock Center 3/8-24 Unf
41	532 15 99-45	Adaptor, Steering Wheel
42	532 16 96-34	Boot, Steering Dash P/L Mtl
43	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Gauge
44	532 15 37-20	Extension Steering
46	532 12 12-32	Cap, Spindle
51	873 80 05-00	Nut Lock Hx W/Ins 5/16-18 UNC
54	874 78 05-20	Bolt Fin Hex 5/16-18 UNC x 1-1/4
63	874 78 06-16	Bolt Fin Hex 3/8-16 unc. x 1 Gr. 5
65	532 16 03-67	Spacer Axle
67	872 14 06-18	Bolt Rdhd Sq 3/8-16 x 2-1/4
68	532 16 98-27	Brace Axle
71	532 17 51-46	Steering Asm.
82	532 16 98-35	Bracket Susp. Chassis Front
87	532 17 39-66	Washer Flat .781 x 1-1/2 x .14
88	532 17 51-18	Bolt Shoulder 7/16-20 Unc
91	532 17 55-53	Clip Steering

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
SEAT ASSEMBLY

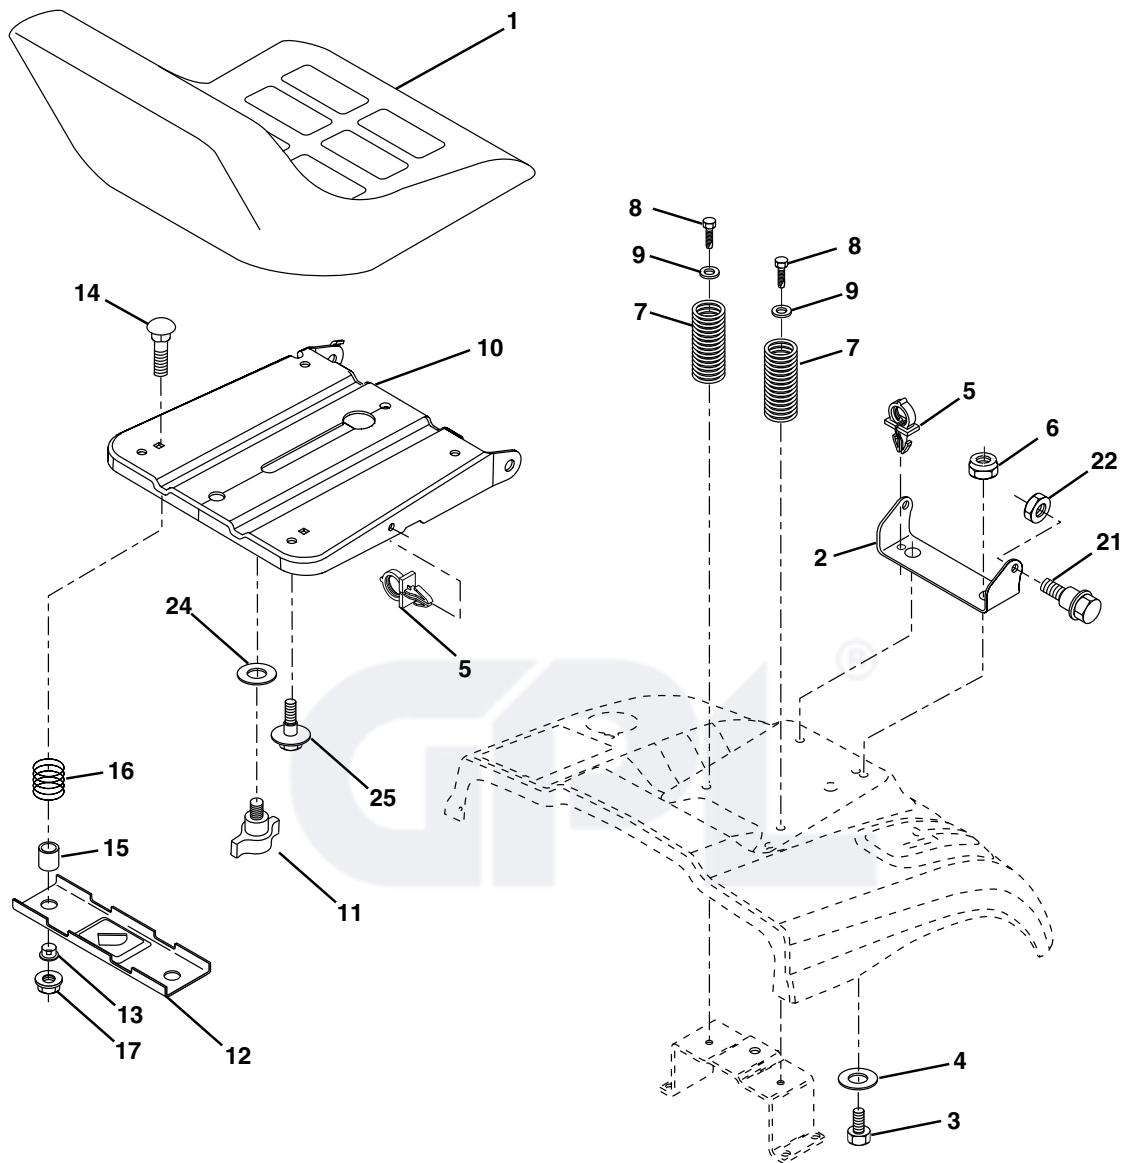


KEY NO.	PART NO.	DESCRIPTION
1	532 1408-40	Seat
2	532 1405-51	Bracket Pnt Pivot Seat (blk)
3	871 1106-16	Bolt Fin Hex 3/8-16 x 1 Blk
4	819 1316-10	Washer Flat 13/32 x 1 x 10 Ga.
5	532 1450-06	Clip Push In Hinged
6	873 8006-00	Nut Lock Hex w/Insert 3/8-16
7	532 1241-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 0006-16	Screw 3/8-16 X 1.5
9	819 1316-14	Washer 13/32 X 1 X 14 Ga
10	532 1748-94	Pan Pnt Seat (blk)
11	532 1663-69	Knob Seat Adj. Wingnut
12	532 1212-46	Bracket Pnt Mounting Switch

KEY NO.	PART NO.	DESCRIPTION
13	532 1212-48	Bushing Snap Blk Nyl 50 Id
14	872 0504-12	Bolt Rdhd Sht Nk 1/4-20x1-1/2
15	532 1212-49	Spacer Split
16	532 1237-40	Spring Cprsn
17	532 1239-76	Nut Lock 1/4 Lge Flg Gr 5 Zinc
21	532 1718-52	Bolt Shoulder 5/16-18 Unc-2A
22	873 8005-00	Nut Hex Lock w/Ins 5/16-18
24	819 1719-12	Washer 17/32 X 1-3/16 X 12 Ga.
25	532 1270-18	Bolt Shoulder 5/16-18 X 62

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm


REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
DECALS

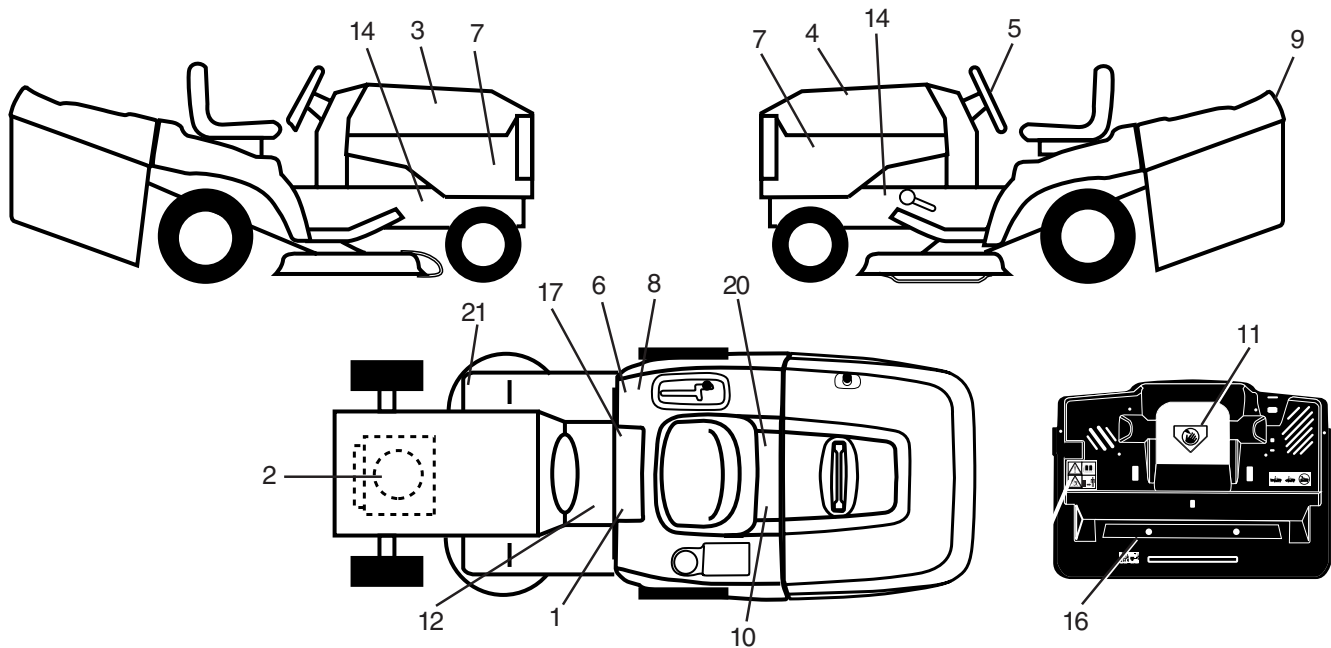

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 14 54-98	Decal Read Owner's Manual Sym	12	532 15 97-37	Decal Brake/Clutch Symbol Lt
2	532 18 04-37	Decal Hp Engine	14	532 15 97-36	Decal Chassis Hot Muffler
3	532 17 96-79	Decal Hood Rh	16	532 18 04-35	Decal Backplate
4	532 17 96-80	Decal Hood Lh	17	532 14 08-37	Decal Saddle Brake Parking
5	532 17 05-64	Decal Wheel Steering	20	532 16 69-60	Decal Bypass Fender CRD
6	532 12 61-87	Decal 100 DBA	21	532 16 62-86	Decal Hex Belt Sch 92 CRD
7	532 15 97-13	Decal Panel Side B&S Logo	—	532 13 83-11	Decal Lift Handle
8	532 14 54-37	Decal Europe Stand Ce	—	532 18 10-90	Pad Footrest RH
9	532 15 06-17	Decal Fender Logo	—	532 18 10-91	Pad Footrest LH
10	532 14 50-05	Decal Bat Dan/Poi P/L Sym Wpn	—	532 17 99-94	Manual Operator's (Euro)
11	532 14 54-94	Decal Mower Cut Finger Symbol	—	532 17 99-95	Manual Operator's (Scan)

WHEELS & TIRES

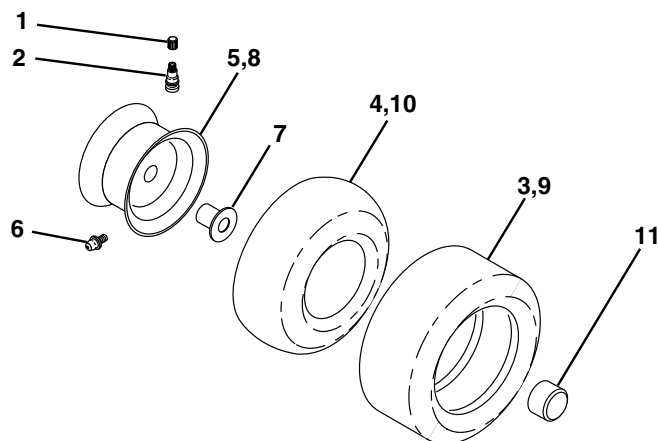


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Value Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 X 6 0 - 6 Service
4	532 05 99-04	Tube Inner Front #35060
5	532 13 83-36	Rim Asm 6"front Silver Service
6	532 12 49-57	Fitting Grease
7	532 12 49-59	Bearing Flange
8	532 13 83-37	Rim Asm 8"rear Silver Service
9	532 13 84-68	Tire R Ts 20 x 8-8 Service
10	532 12 49-26	Tube Rear 9 5 X 8 Service
11	532 17 50-39	Cap Axle Blk 1 50 X 1 00
--	532 14 43-34	Sealant, Tire (10 oz. tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
ENGINE

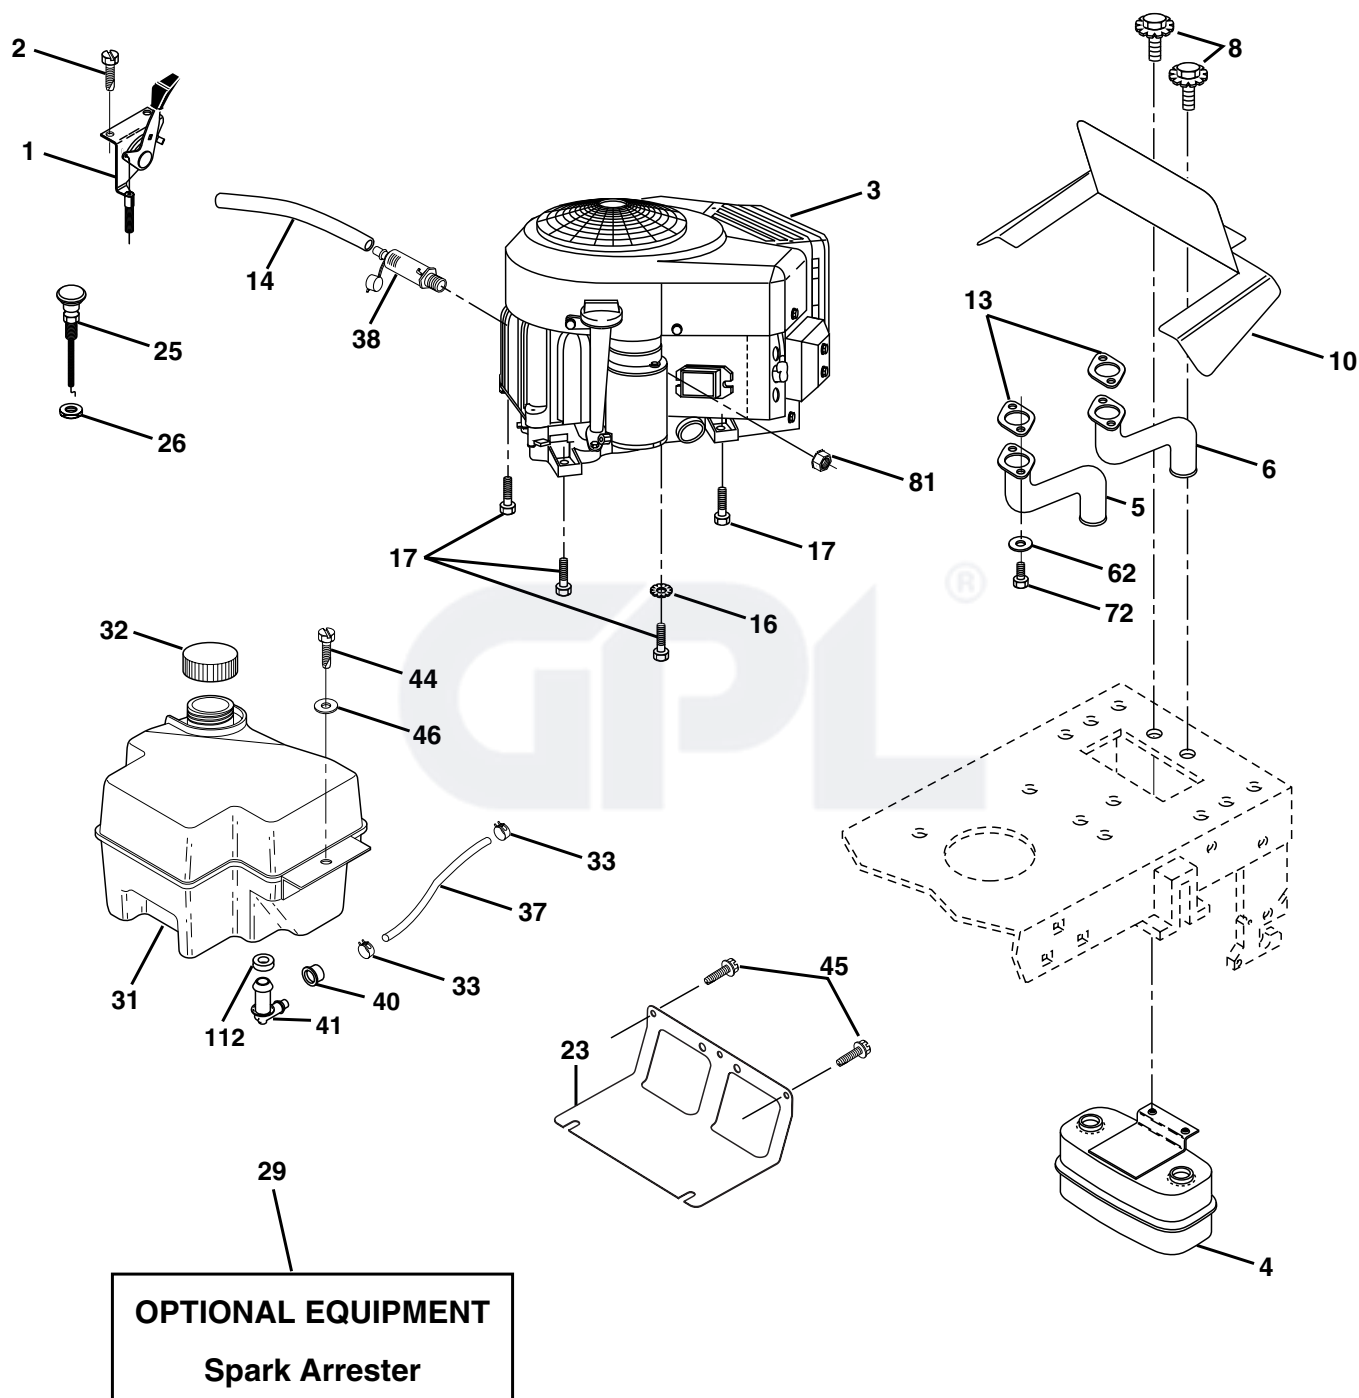

REPAIR PARTS


TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	532 17 07-71	Control Throt
2	817 72 04-08	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine Briggs & Stratton 446777 (Order parts from engine manufacturer)
4	532 14 97-23	Muffler Twin Lo-Twin
5	532 15 99-55	Tube, Manifold Lh
6	532 16 05-89	Tube, Manifold Rh
8	532 17 18-77	Bolt 5/16-18 Unc x 3/4 w/Sems
10	532 16 27-97	Shield Browning Intek
13	532 16 53-91	Gasket Muffler
14	532 14 84-56	Tube Drain Oil Easy
16	811 05 06-00	Washer Lock Ext Tooth 3/8
17	817 06 06-24	Screw, Thdrol 3/8-16 x 1-1/2 Tytt
23	532 16 98-37	Shield Brn/Dbr Guard
25	532 14 59-96	Choke Control 37"
26	873 92 06-00	Nut, Keps 3/8-24 Unf
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)
31	532 18 06-45	Tank Fuel 2.00
32	532 14 05-27	Cap Asm Fuel W/sym Vented
33	532 12 34-87	Clamp Hose Blk
37	532 13 70-40	Line Fuel
38	532 14 83-15	Plug Drain Oil Easy
40	532 12 40-28	Bushing Snap
41	532 13 92-77	Stem Tank Fuel
44	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
45	817 00 06-12	Screw Hexwsh Thdrol 3/8-16 x 3/4
46	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
62	810 04 05-00	Washer, Lock Hvy. Hlcl Spr 5/16
72	871 07 05-12	Screw Hex Hd Cap 5/16-18 x 3/4
81	873 51 04-00	Nut Keps Hex 1/4-20 Unc
112	532 12 49-52	Bushing

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
MOWER LIFT

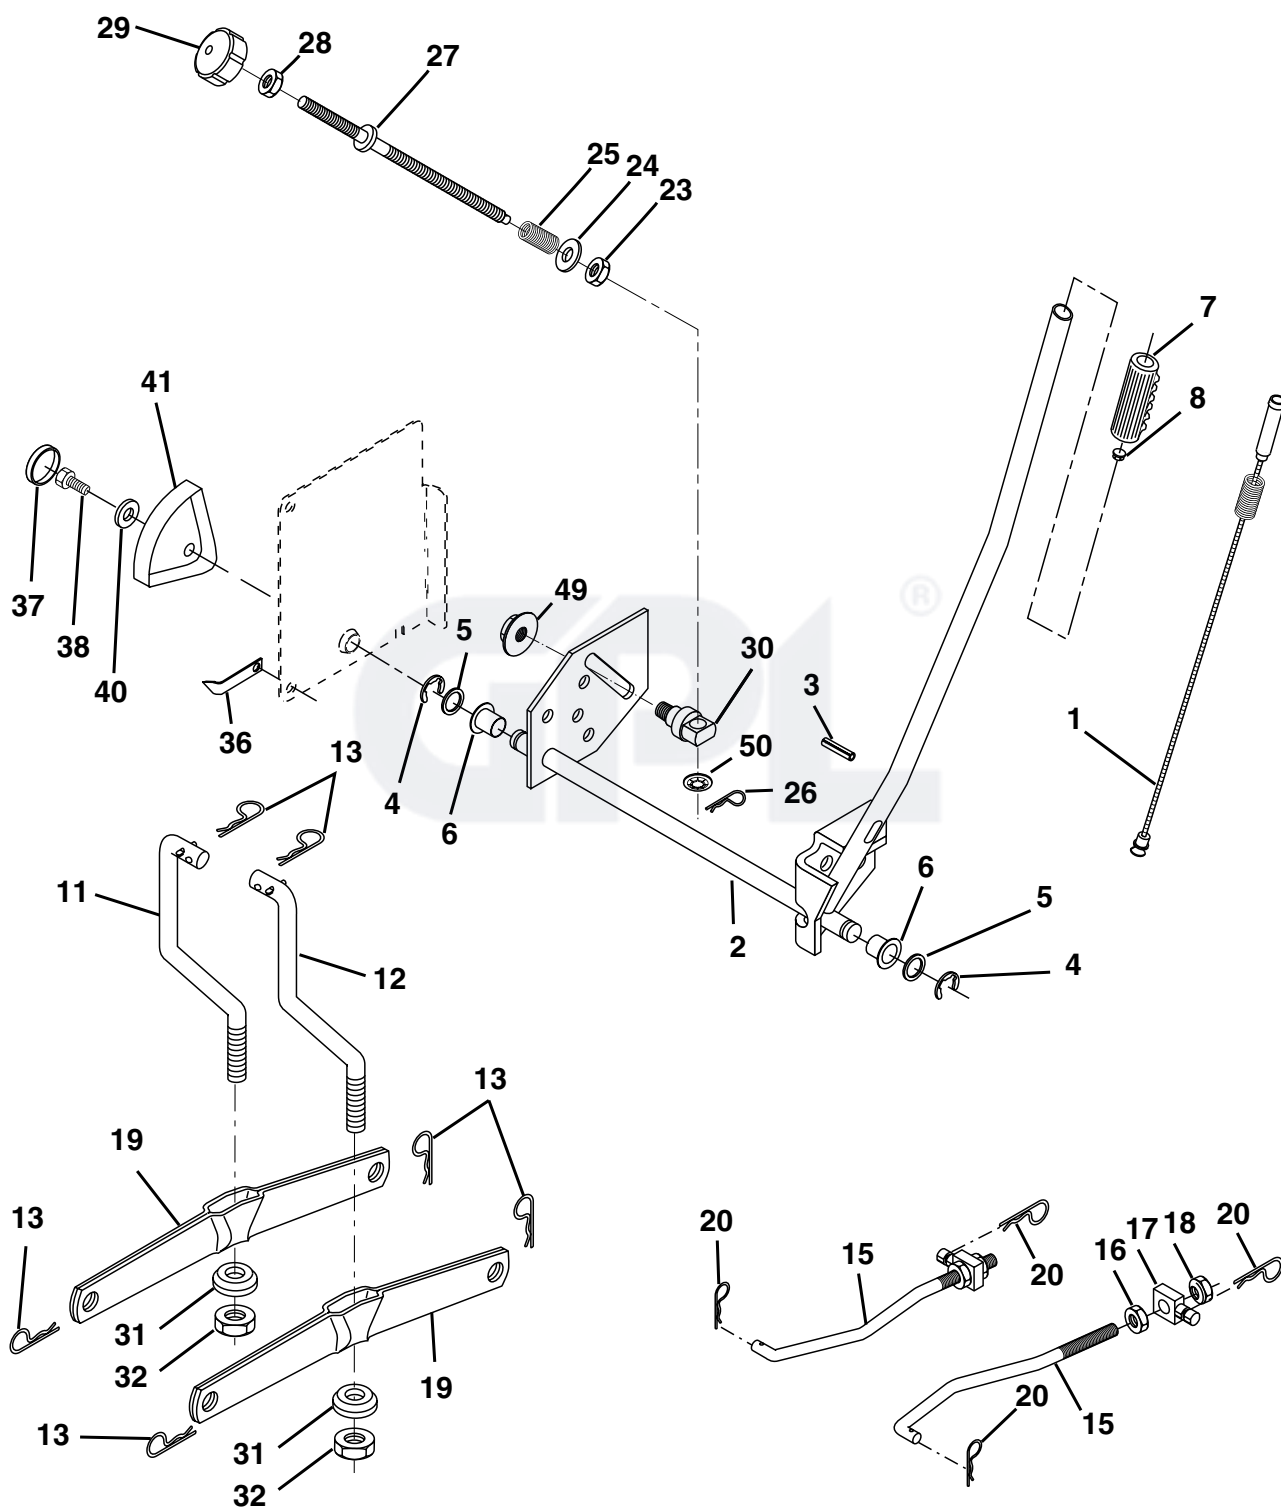

REPAIR PARTS


TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	532 15 94-60	Washer Asm Inner Spring W/Plunger
2	532 15 94-71	Shaft Asm. Lift
3	532 10 57-67	Pin Groove
4	812 00 00-02	E Ring #5133-62
5	819 21 16-21	Washer 21/32 x 1 x 21 Ga.
6	532 12 01-83	Bearing Nylon
7	532 12 56-31	Grip Handle Fluted
8	532 12 45-26	Button Plunger Black
11	532 16 58-29	Link Asm Lift L.H.
12	532 16 58-31	Link Asm Lift R.H.
13	532 12 46-70	Retainer Spring
15	532 17 32-88	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 Unc
17	532 17 56-89	Trunnion Blk Zinc
18	873 80 08-00	Nut Lock w/wsh 1/2-13 Unc
19	532 13 98-68	Arm Suspension Mower
20	532 16 35-52	Retainer Spring
23	532 11 08-07	Nut Special
24	819 13 10-16	Washer 13/32 x 5/8 x 16 Ga.
25	532 12 48-74	Spring 2-1/8"
26	532 16 94-84	Retainer Clip
27	532 12 69-71	Rod Adj Lift Zinc 7.49 Wrk Lg
28	873 35 06-00	Nut Hex Jam 3/8-16 Unc
29	532 13 80-57	Knob Inf 3/8-16 Unc Blk w/sym
30	532 15 02-33	Trunnion Infin Height
31	532 16 98-65	Bearing, Pvt. Lift.
32	873 54 06-00	Nut Crownlock 3/8-24
36	532 15 50-97	Pointer Height Indicator
37	532 12 39-35	Plug Hole Blk 1.485/1.515 Dia
38	817 06 05-16	Screw 5/16-18 x 1
40	819 11 24-10	Washer 11/32 x 1-1/2 x 10 Ga.
41	532 12 39-34	Scale Ind Height Blk
49	532 14 52-12	Nut hex Flange Lock
50	532 11 04-52	Nut Push Phos & Oil

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
MOWER

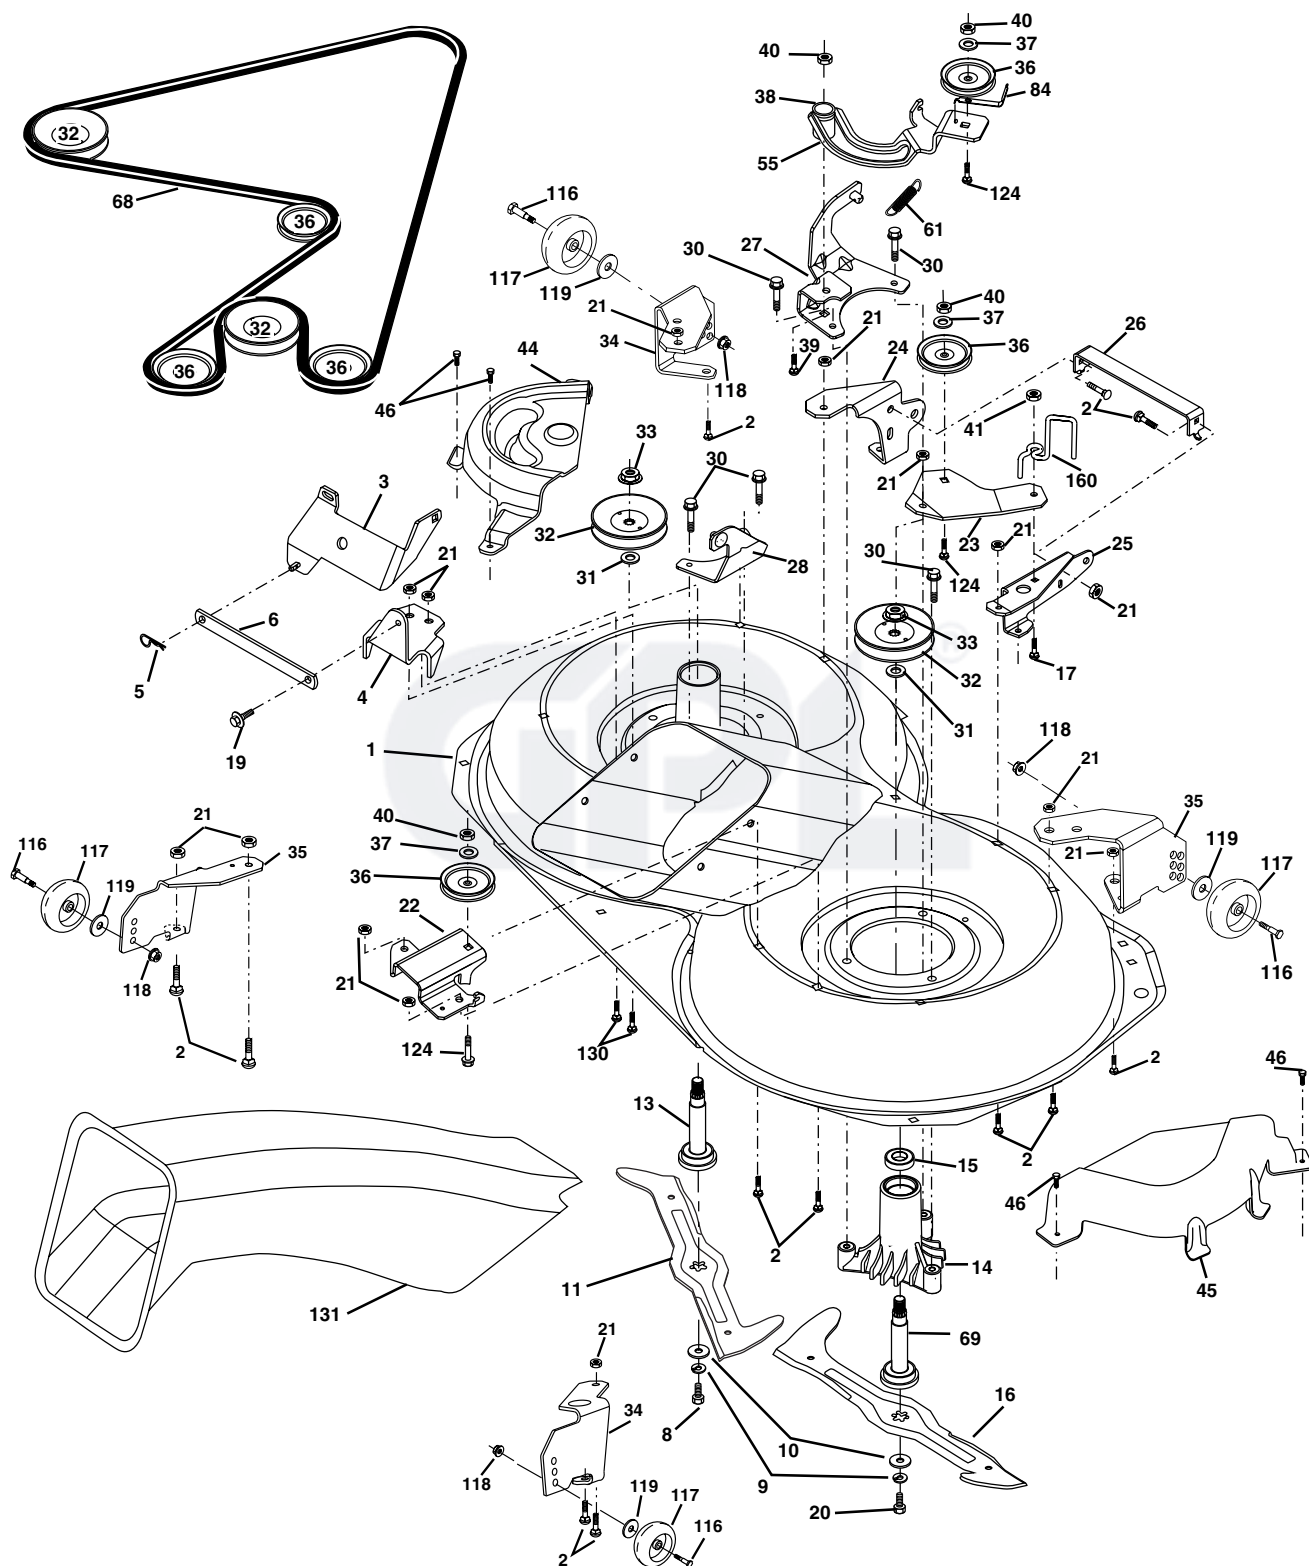

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
MOWER


KEY NO.	PART NO.	DESCRIPTION
1	532 17 57-90	Housing Asm. Mower
2	872 14 05-06	Bolt Rdhd Sqnk 5/16-18 Unc x 3/4
3	532 16 55-69	Bracket Asm. S-Bar Chass
4	532 16 91-67	Bracket Bar Sway Deck
5	532 00 49-39	Retainer Spring
6	532 16 55-57	Bar Sway
8	532 85 08-57	Bolt 3/8-24 x 1.25 Gr8 Patched
9	810 03 06-00	Washer Lock Hvy 3/8 Unplated
10	532 14 02-96	Washer Hard Blade Mower vented
11	532 17 54-50	Blade 3-1 Lh
13	532 13 76-45	Shaft Asm. W/Lower Bearing
14	532 12 87-74	Housing Mandrel Vented (Machd)
15	532 11 04-85	Bearing Ball Mandrel
16	532 17 54-51	Blade 3-1 Rh
17	872 14 06-10	Bolt Carr. 3/8-16 1-1/4
19	532 13 28-27	Bolt Shoulder 5/16-18 Thd Form
20	532 16 54-84	Bolt 3/8-24 x 1.25 Gr8 Ptch Lhthd
21	873 68 05-00	Nut Crown Lock 5/16-18
22	532 16 91-65	Bracket Idler Sprt RR
23	532 16 91-66	Bracket Idler Sprt RF
24	532 16 91-70	Bracket Suspension LF
25	532 16 91-71	Bracket Suspension RF
26	532 16 52-37	Brace Support Susp Frt CRD
27	532 16 91-72	Bracket Asm. Susp RR
28	532 16 91-68	Bracket Asm. Susp LR
30	532 17 39-84	Screw Thd Rolling Dod.PT Hex
31	532 12 99-63	Washer Spacer Mower Vented
32	532 17 57-07	Mandrel Pulleys
33	532 17 83-42	Nut Flg Top Lock
34	532 17 95-09	Bracket Gauge Wheel Lf

KEY NO.	PART NO.	DESCRIPTION
35	532 17 62-92	Bracket Gauge Wheel Rf
36	532 14 67-63	Pulley Idler V-Groove Dim 4.25
37	819 13 13-16	Washer 11/32 x 13/16 x 16 Ga
38	532 16 98-51	Spacer Hub Arm Idler
39	872 11 06-22	Bolt RhHd 3/8-16 Unc x 2-3/4 Gr.5
40	873 68 06-00	Nut Crownlock 3/8-16 Unc
41	873 90 06-00	Nut Lock Flg. 3/8-16
44	532 17 55-38	Cover Mandrel Lh
45	532 17 55-39	Cover Mandrel Rh
46	532 13 77-29	Screw Thd Roll 1/4-20 x 5/8
55	532 16 98-49	Arm Idler
61	532 17 51-59	Spring Tension Belt
68	532 16 91-78	Hex-Belt Mower
69	532 16 54-82	Shaft Asm W/Lwr Brg Rh Thd CRD
84	532 15 60-85	Keeper Belt Idler
116	532 13 76-44	Bolt Shoulder
117	532 13 39-57	Wheel Gage Donut Wide
118	873 93 06-00	Nut Centerlock 3/8-16 Unc
119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
124	872 11 06-12	Bolt Carr Sh 3/8-16 x 1-1/2 Gr5
130	872 11 05-06	Bolt Rdhdsqnk 5/16-18 Unc x 3/4
131	532 16 56-61	Chute Bagger CRD 92cm
160	532 17 51-60	Guide Belt CRD
--	532 13 07-94	Mandrel Asm Service
--	532 16 55-79	Mandrel Asm CRD Lh Threads VC
--	532 18 03-87	Replacement Mower Complete

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. CTH200 (HECTH200A), PRODUCT NO. 954 17 00-53
BAGGER

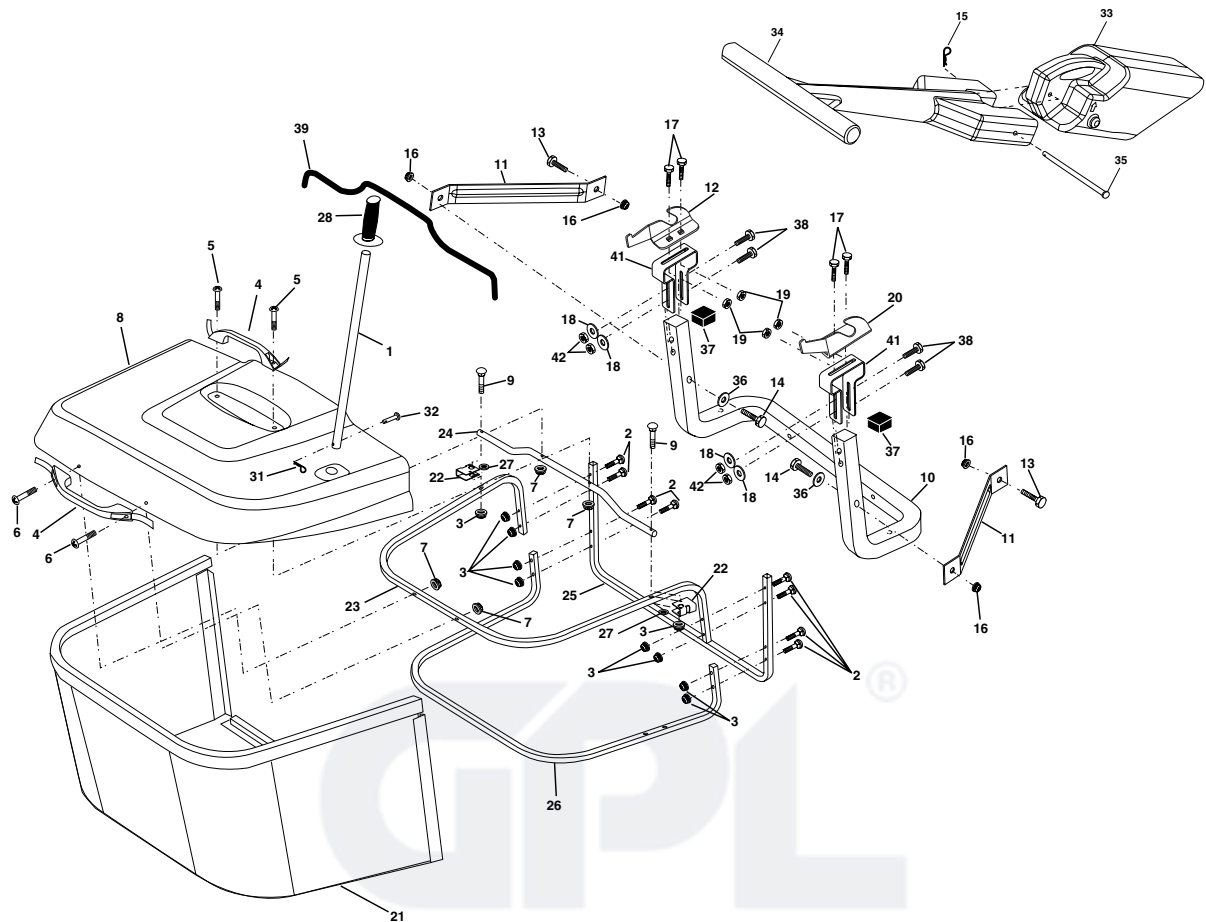

KEY NO.	PART NO.	DESCRIPTION
1	532 16 52-49	Tube Handle Bagger CRD
2	872 14 04-16	Bolt Carriage 1/4-20 x 2.0 Gr.5
3	532 12 39-76	Nut Lock 1/4 Lge Flg Gr. 5 Zinc
4	532 16 99-16	Handle Bagger w/Lvrs Blk CRD
5	874 98 10-24	Screw Pan Head #10-24 x 1.50 Blk
6	874 98 10-32	Screw Pan Hd
7	873 40 10-00	Nut Wiz Lock Hex Serr/Hd 10-24
8	532 18 10-95	Cover Bagger
9	872 14 04-18	Bolt Carriage 1/4-20 x 2.25d x Gr.5
10	532 18 12-82	Tube Support Bagger CRD
11	532 16 57-19	Bracket Support Upper Bag CRD
12	532 16 96-85	Bracket Horiz Adj Bagger Lh
13	872 11 06-06	Bolt Rdhd Sht Sqnk 3/8-16 x 3/4
14	872 14 06-20	Bolt RDHD SQNK 3/8-16 x 2-1/2 Gr.5
15	532 12 46-70	Retainer Spring
16	873 90 06-00	Nut Lock Flg 3/8-16 Unc
17	872 14 05-06	Bolt Rdhd Sht Sqnk 5/16 -18 Unc x 3/4
18	819 11 12-16	Washer 11/32 x 3/4 x 16 Ga.
19	873 90 05-00	Nut Lock Hex Flange 5/16-18
20	532 16 96-84	Bracket Horiz Adj Bagger Rh

KEY NO.	PART NO.	DESCRIPTION
21	532 16 57-80	Bag Asm CRD
22	532 16 57-81	Bracket Side Bagger CRD
23	532 16 57-82	Tube Upper Bagger CRD
24	532 16 57-83	Tube Pivot Bagger CRD
25	532 18 01-24	Tube Front Bagger CRD
26	532 16 57-85	Tube Lower Bagger CRD
27	532 16 96-92	Bushing Snap Bagger CRD
28	532 16 57-87	Grip Handle Black
31	532 12 47-88	Retainer Spring 1" Zinc/Cad
32	532 12 68-75	Rivet Rd Hd Drilled 3/8 Dia
33	532 16 93-80	Plug Mulcher 107 CRD
34	532 16 55-70	Handle Mulcher
35	532 16 55-72	Pin Mulcher
36	819 13 20-16	Washer 13/32 x 1-1/4 x 16 Ga.
37	532 17 54-01	Plug Support Bagger CRD
38	872 01 05-20	Bolt 5/16-18 x 2-1/2
39	532 18 09-85	Seal Trim
41	532 16 96-83	Bracket Pnt Adj Pvt Bagger CRD
42	873 80 05-00	Nut Crownlock 5/16-18 Blk D

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm