

# LT12


Spare parts  
Ersatzteile  
Pièces détachées  
Reserve onderdelen  
Repuestos  
Reservdelar

GPL®

REPAIR PARTS


TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72

SCHEMATIC

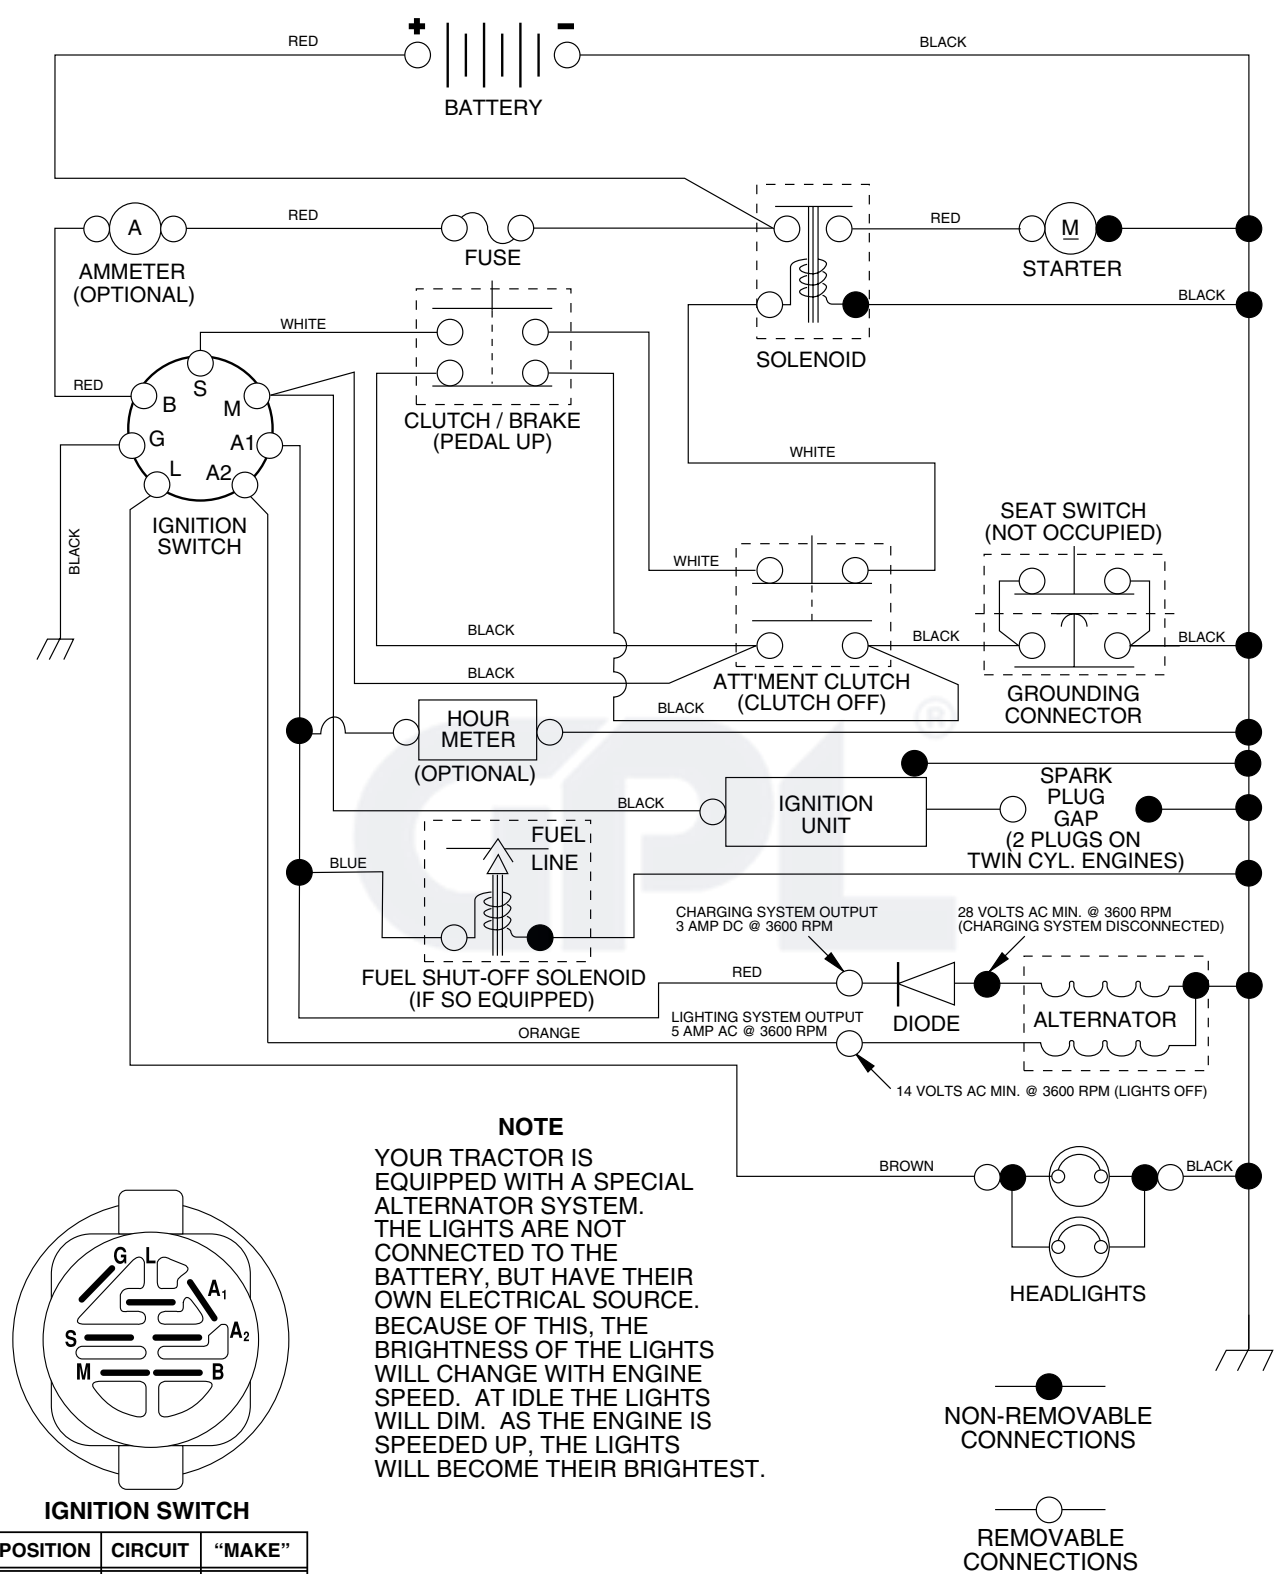

## REPAIR PARTS

**TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72**  
**ELECTRICAL**

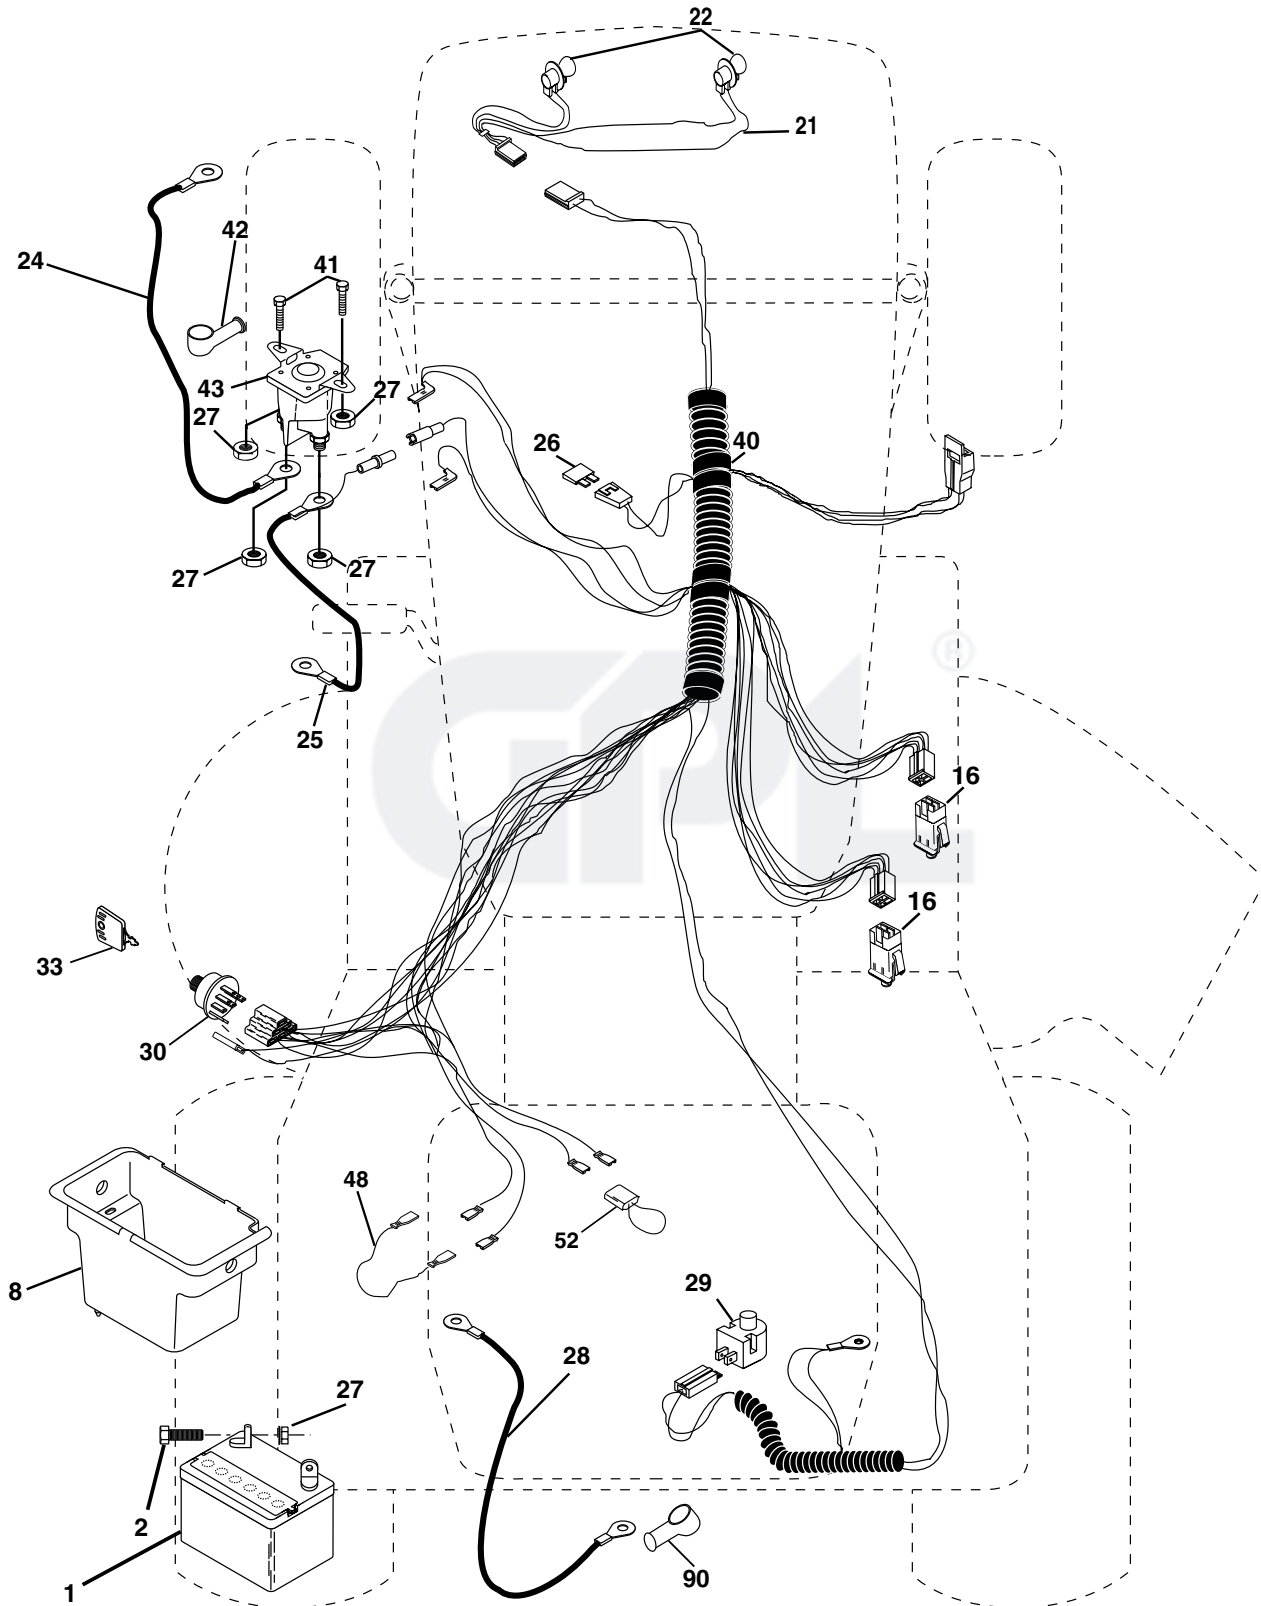

# REPAIR PARTS


TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
ELECTRICAL

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                          |
|------------|--------------|--------------------------------------|
| 1          | 532 16 34-65 | Battery                              |
| 2          | 874 76 04-12 | Bolt Hex Hd 1/4-20unc X 3/4          |
| 8          | 532 17 66-89 | Box Battery                          |
| 16         | 532 17 61-38 | Switch Interlock                     |
| 21         | 532 17 56-88 | Harness Asm Light W/4152j            |
| 22         | 532 00 41-52 | Bulb Light #1156                     |
| 24         | 532 12 47-80 | Cable Battery 6 Ga 11" red           |
| 25         | 532 14 61-47 | Cable Battery 6 Ga 44" red w/16 wire |
| 26         | 532 17 51-58 | Fuse 20 AMP                          |
| 27         | 873 51 04-00 | Nut Keps Hex 1/4-20 Unc              |
| 28         | 532 12 47-73 | Cable Ground 6 Ga 12" black          |
| 29         | 532 12 13-05 | Switch Plunger Nc Gray               |
| 30         | 532 17 55-66 | Switch Ign                           |
| 33         | 532 14 04-01 | Key Ign                              |
| 40         | 532 17 97-20 | Harness Ign.                         |
| 41         | 871 11 04-08 | Bolt Blk Fin Hex 1/4 - 20 x 1/2      |
| 42         | 532 13 15-63 | Cover Terminal Red                   |
| 43         | 532 17 88-61 | Solenoid                             |
| 48         | 532 14 08-44 | Adapter Ammeter                      |
| 52         | 532 14 19-40 | Protection Wire Loop                 |
| 90         | 532 18 04-49 | Cover Terminal Battery               |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
CHASSIS AND ENCLOSURES

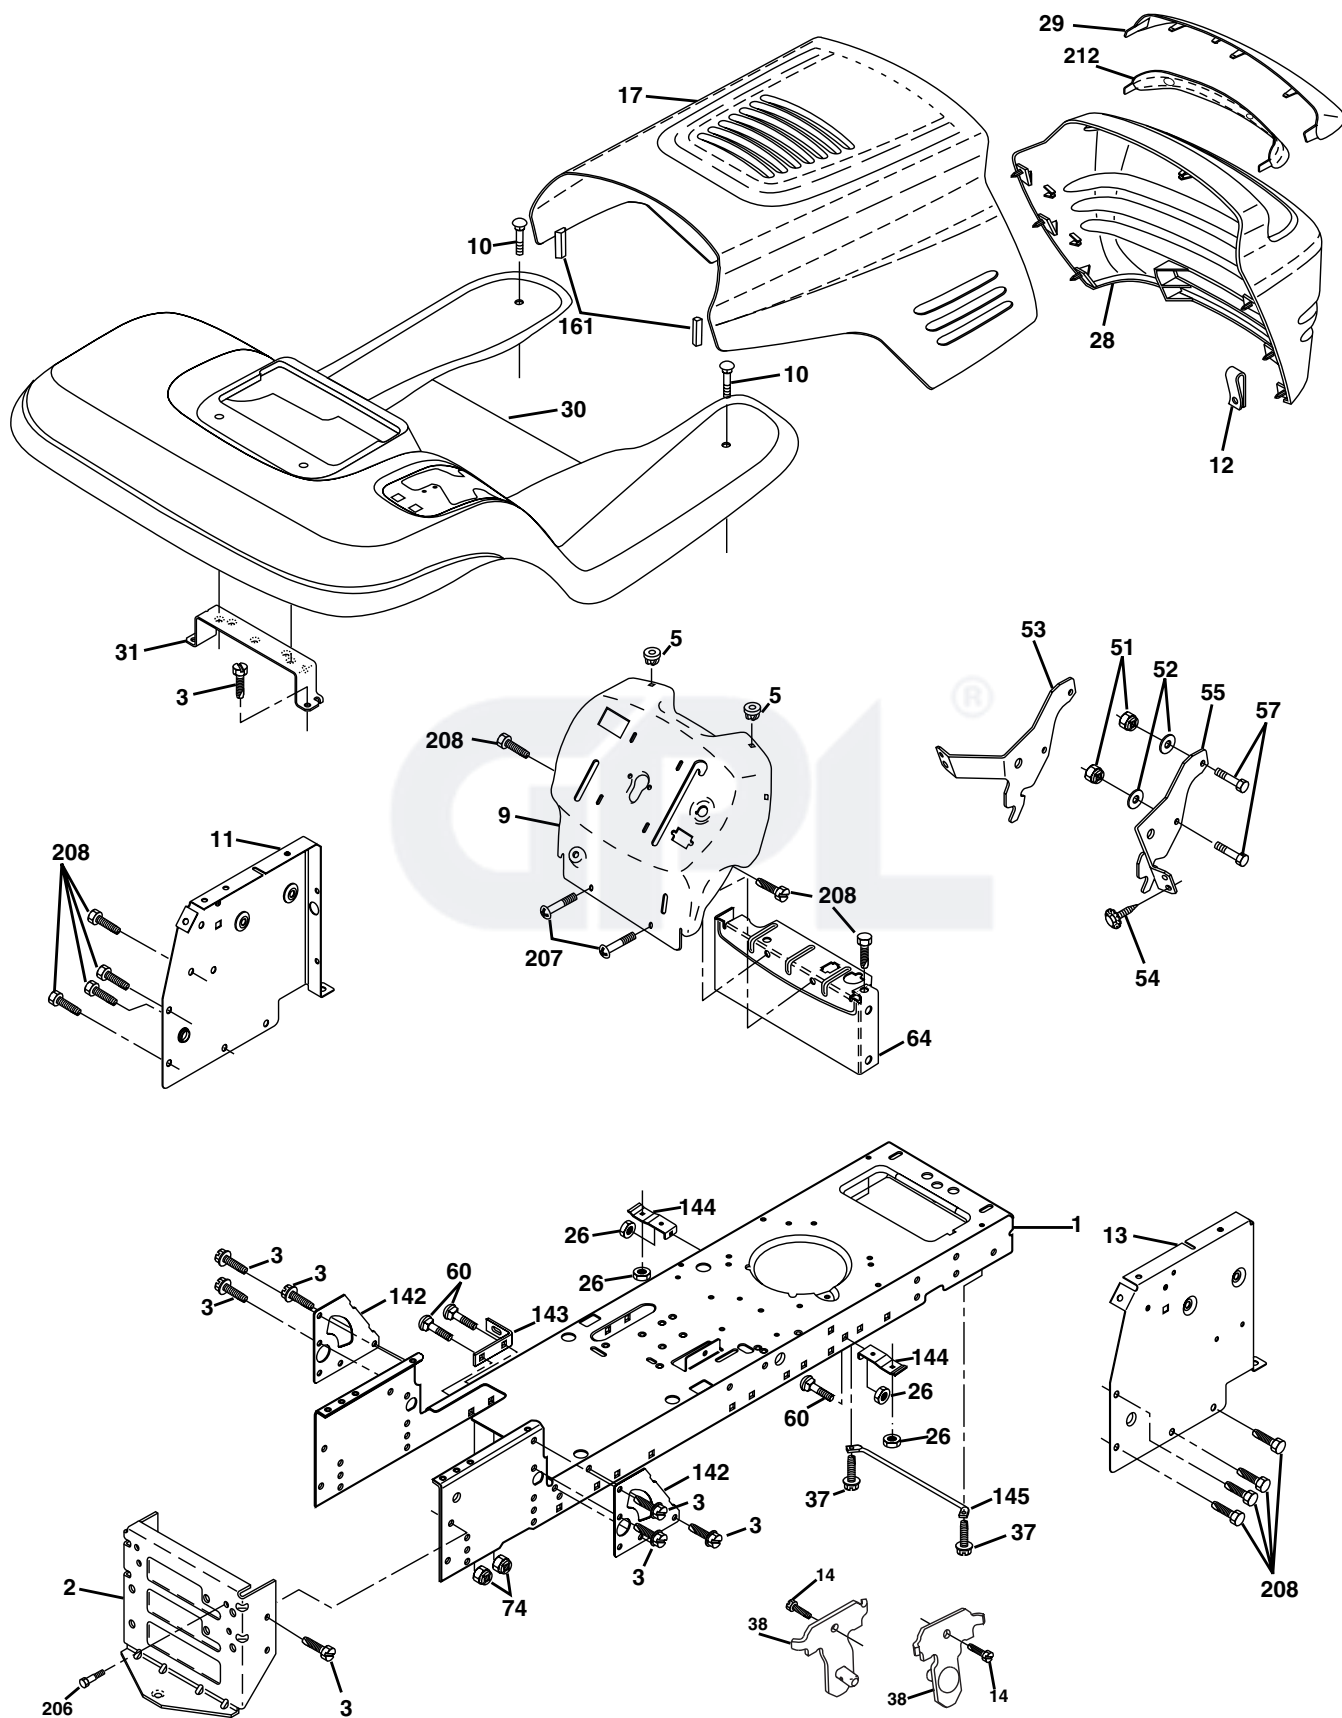

# REPAIR PARTS


## TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72 CHASSIS AND ENCLOSURES

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                    |
|------------|---------------------|--------------------------------|
| 1          | 532 17 46-19        | Chassis Weldment               |
| 2          | 532 17 65-54        | Drawbar                        |
| 3          | 817 06 06-12        | Screw 3/8-16 x .75 SMGML       |
| 5          | 532 15 52-72        | Bumper Hood/Dash               |
| 9          | 532 17 21-51        | Dash P/L                       |
| 10         | 872 14 06-08        | Bolt Carriage 3/8-16 x 1       |
| 11         | 532 17 49-96        | Panel Dash Lh                  |
| 12         | 532 14 56-60        | Clip Tinnerman Grille P/L      |
| 13         | 532 18 17-19        | Panel Dash Rh                  |
| 14         | 817 49 06-08        | Screw Thdrol 3/8-16 x 1/2      |
| 17         | 532 15 07-60        | Hood LT/PL with Louvers        |
| 26         | 873 80 06-00        | Nut Lock Hex W/Ins 3/8-16 Unc  |
| 28         | 532 17 93-51        | Grill/Lens Asm.                |
| 29         | 532 17 90-14        | Lens LT/PL Grille Shark Plain  |
| 30         | 532 18 12-05        | Fender Footrest                |
| 31         | 532 13 99-76        | Bracket Support Fender         |
| 37         | 817 49 05-08        | Screw Thdrol 6/16-18 x 1/2 TYT |
| 38         | 532 17 57-10        | Bracket, Asm. Pivot            |
| 51         | 873 80 04-00        | Nut Lock Hex W/Ins 1/4-20      |
| 52         | 819 09 14-16        | Washer 9/32 x 7/8 x 16 Ga.     |
| 53         | 532 14 52-01        | Bracket Pnt. Pickoff LH        |
| 54         | 532 16 14-64        | Screw Hex Wshd 8-18 x 7/8      |
| 55         | 532 14 52-02        | Bracket Grille Pickoff RH      |
| 57         | 874 78 04-12        | Bolt Hex 1/4-20 x 3/4          |
| 60         | 872 14 06-06        | Bolt Rdhd Sqnk 3/8-16unc x 3/4 |
| 64         | 532 15 47-98        | Dash Lower STLT                |
| 74         | 873 68 06-00        | Nut Crownlock 3/8-16 UNC       |
| 142        | 532 17 57-02        | Plate Reinforcement STLT       |
| 143        | 532 15 49-66        | Bracket Swaybar Chassis        |
| 144        | 532 17 55-82        | Bracket Pnt Footrest STLT      |
| 145        | 532 15 65-24        | Rod Pivot Chassis/Hood         |
| 161        | <b>532 16 46-55</b> | Bumper Extrusion               |
| 206        | 532 17 01-65        | Bolt Shoulder 5/16-18          |
| 207        | 817 67 05-08        | Screw Thdrol 5/16-18 x 1/2     |
| 208        | 817 67 06-08        | Screw Thdrol 3/8-16 x 1/2      |
| 212        | 532 16 59-19        | Insert Lens Reflective         |
| --         | 532 00 54-79        | Plug Button                    |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
DRIVE

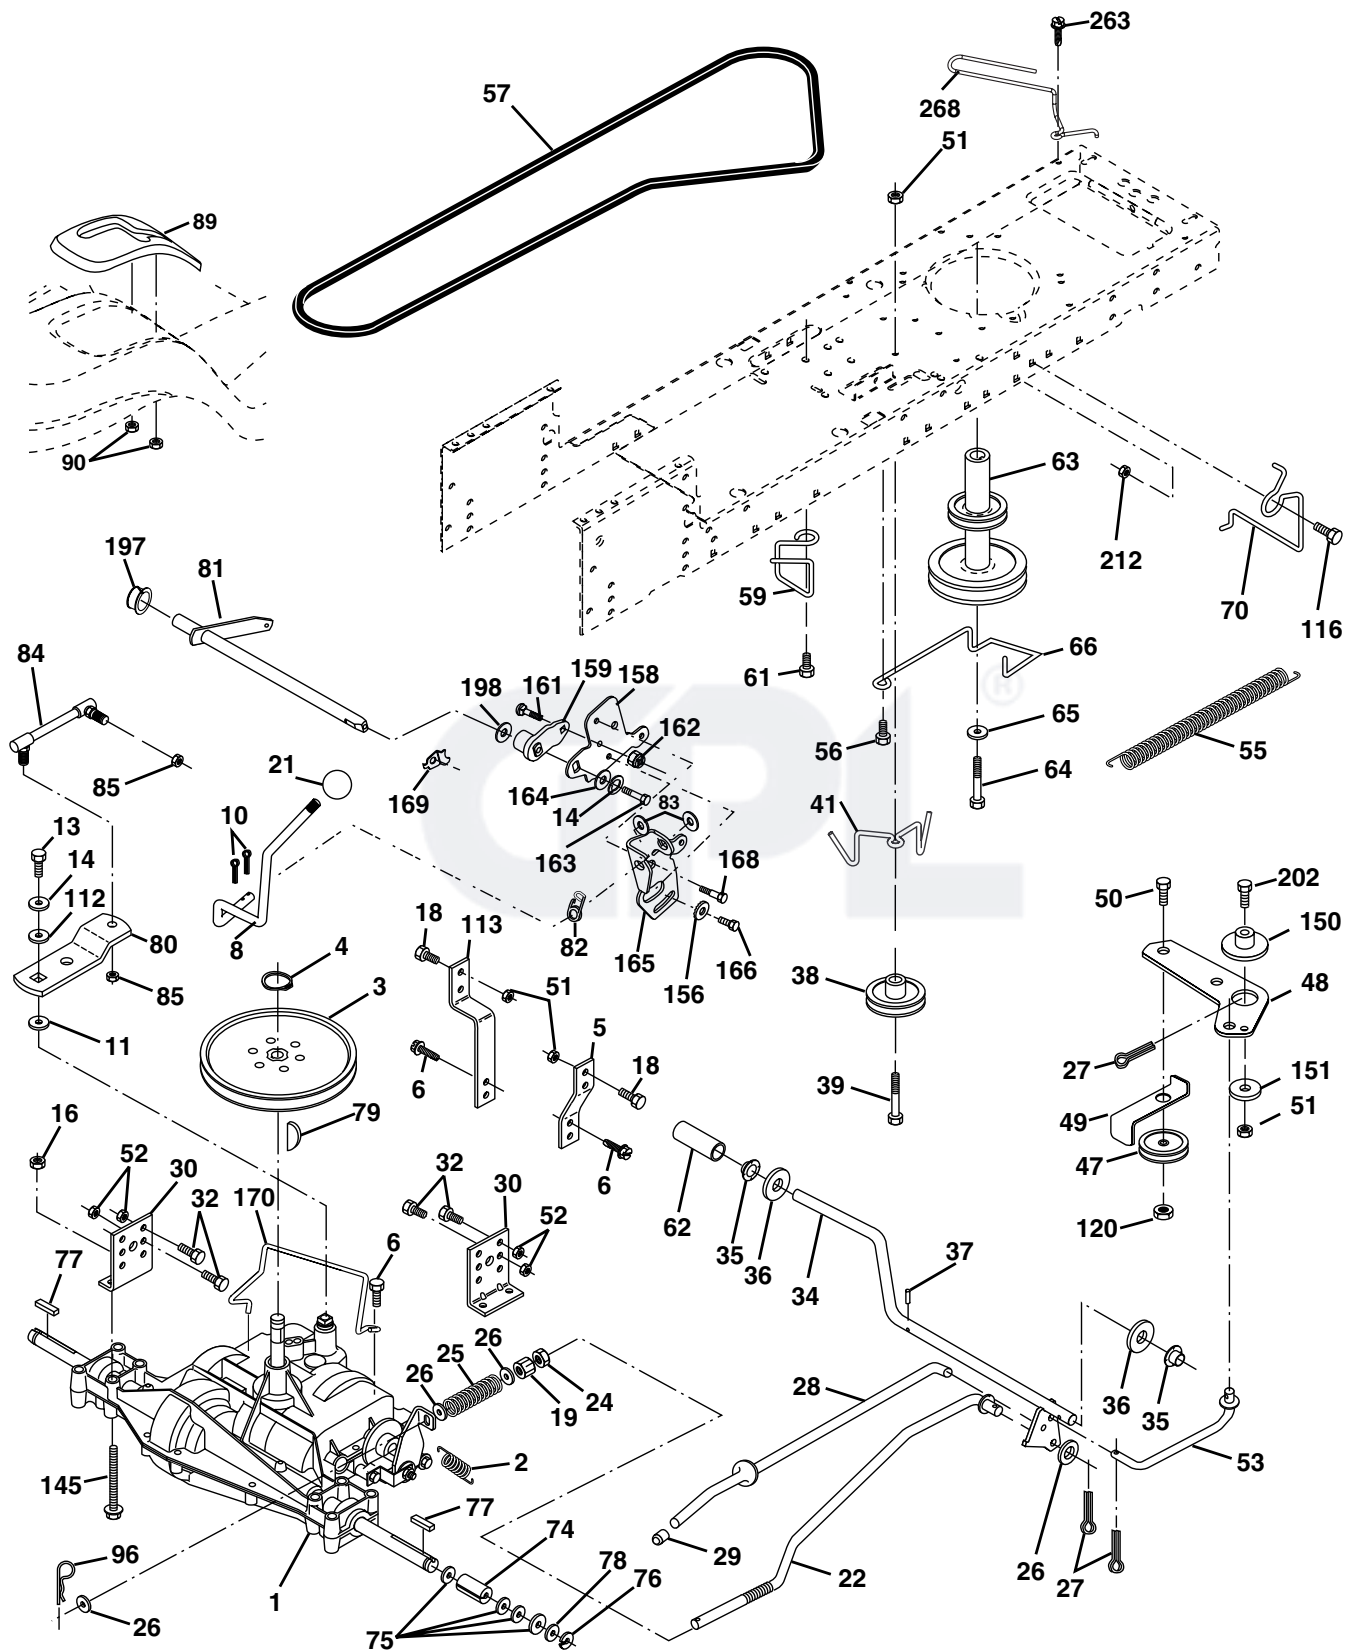

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72

## DRIVE


| KEY NO. | PART NO.            | DESCRIPTION                                                            |
|---------|---------------------|------------------------------------------------------------------------|
| 1       | -----               | Transaxle Peerless 205-544C<br>Order parts from transaxle manufacturer |
| 2       | 532 14 66-82        | Spring Return Brake T/a Zinc                                           |
| 3       | 532 12 36-66        | Pulley Transaxle 18" tires                                             |
| 4       | 812 00 00-28        | Ring Retainer # 5100-62                                                |
| 5       | 532 12 15-20        | Strap Torque 30 Degrees                                                |
| 6       | 817 06 05-12        | Screw Thdrol 5/16-18                                                   |
| 8       | 532 16 58-66        | Rod Shift Fender Adjust Lt                                             |
| 10      | 876 02 04-16        | Pin Cotter 1/8 X 1 Cad                                                 |
| 11      | 532 10 57-01        | Washer Plate Shf 388 Sq Hole                                           |
| 13      | 874 55 04-12        | Bolt 1/4-28 Unf Gr 8 W/Patch                                           |
| 14      | 810 04 04-00        | Washer Lock Hvy Helical                                                |
| 16      | 873 80 05-00        | Nut Lock Hex w/Ins 5/16-18                                             |
| 18      | 874 78 06-16        | Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5                                     |
| 19      | 873 80 06-00        | Nut Lock 3/8-16 Unc                                                    |
| 21      | 532 12 12-74        | Knob                                                                   |
| 22      | 532 13 08-04        | Rod Brake Blk Zinc 26 840                                              |
| 24      | 873 35 06-00        | Nut Hex Jam 3/8-16 Unc                                                 |
| 25      | 532 10 68-88        | Spring Rod Brake 2 00 Zinc                                             |
| 26      | 819 13 13-16        | Washer 13/32 X 13/16 X 16 Ga                                           |
| 27      | 876 02 04-12        | Pin Cotter 1/8 X 3/4 Cad                                               |
| 28      | 532 17 57-65        | Rod Brake Parking LT/YT                                                |
| 29      | 532 07 16-73        | Cap Brake Parking Black                                                |
| 30      | 532 17 49-73        | Bracket Mtg Transaxle                                                  |
| 32      | 874 76 05-12        | Bolt Hex Hd 5/16-18unc X 3/4                                           |
| 34      | 532 17 55-78        | Shaft Asm Pedal Foot                                                   |
| 35      | 532 12 01-83        | Bearing Nylon Blk 629 Id                                               |
| 36      | 819 21 16-16        | Washer 21/32 X 1 X 16 Ga                                               |
| 37      | 532 12 49-63        | Pin Roll 3/16 X 1"                                                     |
| 38      | 532 17 91-14        | Pulley Idler                                                           |
| 39      | 874 76 06-48        | Bolt Fin Hex 3/8-16 Unc x 3                                            |
| 41      | 532 17 55-56        | Keeper Belt Idler Flat                                                 |
| 47      | 532 12 77-83        | Pulley Idler V Groove Plastic                                          |
| 48      | 532 15 44-07        | Bellcrank Clutch Grnd Driv                                             |
| 49      | 532 12 32-05        | Retainer Belt Style Spring                                             |
| 50      | <b>872 11 06-12</b> | Bolt Carriage 3/8-16 x 1-1/2 Gr. 5                                     |
| 51      | 873 68 06-00        | Nut Crownlock 3/8-16 Unc                                               |
| 52      | 873 68 05-00        | Nut Crownlock 5/16-18 Unc                                              |
| 53      | 532 10 57-10        | Link Clutch                                                            |
| 55      | 532 10 57-09        | Spring Return Clutch 6 75                                              |
| 56      | <b>817 06 06-14</b> | Screw 3/8-16 X .875                                                    |
| 57      | 532 13 08-01        | V-Belt Ground Drive 95 25                                              |
| 59      | 532 16 96-91        | Keeper Belt Span Ctr                                                   |
| 61      | 817 12 06-14        | Screw 3/8-16 x .875                                                    |
| 62      | 532 12 48-72        | Cover Pedal Round                                                      |
| 63      | 532 18 02-19        | Engine Pulley                                                          |
| 64      | 871 17 07-64        | Bolt Hex                                                               |

| KEY NO. | PART NO.            | DESCRIPTION                        |
|---------|---------------------|------------------------------------|
| 65      | 810 04 07-00        | Washer Lock Hvy Hlcl Spr 7/16      |
| 66      | 532 15 47-78        | Keeper Belt Engine Foolproof       |
| 70      | 532 18 02-18        | Guide Belt Mower Drive RH          |
| 74      | 532 13 70-57        | Spacer Axle                        |
| 75      | 532 12 17-49        | Washer 25/32 X 1 1/4 X 16 Ga       |
| 76      | 812 00 00-01        | E-ring #5133-75                    |
| 77      | 532 12 35-83        | Key Square 2 0 X 1845/ 1865        |
| 78      | 532 12 17-48        | Washer 25/32 X 1-5/8 X 16 Ga       |
| 79      | 532 12 50-96        | Key Woodruff #9 3/16 x 3/4         |
| 80      | 532 13 14-86        | Arm Shift                          |
| 81      | 532 16 55-94        | Shaft Asm Cross 18"t               |
| 82      | 532 16 57-11        | Spring Torsion T/a                 |
| 83      | 819 17 12-16        | Washer 17/32 X 3/4 X 16 Ga         |
| 84      | 532 16 62-28        | Link Transaxle                     |
| 85      | 532 15 03-60        | Nut Lock Center 1/4 - 28 FNTHD     |
| 89      | 532 17 65-79        | Console Shift STLT                 |
| 90      | 532 12 43-46        | Nut Self-thd Wsh-hd 1/4 Zinc       |
| 96      | 532 12 47-88        | Retainer Spring 1"                 |
| 112     | 819 09 12-10        | Washer 9/32 x 3/4 x 10 Ga.         |
| 113     | 532 12 72-85        | Strap Torque LT                    |
| 116     | 872 14 06-08        | Bolt Rdhd Sq Neck 3/8-16 x 1.0     |
| 120     | 873 90 06-00        | Nut Lock Flg. 3/8-16 Unc           |
| 145     | 874 49 05-40        | Bolt Hex 5/16-18 Gr. 5             |
| 150     | 532 17 54-56        | Spacer                             |
| 151     | 819 13 32-10        | Washer 13/32 x 2 x 10 Ga.          |
| 156     | 532 16 60-02        | Washer Srrted 5/16ID x 1.125       |
| 158     | 532 16 55-89        | Bracket Shift Mount                |
| 159     | 532 16 54-94        | Hub Tapered Flange Shift Lt        |
| 161     | 872 14 04-06        | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5   |
| 162     | 873 68 04-00        | Nut Crownlock 1/4-20 Unc           |
| 163     | 874 78 04-16        | Bolt Hex Fin 1/4-20 Unc x 1 Gr 5   |
| 164     | 819 09 10-10        | Washer 5/8 x .281 x 10 Ga          |
| 165     | 532 16 56-23        | Bracket Pivot Lever                |
| 166     | 532 16 68-80        | Screw 5/16-18 x 5/8                |
| 168     | 532 16 54-92        | Bolt Shoulder 5/16-18 x .561       |
| 169     | 532 16 55-80        | Plate Fastening Lt                 |
| 170     | 532 17 83-94        | Keeper, Belt T/A D/P               |
| 197     | 532 16 96-13        | Nyliner Snap-In                    |
| 198     | 532 16 95-93        | Washer Nyl 7/8 ID x 105"           |
| 202     | 872 11 06-14        | Bolt Carr. SH 3/8-16 x 1-3/4 Gr. 5 |
| 212     | 532 14 52-12        | Nut, Hex Flange Lock               |
| 263     | <b>817 00 06-12</b> | Screw Hexwsh Thdrl 3/8-16 x 3/4    |
| 268     | <b>532 18 24-03</b> | Guard Muffler LH                   |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
STEERING ASSEMBLY

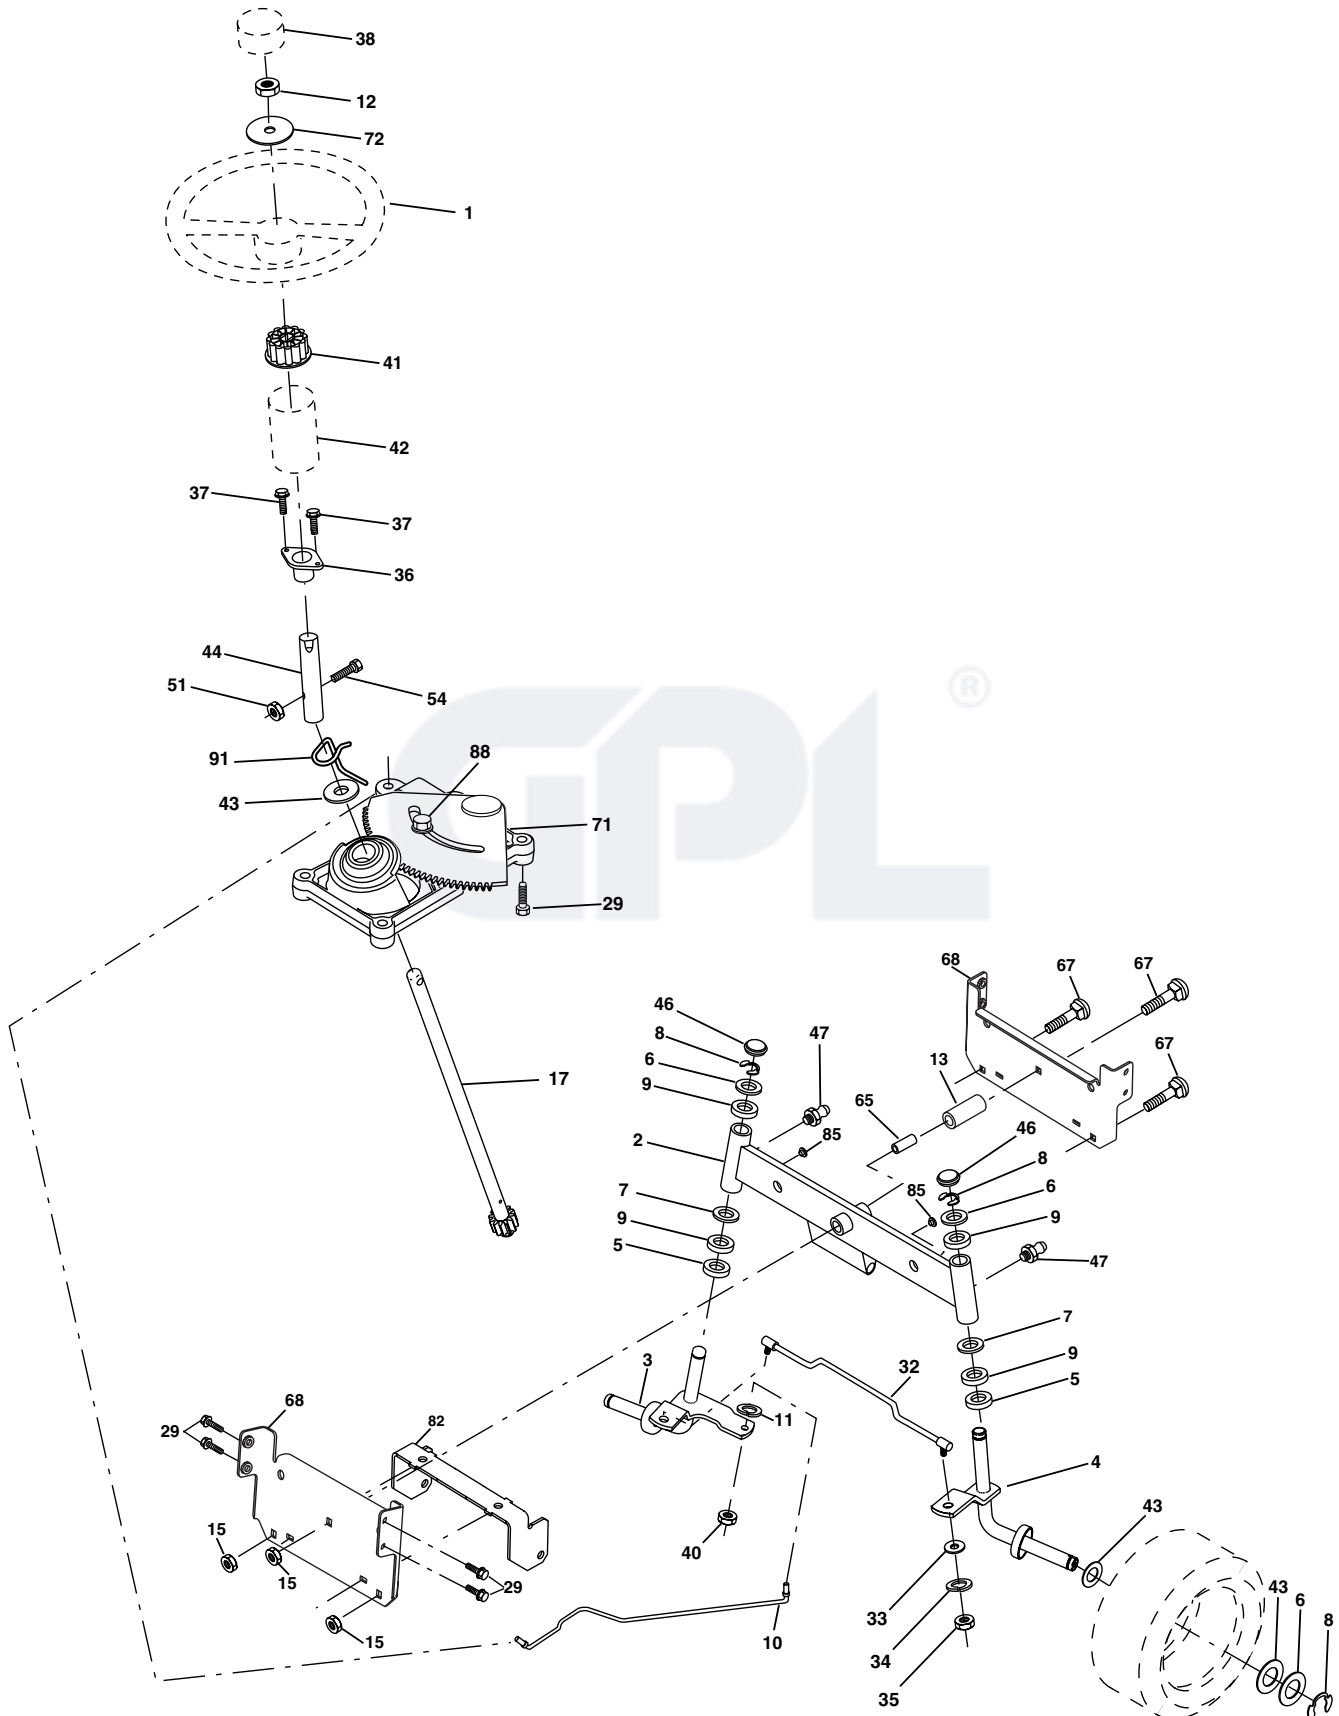

# REPAIR PARTS


## TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72 STEERING ASSEMBLY

| KEY NO. | PART NO.            | DESCRIPTION                       |
|---------|---------------------|-----------------------------------|
| 1       | 532 17 71-82        | Wheel Steering                    |
| 2       | 532 17 51-31        | Axle Asm                          |
| 3       | 532 16 98-40        | Spindle Asm LH                    |
| 4       | 532 16 98-39        | Spindle Asm RH                    |
| 5       | 532 12 49-31        | Bearing Race Thrust Harden        |
| 6       | 532 12 17-48        | Washer 25/32 X 1-5/8 X 16 Ga      |
| 7       | 819 27 20-16        | Washer 27/32 X 1-1/4 X 16 Ga      |
| 8       | 812 00 00-29        | Ring Klip #t5304-75               |
| 9       | 532 12 49-37        | Bearing Col Strg Blk              |
| 10      | 532 17 51-21        | Link Drag                         |
| 11      | 810 04 06-00        | Washer Lock Hvy Hlcl Spr 3/8      |
| 12      | <b>873 94 08-00</b> | Nut Hex Jam Toplock 1/2-20        |
| 13      | 532 13 65-18        | Bearing Axle STLT/GT              |
| 15      | 532 14 52-12        | Nut Hexflange Lock                |
| 17      | <b>532 18 06-41</b> | Shaft Asm Strg                    |
| 26      | 532 12 68-47        | Bushing Link Drag Blk LR          |
| 28      | 819 13 14-16        | Washer 13/32 X 7/8 X 16 Ga        |
| 29      | 817 06 06-12        | Screw 3/8-16x3/4 SMGML            |
| 30      | 876 02 04-12        | Pin Cotter 1/8 X 3/4 Cad          |
| 32      | 532 13 04-65        | Rod Tie Wire Form 19 75 Mech      |
| 36      | 532 15 50-99        | Bushing Strg                      |
| 37      | 532 15 29-27        | Screw                             |
| 38      | 532 17 71-83        | Insert Cap Strg Wh                |
| 40      | 532 12 47-01        | Lock nut                          |
| 41      | 532 10 07-11        | Adaptor Wheel Strg                |
| 42      | 532 16 96-33        | Boot Steering Shaft               |
| 43      | 532 12 17-49        | Washer 25/32 X 1 1/4 X 16 Ga      |
| 44      | <b>532 18 06-40</b> | Extension Steering Shaft          |
| 46      | 532 12 12-32        | Cap Spindle Fr Top Blk            |
| 47      | <b>532 18 32-26</b> | Fitting Grease                    |
| 51      | <b>873 54 04-00</b> | Nut Crownlock 1/4-28              |
| 54      | <b>871 13 04-20</b> | Bolt Hex 1/4-28 Unf x 1-1/4 Gr. 8 |
| 63      | 874 78 06-16        | Bolt Fin Hex 3/8-16unc x 1 Gr. 5  |
| 65      | 532 16 03-67        | Spacer Axle                       |
| 67      | 872 14 06-18        | Bolt RDHD SQNK 3/8-16 x 2-1/4     |
| 68      | 532 16 98-27        | Axle, Brace                       |
| 71      | 532 17 51-46        | Steering Asm.                     |
| 72      | <b>819 18 38-12</b> | Washer 9/16 x 2-3/8 12 G.         |
| 82      | 532 16 98-35        | Bracket Susp Chassis Front        |
| 85      | 532 13 38-35        | Fastner Christmas Tree            |
| 88      | 532 17 51-18        | Bolt Shoulder 7/16-20 Unc         |
| 91      | 532 17 55-53        | Clip Steering                     |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
ENGINE

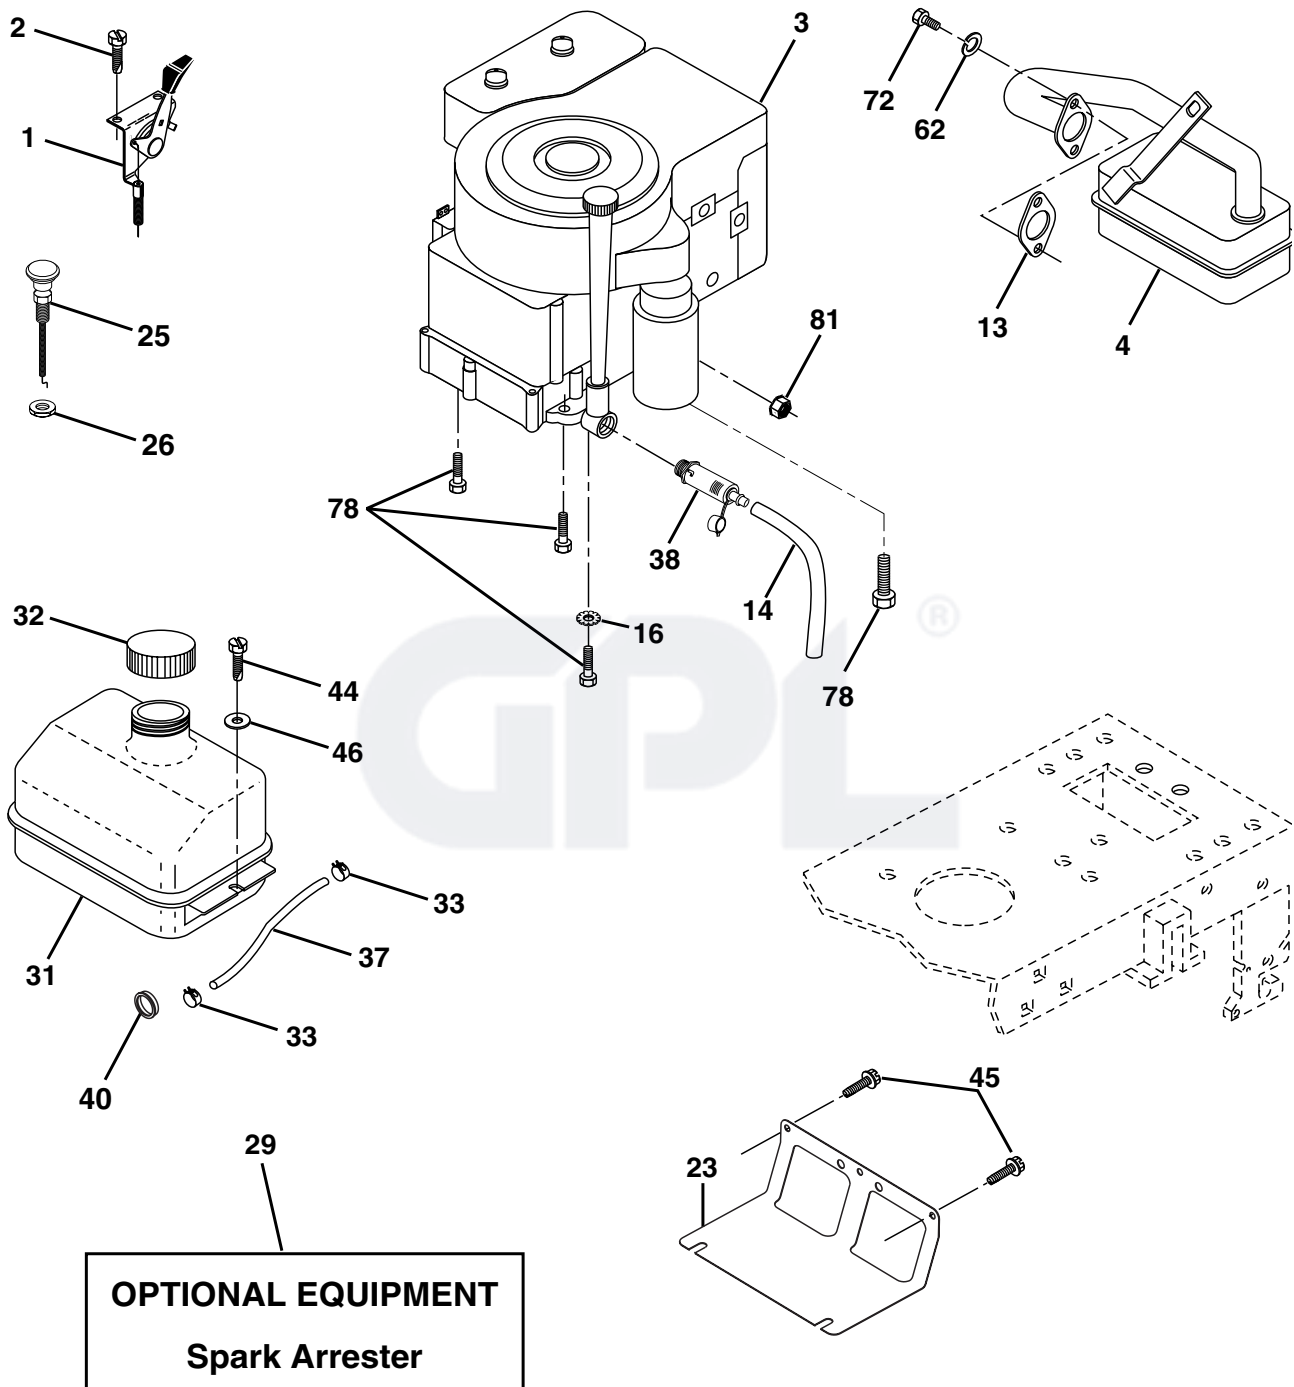

# REPAIR PARTS


TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
ENGINE

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                                                           |
|------------|---------------------|-----------------------------------------------------------------------|
| 1          | 532 17 05-51        | Control Th/ch LH Flag                                                 |
| 2          | 817 72 04-08        | Screw Hex Thd Cut 1/4-20 x 1/2                                        |
| 3          | -----               | Engine B&S Model No. 289707<br>(Order parts from engine manufacturer) |
| 4          | 532 13 73-48        | Muffler                                                               |
| 13         | 532 16 52-91        | Gasket                                                                |
| 14         | 532 14 84-56        | Tube Drain Oil Easy                                                   |
| 16         | 811 05 06-00        | Washer Lock Ext Tooth 3/8                                             |
| 23         | 532 16 98-37        | Shield Brn/Dbr Guard                                                  |
| 25         | 532 18 09-45        | Control Choke 1 Cyl                                                   |
| 26         | 873 92 06-00        | Nut Keps 3/8-24 Unf                                                   |
| 29         | 532 13 71-80        | Kit Spark Arrestor (Flat Scrn)                                        |
| 31         | 532 10 92-02        | Tank Fuel Front                                                       |
| 32         | 532 14 05-27        | Cap Asm Fuel W/sym Vented                                             |
| 33         | 532 12 34-87        | Clamp Hose Black                                                      |
| 37         | 532 13 70-40        | Line Fuel 20"                                                         |
| 38         | <b>532 18 16-54</b> | Plug Drain Oil Easy                                                   |
| 40         | 532 12 40-28        | Bushing Snap Nyl Blk Fuel Line                                        |
| 44         | 817 67 04-12        | Screw Hexwsh Thdrol 1/4-20x3/4                                        |
| 45         | 817 00 06-12        | Screw 3/8-16 x 3/4                                                    |
| 46         | 819 09 14-16        | Washer 9/32 X 7/8 X 16 Ga                                             |
| 62         | 810 04 05-00        | Washer Lock Hvy Hlcl Spr 5/16                                         |
| 72         | 871 07 05-12        | Screw Hexhd Cap 5/16-18 x 3/4                                         |
| 78         | 817 06 06-20        | Screw 3/8-16 x 1-1/4 SMGML                                            |
| 81         | 873 51 04-00        | Nut Keps Hex 1/4-20                                                   |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
SEAT ASSEMBLY

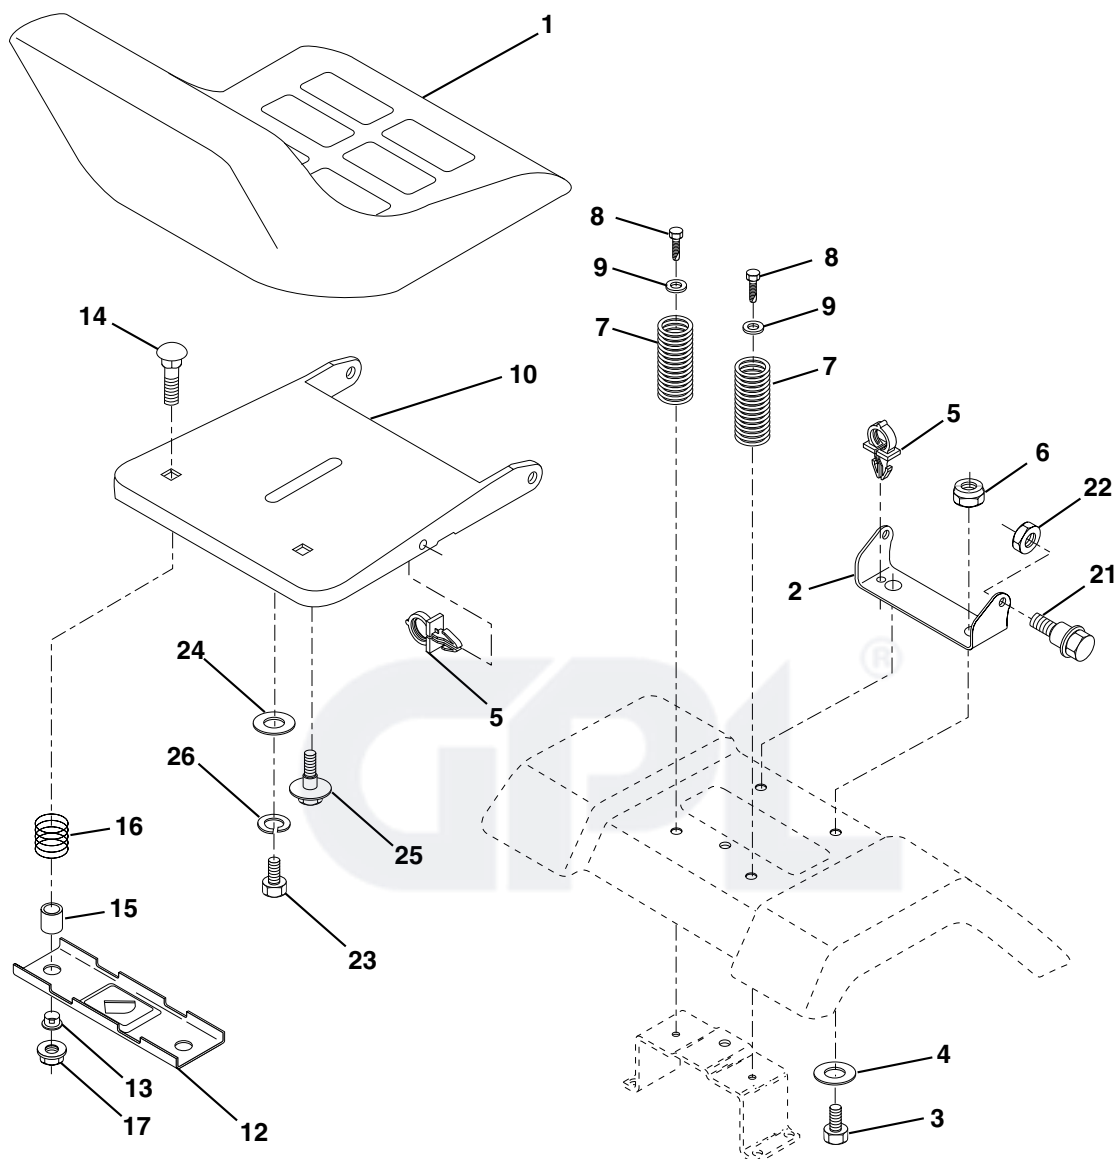


| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 1       | 532 14 01-16 | Seat                           |
| 2       | 532 14 05-51 | Bracket Pivot Seat 8 720       |
| 3       | 871 11 06-16 | Bolt Fin Hex 3/8-16 Unc x 1    |
| 4       | 819 13 16-10 | Washer 13/32 X 1 X 10 Ga       |
| 5       | 532 14 50-06 | Clip Push-In                   |
| 6       | 873 80 06-00 | Nut Hex w/Ins. 3/8-16 Unc      |
| 7       | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi |
| 8       | 817 00 06-16 | Screw 3/8-16 x 1.5 SMGML       |
| 9       | 819 13 16-14 | Washer 13/32 X 1 X 14 Ga.      |
| 10      | 532 18 24-93 | Pan Seat                       |
| 12      | 532 12 12-46 | Bracket Mounting Switch        |
| 13      | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id     |

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 14      | 872 05 04-12 | Bolt Rdhd Sqnk 1/4-20x1-1/2    |
| 15      | 532 13 43-00 | Spacer Split 28x96 Yel Zinc    |
| 16      | 532 12 12-50 | Spring Cprsn 1.27 Blk Pnt      |
| 17      | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr 5 Zinc |
| 21      | 532 17 18-52 | Bolt SHLD 5/16-18 Unc-2A       |
| 22      | 873 80 05-00 | Nut Hex Lock W/Ins 5/16-18     |
| 23      | 871 11 08-14 | Bolt Hex                       |
| 24      | 819 17 19-12 | Washer 17/32 X 1-3/16 X 12 Ga. |
| 25      | 532 12 70-18 | Bolt Shoulder 5/16-18 X 62     |
| 26      | 810 04 08-00 | Washer Lock Hvy HLCL Spr. 1/2  |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm


# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
DECALS

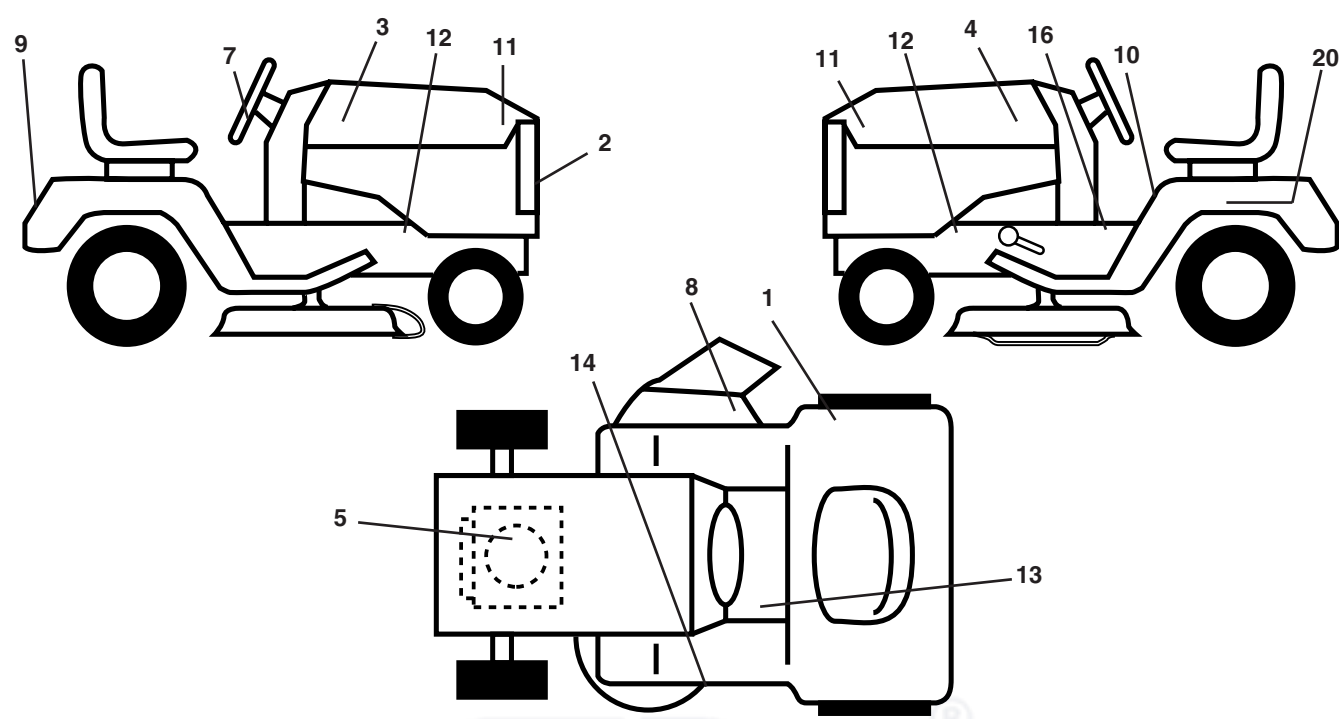

| KEY NO. | PART NO.     | DESCRIPTION                     | KEY NO. | PART NO.     | DESCRIPTION                     |
|---------|--------------|---------------------------------|---------|--------------|---------------------------------|
| 1       | 532 18 04-32 | Decal 100 DBA/CE                | 13      | 532 15 97-37 | Decal Brake/Clutch Symbol LT    |
| 2       | 532 15 22-62 | Decal Grille                    | 14      | 532 13 68-32 | Decal V-Belt Schematic          |
| 3       | 532 17 58-85 | Decal Hood RH                   | 16      | 532 14 08-37 | Decal Saddle Brake Parking      |
| 4       | 532 17 58-86 | Decal Hood LH                   | 20      | 532 14 50-05 | Decal Bat Dan/Psn               |
| 5       | 532 17 08-32 | Decal HP Engine                 | --      | 532 16 25-98 | Decal Drawbar Load Limit        |
| 7       | 532 17 58-84 | Decal, Ins. Strg Whl.           | --      | 532 17 12-84 | Pad Footrest LH STLT            |
| 8       | 532 18 21-66 | Decal Mower Cutfinger           | --      | 532 17 12-85 | Pad Footrest RH STLT            |
| 9       | 532 14 17-61 | Decal Fender Jonsered           | --      | 532 13 83-11 | Decal Handle Lift Height Adjust |
| 10      | 532 14 54-98 | Decal Read Owner's Manual Syms. | --      | 532 18 30-00 | Manual Operator's (Euro.)       |
| 11      | 532 16 29-27 | Decal Hood Insert B&S White     | --      | 532 18 30-01 | Manual Operator's (Scan.)       |
| 12      | 532 15 97-36 | Decal Chassis Hot Muffler       |         |              |                                 |

## WHEELS & TIRES

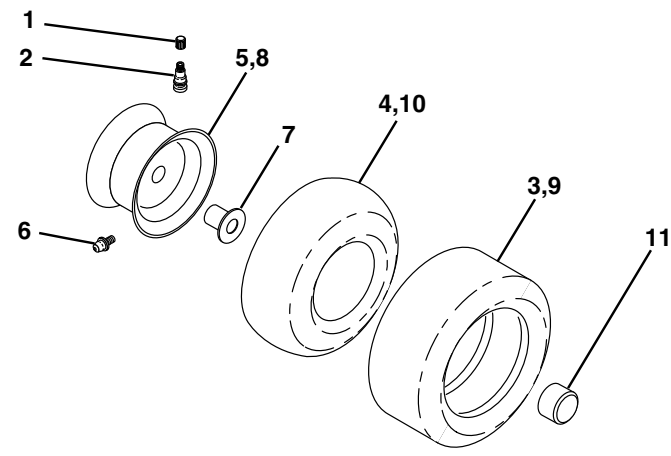


| KEY NO. | PART NO.     | DESCRIPTION                       |
|---------|--------------|-----------------------------------|
| 1       | 532 05 91-92 | Cap Valve Tire                    |
| 2       | 532 06 51-39 | Stem Valve                        |
| 3       | 532 10 62-22 | Tire F Ts 15 X 6 0 - 6 Service    |
| 4       | 532 05 99-04 | Tube Front (Service Item Only)    |
| 5       | 532 13 83-36 | Rim Asm 6"front Silver Service    |
| 6       | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7       | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8       | 532 13 83-37 | Rim Asm 8"rear Silver Service     |
| 9       | 532 12 46-35 | Tire R Ts 18x9 5-8 C Service      |
| 10      | 532 12 49-26 | Tube Rear (Service Item Only)     |
| 11      | 532 17 50-39 | Cap Axle Blk 1 50 X 1 00          |
| --      | 532 14 43-34 | Sealant, Tire ( 10 oz. Tube)      |

NOTE: All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
MOWER DECK

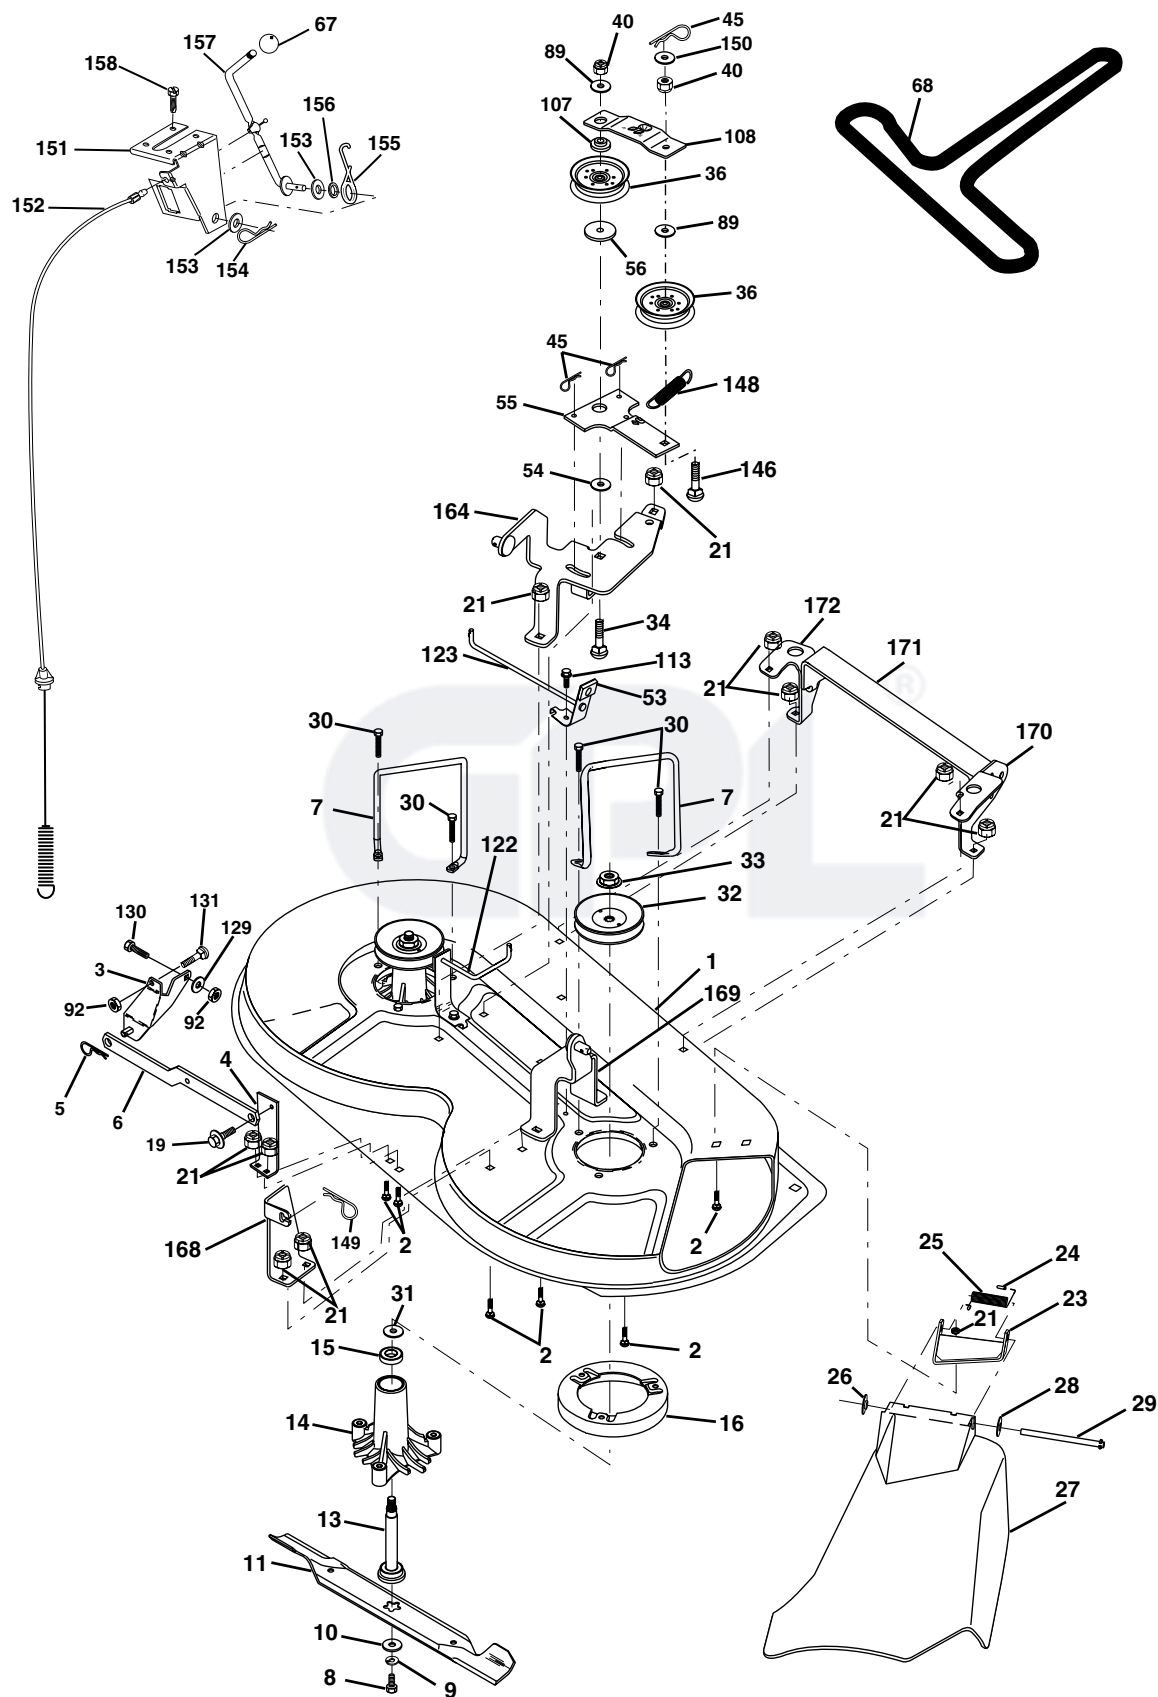

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
MOWER DECK


| KEY NO. | PART NO.            | DESCRIPTION                   |
|---------|---------------------|-------------------------------|
| 1       | 532 17 45-95        | Mower Deck Assembly           |
| 2       | 872 14 05-06        | Bolt                          |
| 3       | 532 13 80-17        | Bracket Assembly, Sway Bar    |
| 4       | 532 17 56-54        | Bracket Sway Bar              |
| 5       | 532 12 46-70        | Retainer Spring               |
| 6       | 532 17 80-24        | Bar, Sway Deck                |
| 7       | 532 14 06-08        | Keeper Belt                   |
| 8       | 532 85 08-57        | Bolt, Hex 3/8-24 x 1.25 Gr. 8 |
| 9       | 810 03 06-00        | Washer, Lock Hvy Hlcl 3/8     |
| 10      | 532 14 02-96        | Washer, Hardened              |
| 11      | 532 13 84-96        | Blade, Mower                  |
| 13      | 532 13 76-45        | Shaft Assembly, Mandrel       |
| 14      | 532 12 87-74        | Housing, Mandrel, Vented      |
| 15      | 532 11 04-85        | Bearing, Ball, Mandrel        |
| 16      | 532 17 44-93        | Stripper, Mower Deck          |
| 19      | 532 13 28-27        | Bolt, Shoulder                |
| 21      | 873 68 05-00        | Nut Crownlock 5/16-18         |
| 23      | 532 13 66-31        | Bracket, Mower Deflector      |
| 24      | 532 10 53-04        | Cap, Sleeve                   |
| 25      | 532 12 37-13        | Spring, Torsion, Deflector    |
| 26      | 532 11 04-52        | Nut, Push                     |
| 27      | 532 17 61-62        | Shield, Deflector             |
| 28      | 819 11 10-16        | Washer 11/32 x 5/8 x 16 Ga.   |
| 29      | 532 12 19-80        | Rod, Hinge                    |
| 30      | 532 17 39-84        | Screw Thdrol                  |
| 31      | 532 12 99-63        | Washer, Spacer                |
| 32      | 532 15 35-31        | Pulley, Mandrel               |
| 33      | 532 17 83-42        | Nut, Toplock, Flanged         |
| 34      | 872 11 06-14        | Bolt Rdhd 3/8-16 x 1-3/4      |
| 36      | 532 13 14-94        | Pulley, Idler, Flat           |
| 40      | 873 68 06-00        | Nut Crownlock 3/8-16          |
| 45      | 532 12 47-88        | Retainer, Spring              |
| 53      | 532 13 08-40        | Brake Assembly                |
| 54      | <b>532 17 85-15</b> | Washer, Hardened              |
| 55      | 532 13 38-40        | Idler Arm Assembly            |
| 56      | 532 16 57-23        | Spacer, Retainer              |
| 67      | 532 10 69-32        | Knob RD 3/8-16 Plstc Thd      |

| KEY NO. | PART NO.     | DESCRIPTION                                                                              |
|---------|--------------|------------------------------------------------------------------------------------------|
| 68      | 532 18 02-13 | Belt                                                                                     |
| 89      | 819 13 16-12 | Washer 13/32 x 1 x 12 Ga                                                                 |
| 92      | 873 80 06-00 | Nut Lock Hex w/Ins. 3/8-16 Unc                                                           |
| 107     | 532 13 35-02 | Spacer, Retainer                                                                         |
| 108     | 532 13 35-03 | Stiffener, Idler Arm                                                                     |
| 113     | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2                                                               |
| 122     | 532 17 45-05 | Rod, Brake, LH                                                                           |
| 123     | 532 17 45-04 | Rod, Brake, RH                                                                           |
| 129     | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga.                                                            |
| 130     | 874 78 06-16 | Bolt Fin Hex 3/8-16 Unc x 1 Gr. 5                                                        |
| 131     | 872 14 06-08 | Bolt RdHd Sqnk 3/8-16 Unc x 1                                                            |
| 146     | 532 16 58-91 | Bolt Carriage Idler                                                                      |
| 148     | 532 16 90-22 | Spring Return Idler                                                                      |
| 149     | 532 16 58-98 | Retainer Spring Yellow Zinc                                                              |
| 150     | 819 09 12-16 | Washer 9/32 x 3/4 x 16 Ga.                                                               |
| 151     | 532 16 96-70 | Bracket Clutch                                                                           |
| 152     | 532 17 60-79 | Cable Clutch                                                                             |
| 153     | 532 16 96-74 | Washer Flat 3/8" Type B                                                                  |
| 154     | 532 16 96-75 | Spring Retainer                                                                          |
| 155     | 532 16 96-71 | Spring Retention Lever                                                                   |
| 156     | 532 16 96-72 | Spacer                                                                                   |
| 157     | 532 16 96-69 | Rod Clutch                                                                               |
| 158     | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2                                                           |
| 164     | 532 17 49-76 | Bracket Asm Idler Support                                                                |
| 168     | 532 17 23-77 | Bracket Deck Cable                                                                       |
| 169     | 532 17 49-77 | Bracket Asm Suspension                                                                   |
| 170     | 532 17 23-59 | Bracket Suspension RF                                                                    |
| 171     | 532 16 52-37 | Brace Support Susp. Frt                                                                  |
| 172     | 532 17 23-55 | Bracket Suspension LF                                                                    |
| --      | 532 13 07-94 | Mandrel Assembly (Includes Housing, Shaft and Shaft Hardware Only - Pulley Not Included) |
| --      | 532 18 13-76 | Replacement Mower, Complete                                                              |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
MOWER LIFT

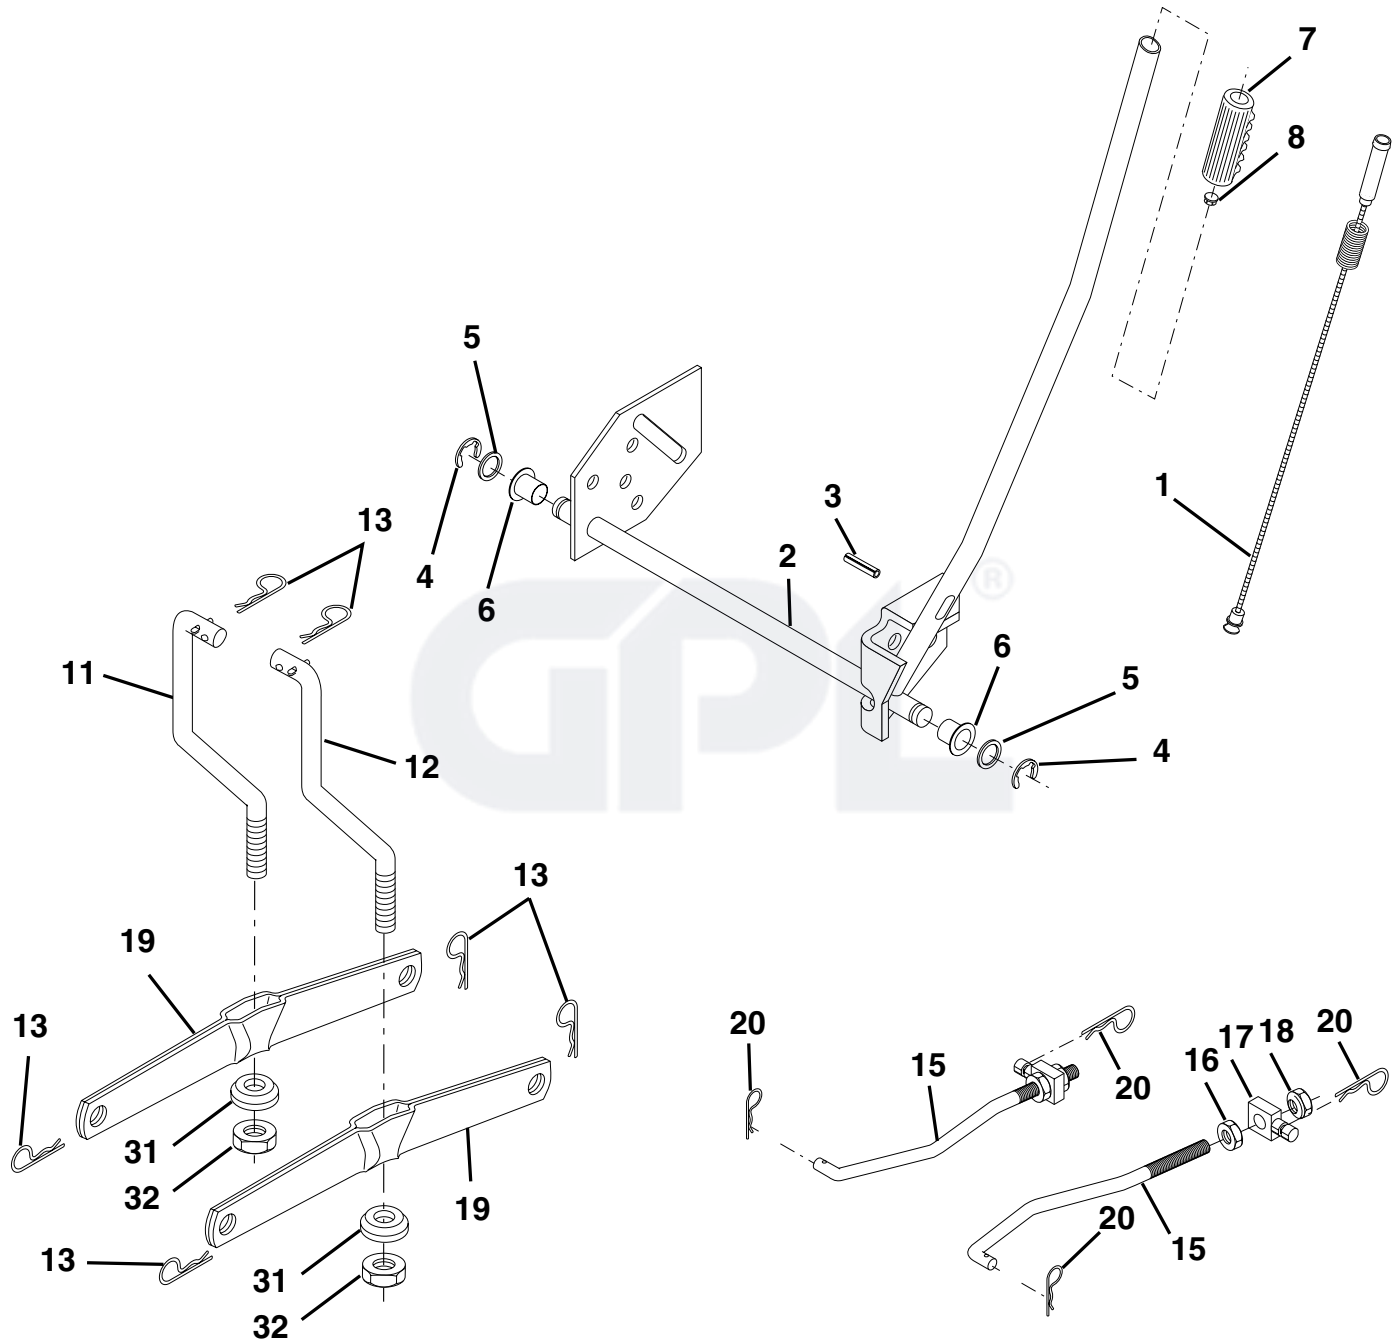

# REPAIR PARTS

TRACTOR - MODEL NO. LT12 (JLT12F), PRODUCT NO. 954 13 00-72  
MOWER LIFT

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                       |
|------------|--------------|-----------------------------------|
| 1          | 532 15 94-60 | Washer Asm Inner Spring W/Plunger |
| 2          | 532 15 94-71 | Shaft Asm. Lift                   |
| 3          | 532 10 57-67 | Pin Groove                        |
| 4          | 812 00 00-02 | E Ring #5133-62                   |
| 5          | 819 21 16-21 | Washer 21/32 x 1 x 21 Ga          |
| 6          | 532 12 01-83 | Bearing Nylon                     |
| 7          | 532 10 94-13 | Grip Handle                       |
| 8          | 532 12 23-65 | Button Plunger                    |
| 11         | 532 13 98-65 | Link Lift LH                      |
| 12         | 532 13 98-66 | Link Lift RH                      |
| 13         | 532 12 46-70 | Retainer Spring                   |
| 15         | 532 17 32-88 | Link Front                        |
| 16         | 873 35 08-00 | Nut Jam Hex 1/2-13 Unc            |
| 17         | 532 17 56-89 | Trunnion                          |
| 18         | 873 80 08-00 | Nut Lock W/Wsh 1/2-13 Unc         |
| 19         | 532 13 98-68 | Arm Suspension Mower              |
| 20         | 532 16 35-52 | Retainer Spring                   |
| 31         | 532 16 98-65 | Bearing Pvt. Lift                 |
| 32         | 873 54 06-00 | Nut Crownlock 3/8-24              |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm