


LT 140

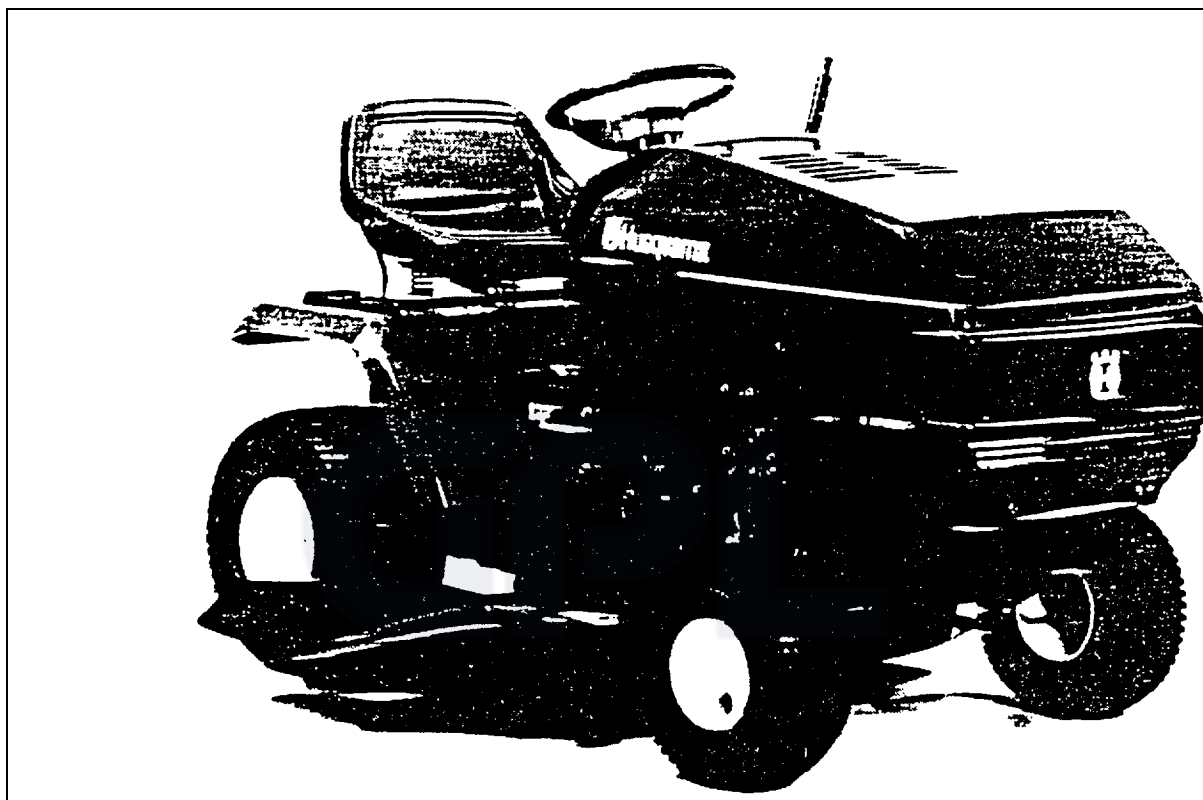

1. 1993

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52
ELECTRICAL

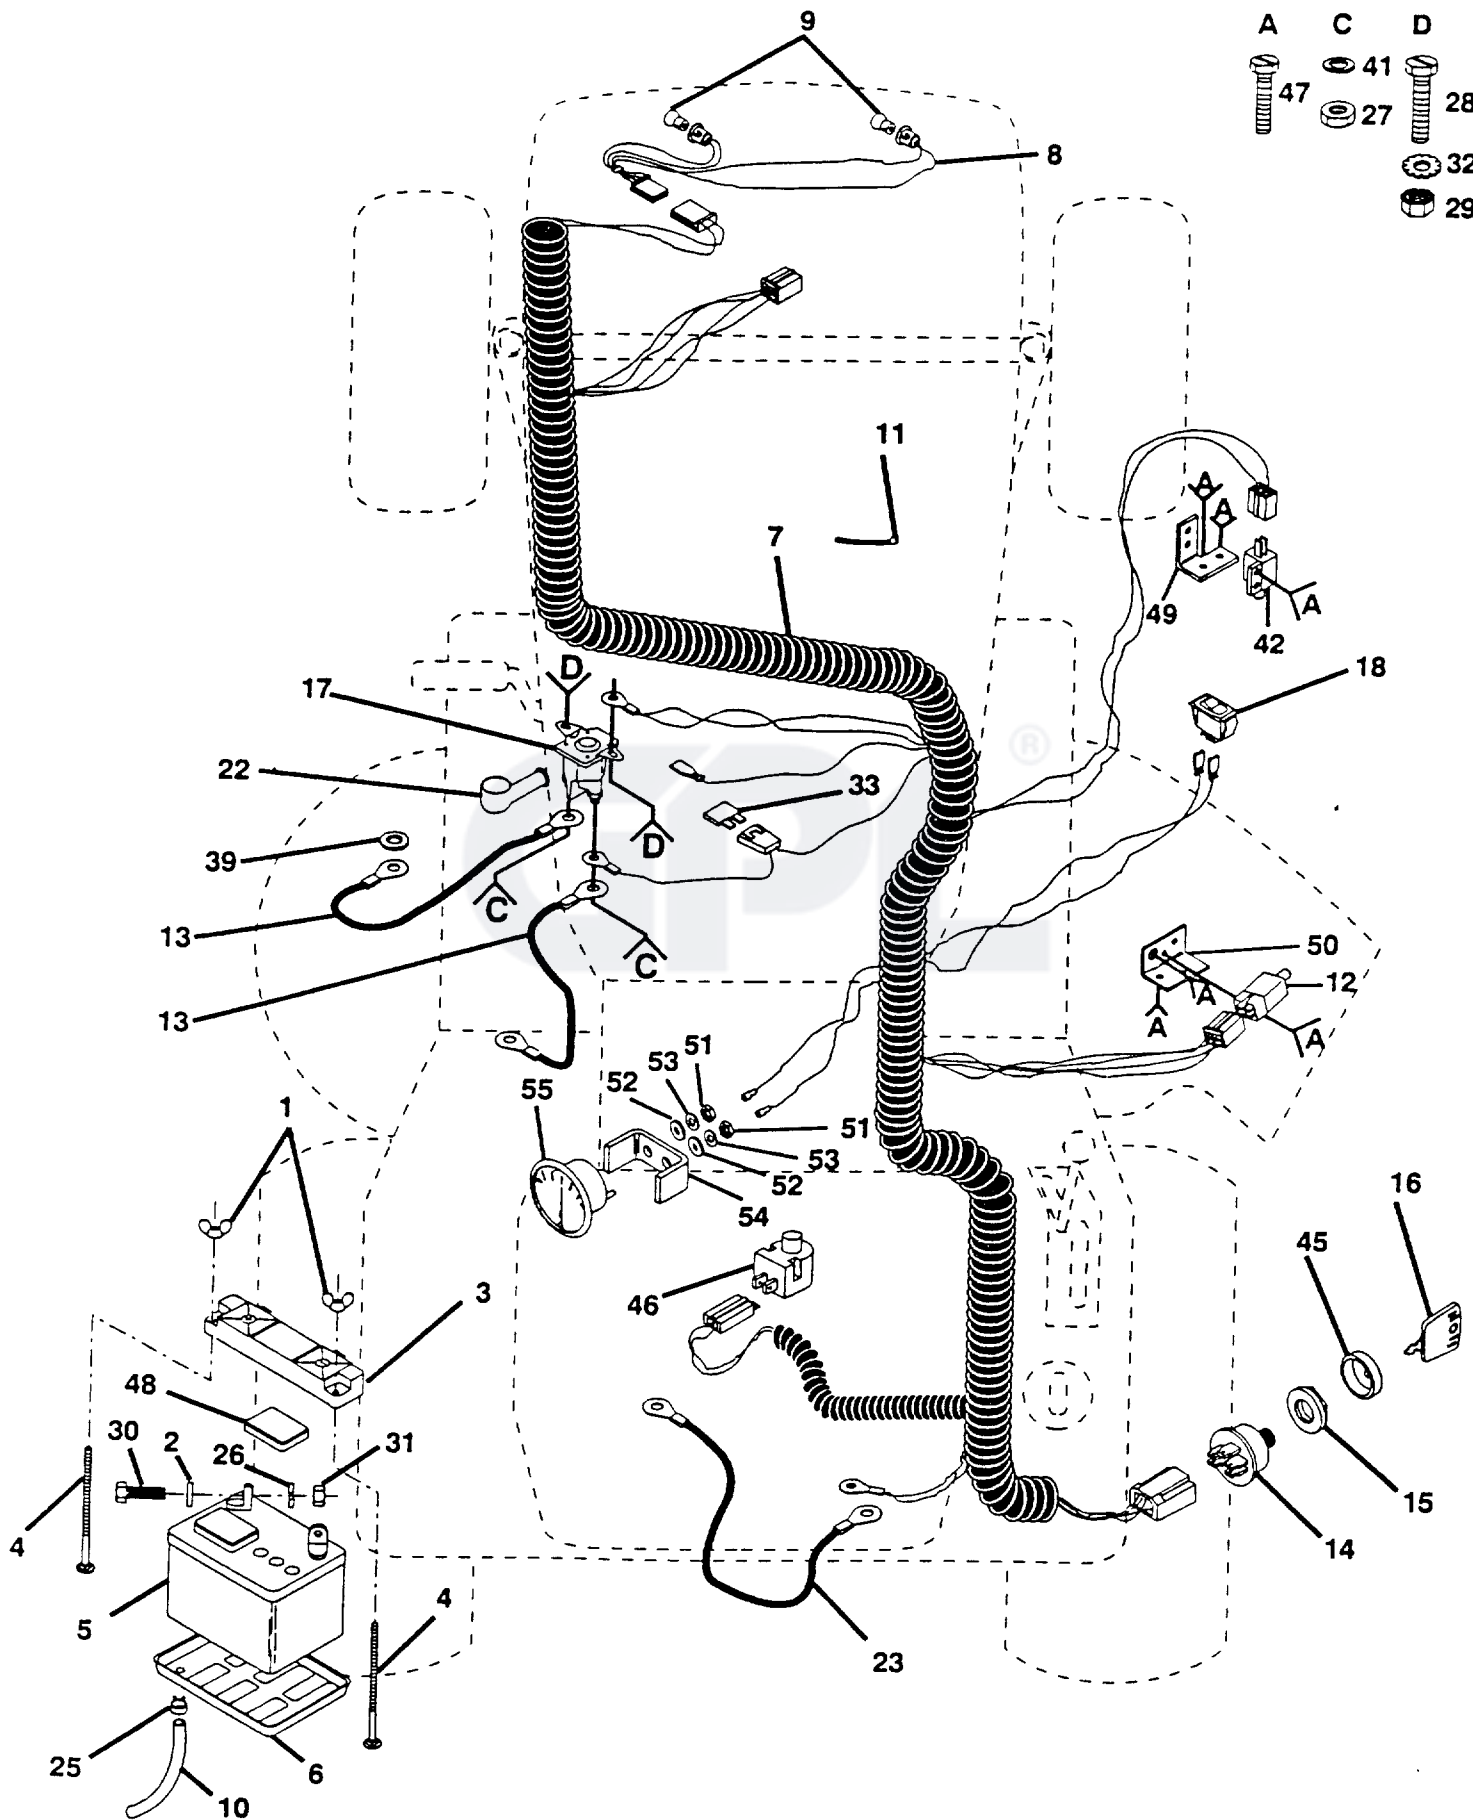

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52


ELECTRICAL

KEY PART NO.	PART NO.	DESCRIPTION
1	532 12 31-98	Nut, Wing 1/4-20
2	819 09 10-16	Washer 9/32 x 5/8 x 16 Gauge
3	532 10 24-76	Guard, Terminal
4	872 24 04-60	Bolt, Carriage 1/4-20 x 7-1/2
5	532 12 12-65	Battery
6	532 12 48-86	Tray, Battery
7	532 13 90-08	Harness, Ignition
8	532 13 68-50	Harness, Socket, Light
9	532 00 41-52	Bulb, Light
10	532 00 76-97	Tube, Tray, Battery
11	532 12 47-56	Cable Tie
12	532 10 95-53	Switch, Clutch, Attachment, Interlock
13	532 12 47-70	Cable, Battery
14	532 10 29-72	Switch, Ignition
15	532 12 42-11	Nut, Ignition
16	532 12 21-47	Key
17	532 13 84-06	Solenoid
18	532 11 07-12	Switch, Light
22	532 13 15-63	Cover, Terminal
23	532 12 47-73	Cable, Battery
25	532 10 95-96	Clamp, Hose
26	810 04 04-00	Washer, Lock, Heavy Helical 1/4
27	873 35 04-00	Nut, Hex, Jam 1/4-20 UNC
28	874 78 04-08	Bolt, Hex Head, Fin. 1/4-20 UNC x 1/2 Grade 5
29	873 51 04-00	Nut, Hex, Keps 1/4-20 UNC
30	874 76 04-12	Bolt, Hex Head 1/4-20 UNC x 3/4
31	873 22 04-00	Nut, Hex, Fin. 1/4-20 UNC
32	811 05 04-00	Washer, Lock, External Tooth 1/4
33	532 10 88-24	Fuse
39	811 15 04-00	Washer, Lock, Internal Tooth 1/4
41	810 09 04-00	Washer, Lock 1/4
42	532 10 44-45	Switch, Interlock, Clutch Pedal
45	532 12 36-20	Bezel, Ignition
46	532 12 13-05	Switch, Plunger
47	817 02 10-08	Screw, Hex Head, Self-Tapping #10-24 UNC x 1/2
48	532 12 12-64	Caps, Battery (Set)
49	532 10 82-36	Bracket, Switch, Interlock
50	532 13 08-90	Bracket, Switch
51	873 91 10-00	Nut
52	819 07 08-18	Washer 7/32 x 1/2 x 18 Gauge
53	810 10 10-00	Washer, Lock
54	532 13 17-08	Bracket, Ammeter
55	532 12 49-00	Ammeter Round 15 amp

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52
CHASSIS AND ENCLOSURES

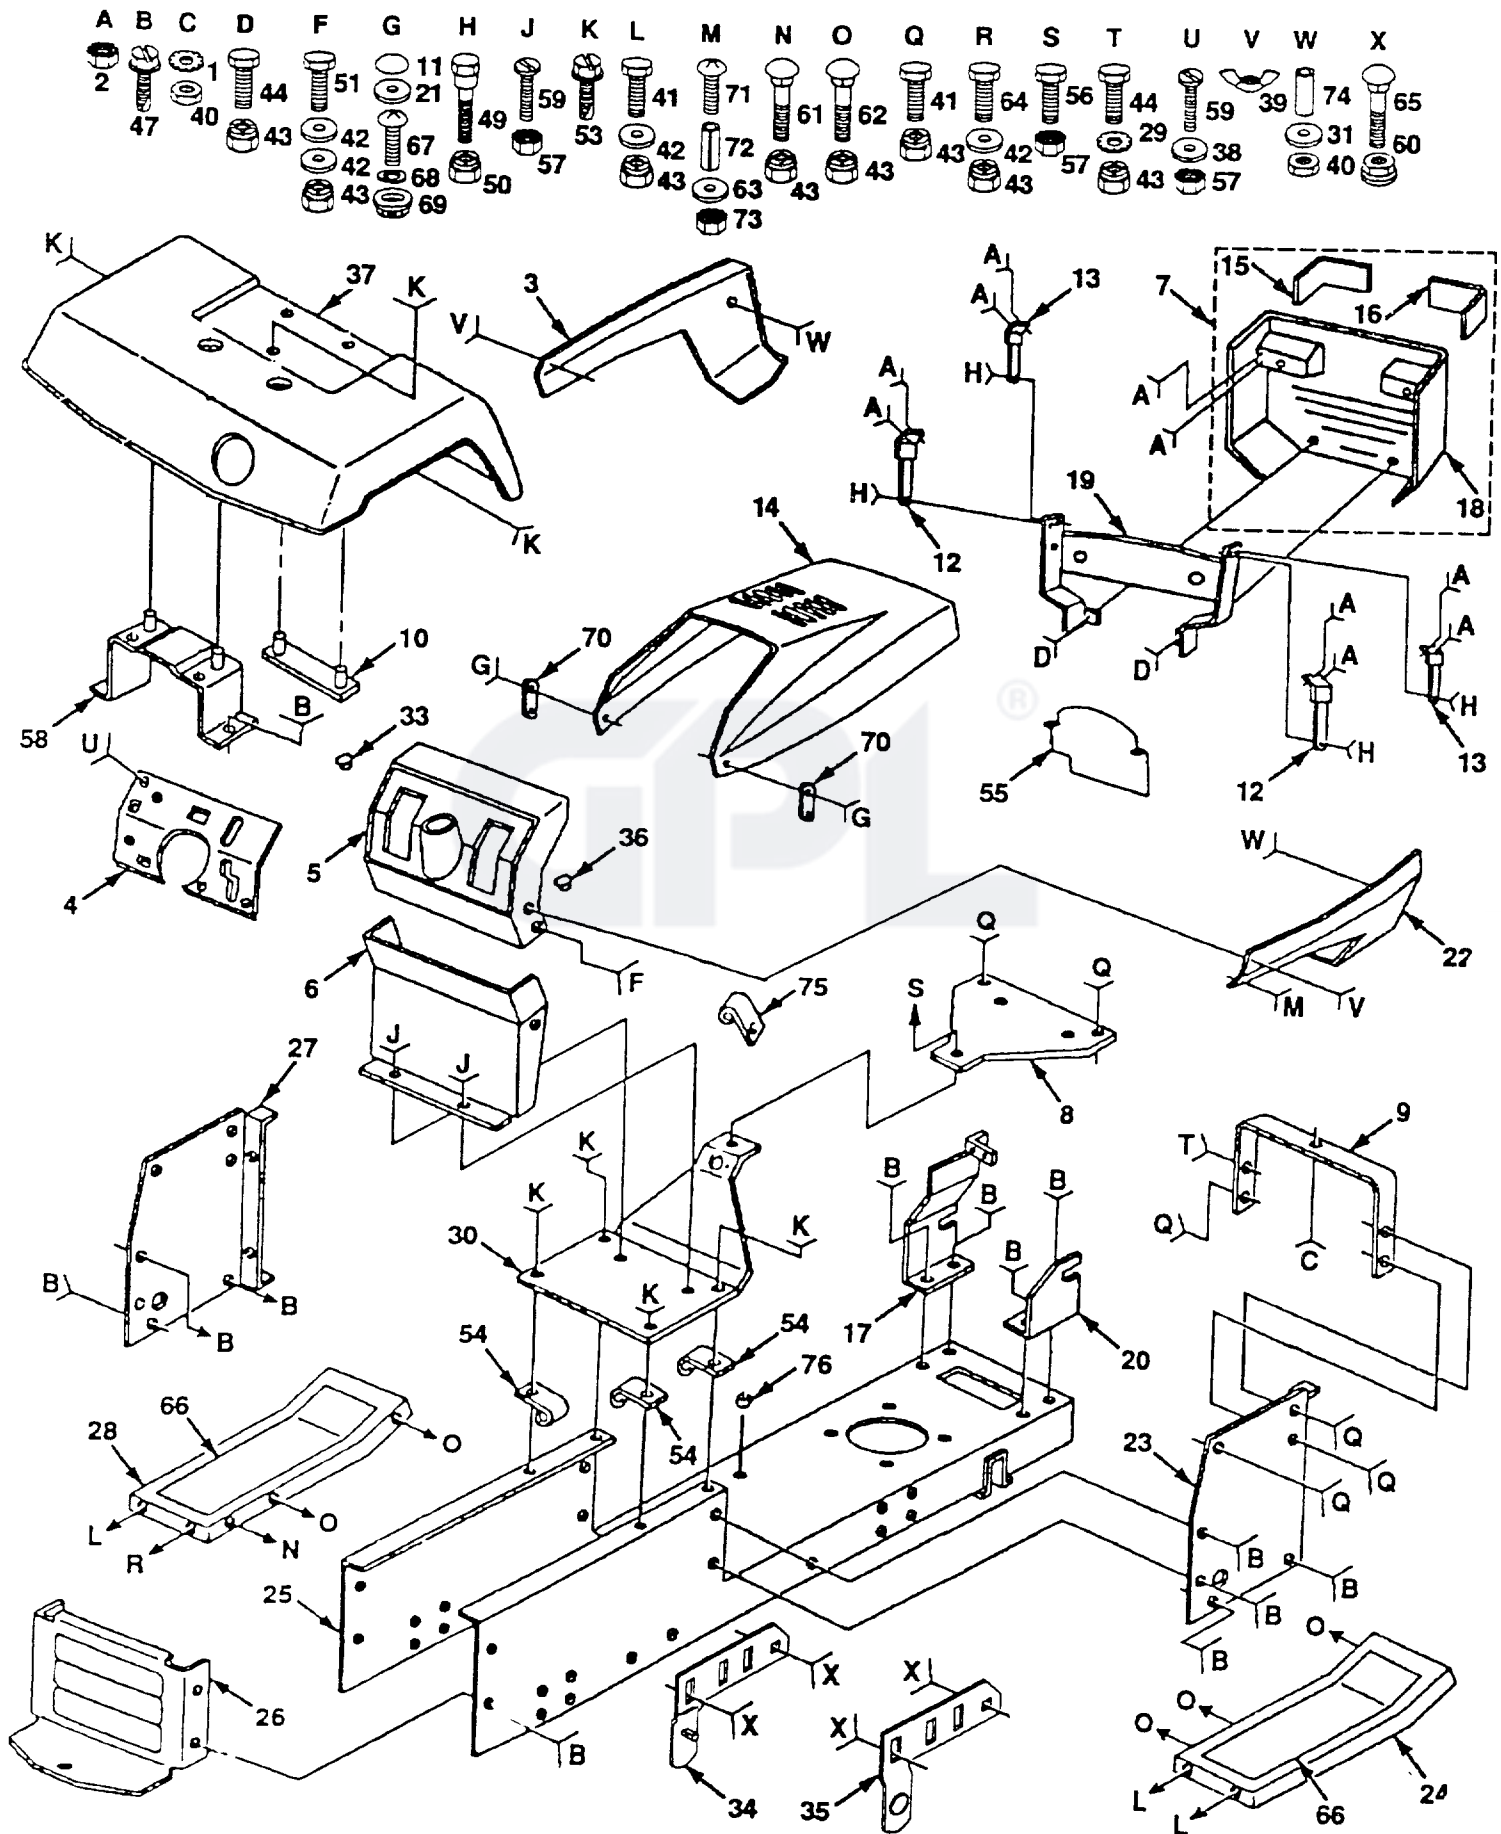

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52

CHASSIS AND ENCLOSURES

KEY PART NO. NO.

DESCRIPTION

1	811 05 04-00	Washer, Lock, External Tooth 1/4
2	873 51 04-00	Nut, Hex, Keps 1/4-20 UNC
3	532 12 53-93	Side Panel, LH
4	532 12 54-55	Plate, Dash
5	532 12 41-82	Dashboard
6	532 10 47-83	Dash, Lower
7	532 12 73-21	Grill Assembly
8	532 13 76-54	Plate, Battery Support
9	532 12 41-30	Support, Dash
10	532 10 55-11	Strap, Fender
11	532 11 03-56	Cap, Black
12	532 10 67-84	Strap Assembly, Hinge, Rear
13	532 10 46-18	Strap Assembly, Hinge, Front
14	532 12 54-54	Hood
15	532 12 42-50	Lens, Headlight, LH, Smoked
16	532 12 42-51	Lens, Headlight, RH, Smoked
17	532 11 08-53	Pivot Bracket Assembly, LH
18	532 12 73-24	Grille
19	532 12 60-25	Support Assembly, Grille
20	532 11 08-52	Pivot Bracket Assembly, RH
21	532 11 03-57	Washer, Cap
22	532 13 88-86	Side Panel, RH
23	532 13 20-69	Dash Panel, RH
24	532 12 49-14	Footrest, RH
25	532 13 50-34	Chassis
26	532 13 72-75	Drawbar
27	532 13 72-07	Dash Panel, LH
28	532 12 48-99	Footrest, LH
29	811 05 06-00	Washer, Lock, External Tooth 3/8
30	532 13 88-84	Saddle
31	819 09 12-16	Washer 9/32 x 3/4 x 16 Gauge
33	532 00 54-79	Plug, Button
34	532 13 47-74	Pivot Bracket Assembly, Rear, LH
35	532 13 47-75	Pivot Bracket Assembly, Rear, RH
36	532 13 40-14	Plug, Dome, Black
37	532 12 49-29	Fender
38	819 11 11-16	Washer 11/32 x 11/16 x 16 Gauge
39	532 12 31-98	Wing Nut, Plastic 1/4-20
40	873 22 04-00	Nut, Hex, Fin. 1/4-20 UNC

KEY PART NO. NO.


DESCRIPTION

41	874 76 06-12	Bolt, Hex, Fin. 3/8-16 UNC x 3/4
42	819 13 13-12	Washer 13/32 x 13/16 x 12 Gauge
43	873 68 06-00	Nut, Crownlock 3/8-16 UNC
44	874 76 06-16	Bolt, Hex, Fin. 3/8-16 UNC x 1
45	532 10 50-37	Strip, Foam
47	817 49 06-12	Screw, Thd., Roll. 3/8-16 x 3/4
49	532 12 34-81	Bolt, Shoulder 1/4-20 UNC
50	873 68 04-00	Nut, Crownlock 1/4-20 UNC
51	874 76 06-20	Bolt, Hex, Fin. 3/8-16 UNC x 1-1/4
53	817 49 06-08	Screw, Thd., Roll. 3/8-16 x 1/2
54	532 12 64-71	Clip, Insulator
55	532 12 64-23	Baffle, Vertical
56	874 78 05-12	Bolt, Hex, Fin. 5/16-18 UNC x 3/4
57	873 51 05-00	Nut, Hex, Keps 5/16-18 UNC
58	532 13 71-13	Bracket Fender
59	874 18 05-12	Screw, Machine 5/16-18 UNC x 3/4
60	873 80 06-00	Locknut, Hex, with Washer Insert 3/8-16 UNC
61	872 14 06-08	Bolt, Carriage 3/8-16 UNC x 1
62	872 11 06-06	Bolt, Carriage 3/8-16 x 3/4
63	819 07 08-18	Washer 7/32 x 1/2 x 18 Gauge
64	874 76 06-14	Bolt, Hex, Fin. 3/8-16 UNC x 7/8
65	872 14 06-08	Bolt, Carriage 3/8-16 UNC x 1
66	532 10 82-56	Pad, Footrest
67	874 19 10-08	Screw, Machine, Cross Pan Head #10-24 x 1/2
68	810 07 10-00	Washer, Lock #10
69	532 12 50-04	Nut, Weld
70	532 10 98-08	Latch, Chute
71	874 98 10-20	Screw, Machine, Cross Pan Head #10-24 x 1-1/4
72	532 00 72-06	Spacer, Split #10 x 3/4
73	873 73 10-00	Nut, Hex, Keps #10-24 UNC
74	532 00 12-60	Spacer 17/64 x 1/2 x 3/8
75	532 12 49-96	Clip, Fuel Line
76	532 11 04-36	Bushing, Snap Split

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR-MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52
DRIVE

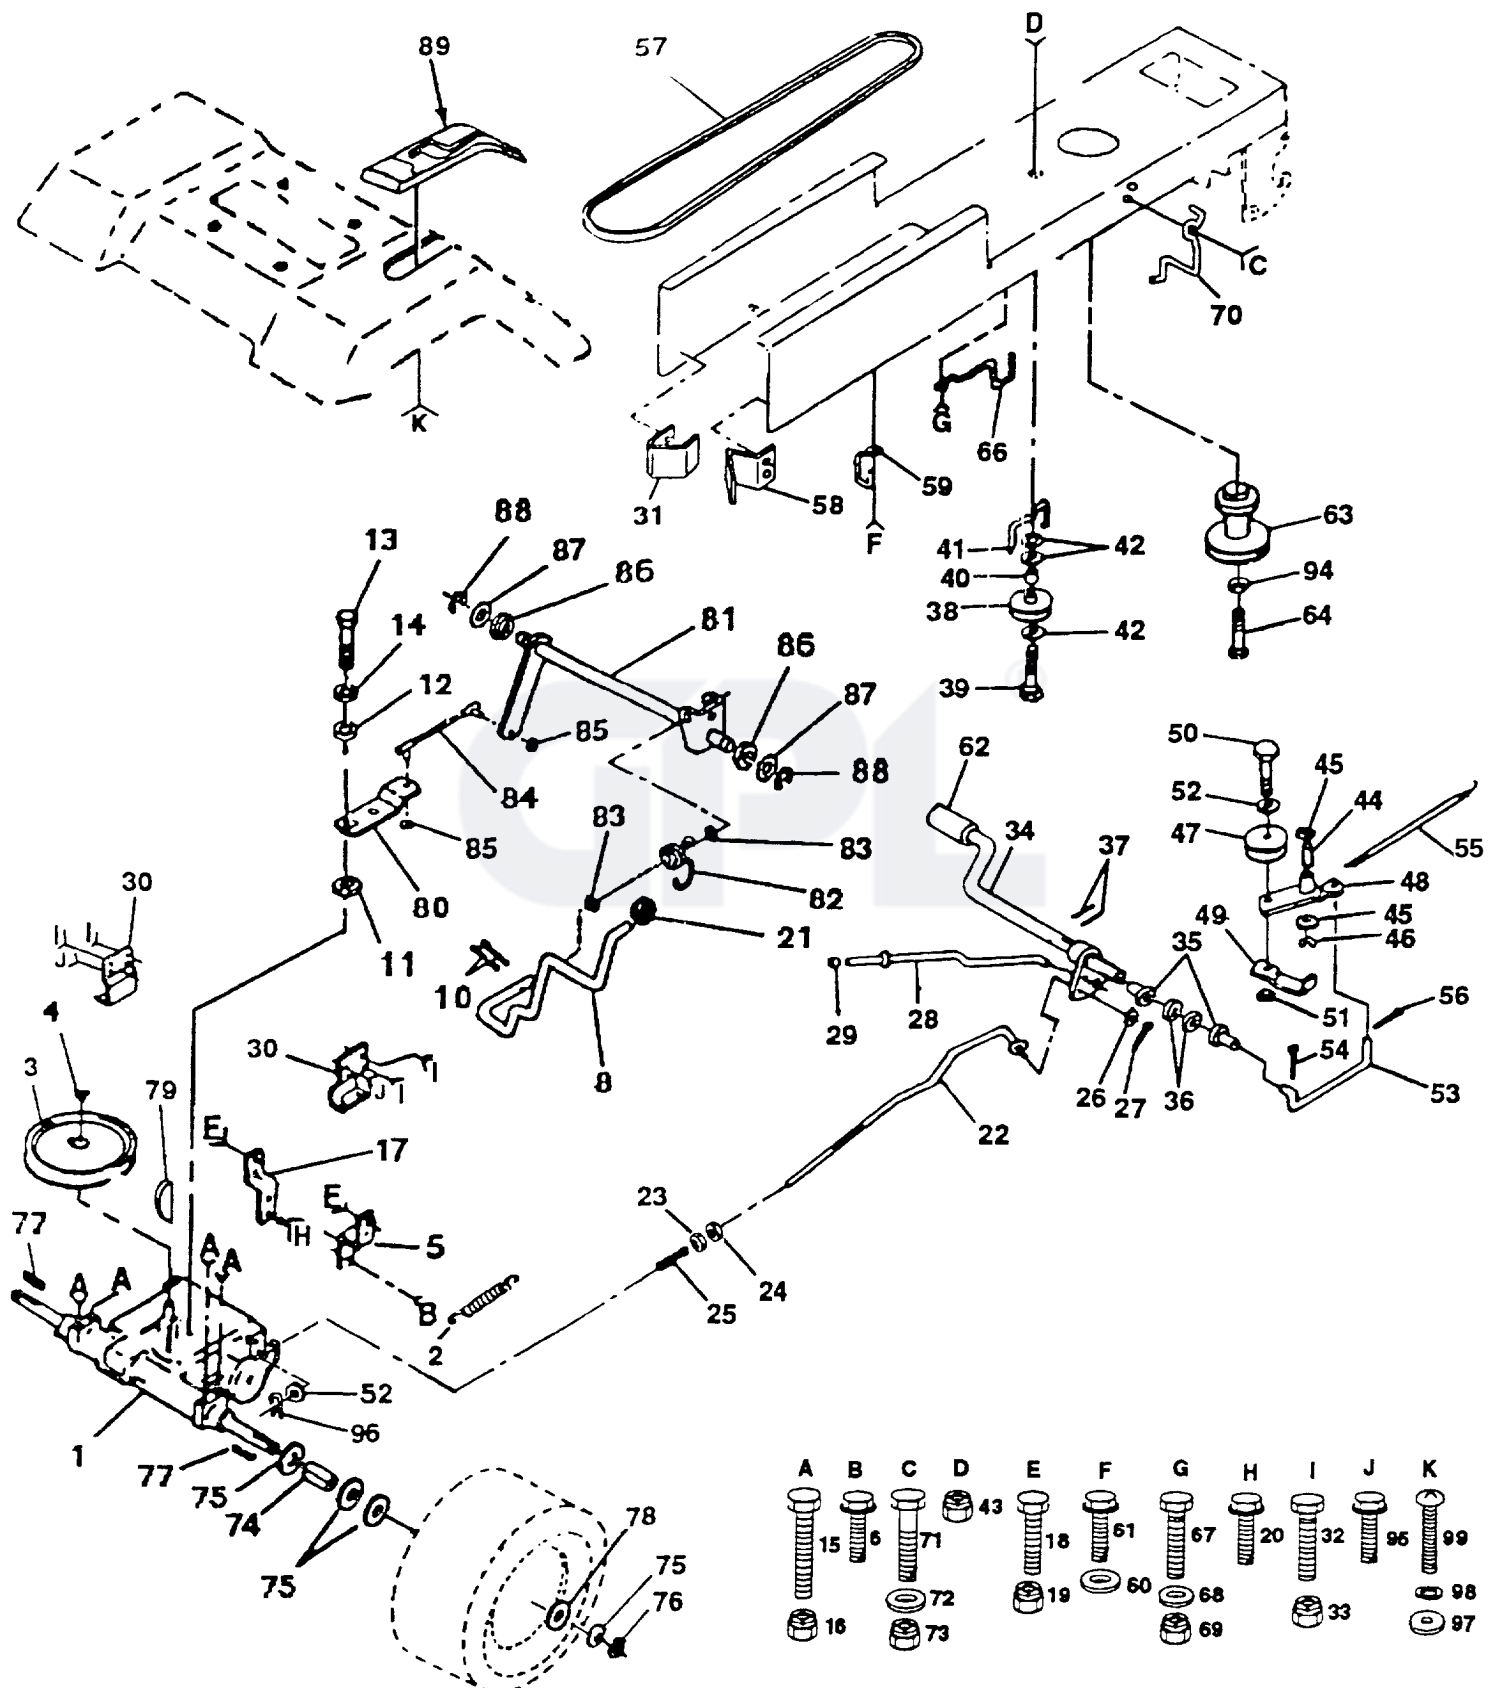

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52

DRIVE

KEY PART NO. NO.

DESCRIPTION

1	-----	Transaxle 6sp 930 Peerless LT Model # 930-010
2	532 11 04-22	Spring Return Brake T/a Zinc
3	532 12 36-66	Pulley Transaxle 18"tires
4	812 00 00-28	Ring Retainer # 5100-62
5	532 12 15-20	Strap Torque 30 Degrees
6	817 49 05-12	Screw Thdrol 5/16-18 X 3/4 TYT
8	532 12 72-88	Rod Shifter
10	876 02 04-16	Pin Cotter 1/8 X 1 Cad
11	532 10 57-01	Washer Plate Shf 388 Sq Hole
12	819 09 12-10	Washer 9/32 X 3/4 X 10 Ga
13	871 04 04-12	Bolt Fin Hex 1/4-28unfx3/4 Gr8
14	810 04 04-00	Washer Lock Hvy Helical 1/4
15	874 76 05-36	Bolt Fin Hex 5/16-18uncx 2 1/4
16	873 68 05-00	Nut Crown Lock 5/16-18
17	532 12 72-85	Strap Torque LT
18	874 76 06-12	Bolt Fin Hex 3/8-16unc X 3/4
19	873 68 06-00	Nut Crownlock 3/8-16 Unc
20	817 49 05-12	Screw Thdrol 5/16-18 X 3/4 TYT
21	532 12 12-74	Knob Duckhead 1/2-13unc Blk
22	532 13 08-04	Rod Brake Blk Zinc 27 326
23	873 80 06-00	Nut Lock Hex W/wsh 3/8-16unc
24	873 35 06-00	Nut Hex Jam 3/8-16 Unc
25	532 10 68-88	Spring Rod Brake 2 00 Zinc
26	819 13 13-16	Washer 13/32 X 13/16 X 16 Ga
27	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
28	532 13 32-61	Rod Brake Parking 14 500
29	532 07 16-73	Cap Brake Parking Black
30	532 13 08-07	Bracket Mtg Transaxle
31	532 12 72-75	Keeper Belt LH LT 14 Ga
32	874 76 05-12	Bolt Hex Hd 5/16-18unc X 3/4
33	873 68 05-00	Nut Crown Lock 5/16-18
34	532 12 24-24	Shaft Asm Pedal Foot 1 930
35	532 12 01-83	Bearing Nylon Blk 629 Id
36	819 21 16-16	Washer 21/32 X 1 X 16 Ga
37	532 12 49-63	Pin Roll 3/16 X 1"
38	532 12 36-74	Pulley Idler Flat
39	874 76 06-44	Bolt Fin Hex 3/8-16unc X 2-3/4
40	532 12 49-65	Spacer Split 395 X 59 Bzp
41	532 10 90-70	Keeper Belt Retainer
42	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
43	873 68 06-00	Nut Crownlock 3/8-16 Unc
44	532 10 57-06	Bearing Nyl 503 X 628 X 1 25
45	532 11 08-12	Washer Hardened
46	812 00 00-39	Ring Klip #t5304-50
47	532 12 77-83	Pulley Idler V Groove Plastic
48	532 12 37-89	Bellcrank Asm Clutch
49	532 12 32-05	Retainer Belt Style Spring

KEY PART NO. NO.


DESCRIPTION

50	874 76 06-24	Bolt Hex Hd 3/8-16unc X 1-1/2
51	873 68 06-00	Nut Crownlock 3/8-16 Unc
52	819 13 13-16	Washer 13/32 X 13/16 X 16 Ga
53	532 10 57-10	Link Clutch 7 66
54	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
55	532 10 57-09	Spring Return Clutch 6 75
56	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
57	532 13 82-55	V-Belt Ground Drive 95 25 42"
58	532 12 72-74	Keeper Belt RH LT Pnt/zinc 16g
59	532 13 67-15	Keeper Belt Chassis Span Ctr
60	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
61	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
62	532 12 35-33	Cover Pedal Premuim
63	532 13 48-25	Engine Pulley LT/YT
64	532 13 88-85	Bolt, Hex
66	532 12 99-21	Keeper Belt Engine LH LT
67	874 76 06-16	Bolt Fin Hex 3/8-16unc X 1
68	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
69	873 68 06-00	Nut Crownlock 3/8-16 Unc
70	532 13 46-83	Guide Belt Mower Drive RH
71	874 76 06-16	Bolt Fin Hex 3/8-16unc X 1
72	819 13 20-12	Washer 13/32 X 1-1/4 X 12 Ga
73	873 68 06-00	Nut Crownlock 3/8-16 Unc
74	532 13 70-57	Spacer Axle
75	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
76	812 00 00-01	E-ring #5133-75
77	532 12 35-83	Key Square 2 0 X 1845/ 1865
78	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
79	532 12 50-96	Key, Woodruff
80	532 13 14-86	Arm Shift Transaxle
81	532 13 69-32	Shaft Asm Cross 18"t 42"deck
82	532 12 37-82	Spring Torsion T/a
83	819 17 12-16	Washer 17/32 X 3/4 X 16 Ga
84	532 12 37-93	Rod Link Shift Adj 3 710
85	873 53 04-00	Nut Nylock 1/4-28
86	532 07 12-08	Bushing Rod Strg 629/632 Id
87	819 21 20-16	Washer 21/32 X 1-1/4 X 16 Ga
88	812 00 00-08	Ring Klip #5304-62
89	532 13 16-36	Console Shift 6sp W/ign LT
94	810 04 07-00	Washer Lock Hvy Hlcl Spr 7/16
95	817 49 06-12	Screw Thdrol 3/8-16 x 3/4
96	532 12 47-88	Retainer Spring
97	819 06 07-18	Washer 3/16 X 7/16 X 18 Ga
98	810 10 08-00	Washer Lock #8
99	874 64 08-08	Screw #8x1/2

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52
STEERING ASSEMBLY

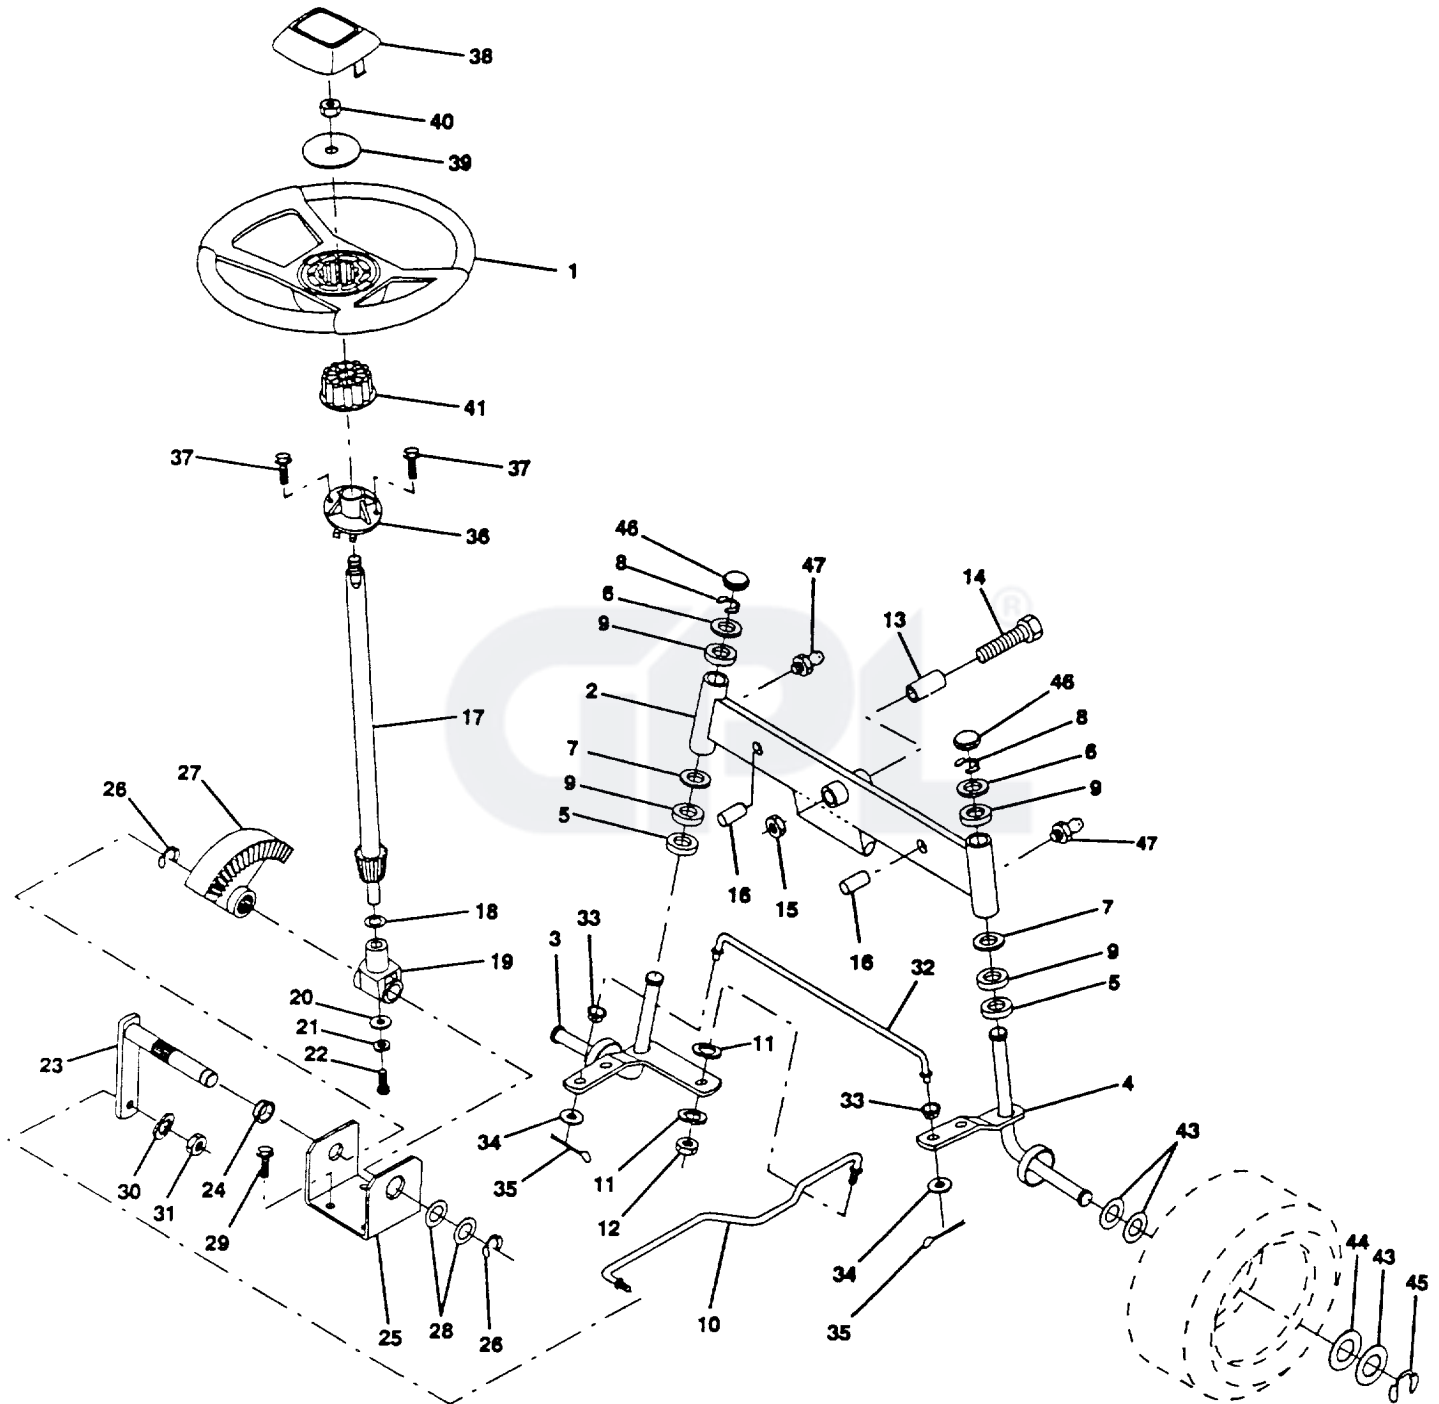

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52




STEERING ASSEMBLY

KEY PART NO.	PART NO.	DESCRIPTION
1	532 12 44-15	Wheel Steering Auto Grey
2	532 13 39-88	Axle Asm Fr LT W/gzks 38/42
3	532 13 52-27	Spindle Asm LH
4	532 13 52-28	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
7	819 27 20-16	Washer 27/32 X 1-1/4 X 16 Ga
8	812 00 00-29	Ring Klip #t5304-75
9	532 12 49-37	Bearing Col Strg Blk
10	532 13 04-68	Link Drag Sol Ball Jt 20 064
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
12	873 61 06-00	Nut Fin Hex 3/8-24 Unf
13	532 11 04-38	Spacer Bearing Axle Front
14	874 01 10-56	Bolt Hex 5/8-11 Unc X 3-1/2
15	873 90 10-00	Nut Lock Flange 5/8-11 Unc
16	532 13 26-24	Pin Axle 5/8 X 1 55/1 54 Lg
17	532 12 87-58	Shaft Asm Strg 18 31x3/4 Yp LT
18	532 05 70-79	Washer Thrust 515x 750x 033
19	532 12 40-35	Support Shaft
20	532 12 66-84	Washer Shim 1/4 X 5/8 X 062
21	810 04 04-00	Washer Lock Hvy Helical 1/4
22	871 07 04-10	Screw Hex Socket 1/4-20 X 5/8
23	532 12 75-01	Shaft Asm Pittman
24	532 10 98-16	Nyliner Snap In
25	532 12 40-36	Bracket Steering
26	812 00 00-29	Ring Klip #t5304-75
27	532 13 68-74	Gear Sector
28	532 12 49-31	Bearing Race Thrust Harden
29	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
30	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
31	873 61 06-00	Nut Fin Hex 3/8-24 Unf
32	532 13 04-65	Rod Tie Wire Form 19 75 Mech
33	532 12 68-47	Bushing Link Drag Blk LR
34	819 13 14-16	Washer 13/32 X 7/8 X 16 Ga
35	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
36	532 12 47-20	Bushing Strg Blk 742/747 Id
37	817 43 10-08	Screw Slftp #10-16 X 1/2 Ty-b
38	532 12 44-16	Insert Cap Strg Wh Aut Hus Gry
39	532 10 07-12	Washer 53 X 2 25 X 160 Zinc
40	873 94 08-00	Nut Hex Jam Toplock 1/2-20 Unf
41	532 10 07-11	Adapter Wheel Strg 758/ 753id
43	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
44	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
45	812 00 00-29	Ring Klip #t5304-75
46	532 12 12-32	Cap Spindle Fr Top Blk
47	532 12 48-36	Fitting Grease

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52
SEAT ASSEMBLY

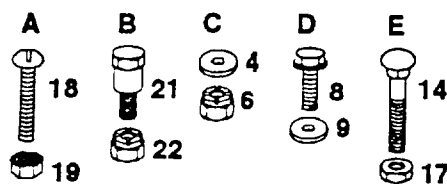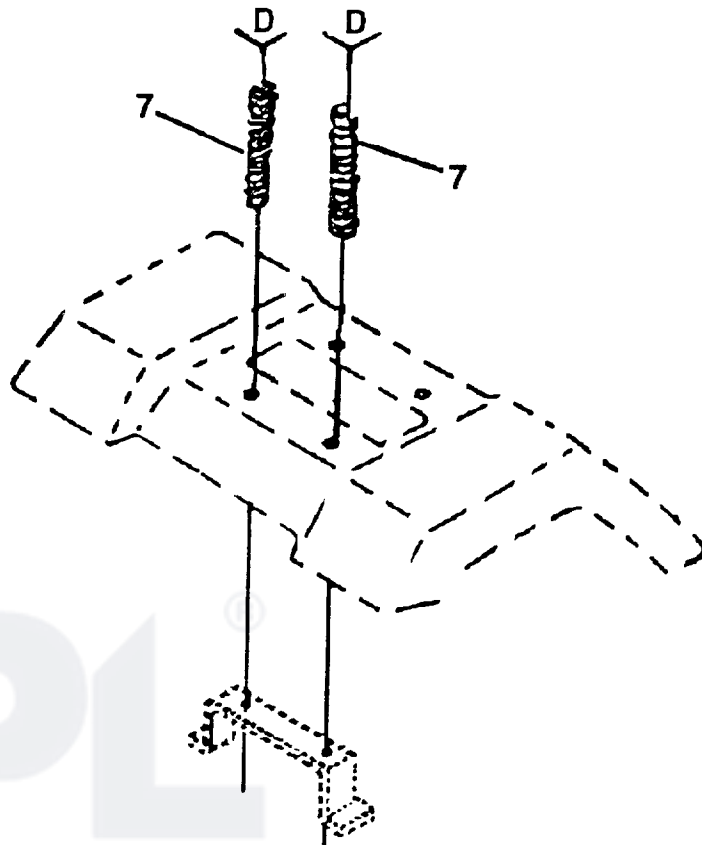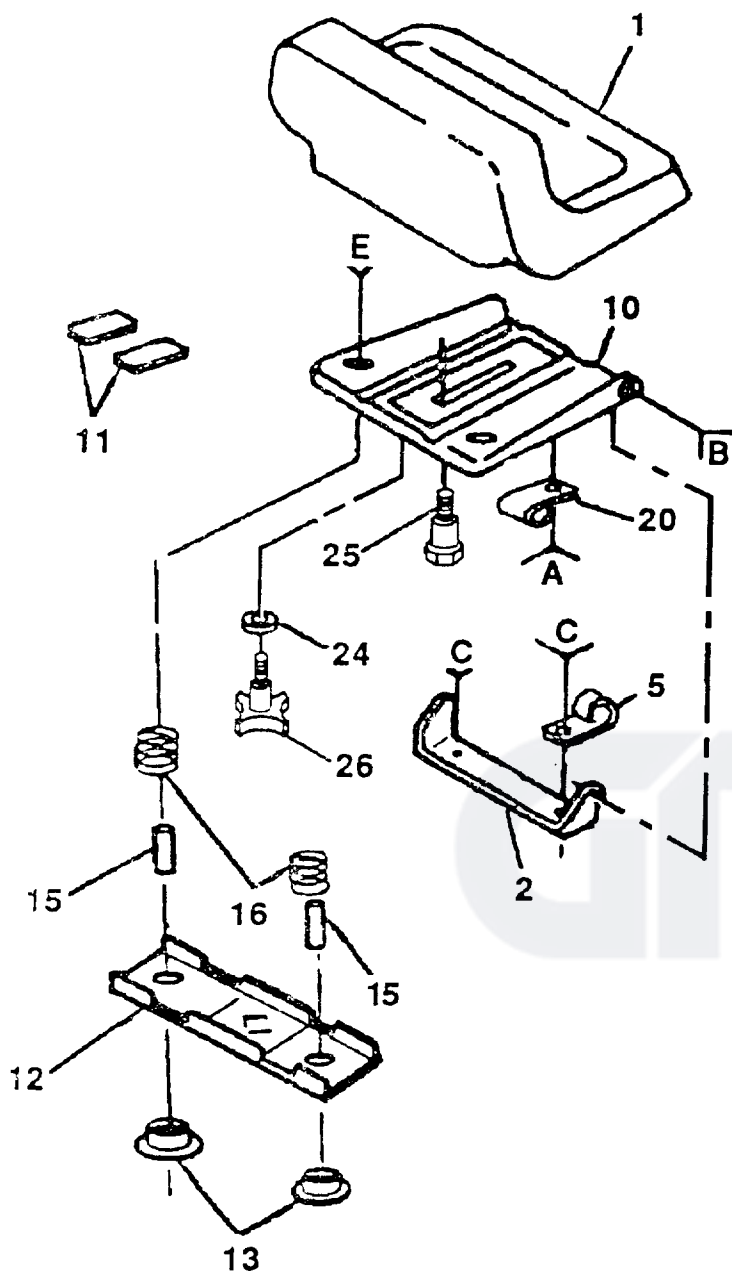

KEY PART NO. NO.

DESCRIPTION

1	532 12 41-85	Seat V-450 Gry/blk Std
2	532 12 66-56	Bracket Pivot Seat 8 720
4	819 13 12-10	Washer 13/32 X 3/4 X 10 Ga
5	532 12 49-96	Clip Line Fuel 13/32 Mtg Hole
6	873 68 06-00	Nut Crownlock 3/8-16 Unc
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 49 05-08	Screw Hwsh Thdrol 5/16-18 x 1/2
9	819 13 16-14	Washer 13/32 X 1 X 14 Ga
10	532 13 14-51	Pan Seat
11	532 12 12-51	Strip Foam Gray Or Black
12	532 12 12-46	Bracket Mounting Switch
13	532 12 12-48	Bushing Snap Blk Nyl 50 Id
14	872 05 04-11	Bolt Rdhd Sht Nk 1/4-20x1-3/8
15	532 13 43-00	Spacer Split 28x 96 Yel Zinc

KEY PART NO. NO.

DESCRIPTION


16	532 12 12-50	Spring Cprsn 1 27 Blk Pnt
17	532 12 39-76	Nut Lock 1/4 Lge Flg Gr 5 Zinc
18	874 64 10-08	Screw SLTD Pan Hd #10-32 X 1/
19	873 95 10-00	Nut Keps #10-32 Unf
20	532 12 49-67	Clip Insulated 11/32 Mtg Hole
21	532 10 55-29	Bolt Shoulder 5/16-18 Unc Blkz
22	873 68 05-00	Nut Crown Lock 5/16-18
24	819 17 19-12	Washer 17/32 X 1-3/16 X 12 Ga
25	532 12 70-18	Bolt Shoulder 5/16-18 X 62
26	532 12 00-68	Knob Seat 1/2-13unc Blk
27	873 68 06-00	Nut, Crownlock 3/8-16 Unc

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52

DECALS

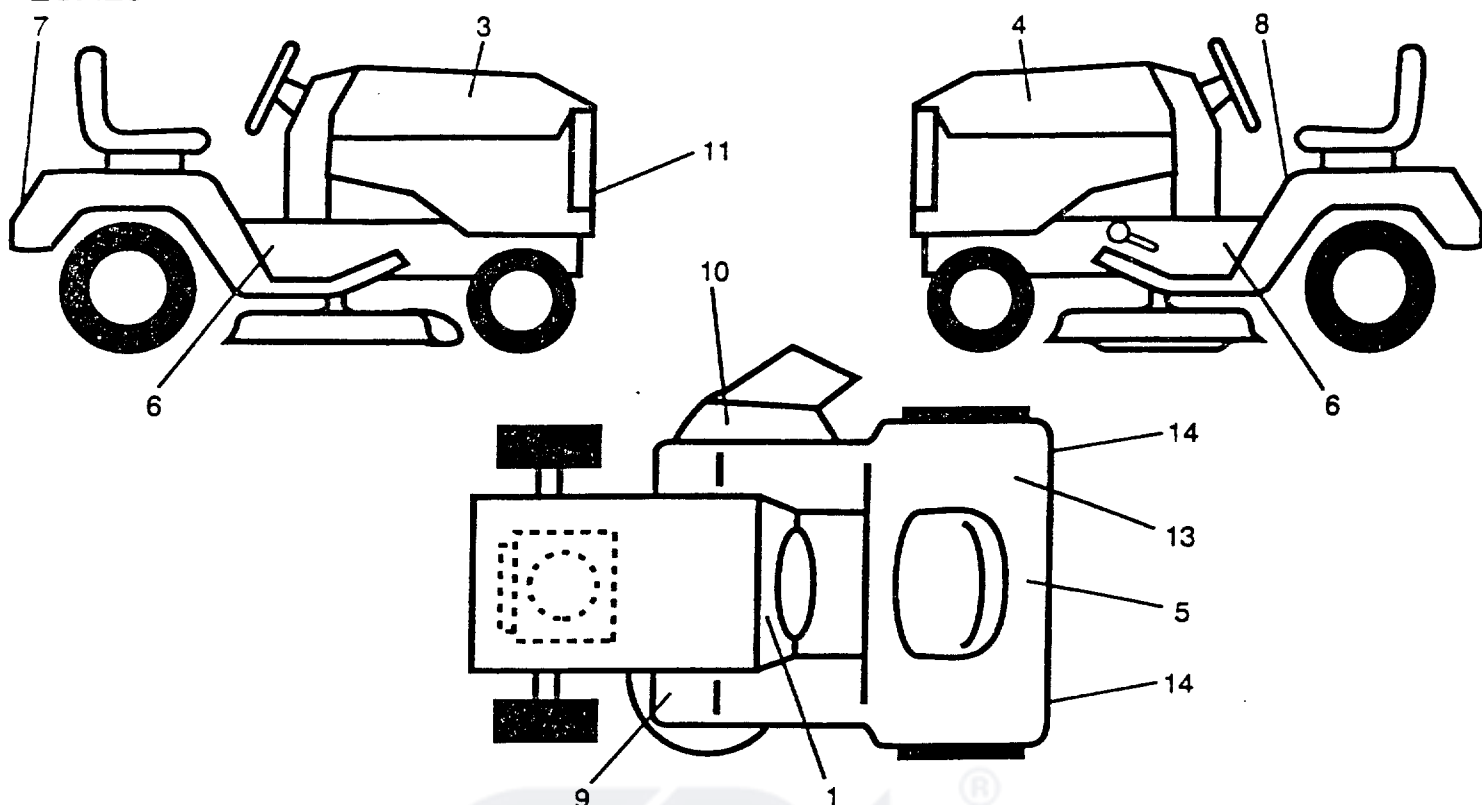

KEY PART NO. NO.

DESCRIPTION

1	532 13 67-95	Decal Instruction Dash Eng/fr
3	532 13 89-37	Decal Hood RH Husq LT140
4	532 13 89-38	Decal Hood LH Husq LT140
5	532 12 15-49	Decal Caution Battery Fr/ger
6	532 12 59-46	Decal Chassis Lawn Tractor
7	532 13 15-82	Decal Fender Husqvarna
8	532 13 37-95	Decal Caution Fender Eng/fr
9	532 10 18-92	Decal Clutch/brake Eng/fr
10	532 13 72-59	Decal Warning MULT-LANGUAGE
11	532 12 59-89	Decal Grille Husqvarna "h" logo

KEY PART NO. NO.


DESCRIPTION

13	532 12 56-90	Decal 100 DbA
14	532 10 62-02	Reflector Tail Light Red/amber
-	532 13 83-11	Decal Lift Handle (Lift Handle)
-	532 13 89-50	Manual Owners H1442a English
-	532 13 89-51	Manual Owners H1442a French

Available accessories not included with tractor:

-	BD20	42" Snow blade
-	GWN42	Guage Wheels for 42" Vent Deck
-	LAO18	Tire Chains
-	LC05	33 lb. Weights (pairs)
-	SB20	40" Snow Thrower
-	CE42	42" Bagger

WHEELS & TIRES

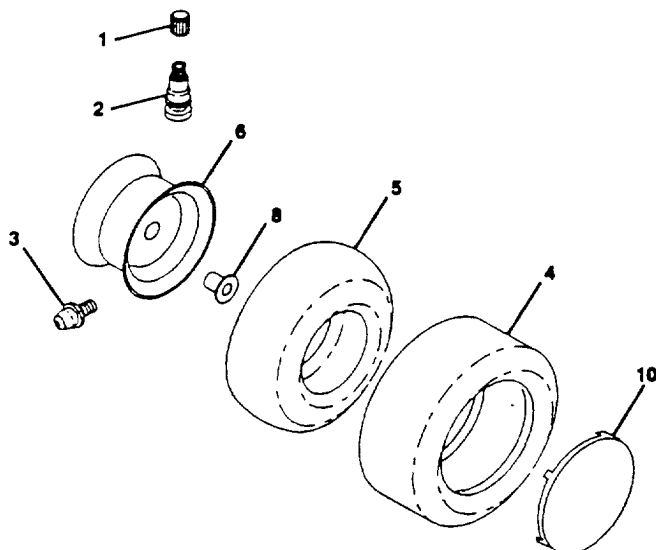

KEY PART NO. NO.



DESCRIPTION

1	532 05 91-92	Cap Valve Tire
2	532 06 51-33	Stem Valve
3	532 12 49-57	Fitting Grease (Front Wheel Only)
4	532 10 62-22	Tire F Ts 15 X 6 0 - 6 Service
	532 10 62-68	Tire R Ts 18x9 5-8 C Service
5	532 05 99-04	Tube Front (Service Item Only)
	532 12 49-26	Tube Rear (Service Item Only)
6	532 12 49-99	Rim Asm 8" rear White Service
	532 12 51-02	Rim Asm 6" front White Service
8	532 12 49-59	Bearing Flange (Front Wheel Only)
10	532 12 45-77	Cover Wheel 6" white
	532 12 45-78	Cover Wheel 8" white

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52
ENGINE

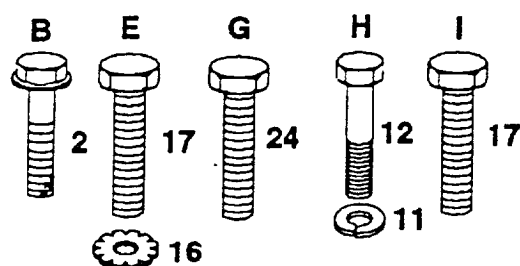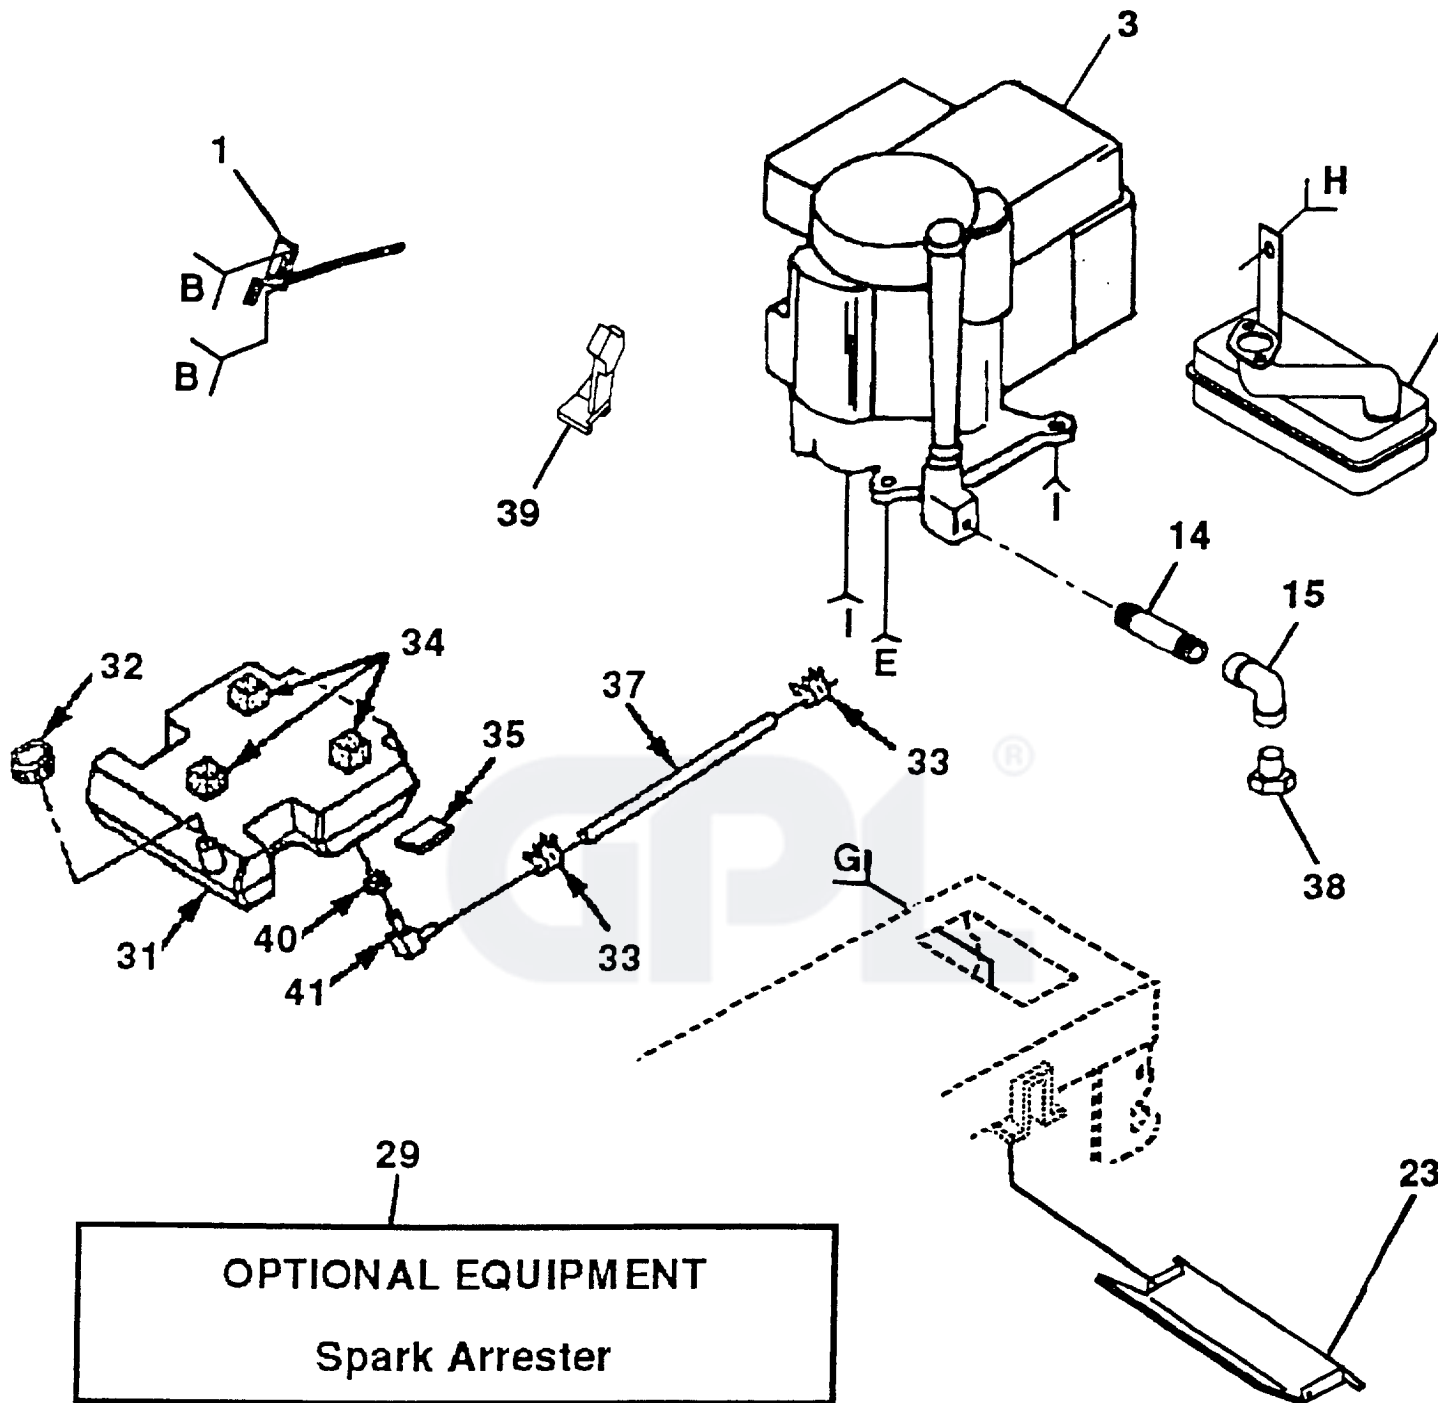

REPAIR PARTS


14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52
ENGINE

KEY PART NO.	PART NO.	DESCRIPTION
1	532 13 27-50	Control Th/ch RH Blk Fig 35 85
2	817 72 04-10	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine Kohler, Model No. PS1453
11	810 04 05-00	Washer Lock Hvy Hlcl Spr 5/16
12	874 76 05-08	Bolt, Fin Hex 5/16-18 x 1/2
13	532 13 73-50	Muffler LT Kohler
14	813 28 03-28	Nipple Pipe 3/8 Npt X 3-1/2"
15	813 20 03-00	Elbow Std 90 Degree 3/8-18 Npt
16	811 05 06-00	Washer Lock Ext Tooth 3/8
17	532 12 53-98	Bolt, Hex
23	532 12 89-53	Shield Heat Browning LT/YT
24	817 02 10-08	Screw Tap Hex #10-24unc X 1/2
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)
31	532 12 73-34	Tank Fuel 3 50 Rear
32	532 12 35-49	Cap Asm Fuel W/sym Vented
33	532 12 34-87	Clamp Hose Blk
34	532 10 60-82	Pad, Spacer
35	532 10 92-27	Pad, Idler
37	532 00 85-43	Line Fuel 54"
38	-----	Plug Oil Drain (Order From Engine Manufacturer)
39	532 13 55-02	Stop Throt 2650 Rpm
40	532 12 43-52	Bushing
41	532 13 92-27	Stem Tank Fuel

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52
MOWER LIFT ASSEMBLY

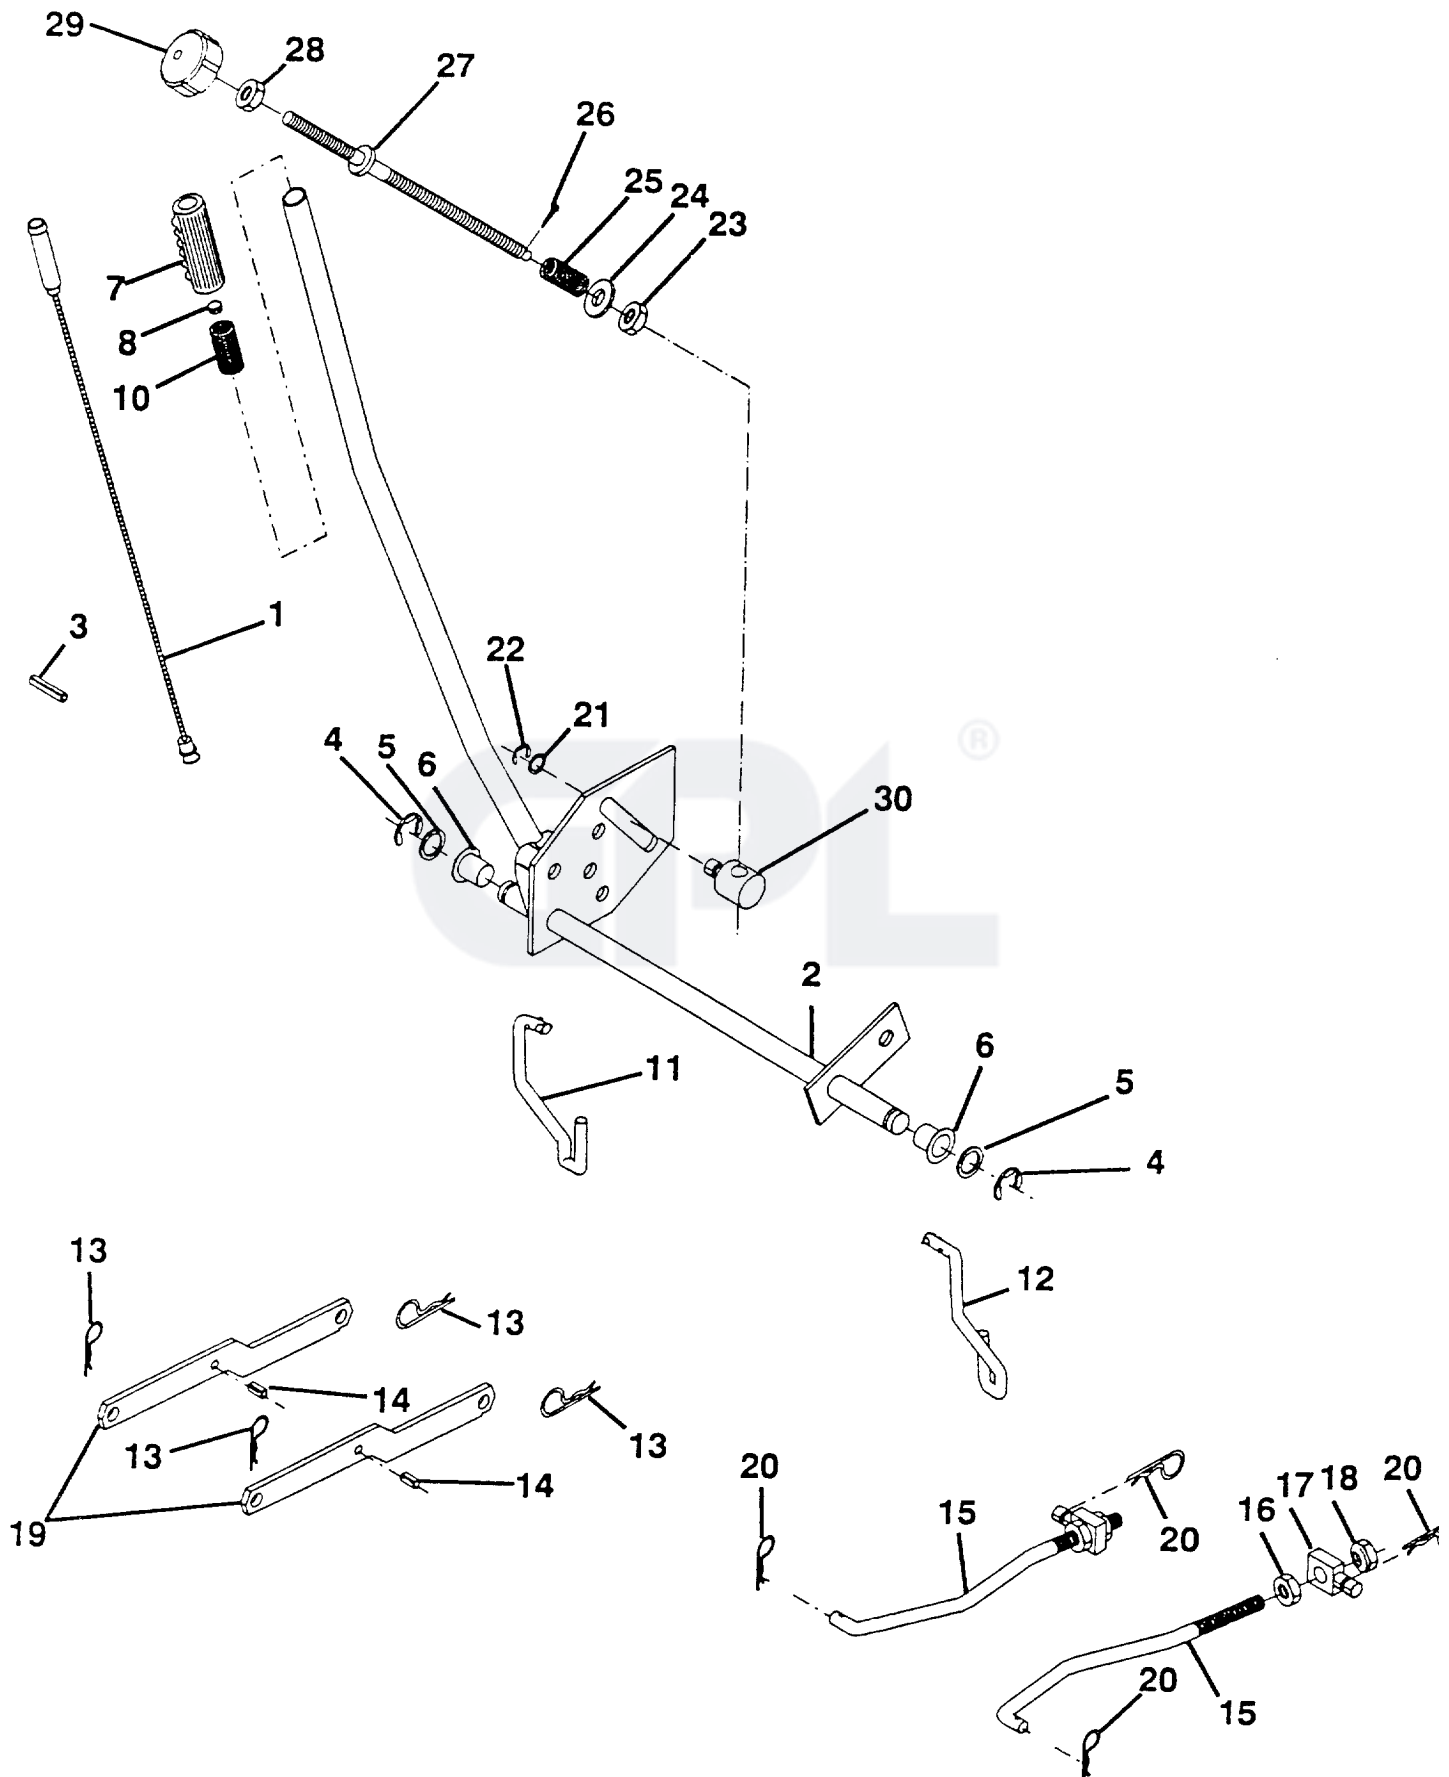

REPAIR PARTS


14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52
MOWER LIFT ASSEMBLY

KEY PART NO.	PART NO.	DESCRIPTION
1	532 13 69-73	Wire Asm Inner W/plunger 17 32
2	532 13 71-11	Shaft Asm Lift 93 LH Lift
3	532 13 82-84	Pin Groove 1 500 Zinc
4	812 00 00-02	E Ring #5133-62
5	819 21 14-16	Washer 21/32 X 7/8 X 16 Ga
6	532 12 01-83	Bearing Nylon Blk 629 Id
7	532 12 56-31	Grip Handle Fluted Blk
8	532 12 45-26	Button Plunger Black
10	532 12 25-12	Spring Cprsn 3 750 Oiled
11	532 13 46-19	Link Lift LH Fixed Length
12	532 13 53-88	Link Lift RH Fixed Length
13	532 12 46-70	Retainer Spring
14	532 13 55-63	Pin Roll SLT 5/16 X 1 25 Blk O
15	532 12 72-18	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 Unc
17	532 13 01-71	Trunnion Blk Zinc
18	873 80 08-00	Nut Lock W/wsh 1/2-13unc
19	532 13 08-32	Arm Suspension Rear
20	532 12 46-60	Retainer Spring
21	819 15 12-16	Washer 15/32 X 3/4 X 16 Ga
22	812 00 00-37	Ring Klip #t5304-37
23	532 11 08-07	Nut Special
24	819 13 10-16	Washer 13/32 X 5/8 X 16 Ga
25	532 12 48-74	Spring 2-1/8"
26	876 02 03-08	Pin Cotter 3/32 X 1/2
27	532 11 07-29	Rod Adj Lift Zinc 9 00 Wrk Lg
28	873 35 06-00	Nut Hex Jam 3/8-16 Unc
29	532 13 80-57	Knob Inf 3/8-16 Unc Blk W/sym
30	532 11 08-10	Trunnion Dp Stop Dbl Thds PLT

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR-MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52
42" MOWER

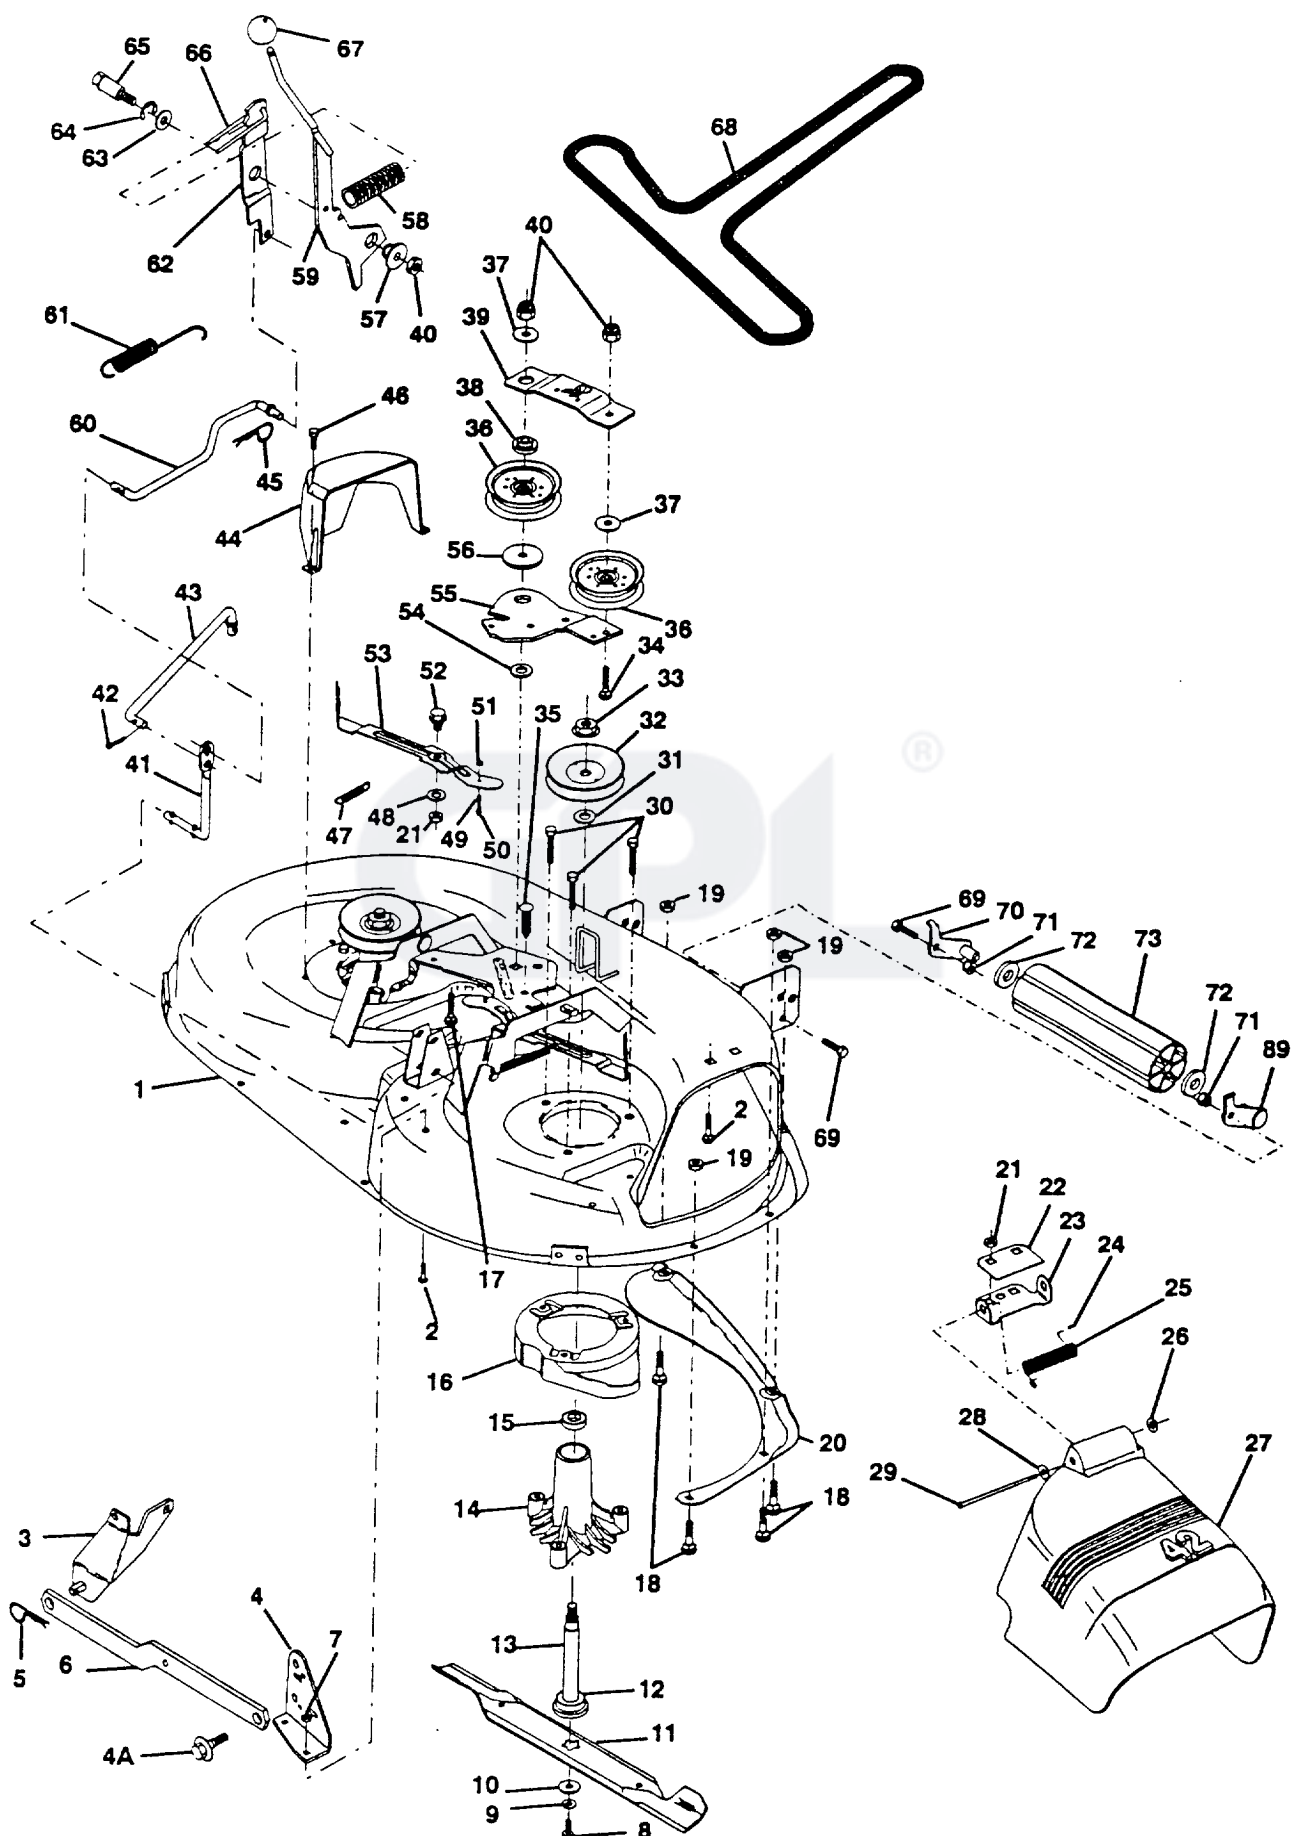

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52
42" MOWER


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532 13 80-24	Deck Asm MWR 42"weldment	40 873 68 06-00	Nut Crownlock 3/8-16 Unc
2 872 14 05-06	Bolt Rdhd Sqnk 5/16-18unc X3/4	41 532 13 35-51	Rod Pivot W/nibs
3 532 13 80-17	Bracket Asm Fr Sway Bar 38/42	42 876 02 03-12	Pin Cotter 3/32 X 3/4 Cad
4 532 13 84-40	Bracket Asm Deck 42"sway Bar	43 532 13 35-04	Rod Clutch Secondary W/nibs
4A 532 13 28-27	Bolt Shoulder	44 532 13 42-36	Guard Mandrel LH Black
5 532 12 46-70	Retainer Spring	45 532 12 47-88	Spring Retainer 1" Zinc/cad
6 532 13 03-32	Arm Suspension Rear	46 532 13 77-29	Screw Thdrol 1/4-20x5/8
7 873 80 05-00	Locknut-hex W/ins 5/16-18unc P	47 532 13 13-35	Spring Extension
8 532 85 08-57	Bolt 3/8-24x1 25 Gr8 Patched	48 532 13 39-44	Washer Hardened Smaller
9 810 03 06-00	Washer Lock Hvy 3/8 Unplated	49 532 13 39-40	Roller Asm Cam Follower 42"dec
10 532 12 99-62	Washer Hard Blade Mower Vented	50 532 13 13-40	Bolt Shldr 10-24 Zinc Gr 5 42"
11 532 13 84-98	Blade Mower High Perf 42"	51 532 06 91-80	Nut Lock #10-24 Unc
12 532 12 98-95	Bearing Ball #6204 (Mandrel)	52 532 10 55-29	Bolt Shoulder 5/16-18 Unc Blkz
13 532 13 31-72	Shaft Asm W/lower Bearing	53 532 13 18-45	Arm Asm Pad Brake
14 532 12 87-74	Housing Mandrel Vented(machd)	54 532 13 39-43	Washer Hardened
15 532 11 04-85	Bearing Ball Mandrel	55 532 13 38-44	Arm Idler 42"mower LT/YT
16 532 13 69-29	Stripper Mower Vented	56 532 12 20-52	Spacer Retainer Pm Mower
17 872 11 06-18	Bolt Rdhd Sqnk 3/8-16 X 2-1/4	57 532 12 74-98	Bushing 747 Od X 794 Lg Brass
18 872 14 05-05	Bolt Carr 5/16-18 X 5/8	58 532 12 87-59	Spring Clutch Mower 2 750 Zinc
19 873 80 05-00	Locknut-hex W/ins 5/16-18unc P	59 532 13 80-03	Lever Asm Clutch Primary Yp
20 532 13 68-88	Baffle Vortex 42	60 532 13 46-66	Rod Clutch Primary 38/42
21 873 68 05-00	Nut Crown Lock 5/16-18	61 532 13 18-70	Spring Return
2 532 13 47-53	Stiffener Bracket 42"deck	62 532 12 78-47	Arm Clutch Secondary
23 532 13 12-67	Bracket Deflector Mower 42"	63 532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
24 532 10 53-04	Cap Sleeve 80x 112 Blk Mower	64 812 00 00-29	Ring Klip #t5304-75
25 532 12 37-13	Spring Torsion Deflector 2 52	65 532 12 89-03	Bolt Shoulder 3/8-16 Unc 1 44
26 532 11 04-52	Nut Push Phos & Oil	66 532 12 78-45	Keeper Spring 4 000
27 532 13 09-68	Shield Deflector Mower 42" Blk	67 532 13 20-44	Cover Handle Round Black 5 25
28 819 11 10-16	Washer 11/32 X 5/8 X 16 Ga	68 532 13 09-69	V-Belt Mower 42" 92 40
29 532 13 14-91	Rod Hinge 42"6 75 Wlg	69 874 76 06-16	Bolt Fin Hex 3/8-16unc X 1
30 532 07 81-58	Bolt 5/16-18 X 1 25 T/t	70 532 13 22-74	Bracket Asm Noseroller LH
31 532 12 99-63	Washer Spacer Mower Vented	71 873 68 06-00	Nut Crownlock 3/8-16 Unc
32 532 12 98-61	Pulley Mandrel 42"	72 819 17 14-16	Washer 17/32 X 7/8 X 16 Ga
33 873 05 09-00	Nut 9/16top Lock Flng Oil Dip	73 532 13 22-64	Roller Nose 38 & 42
34 872 11 06-14	Bolt Rdhd 3/8-16uncx1-3/4 Gr5	89 532 13 22-73	Bracket Asm Noseroller RH
35 532 13 38-35	Fastner Christmas Tree	-- 532 13 83-58	Deck Serv 42" Mech Vent (Standard Deck - Order Nose Roller components separately Key Nos. 69-73 and 89)
36 532 13 14-94	Pulley Idler Flat 3 060	-- 532 13 07-94	Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33)
37 819 13 16-12	Washer 13/32 X 1 X 12 Ga		
38 532 13 35-02	Spacer Arm Idler Upper Hdn 42"		
39 532 13 35-03	Stiffener Arm Idler Upper 42"		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO.954 00 05-52

PEERLESS TRANSAXLE - - MODEL NUMBER 930-010

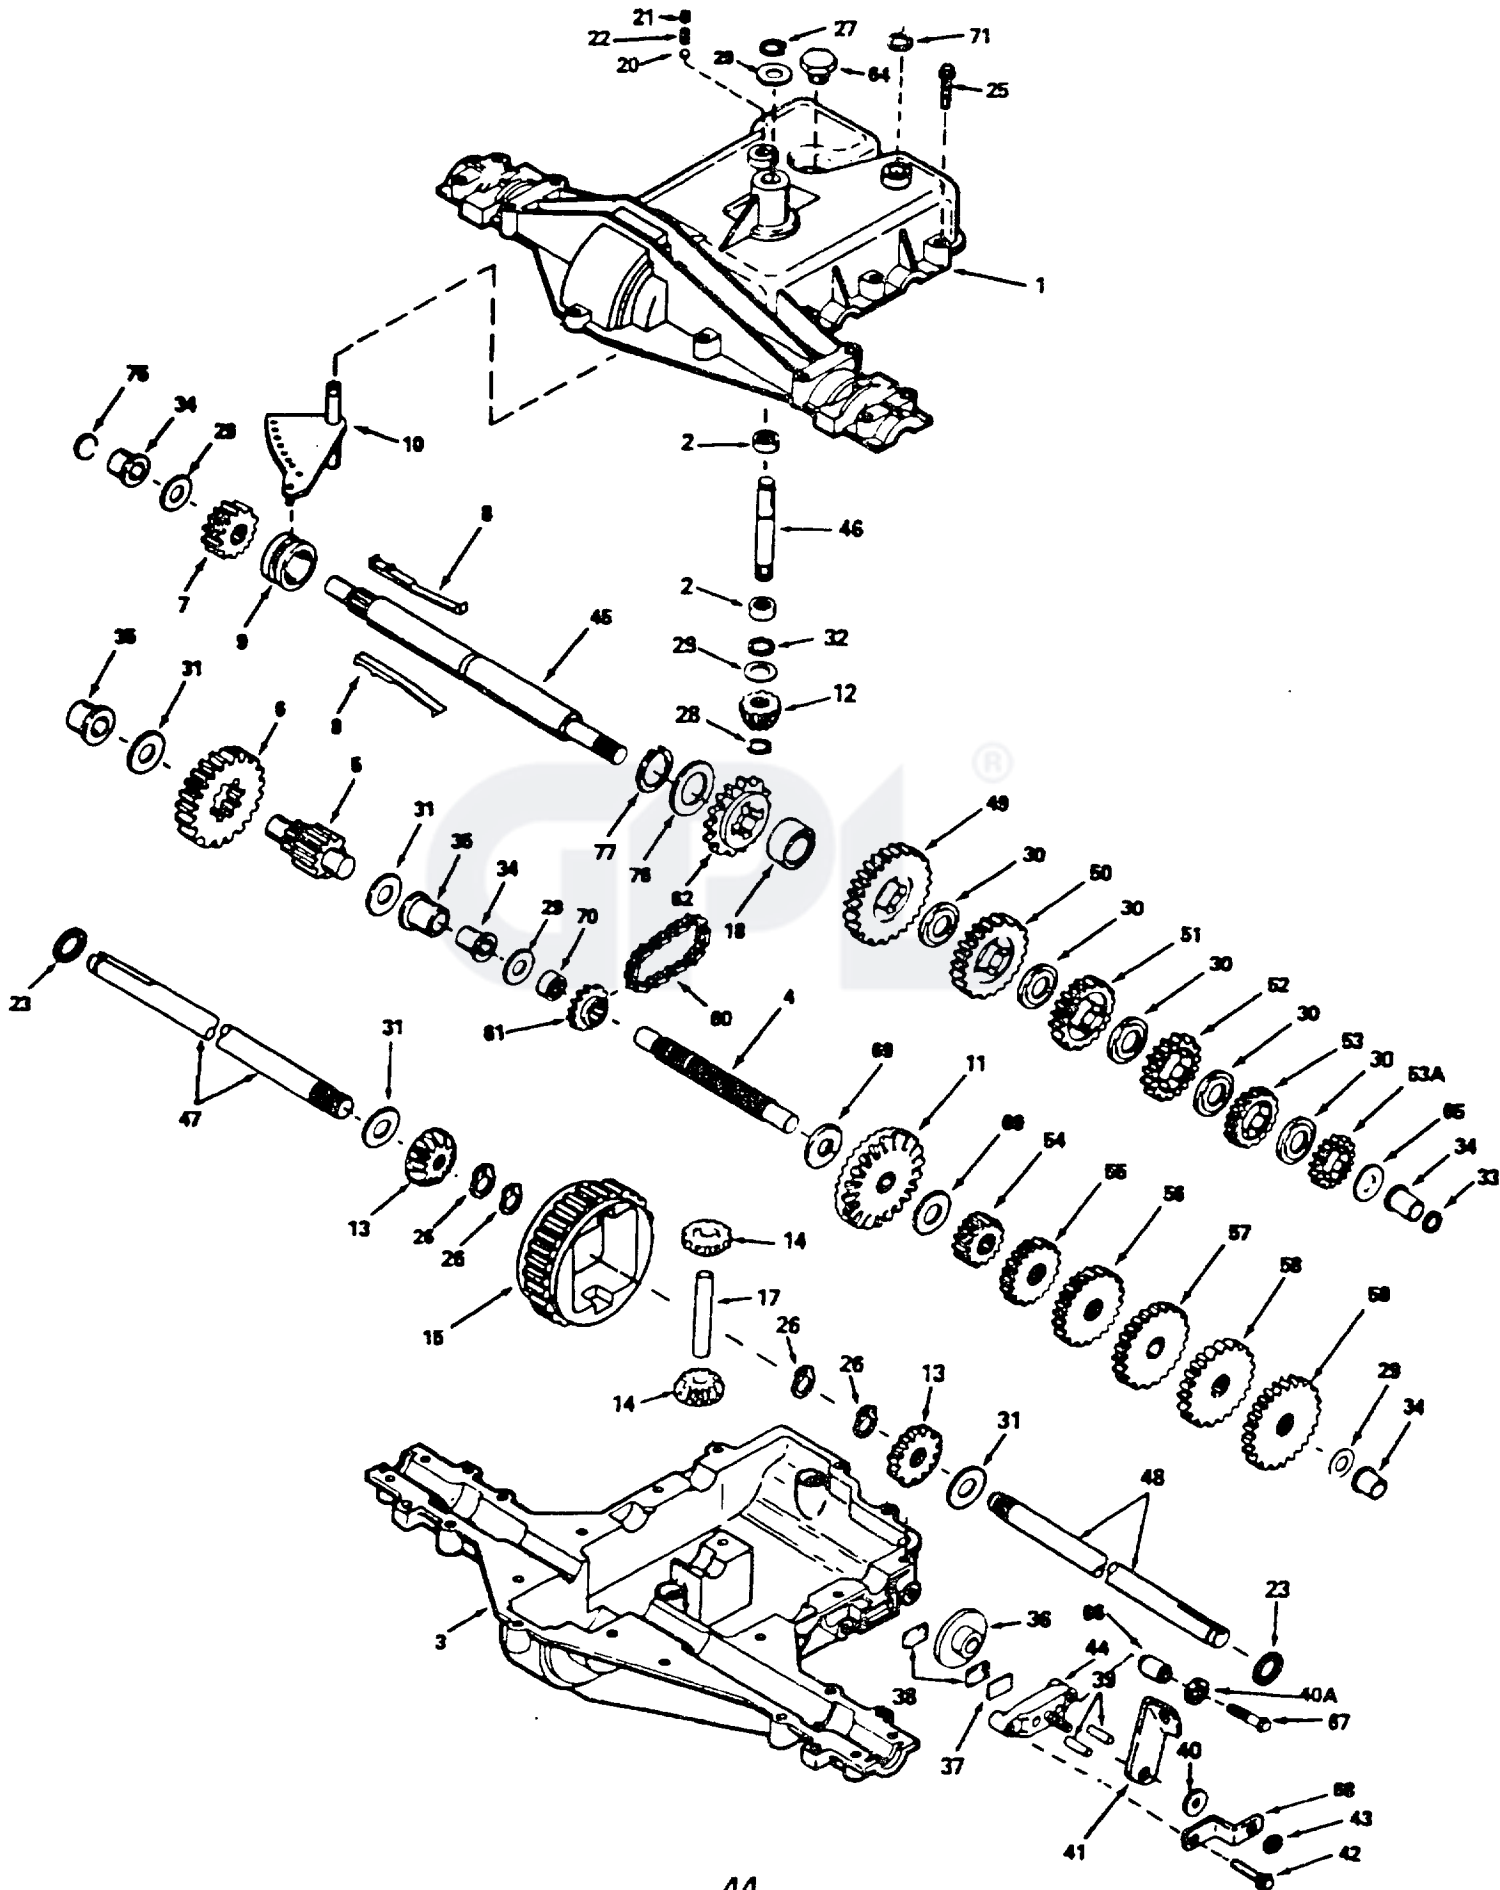

REPAIR PARTS

14 HP 42" TRACTOR—MODEL NO. LT140 (H1442A), PRODUCT NO. 954 00 05-52
PEERLESS TRANSAXLE - - MODEL NUMBER 930-010

REF PART NO. NO.	DESCRIPTION	REF PART NO. NO.	DESCRIPTION
1 772108	Cover, Transaxle	42 792073	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4
2 780086	Bearing, Needle	43 792075	Locknut 5/16-24
3 770102	Case, Transaxle	44 790025	Holder, Brake Pad
4 776260	Shaft, Counter	45 776315A	Shaft, Brake, 4-Keyed
5 776219	Shaft and Pinion Assembly, Output	46 776135	Shaft, Input
6 778139	Gear, Output	47 774690	Axle, 11-15/16"
7 778136	Gear Spur 15 Teeth	48 774691	Axle, 16-1/2"
8 792136	Key	49 778191	Gear, Spur 37 Teeth
9 784352	Collar, Shifter	50 778125	Gear, Spur 35 Teeth
10 784355	Rod & Fork Assembly, Shift	51 778124A	Gear, Spur 30 Teeth
11 778229	Gear, Bevel 42 Teeth	52 778123A	Gear, Spur 25 Teeth
12 778113A	Bevel Pinion, Input	53 778122A	Gear, Spur 22 Teeth
13 778221	Gear, Bevel	53A 778209	Gear, Spur 19 Teeth
14 778068	Gear, Bevel Pinion	54 778230	Gear, Spur 12 Teeth
15 778260	Gear, Ring	55 773151	Gear, Spur 15 Teeth
17 786139	Pin, Drive	56 778126A	Gear, Spur 20 Teeth
18 786102	Spacer, Neutral	57 778127A	Gear, Spur 25 Teeth
20 792077	Ball, Steel 5/16" diameter	58 778128A	Gear, Spur 28 Teeth
21 792078	Set Screw 3/8-16 x 3/8	59 778163	Gear, Spur 31 Teeth
22 792079	Spring	60 786081	Chain, Roller (Number 41 Chain, 24 Links)
23 788061	Ring, Felt	61 786082	Sprocket 9 Teeth
25 792073	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4	62 786123	Sprocket 18 Teeth
6 792125	Ring, Retainer (4 Required, Package Of 2)	64 792074	Plug, Hex Head, Threaded 9/16-18
27 792035	Ring, Retainer	65 780109	Washer, Thrust
28 788040	Ring, Retainer	66 786067	Spacer
29 780072	Washer, Thrust	67 792085	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 2-1/4
30 780108	Washer, Thrust	68 786086	Bracket, Brake Lever
31 780001	Washer	69 780051	Washer, Thrust
32 792001	"O" Ring	70 786118	Spacer
33 788051	Seal, Square Cut	71 788069	Seal, Square Cut
34 780105A	Bushing, Flanged	75 786116	Disk
35 780118A	Bushing, Flanged	76 780090	Washer, Thrust
36 790003	Disk, Brake	77 788075	Ring, Retaining
37 790007	Plate, Brake Pad		
38 790006	Pad, Brake		
39 786026	Pin, Dowel		
40 792076	Washer, Flat		
40A 792128	Washer, Flat		
41 790047	Lever, Brake		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Parts must be ordered from Tecumseh Products Co.