

LT152

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar


GPL®

ILLUSTRATED PARTS LIST

MODEL NO. 96041002905

CUSTOMER CATALOG NO. LT152


PRODUCT NO. 960 41 00-29

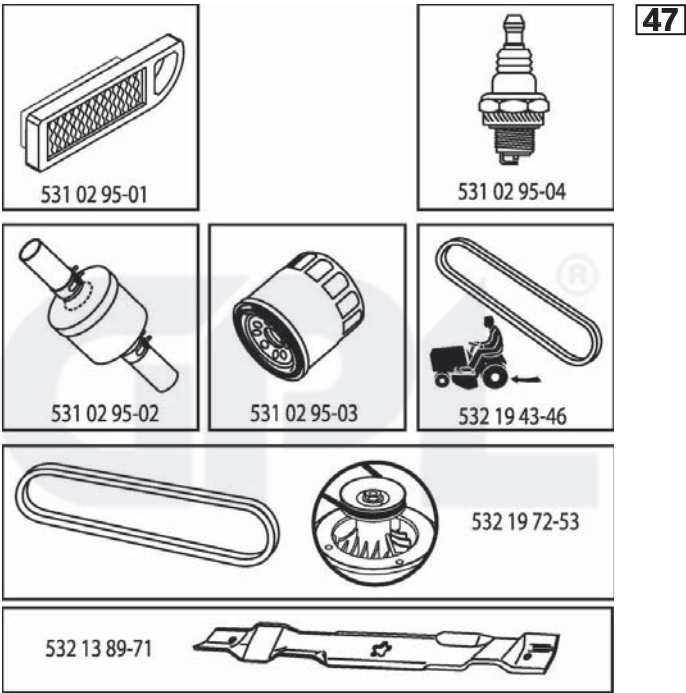

408774

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29


DECALS 27

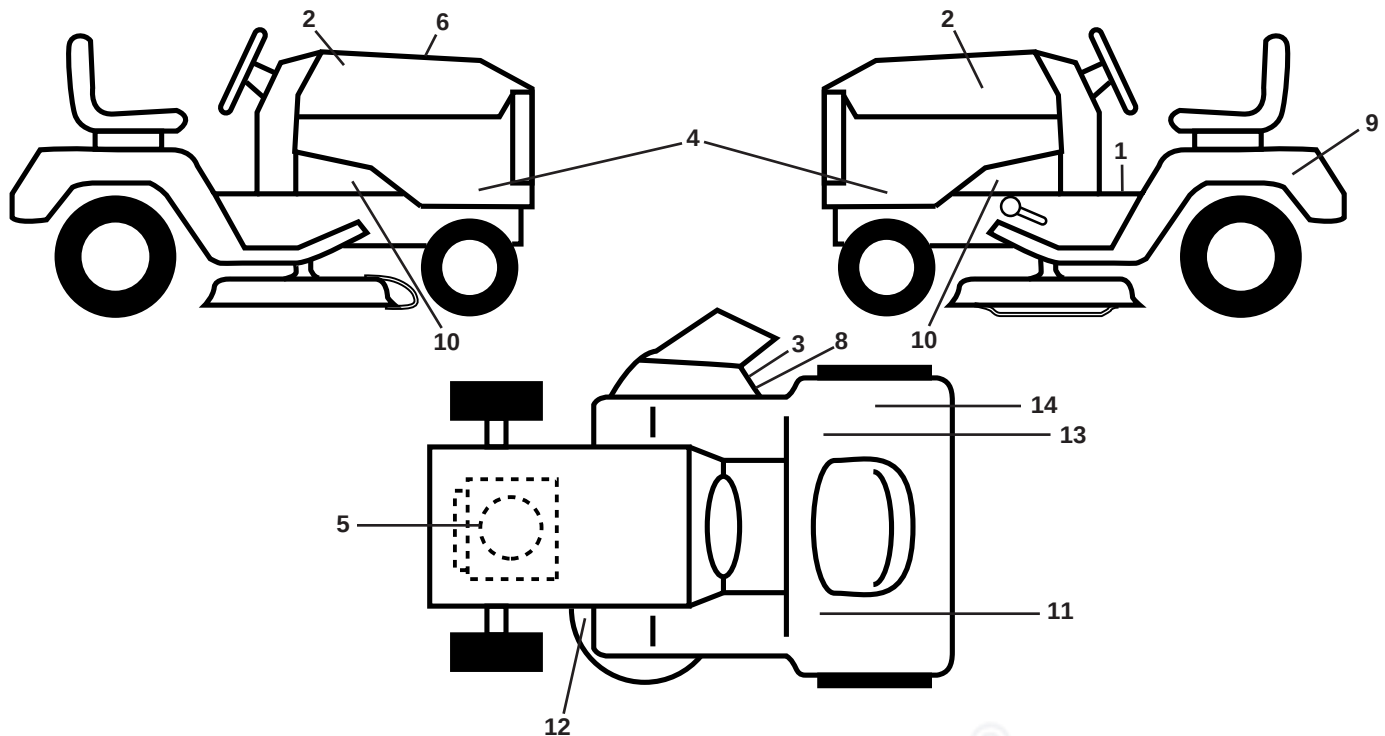

KEY NO.	PART NO.	DESCRIPTION
1	532 40 03-89	Decal, Operators
2	532 42 91-96	Decal, Emblem
3	532 18 21-66	Decal, Cutfinger
4	532 40 86-01	Decal, Hood Panel
5	532 19 68-41	Decal, Engine
6	532 43 00-35	Decal, Replacement
8	532 19 63-57	Decal, Deflect
9	532 14 50-05	Decal, Battery Dnge/Poi
10	532 15 97-36	Decal, Chassis Hot Muffler
11	532 15 97-37	Decal, Brake/Clutch

KEY NO.	PART NO.	DESCRIPTION
12	532 16 03-96	Decal, Mower V-Belt Schematic
13	532 14 08-37	Decal, Saddle
14	532 18 04-32	Decal, Fender DB/CE
--	532 16 25-98	Decal, Drawbar
--	532 41 08-05	Pad, Footrest, LH
--	532 41 10-56	Pad, Footrest, RH
--	532 43 10-59	Manual, Operator's (Euro)
--	532 43 10-60	Manual, Operator's (Scand)
--	532 43 10-61	Manual, Operator's (E-Bloc)
--	532 43 10-62	Manual, Operator's (Baltic)

WHEELS AND TIRES

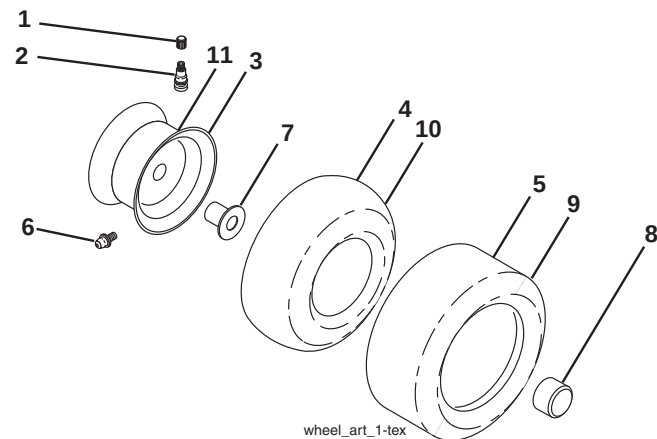


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 13 83-36	Rim Asm 6" Front
4	532 05 99-04	Tube Front
5	532 10 62-22	Tire F T 15 x 6.0 - 6"
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 17 50-39	Cap Axle Blk 1 50 x 1 00
9	532 42 05-31	Tire R 18 x 9.5-8 Turf Saver LT
10	532 12 49-26	Tube Rear
11	532 13 83-37	Rim Asm 8" Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
SCHEMATIC **38**

SCH10

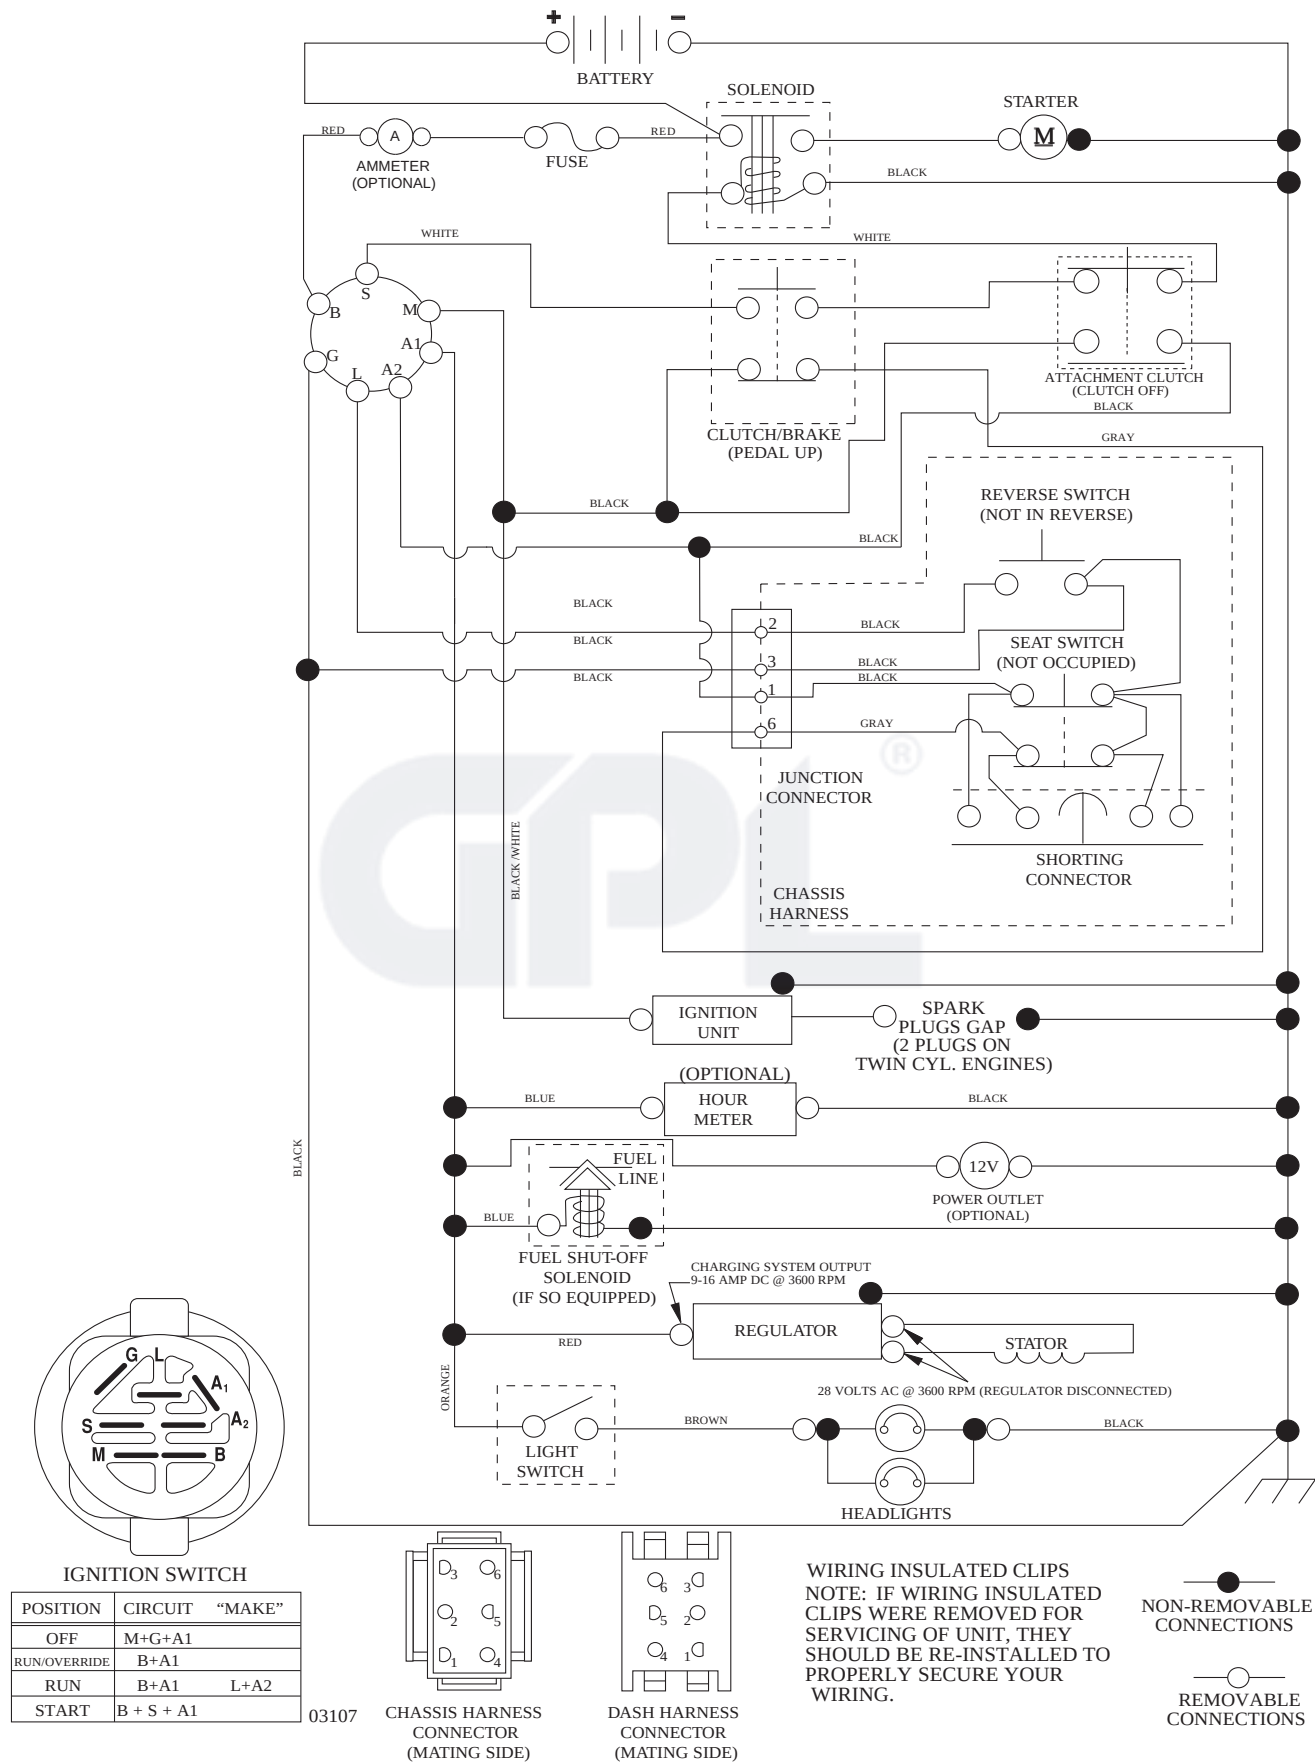

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
ELECTRICAL 32

T02S

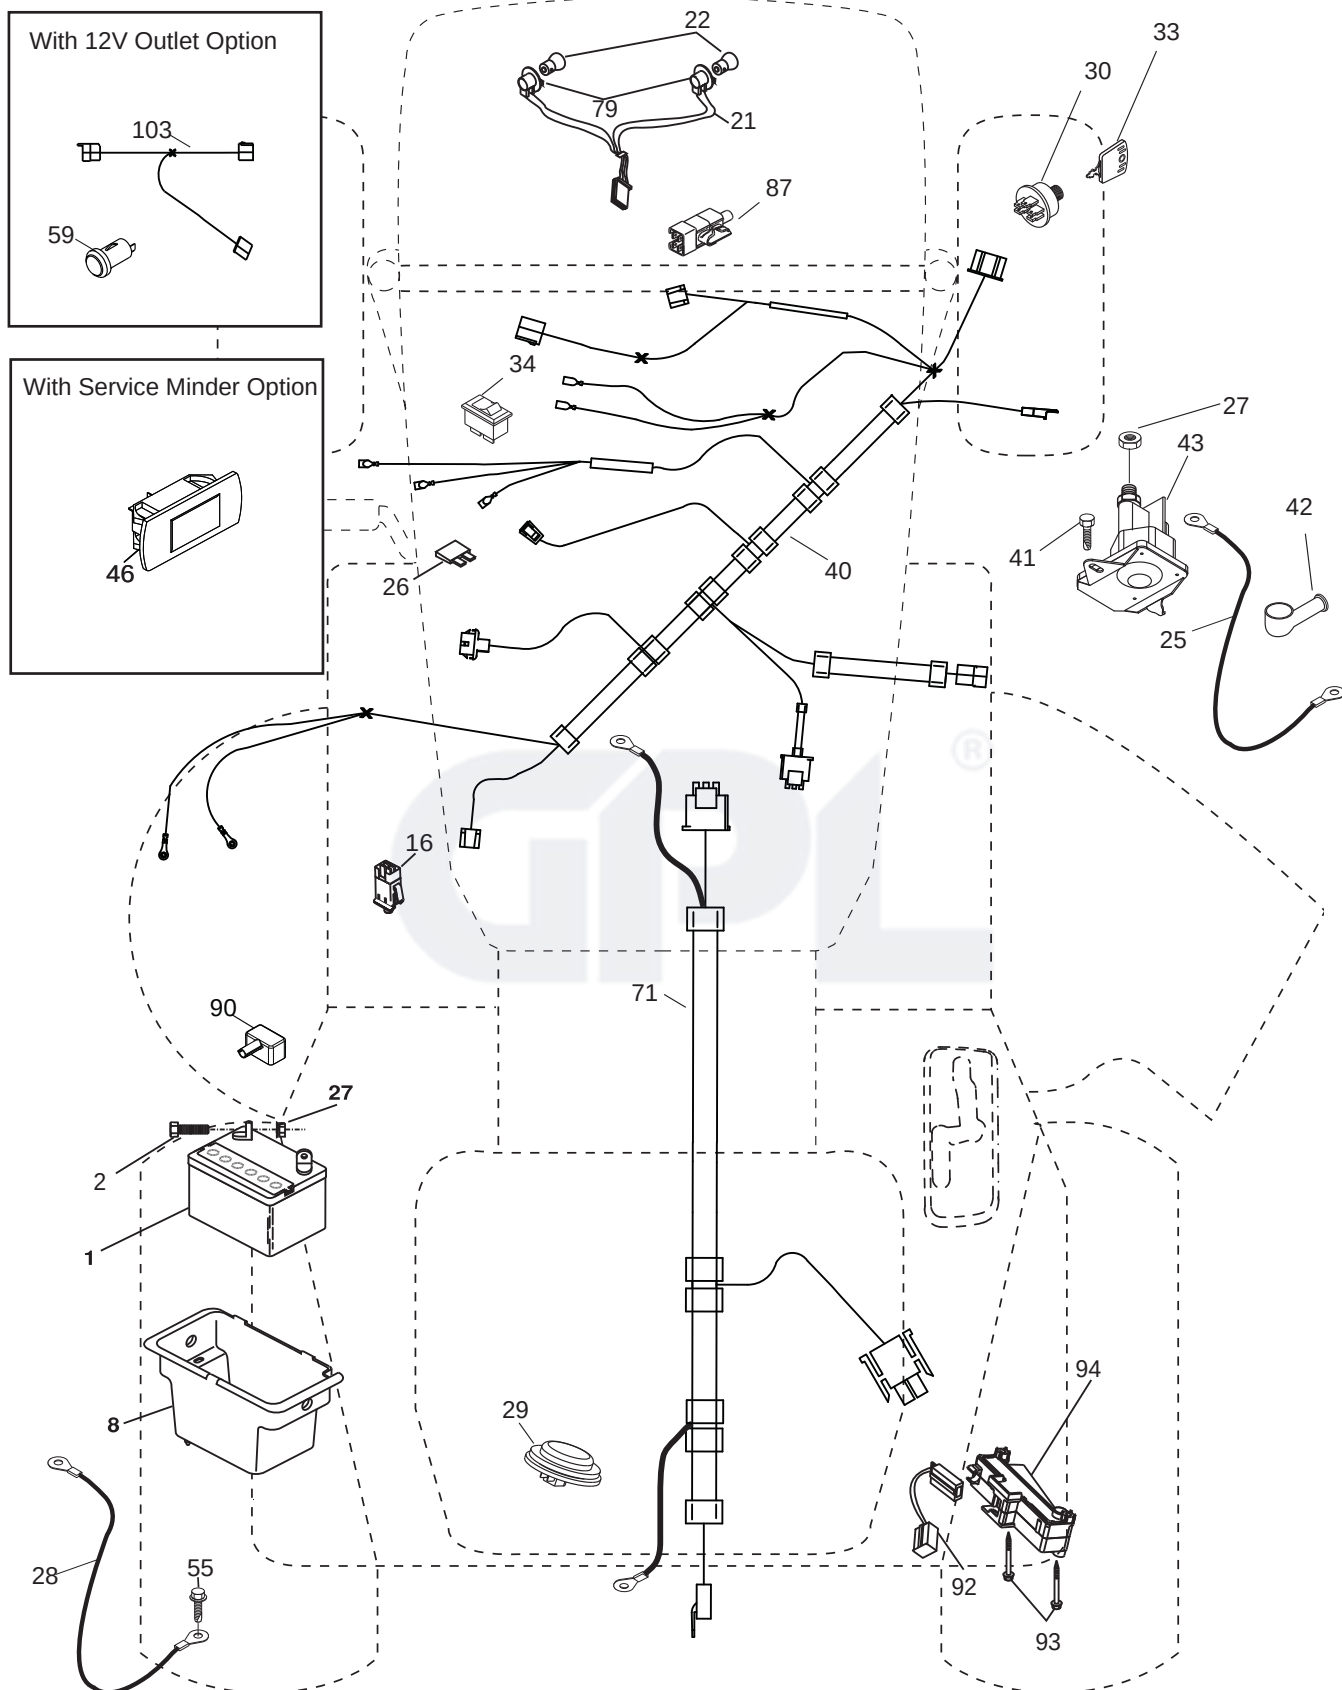


TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
ELECTRICAL 32

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Head 1/4-20 x 3/4
8	532 19 32-28	Box Battery
16	532 17 61-38	Switch Interlock Push-In
21	532 40 02-52	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
25	532 41 28-94	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 19 88-85	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light / Reset
40	532 40 10-98	Harness Ign. Dash
41	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
42	532 13 15-63	Cover, Terminal
43	532 19 25-07	Solenoid
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4
71	532 40 04-49	Harness Chassis
79	532 17 52-42	Socket Asm Bulb
87	532 19 78-02	Switch Interlock Clutch Cable
90	532 40 07-25	Cover Square Terminal
92	532 19 66-15	Harness Pigtail Reverse Switch
93	532 19 25-40	Screw Plastite 10-14 x 2.0
94	532 19 18-34	Module Reverse ROS

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
CHASSIS AND ENCLOSURES 39

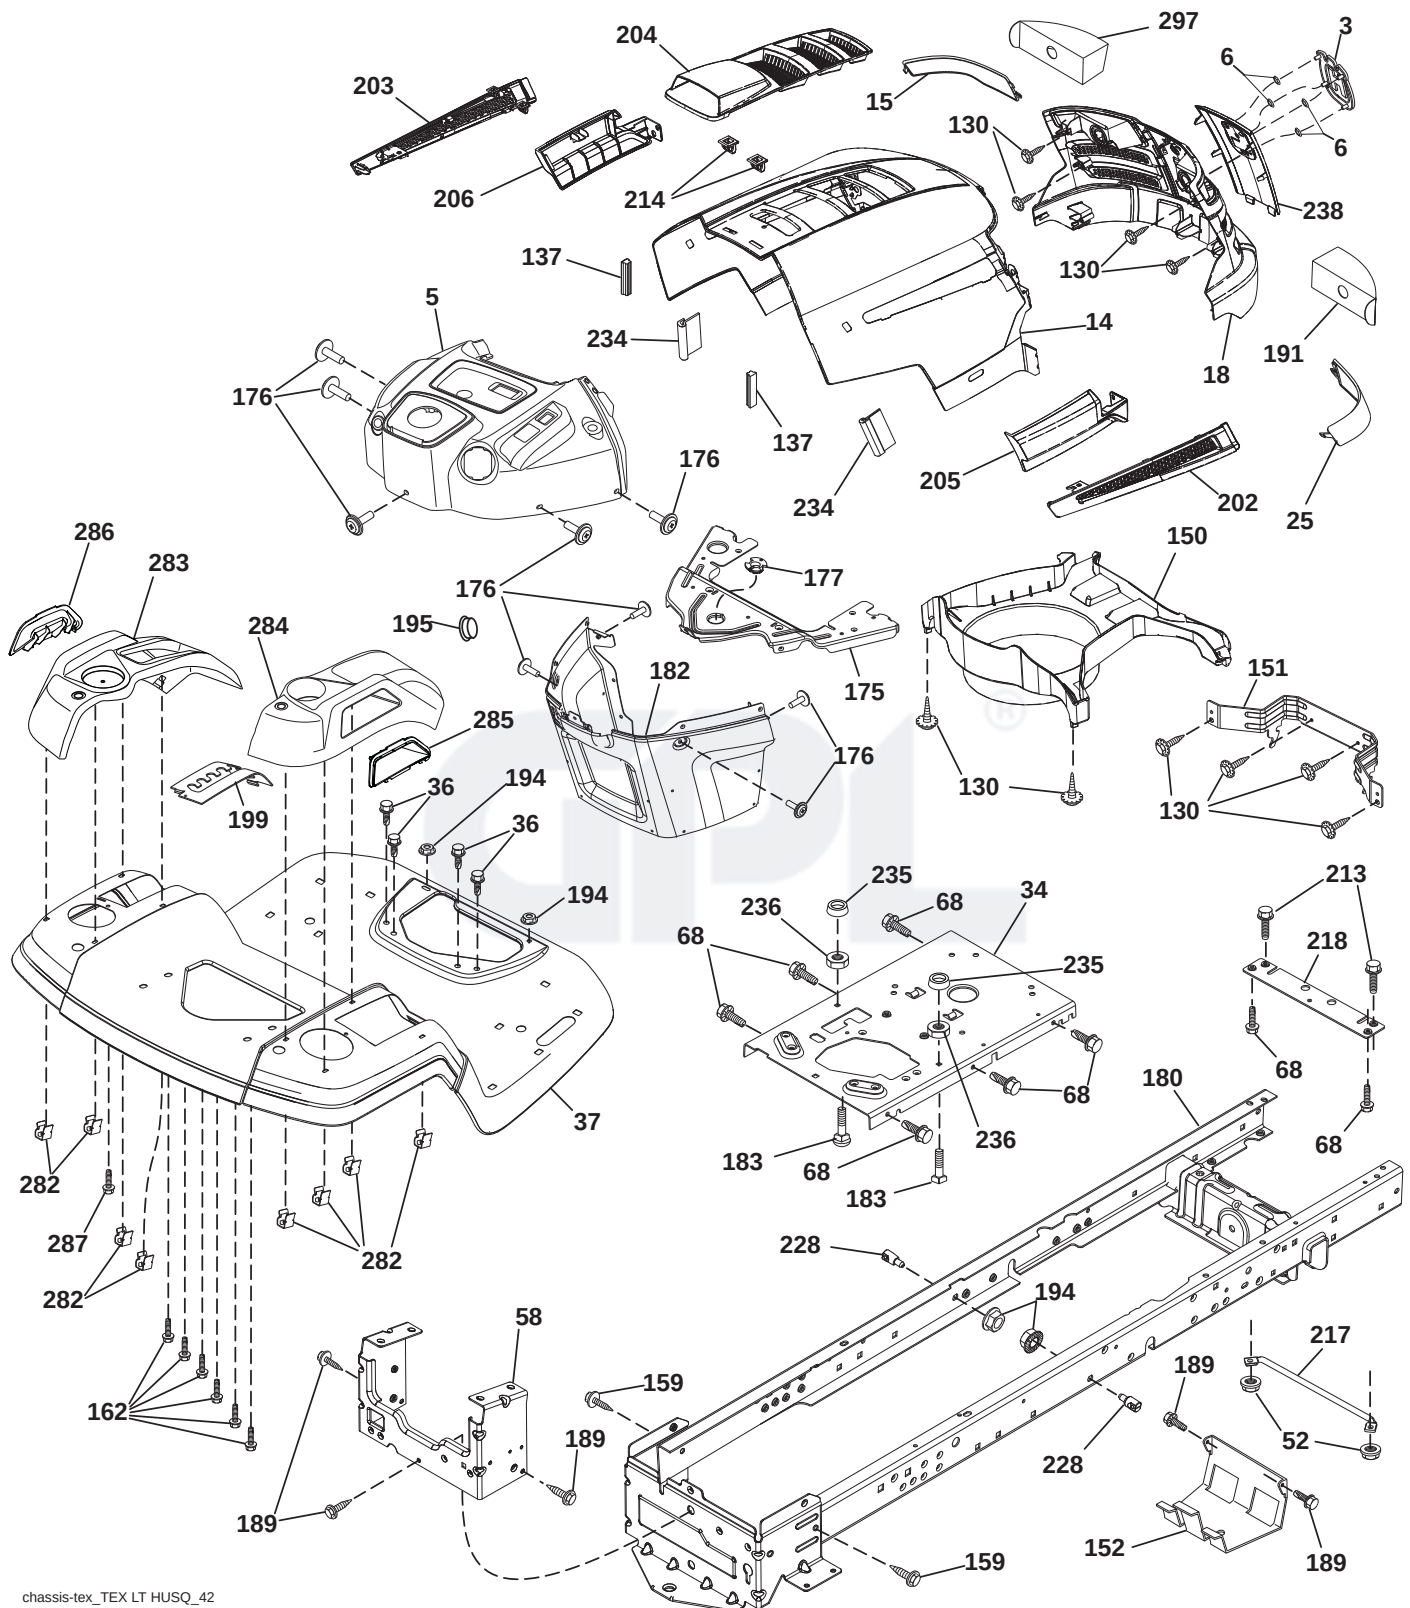

chassis-tex_TEX LT HUSQ_42


TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29

CHASSIS AND ENCLOSURES **39**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
3	532 40 50-12	Logo	199	532 41 34-85	Plate Deck Lift Husqvarna LT
5	532 40 75-92	Dash	202	532 41 10-75	Vent Side Hood RH
6	532 40 48-83	Clip Tinnerman	203	532 41 10-74	Vent Side Hood LH
14	532 44 12-67	Hood	204	532 41 11-16	Vent Top Hood
15	532 41 10-79	Lens LH	205	532 41 10-76	Skirt Side RH
18	532 42 69-63	Grille	206	532 41 10-77	Skirt Side LH
25	532 41 10-78	Lens RH	213	874 76 05-12	Bolt Hex 5/16-18 unc x 3/4
34	532 19 61-25	Plate Engine	214	532 19 91-45	Clip Retainer
36	817 06 05-12	Screw 5/16-18 x 3/4	217	532 40 91-67	Rod Pivot Hood
37	532 44 12-66	Fender	218	532 19 63-95	X-Piece Hood Stop
52	873 68 05-00	Nut Lock 5/16-18	228	532 19 51-61	Stud Fastener
58	532 41 22-80	Drawbar, Upper	234	532 40 47-42	Bumper Hood
68	817 49 05-08	Screw Thdrol 5/16-18 x 1/2	235	532 40 61-29	Spacer Fender
130	532 41 63-58	Screw#10 x 0.750 BOS Thread	236	873 93 05-00	Nut Centerlock 5/16-18 unc
137	532 40 75-90	Bumper Dash	238	532 41 11-19	Trim
150	532 40 75-37	Air Duct	282	532 41 41-10	Clip Retainer Console
151	532 40 78-07	Bracket Pivot	283	532 41 63-16	Console Deck Lift Husq N/FR GR
152	532 19 95-35	Shield Browning	284	532 41 63-14	Console SHFT HYD HUSQ LT
159	817 00 06-12	Screw Hexwsh Thdrol 3/8-16 x 3/4	285	532 41 63-15	Console INSRT RH HUSQ
162	532 14 24-32	Screw	286	532 41 63-17	Console INSRT LH HUSQ
175	532 19 94-72	Crossmember	287	817 60 04-06	Screw Hex WASHEAD 1/4-20 x 3/8
176	532 40 07-76	Screw 10-24 x 5/8	297	532 40 66-65	Insert Reflective LH
177	532 19 52-28	Bushing Steering			
180	532 41 50-63	Chassis			
182	532 40 71-76	Dash Lower			
183	874 78 05-20	Bolt 5/16-18 unc x 1-1/4			
189	817 00 05-12	Screw 5/16-18 x 3/4			
191	532 41 65-00	Insert Reflective RH			
194	873 90 05-00	Nut Lock Hex Flange 5/16-18			
195	532 41 11-15	Plug Dash			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
DRIVE 40

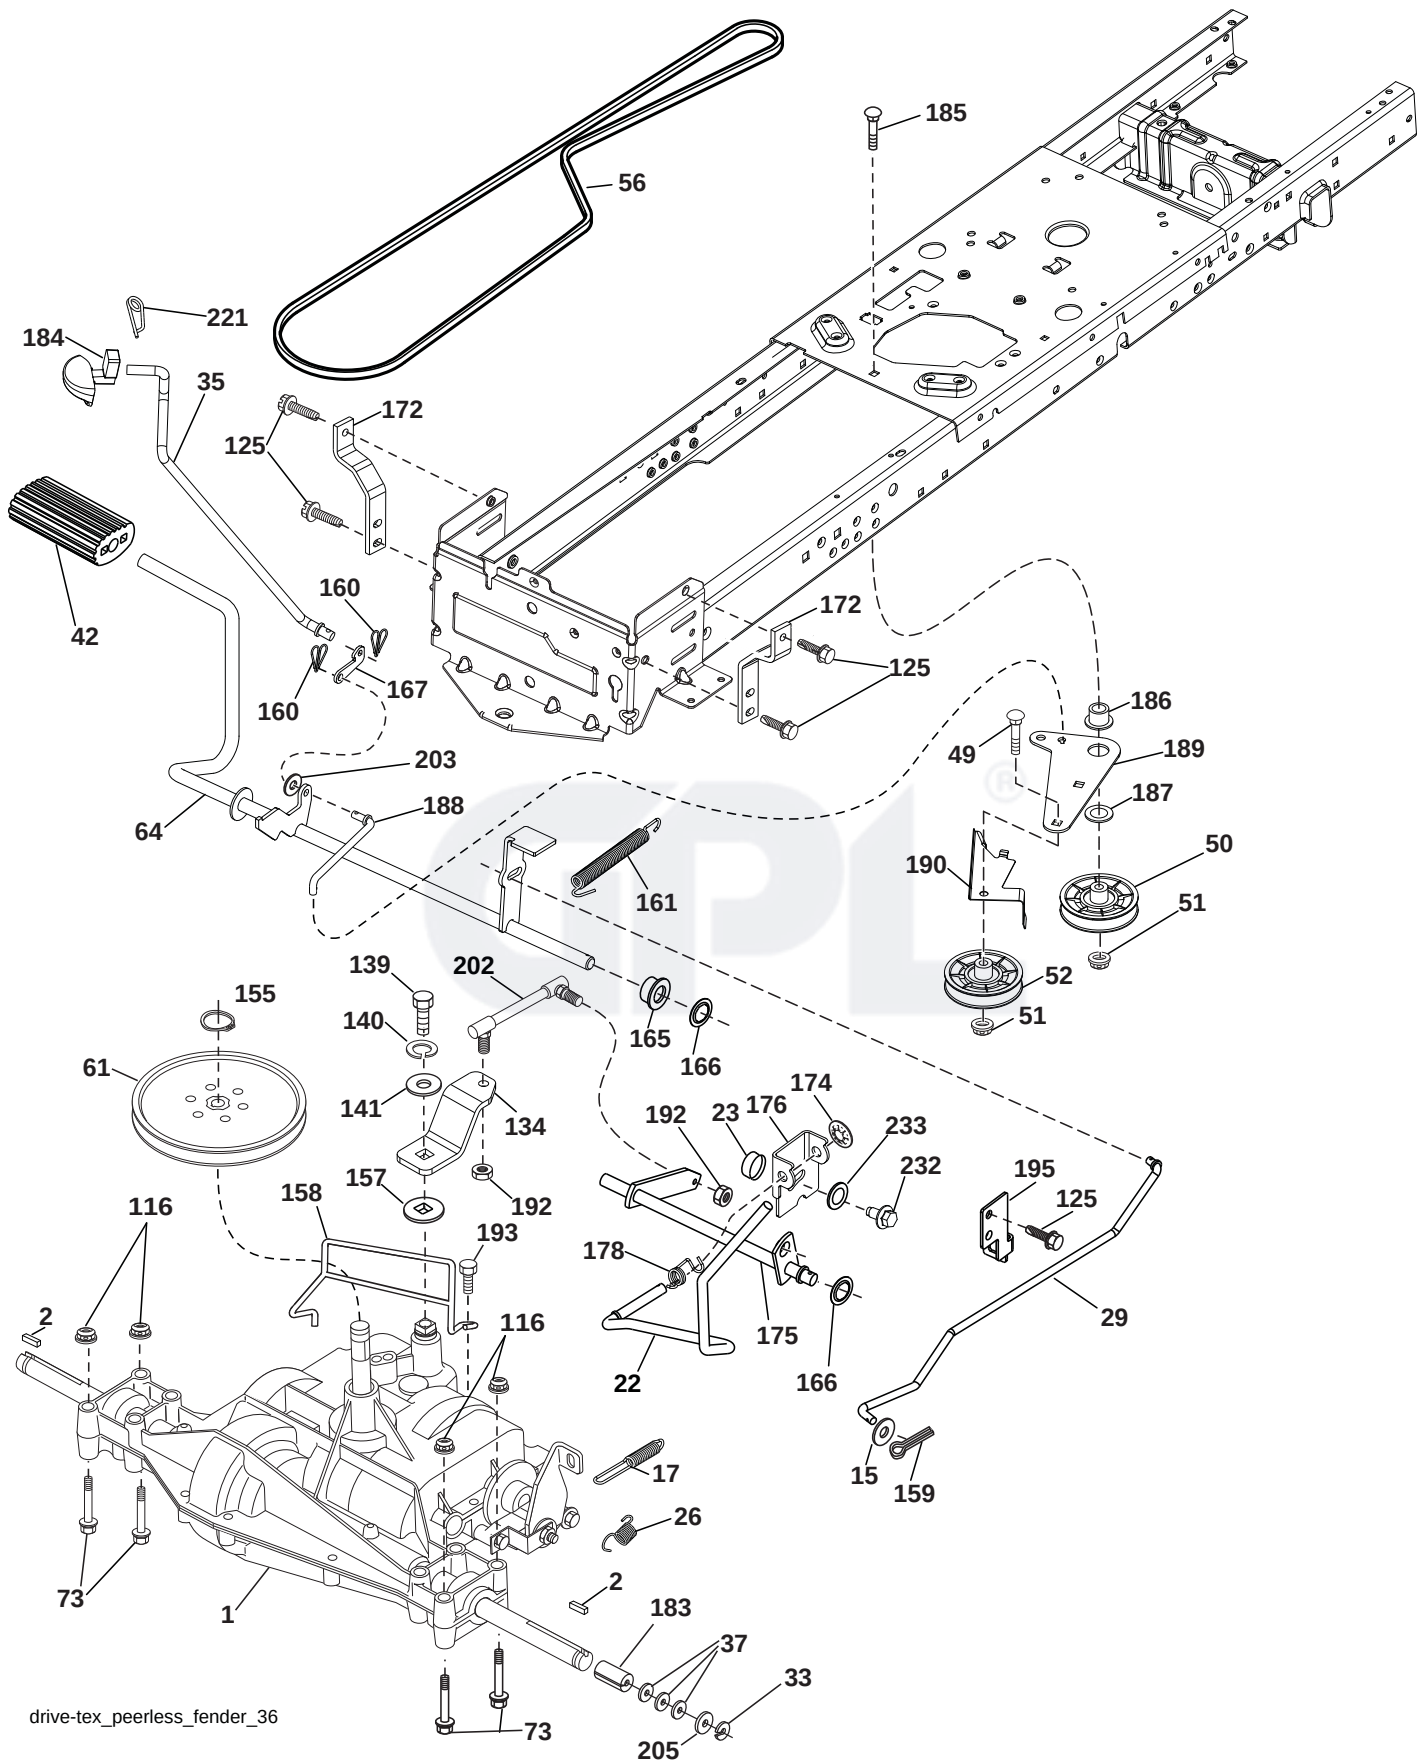


drive-tex_peerless_fender_36

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
DRIVE 40

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Transaxle, Peerless 206-565 (Order parts from transaxle manufacturer)	160	532 16 94-84	Retainer Clip
2	532 12 35-83	Key Square	161	532 10 57-09	Spring, Return, Clutch
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	165	532 19 62-12	Busing Shaft Brake Hand Control
17	532 19 72-97	Spring, Brake	166	532 42 83-05	Nut Push .625
22	532 19 76-60	Rod Shift	167	532 40 52-57	Latch Brake Parking
23	532 12 12-74	Knob	172	532 19 76-57	Strap Torque LH
26	532 19 74-55	Spring Brake Return	174	532 19 72-89	Nut Push
29	532 19 72-67	Rod, Brake	175	532 19 78-58	Shaft Asm. Shift
33	812 00 00-01	Ring E	176	532 19 62-14	Arm Clevis Rod Shift
35	532 40 10-31	Rod, Brake, Park	178	532 19 74-56	Spring Shift
37	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.	183	532 13 70-57	Spacer Axle
42	532 12 48-72	Cover, Foot Pedal	184	532 40 97-47	Handle Parking Brake
49	872 11 06-14	Bolt	185	872 11 06-22	Bolt 3/8-16 unc x 2-3/4 Gr. 5
50	532 19 43-27	Pulley Idler Flat	186	532 19 43-21	Spacer Retainer
51	873 90 06-00	Lock Nut 3/8-16	187	819 13 32-10	Washer
52	532 19 43-26	Idler V-Groove	188	532 19 43-23	Link Clutch Ground Drive
56	532 19 43-46	V-Belt, Drive	189	532 19 43-17	Bellcrank Ground Drive
61	532 12 36-66	Pulley Transaxle	190	532 19 43-18	Keeper Bellcrank Ground Drive
64	532 19 62-00	Shaft Asm. Pedal Brake Control	192	532 15 03-60	Nut Lock Center 1/4-28 Fnthd
73	874 49 05-44	Bolt Hex Flghd 5/16-18 Gr. 5	193	817 06 05-12	Screw 5/16-18 x 3/4
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	195	532 19 73-32	Bracket Brake Rod
125	817 00 05-12	Screw 5/16-18 x 3/4	202	532 19 78-59	Link Transaxle
134	532 19 78-57	Asm Shift	203	819 11 11-16	Washer 11/32 x 11/16 x 16 Ga.
139	874 55 04-12	Bolt 1/4-28 unf Gr. 8 w/Patch	205	532 12 17-48	Washer 25/32 x 1-5/8 16 Ga.
140	810 04 04-00	Washer Lock Hvy Helical 1/4	221	532 40 31-87	Retainer Spring Clip Handle
141	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.	232	874 78 07-16	Bolt Hex 7/16-14 x 1 Gr. 5
155	812 00 00-28	Ring Retainer	233	532 40 52-96	Washer Serrated
157	532 10 57-01	Washer Plate Shift			
158	532 19 43-52	Belt Keeper			
159	876 02 04-12	Pin Cotter 1/8 x 3/4			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

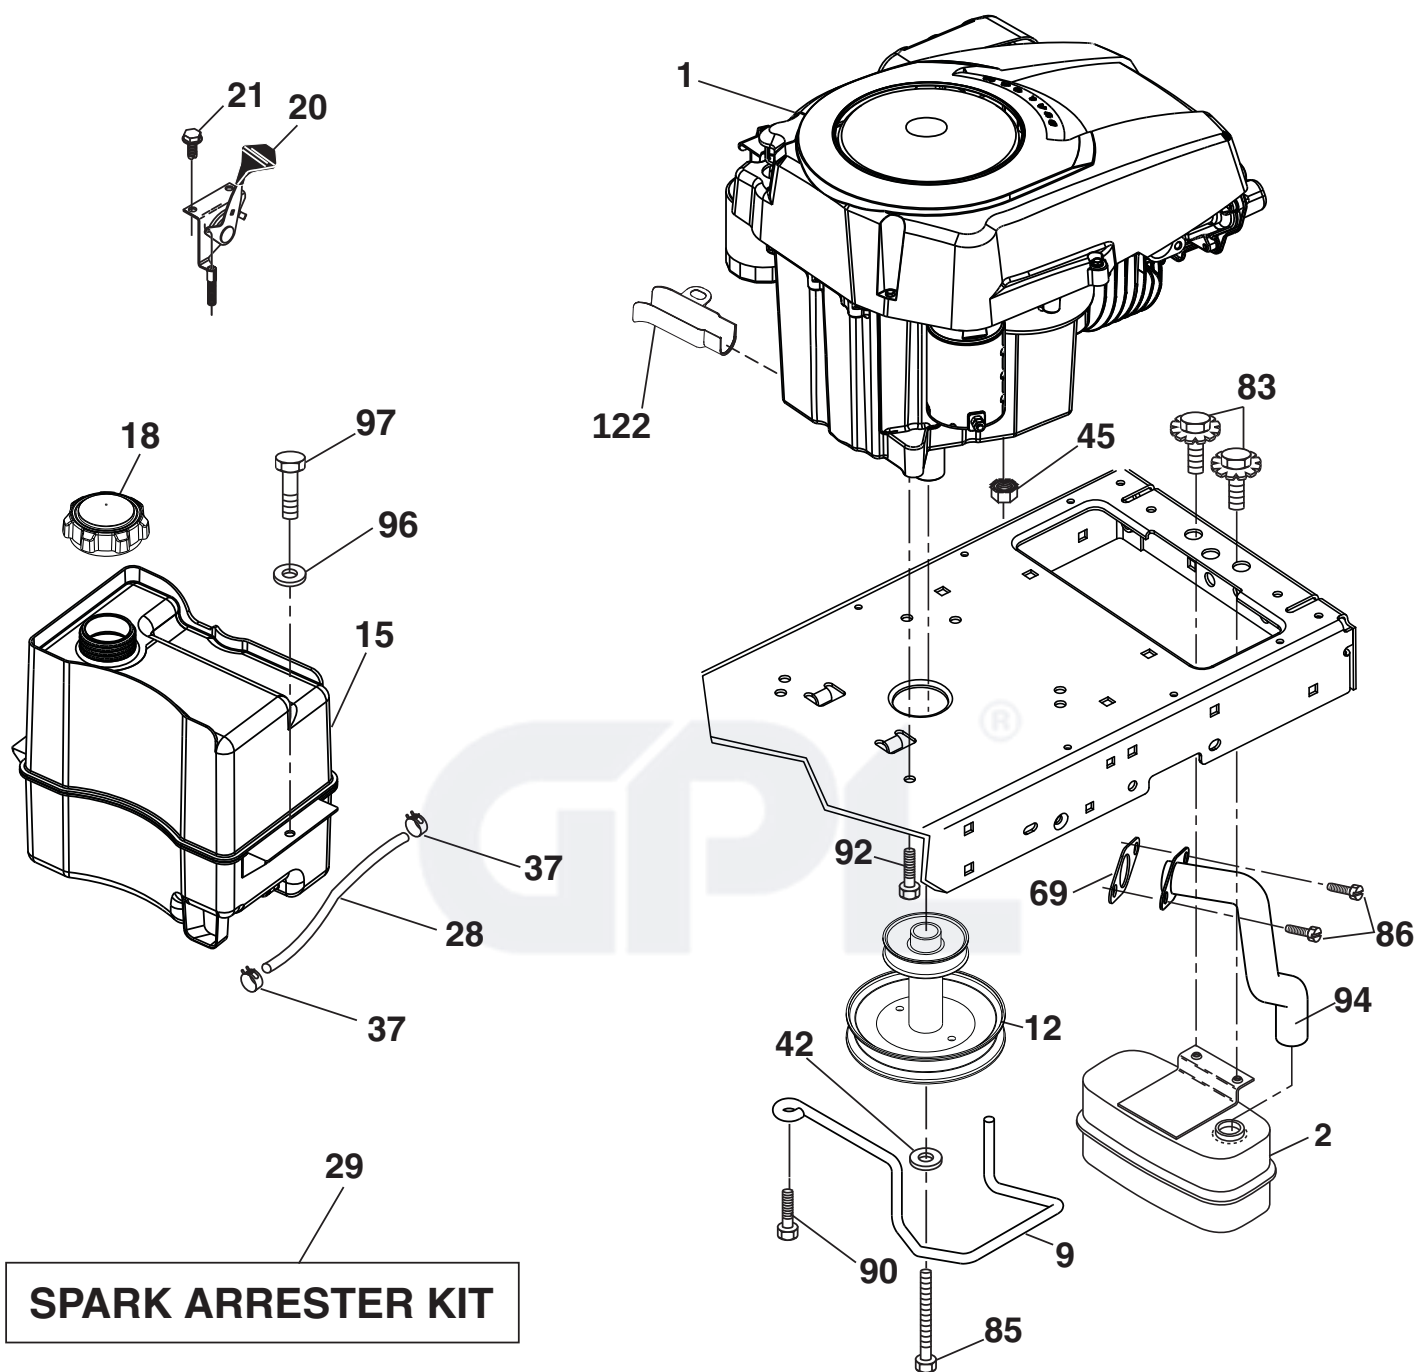

engine-tex_kohl_23

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
ENGINE [24]

KEY NO.	PART NO.	DESCRIPTION
1	- - - - -	Engine Kohler Model No. SV470-0212(Order parts from engine manufacturer)
2	532 18 86-55	Muffler
9	532 19 43-19	Keeper Belt Engine
12	532 40 19-85	Pulley Engine
15	532 40 75-45	Tank Fuel
18	532 42 51-62	Cap Fuel
20	532 18 38-97	Control Throttle
21	532 41 63-58	Screw #10 x 0.750 BOS Thread
28	532 13 70-40	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
42	810 04 07-00	Washer Lock 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
69	532 18 59-09	Gasket
83	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
85	532 17 39-37	Bolt Hex 7/16-20 x 4 Gr. 5
86	532 19 23-34	Screw Socket HD 5/16-18 x .75
90	817 00 06-16	Screw 3/8-16 x 1
92	817 12 06-16	Screw 3/8-16 x 1
94	532 18 86-54	Tube Exhaust
96	819 09 14-16	Washer 9/32 x 7/8 x 16 Gr.
97	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
122	532 42 19-22	Extension Oil Drain

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

This is a detailed exploded view diagram of a steering assembly, likely for a vehicle. The diagram shows the following components and their assembly sequence:

- Top Assembly:** Includes a cap (1), a central pin (33), a washer (45), a nut (26), and a pin (72).
- Adjustment Mechanism:** Consists of a cap (20), a pin (21), a nut (71), and a pin (70).
- Main Frame and Mounting:** Features a main frame (19), a mounting plate (57), a pin (63), a pin (64), a pin (28), a pin (13), a pin (22), a pin (60), a pin (59), a pin (35), a pin (58), a pin (61), a pin (4), a pin (14), a pin (15), a pin (69), a pin (68), a pin (70), a pin (67), a pin (66), a pin (9), a pin (8), a pin (7), a pin (74), a pin (6), a pin (5), a pin (13), a pin (8), a pin (53).
- Steering Arm and Wheel:** Includes a steering arm (2), a pin (67), a pin (66), a pin (9), a pin (8), a pin (7), a pin (74), a pin (6), a pin (5), a pin (13), a pin (8), a pin (53).
- Watermark:** A large, semi-transparent 'GPL' watermark is visible across the center of the diagram.


steering-tex_HUSQSR_10_r1

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
STEERING ASSEMBLY 41

KEY NO.	PART NO.	DESCRIPTION
1	532 41 64-80	Wheel, Steering Husq SR
2	532 41 81-68	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Washer, Thrust Hardened
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Klip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy Hlcl Spr 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 42 93-73	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 41 11-39	Boot, Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 42 05-37	Steering Support
26	532 41 59-87	Insert, Wheel Steering Husq SR
28	817 00 06-12	Screw 3/8-16 x 3/4
33	810 04 05-00	Washer Lock 5/16
35	532 19 47-32	Gear, Sector Plate
45	819 11 38-12	Washer 11/32 ID x 2-3/8 x 12 Ga.
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd 7/16-14 x 3 Serr
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front
71	532 19 07-52	Shaft Ext Steering
72	532 42 89-82	Bolt Fin. Hx. 5/16-18 x 4
74	532 12 49-37	Bearing

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
MOWER DECK 44

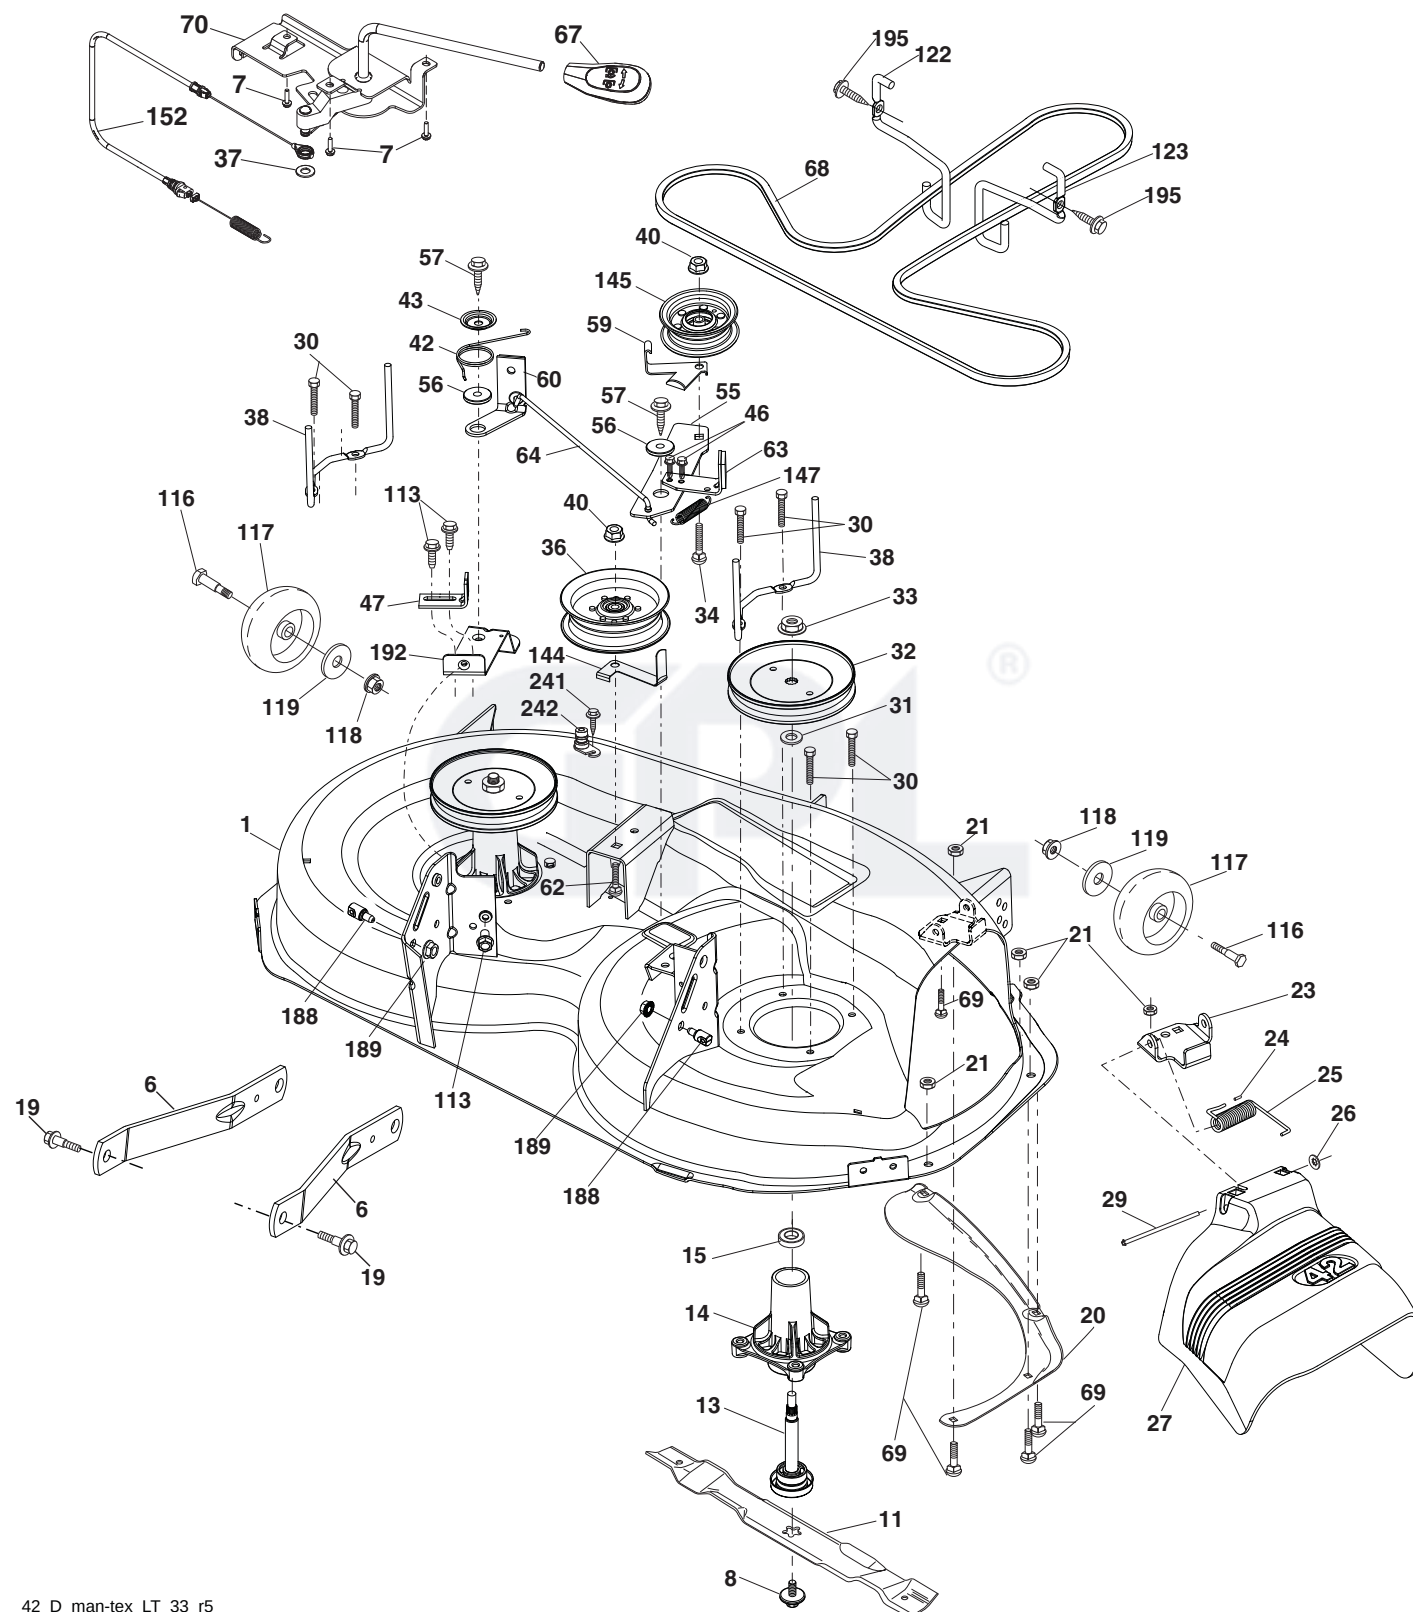


TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29

MOWER DECK **44**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 64-95	MOWER HOUSING	60	532 19 72-61	ARM BRAKE MOWER
6	532 19 51-86	ARM SUSPENSION	62	872 11 06-16	BOLT Rd Hd Sq Nk 3/8-16 UNC x 2
7	532 41 63-58	SCREW #10 x 0.750 BOS THREAD	63	532 19 94-77	ARM BRAKE MOWER
8	532 19 30-03	BOLT/WASHER ASM 7/16-20 UNF	64	532 19 97-90	LINK BRAKE
11	532 13 89-71	BLADE, 42" HI-LIFT (FOR BAGGING OR DISCHARGE)	67	532 40 30-12	HANDLE CLUTCH CABLE
13	532 19 28-72	SHAFT ASSEMBLY, MANDREL	68	532 42 96-36	V-BELT
14	532 18 72-81	HOUSING, MANDREL	69	872 14 05-05	BOLT
15	532 11 04-85	BEARING, BALL, MANDREL	70	532 40 12-46	CLUTCH ASM MANUAL
19	532 19 65-39	BOLT, SHOULDER	113	817 00 05-10	SCREW 5/16-18
20	532 15 97-70	BAFFLE, VORTEX	116	532 12 48-42	BOLT, SHOULDER
21	873 68 05-00	NUT, CROWNLOCK 5/16-18 UNC	117	532 18 86-06	WHEEL, GAUGE
23	532 19 25-57	BRACKET, DEFLECTOR	118	873 90 06-00	NUT, CROWNLOCK 3/8-1
24	532 10 53-04	CAP, SLEEVE	119	819 12 14-14	WASHER 13/32 x 7/8 x 14 GA.
25	532 19 70-26	SPRING, TORSION, DEFLECTOR	122	532 19 72-58	KEEPER BELT ENGINE LH
26	532 11 04-52	NUT, PUSH	123	532 19 72-59	KEEPER BELT ENGINE RH
27	532 40 30-04	SHIELD, DEFLECTOR	144	532 19 92-04	KEEPER BELT
29	532 13 14-91	ROD, HINGE	145	532 19 31-97	PULLEY, IDLER, FLAT
30	532 17 39-84	SCREW THDROL ROLLING WSH Hd	147	532 40 19-71	SPRING RETURN
31	532 18 76-90	WASHER, SPACER	152	532 40 87-14	MANUAL CLUTCH CABLE
32	532 19 74-73	PULLEY, MANDREL	188	532 19 51-61	STUD FASTENER
33	532 40 02-34	NUT, TOPLOCK, FLANGED	189	873 90 05-00	NUT LOCK HEX FLANGE
34	872 11 06-12	BOLT CARR SH. 3/8-16 x 1-1/2 GR. 5	192	532 19 72-60	BRACKET BRAKE STAND LH
36	532 19 73-79	PULLEY IDLER	195	817 00 06-12	SCREW 3/8-16 x 3/4
37	819 13 13-16	WASHER	241	532 15 29-27	SCREW
38	532 19 91-89	KEEPER BELT LH MANDREL	242	532 41 55-98	PORT WASHOUT
40	873 90 06-00	NUT, LOCK FLG. 3/8-16 UNC	--	532 19 28-70	MANDREL ASSEMBLY (INCLUDES HOUSING, SHAFT ASSEMBLY, AND BEARING ONLY - PULLEY/NUT/WASHER AND BLADE BOLT/ WASHERS NOT INCLUDED)
42	532 19 84-10	SPRING TORSION BRAKE	--	532 19 96-08	REPLACEMENT MOWER, COMPLETE
43	532 19 72-56	SPRING TORSION RETAINER			
46	532 13 77-29	SCREW THD ROLL 1/4-20 x 5/8			
47	532 19 72-50	BRACKET CLUTCH CABLE			
55	532 43 71-10	ARM, IDLER			
56	532 19 90-92	SPACER, RETAINER			
57	817 00 06-16	SCREW 3/8-16 x 1			
59	532 14 10-43	GUARD, TUV IDLER			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
SEAT ASSEMBLY 42

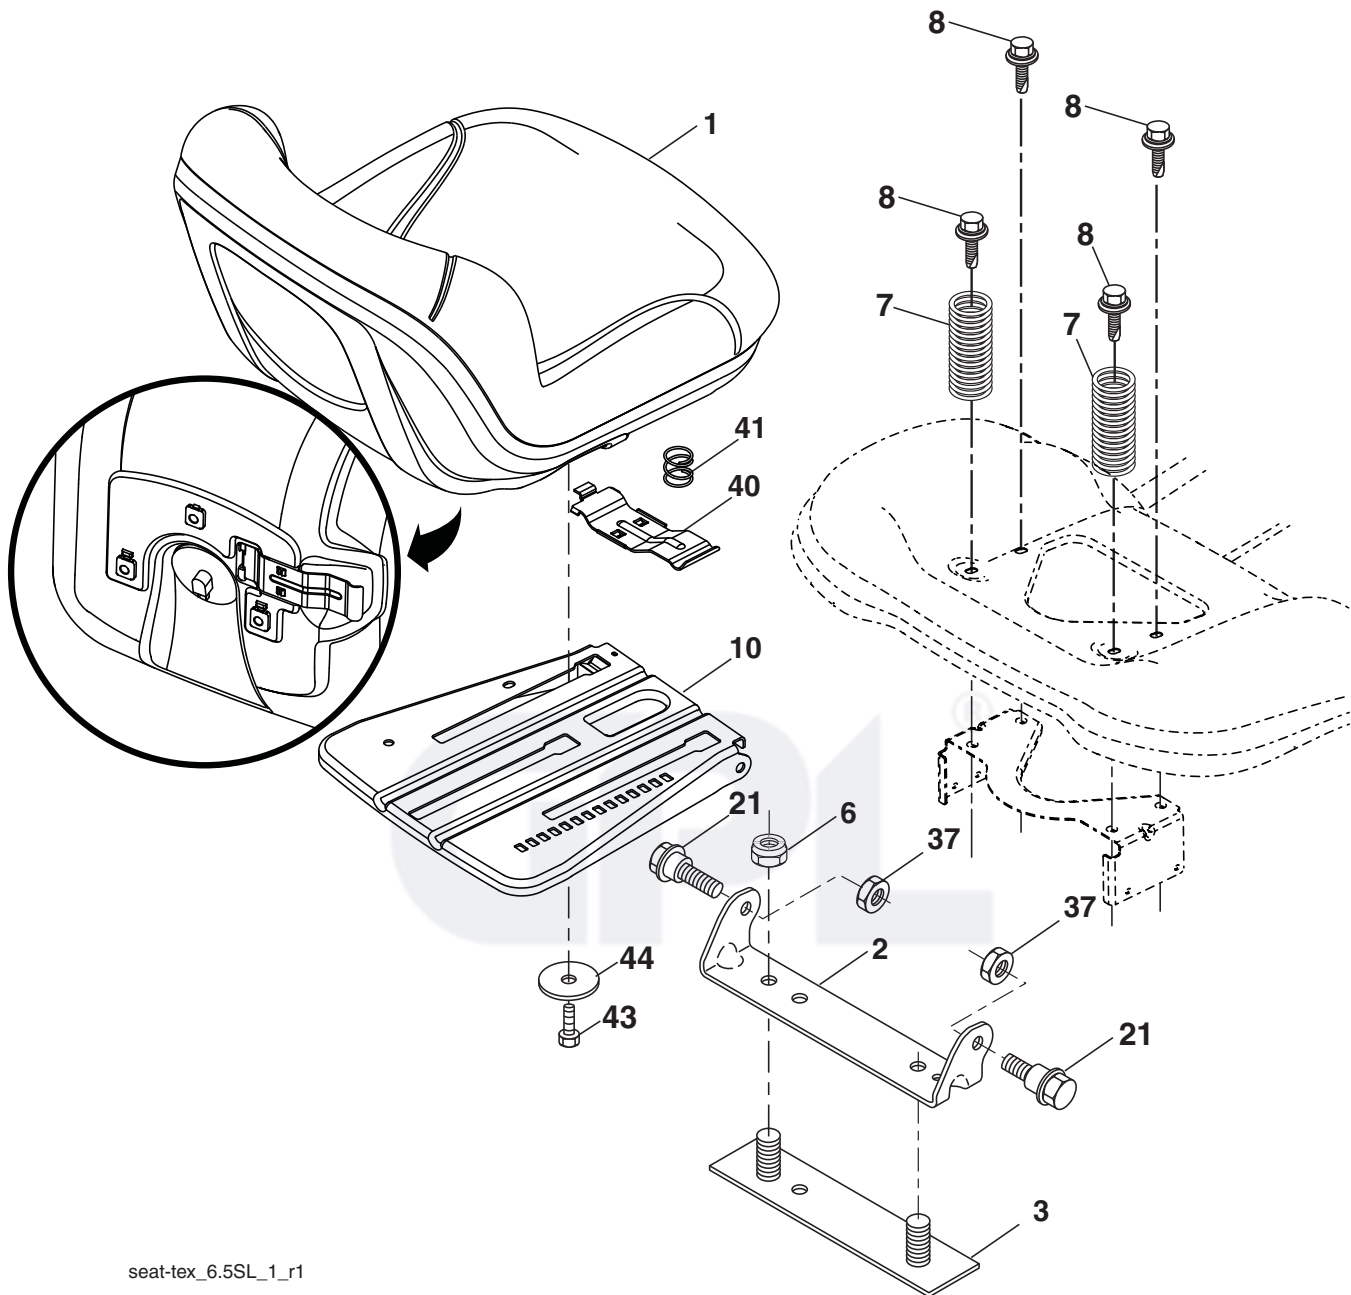


seat-tex_6.5SL_1_r1

KEY NO.	PART NO.	DESCRIPTION
1	532 42 40-67	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt, Shoulder 5/16-18
37	873 80 05-00	Nut, Lock 5/16-18 unc

KEY NO.	PART NO.	DESCRIPTION
40	532 19 76-61	Handle Slide Seat
41	532 19 82-00	Spring Latch
43	874 76 06-12	Bolt Fin Hex 3/8-16 unc x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT152 (96041002905), PRODUCT NO. 960 41 00-29
MOWER LIFT 45

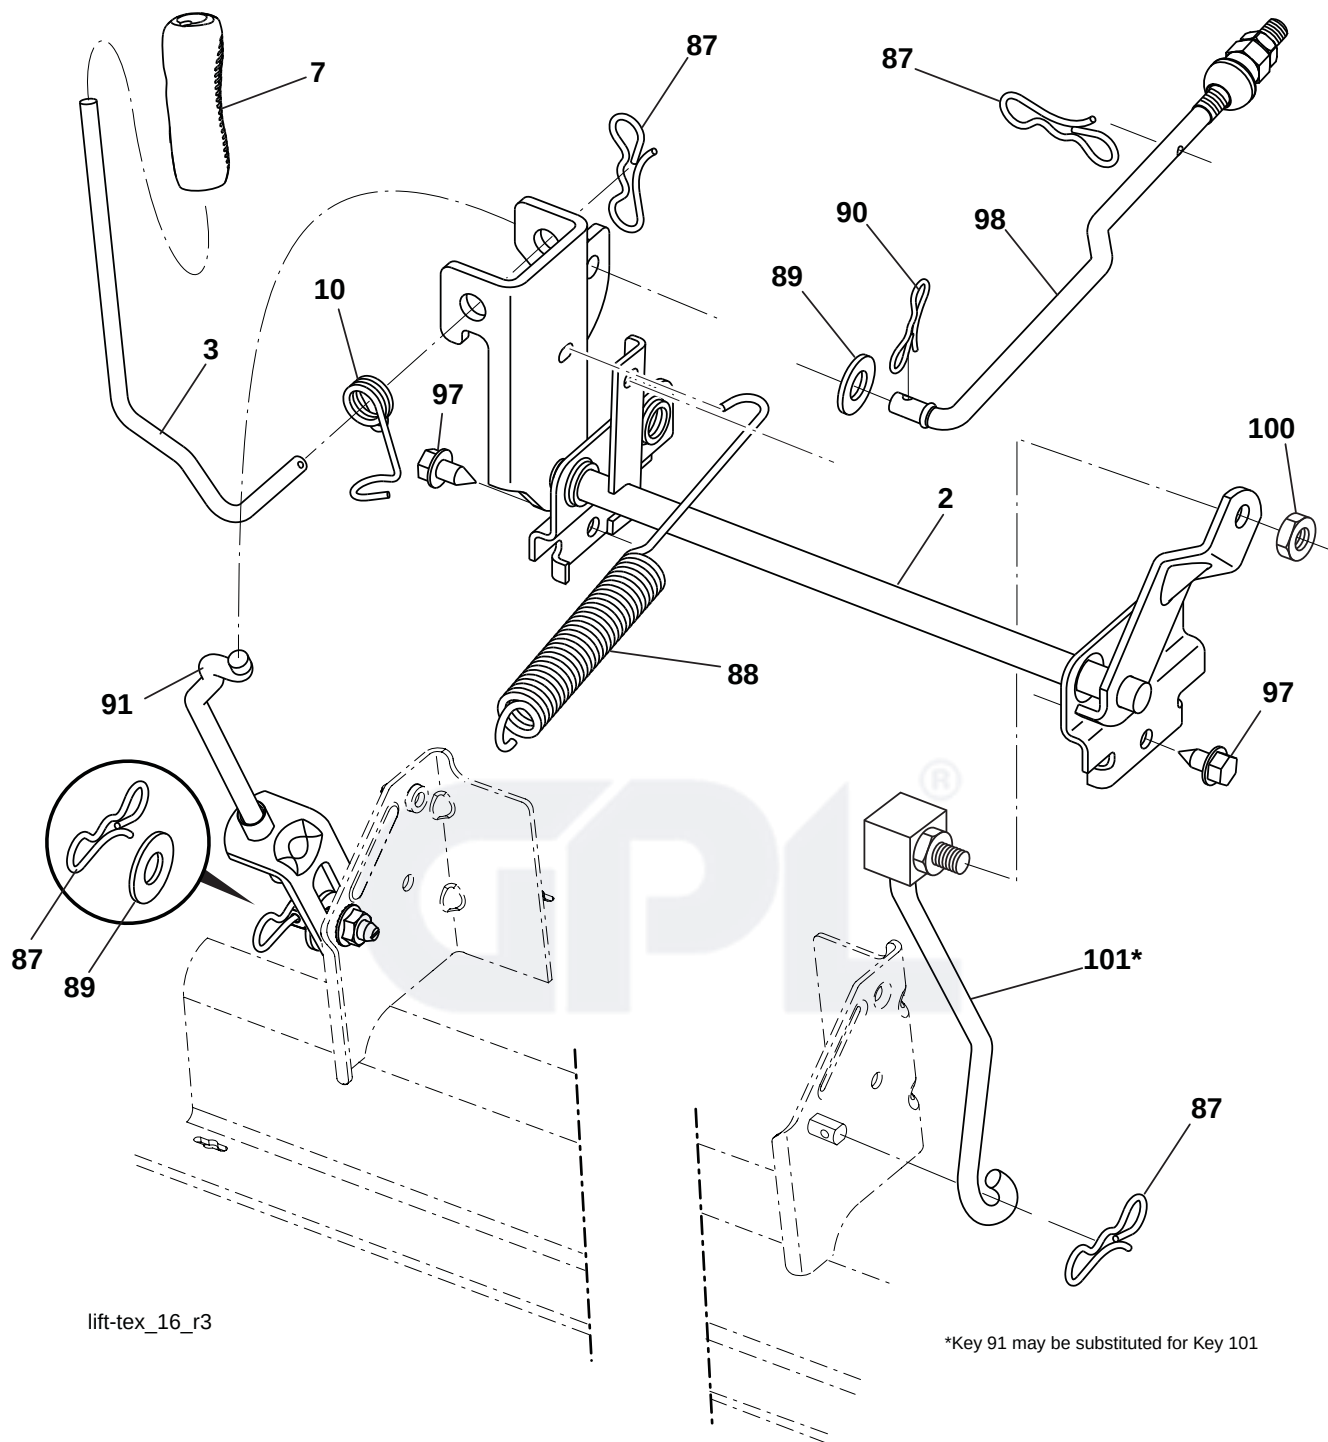

KEY NO.	PART NO.	DESCRIPTION
2	532 42 20-27	Shaft Asm., Cross Lift
3	532 19 52-31	Lever Asm., Lift Rh
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 41 07-10	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock

KEY NO.	PART NO.	DESCRIPTION
91	532 19 51-81	Link Lift Susp Mower Rear
97	817 00 06-12	Screw Hexwsh Thdr. 3/8-16 x 3/4
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Hex Jam ASF 7/16-20 unf
101	532 40 70-03	Link Asm. Lift FXD

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

