


LT16

Spare parts
Ersatzteile
Pièces détachées
Reserve onderdelen
Repuestos
Reservdelar


GPL®

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
SCHEMATIC

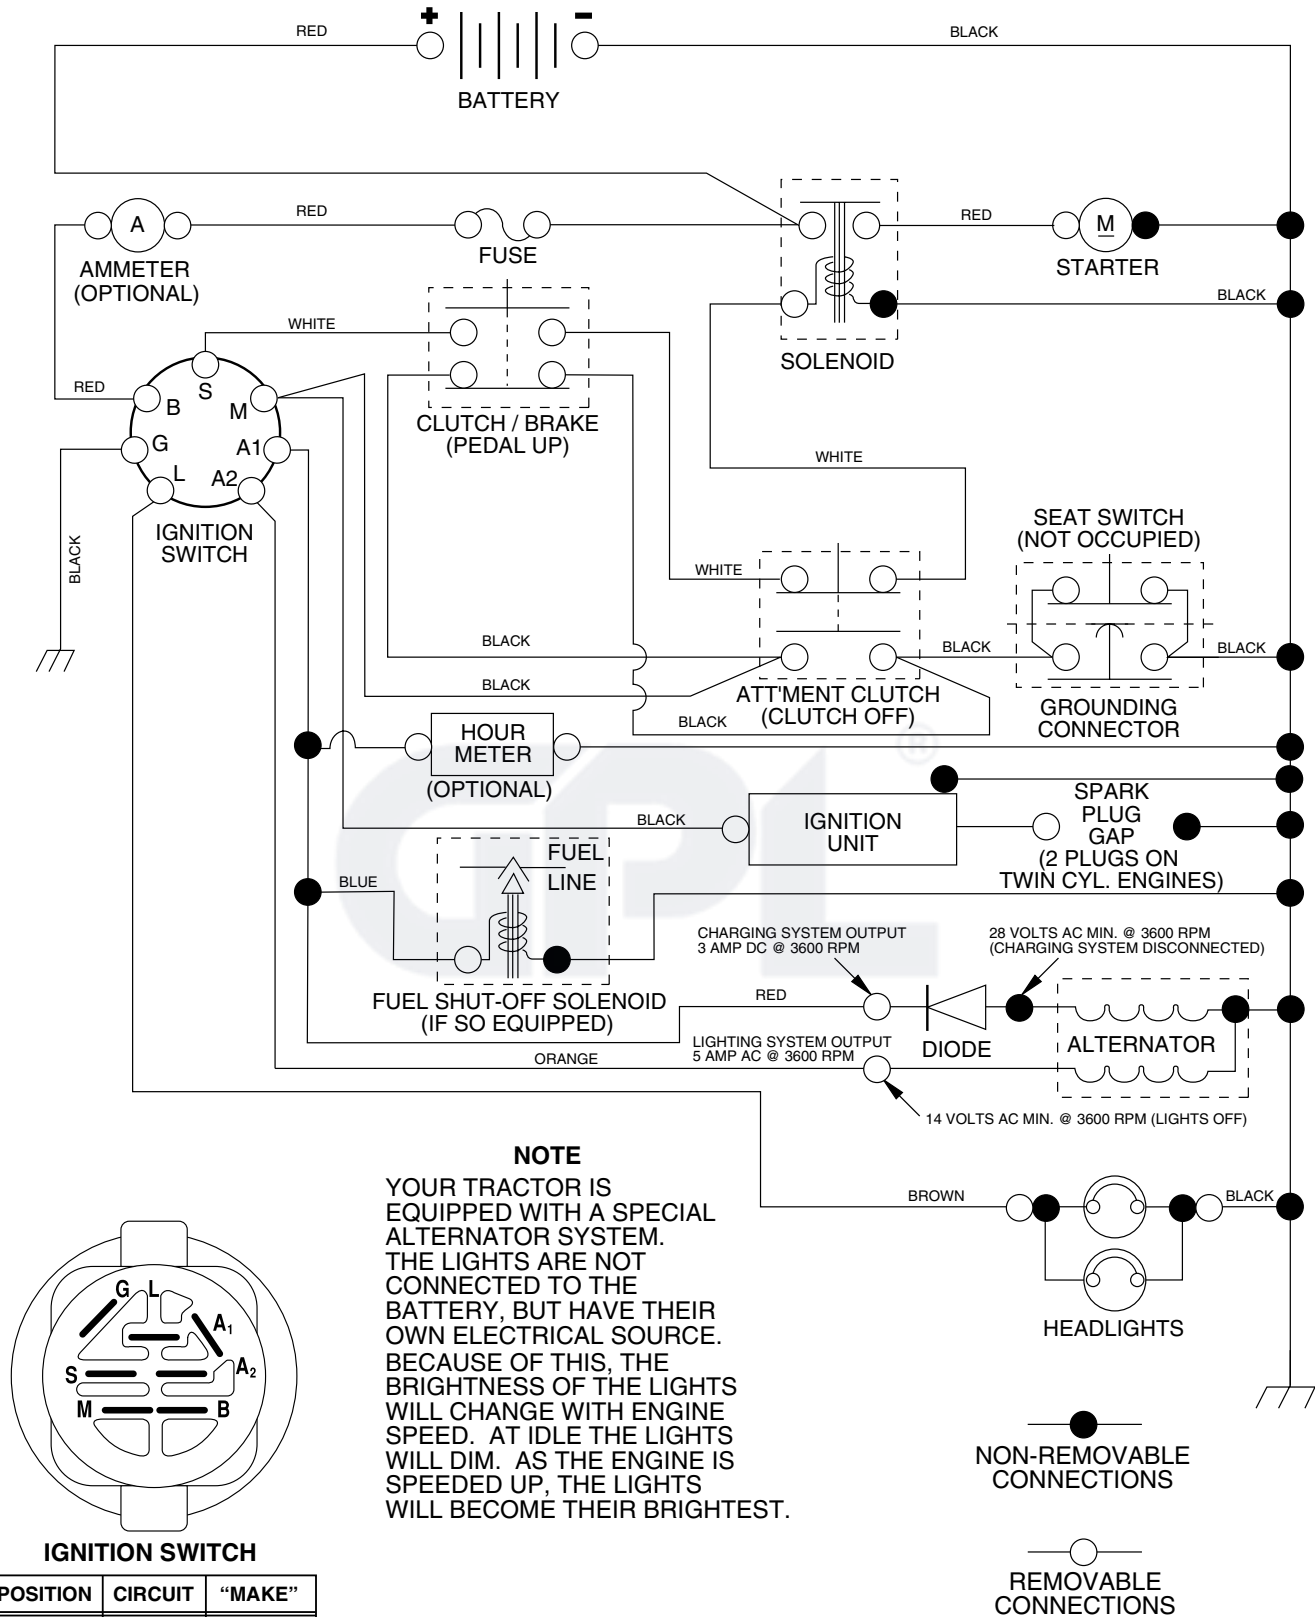

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
ELECTRICAL

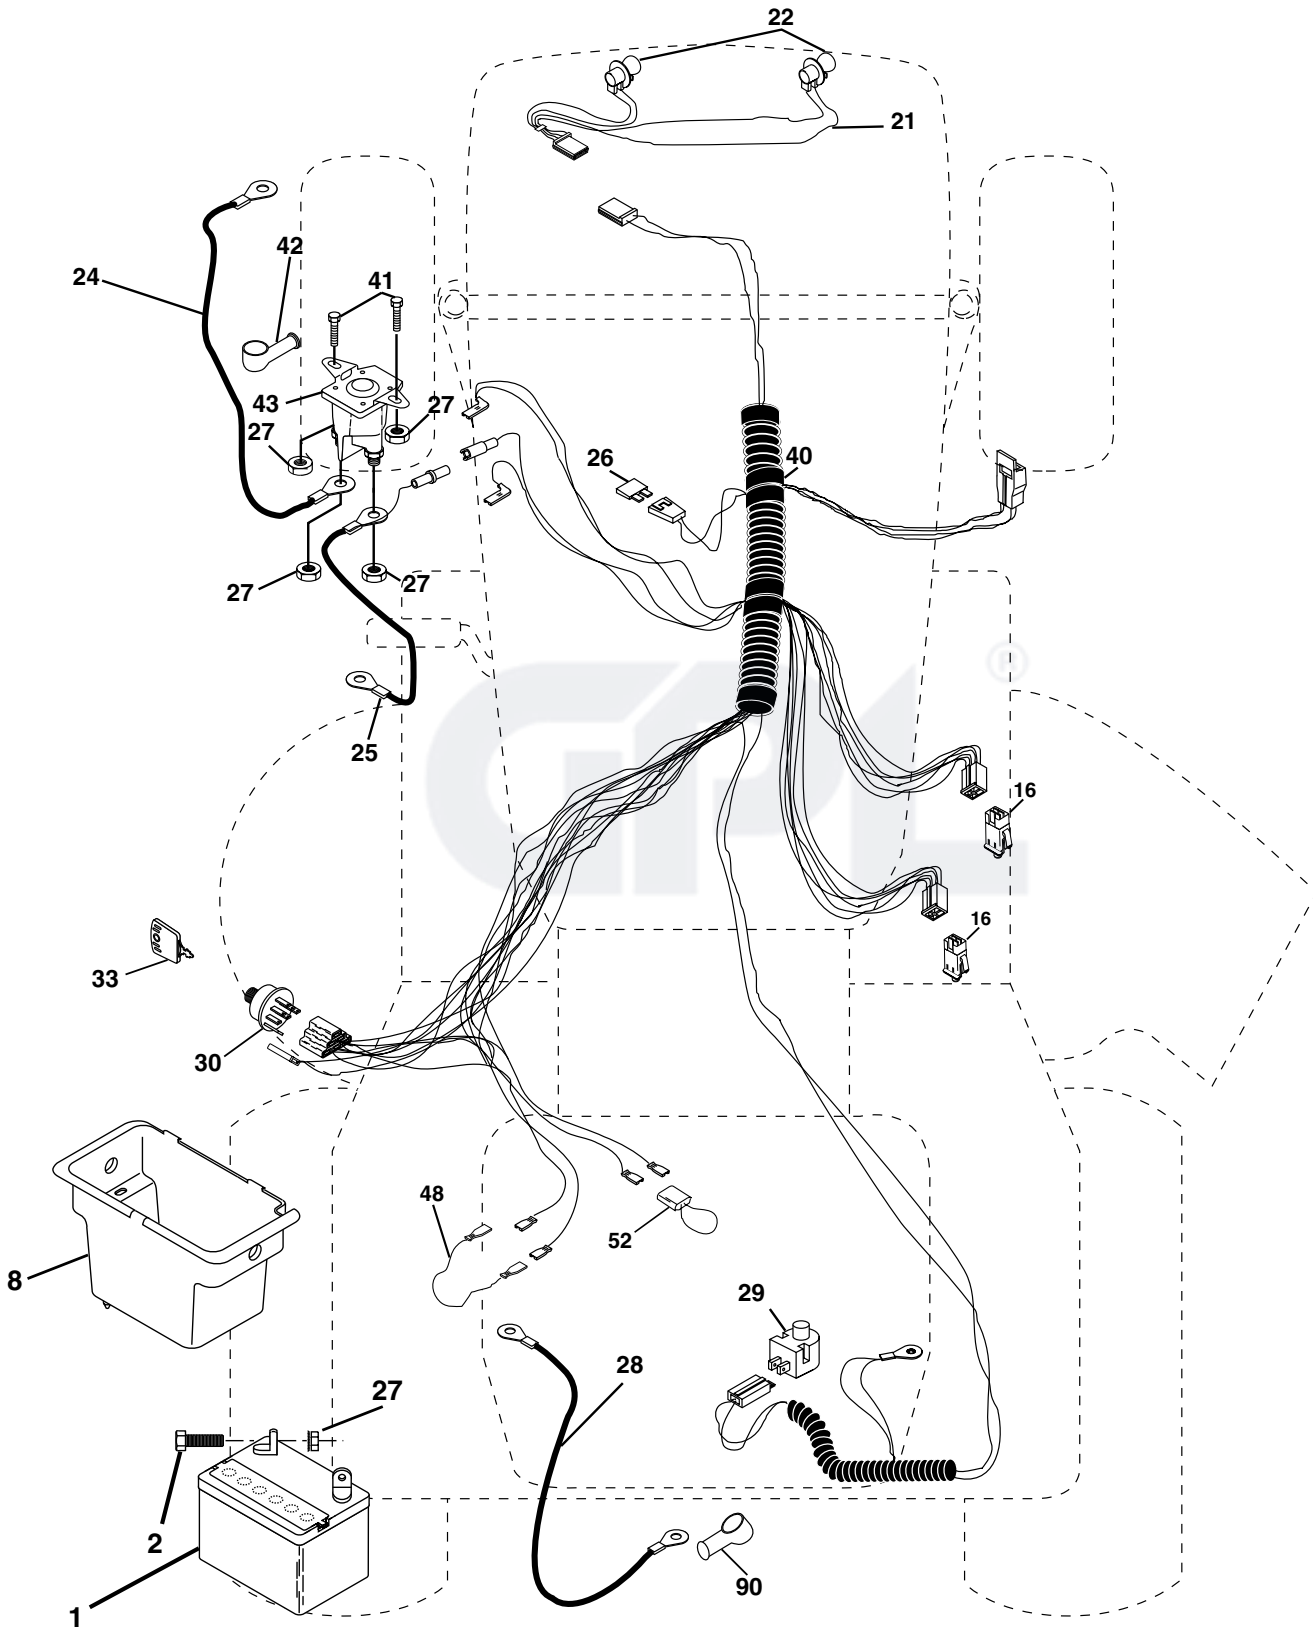


REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Hd 1/4-20unc X 3/4
8	532 17 66-89	Box Battery
16	532 17 61-38	Switch Interlock
21	532 17 56-85	Harness Asm Light W/4152j
22	532 00 41-52	Bulb Light #1156
24	532 12 47-80	Cable Battery 6 Ga 11" red
25	532 14 61-47	Cable Battery 6 Ga 44" red w/16 wire
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 Unc
28	532 12 47-73	Cable Ground 6 Ga 12" black
29	532 12 13-05	Switch Plunger Gray
30	532 17 55-66	Switch Ign Delta
33	532 14 04-01	Key Ign Molded Generic
40	532 17 97-20	Harness Ign.
41	871 11 04-08	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 17 88-61	Solenoid
48	532 14 08-44	Adapter Ammeter Rectangular
52	532 14 19-40	Protection Wire Loop
90	532 18 04-49	Cover Terminal Battery

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
CHASSIS AND ENCLOSURES

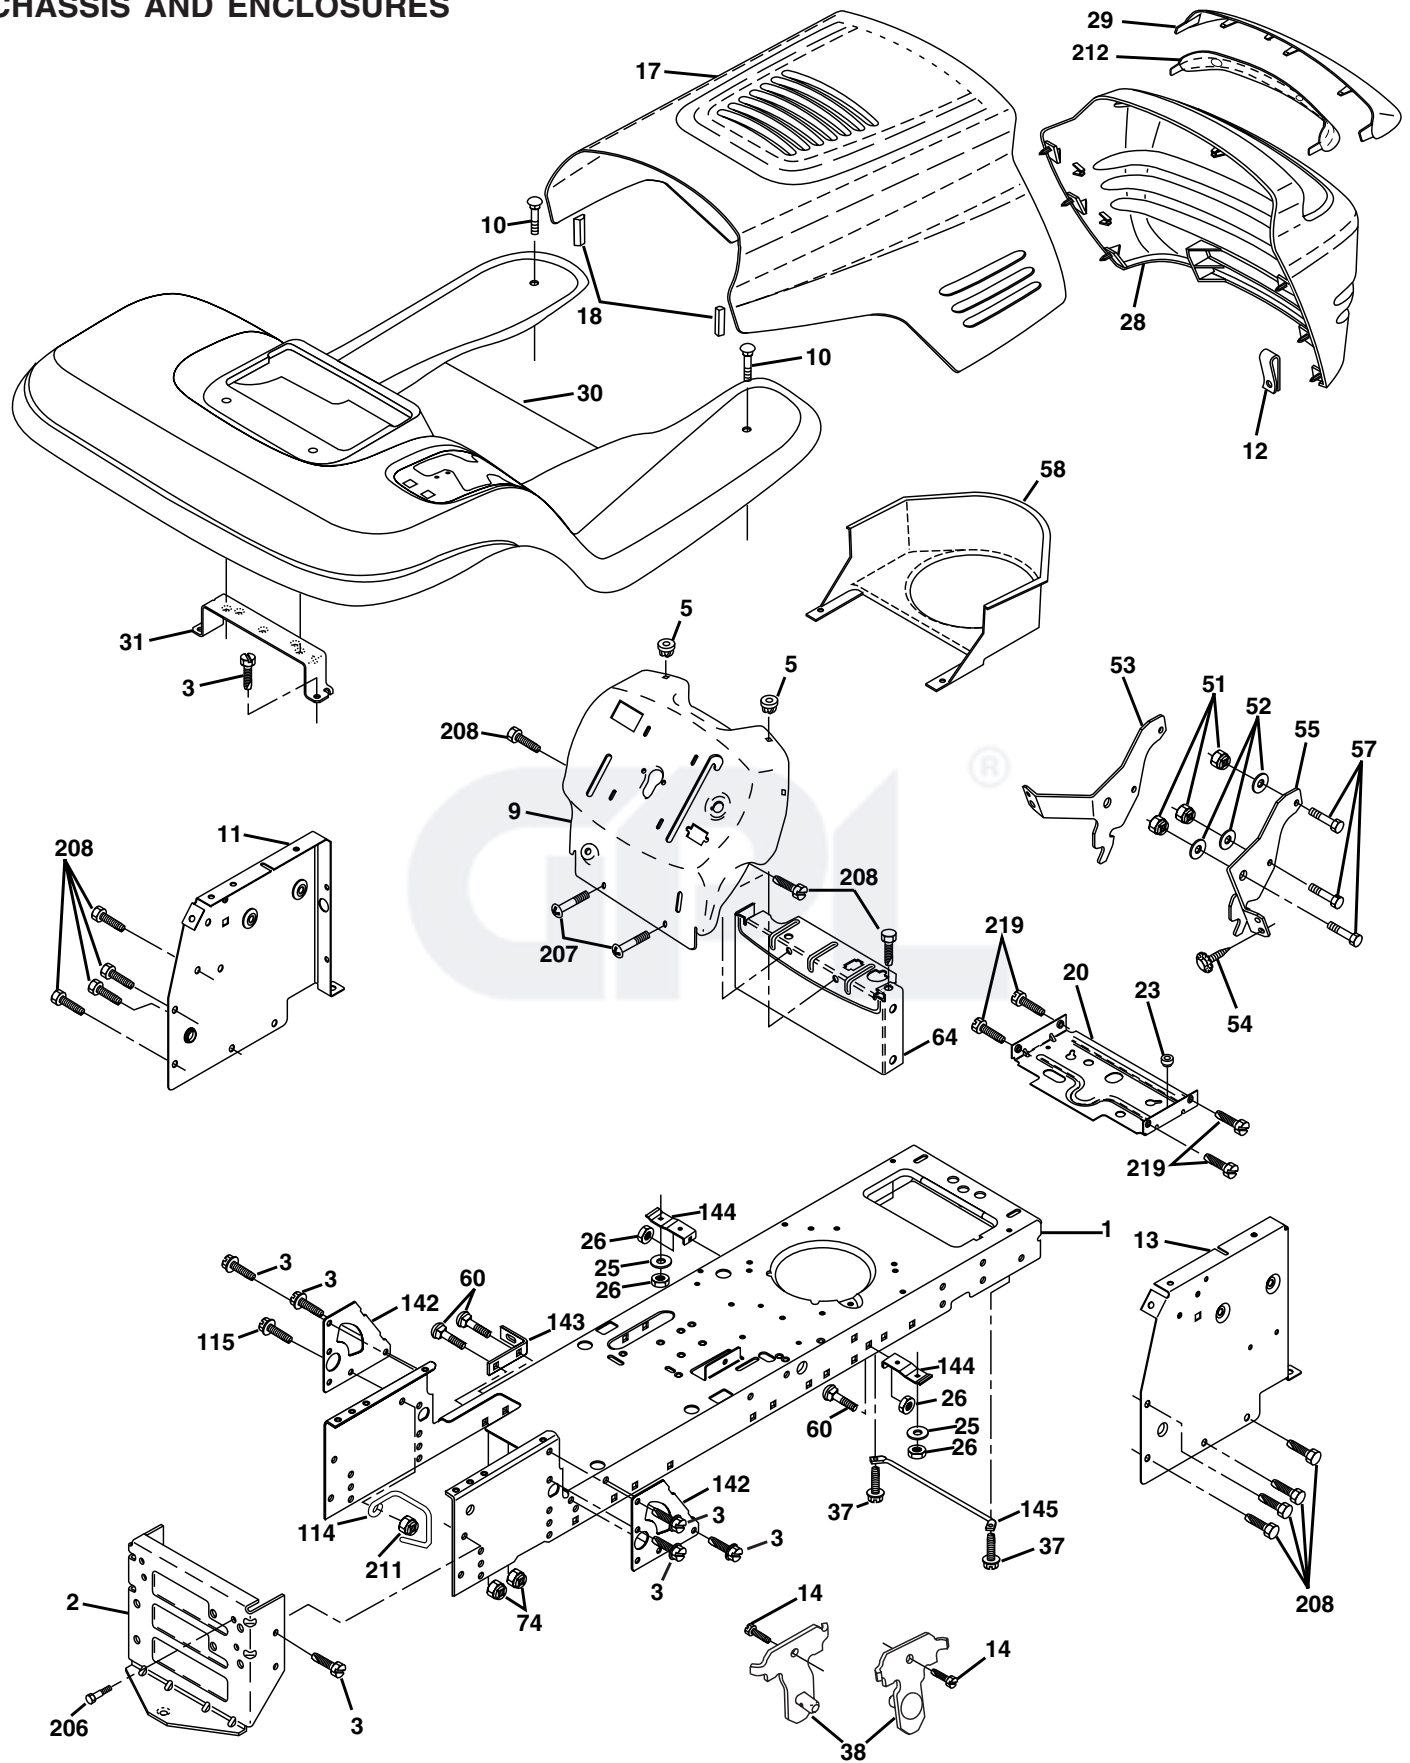

REPAIR PARTS


TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85 CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1	532 17 46-19	Chassis Stamping
2	532 17 65-54	Drawbar, 12 Ga.
3	817 06 06-12	Screw 3/8-16 x 3/4
5	532 15 52-72	BumperHood/Dash
9	532 17 21-51	Dash Slkscr
10	872 14 06-08	Bolt Carriage 3/8-16 x 1
11	532 17 49-96	Panel Dash Lh
12	532 14 56-60	Clip Tinnerman Grille P/L
13	532 17 21-06	Panel Dash Rh
14	817 49 06-08	Screw Thdrol 3/8-16 x 1/2
17	532 16 35-57	Hood LT/PL
18	532 12 69-38	BumperHood
20	532 18 06-79	Plate BRTY
23	532 12 40-28	Bushing
25	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
26	873 80 06-00	Nut Lock Hex W/Ins 3/8-16 Unc
28	532 17 91-01	Grille/Lens Asm
29	532 16 81-54	Lens P/L
30	532 17 21-57	Fender Footrest
31	532 13 99-76	Bracket Fender
37	817 49 05-08	Screw Thdrol 6/16-18 x 1/2 TYT
38	532 17 57-10	Bracket Asm Pivot Mower Rear
51	873 80 04-00	Nut Lock W/Insert 1/4-20unc
52	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
53	532 14 46-97	Bracket Grille Lh
54	532 16 14-64	Screw Hex Wshd 8-18 x 7/8
55	532 14 46-96	Bracket Grille Rh
57	874 78 04-12	Bolt Hex 1/4-20 x 3/4
58	532 15 01-27	Air Duct Engine P/L
60	872 14 06-08	Bolt Carr 3/8-16 x 1
64	532 15 47-98	Dash Lower STLT
74	873 68 06-00	Nut Crownlock 3/8-16
114	532 15 81-12	Keeper Belt Rear Lh
115	817 06 06-20	Screw 3/8-16 x 1 1/4
142	532 17 57-02	Plate Reinforcement STLT
143	532 15 49-66	Bracket Swaybar
144	532 17 55-82	Bracket Ft Rest
145	532 15 65-24	Rod Pivot Chassis/Hood
206	532 17 01-65	Bolt Shoulder 5/16-18 TT
207	817 67 05-08	Screw Thdrol 5/16-18 x 1/2
208	817 67 06-08	Screw Thdrol 3/8-16x1/2 Ty-tt
211	532 14 52-12	Nut Hex Flange Lock
212	532 15 62-29	Insert Lens Reflective
219	817 00 05-12	Screw 5/16-18 x 3/4
--	532 00 54-79	Plug Button

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
DRIVE

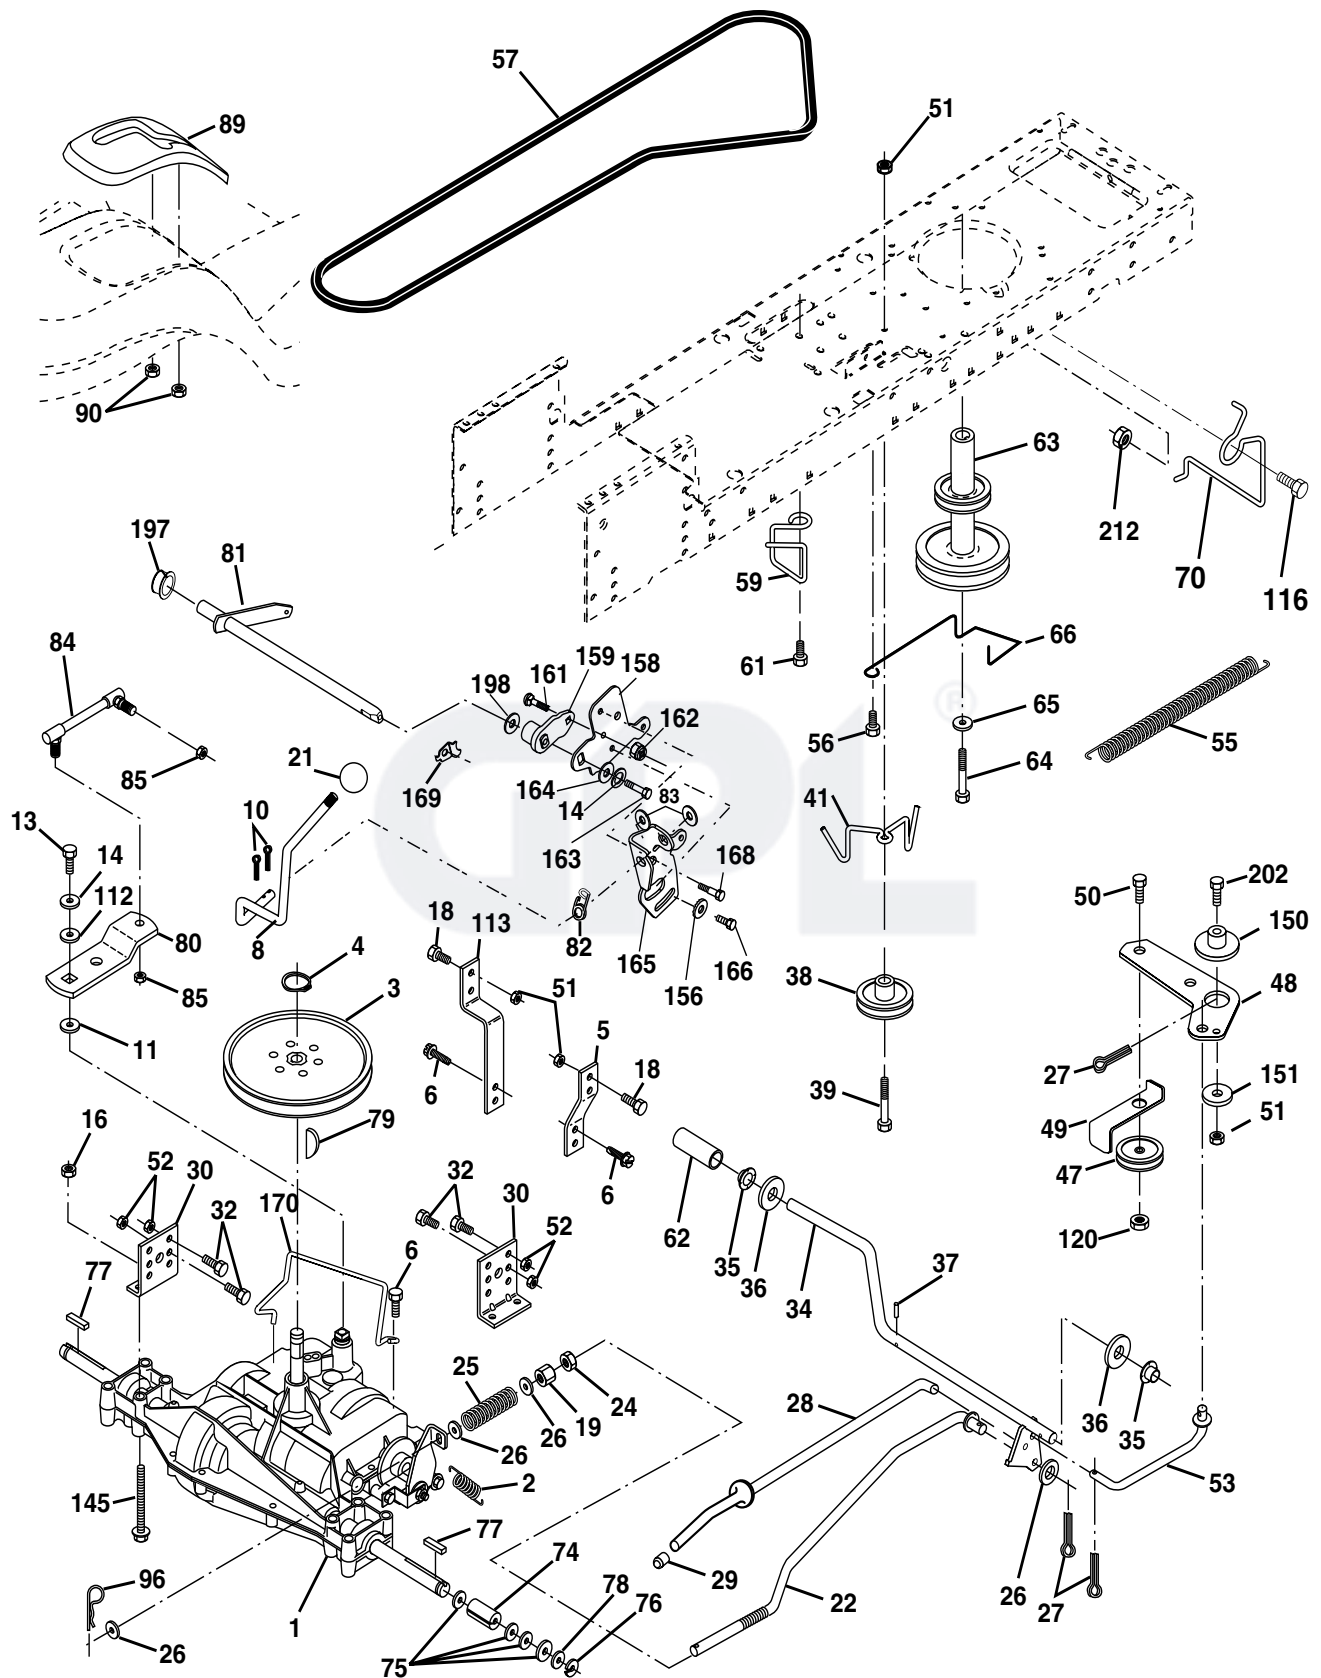

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle Peerless 205-545C Order parts from transaxle manufacturer
2	532 14 66-82	Spring Return Brake T/a Zinc
3	532 12 36-66	Pulley Transaxle 18" tires
4	812 00 00-28	Ring Retainer #5100-62
5	532 12 15-20	Strap Torque 30 Degrees
6	817 06 05-12	Screw Thdrol 5/16-18
8	532 16 58-66	Rod Shift Fender Adjust Lt
10	876 02 04-16	Pin Cotter 1/8 X 1 Cad
11	532 10 57-01	Washer Plate Shf 388 Sq Hole
13	874 55 04-12	Bolt 1/4-28 Unf Gr 8 W/Patch
14	810 04 04-00	Washer Lock Hvy Helical
16	873 80 05-00	Nut Lock Hex w/Ins 5/16-18
18	874 78 06-16	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5
19	873 80 06-00	Nut Lock 3/8-16 Unc
21	532 13 05-64	Knob
22	532 13 08-04	Rod Brake Blk Zinc 26 840
24	873 35 06-00	Nut Hex Jam 3/8-16 Unc
25	532 10 68-88	Spring Rod Brake 2 00 Zinc
26	819 13 13-16	Washer 13/32 X 13/16 X 16 Ga
27	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
28	532 17 57-65	Rod Brake Parking LT/YT
29	532 07 16-73	Cap Brake Parking Black
30	532 16 95-92	Bracket Mtg Transaxle
32	874 76 05-12	Bolt Hex Hd 5/16-18unc X 3/4
34	532 17 55-78	Shaft Asm Pedal Foot
35	532 12 01-83	Bearing Nylon Blk 629 Id
36	819 21 16-16	Washer 21/32 X 1 X 16 Ga
37	532 12 49-63	Pin Roll 3/16 X 1"
38	532 17 91-14	Pulley Idler Composite
39	874 76 06-48	Bolt Fin Hex 3/8-16 Unc x 3
41	532 17 55-56	Keeper Belt Idler Flat
47	532 12 77-83	Pulley Idler V Groove Plastic
48	532 15 44-07	Bellcrank Clutch Grnd Driv
49	532 12 32-05	Retainer Belt Style Spring
50	874 76 06-24	Bolt Hex Hd 3/8-16unc X 1-1/2
51	873 68 06-00	Nut Crownlock 3/8-16 Unc
52	873 68 05-00	Nut Crownlock 5/16-18 Unc
53	532 10 57-10	Link Clutch
55	532 10 57-09	Spring Return Clutch 6 75
56	817 06 06-20	Screw 3/8-16 x 1 1/4
57	532 13 08-01	V-Belt Ground Drive 95 25
59	532 16 96-91	Keeper Belt Span Ctr
61	817 12 06-14	Screw 3/8-16 x .875
62	532 12 48-72	Cover Pedal Round

KEY NO.	PART NO.	DESCRIPTION
63	532 17 54-10	Engine Pulley LT/YT
64	871 17 07-64	Bolt Hex
65	810 04 07-00	Washer Lock Hvy Hlcl Spr 7/16
66	532 15 47-78	Keeper Belt Engine Foolproof
70	532 13 46-83	Guide Belt Mower Drive RH
74	532 13 70-57	Spacer Axle
75	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
76	812 00 00-01	E-ring #5133-75
77	532 12 35-83	Key Square 2 0 X 1845/ 1865
78	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
79	532 12 50-96	Key Woodruff #9 3/16 x 3/4
80	532 14 50-90	Arm Shift
81	532 16 55-92	Shaft Asm Cross
82	532 16 57-11	Spring Torsion T/a
83	819 17 12-16	Washer 17/32 X 3/4 X 16 Ga
84	532 16 62-31	Link Transaxle
85	532 15 03-60	Nut Lock Center 1/4 - 28 FNTHD
89	532 16 65-56	Console Shift STLT
90	532 12 43-46	Nut Self-thd Wsh-hd 1/4 Zinc
96	532 12 47-88	Retainer Spring 1"
112	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
113	532 12 72-85	Strap Torque LT
116	872 14 06-08	Bolt Rdhd Sq Neck 3/8-16 x 1.0
120	873 90 06-00	Nut Lock Flg. 3/8-16 Unc
145	874 49 05-40	Bolt Hex 5/16-18 Gr. 5
150	532 17 54-56	Spacer
151	819 13 32-10	Washer 13/32 x 2 x 10 Ga.
156	532 16 60-02	Washer Srted 5/16ID x 1.125
158	532 16 55-89	Bracket Shift Mount
159	532 16 54-94	Hub Tapered Flange Shift Lt
161	872 14 04-06	Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5
162	873 68 04-00	Nut Crownlock 1/4-20 Unc
163	874 78 04-16	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
164	819 09 10-10	Washer 5/8 x .281 x 10 Ga
165	532 16 56-23	Bracket Pivot Lever
166	532 16 68-80	Screw 5/16-18 x 5/8
168	532 16 54-92	Bolt Shoulder 5/16-18 x .561
169	532 16 55-80	Plate Fastening Lt
170	532 17 83-94	Keeper, Belt T/A D/P
197	532 16 96-13	Nyliner Snap-In
198	532 16 95-93	Washer Nyl 7/8 ID x 105"
202	872 11 06-14	Bolt Carr. SH 3/8-16 x 1-3/4 Gr. 5
212	532 14 52-12	Nut, Hex Flange Lock

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
STEERING ASSEMBLY

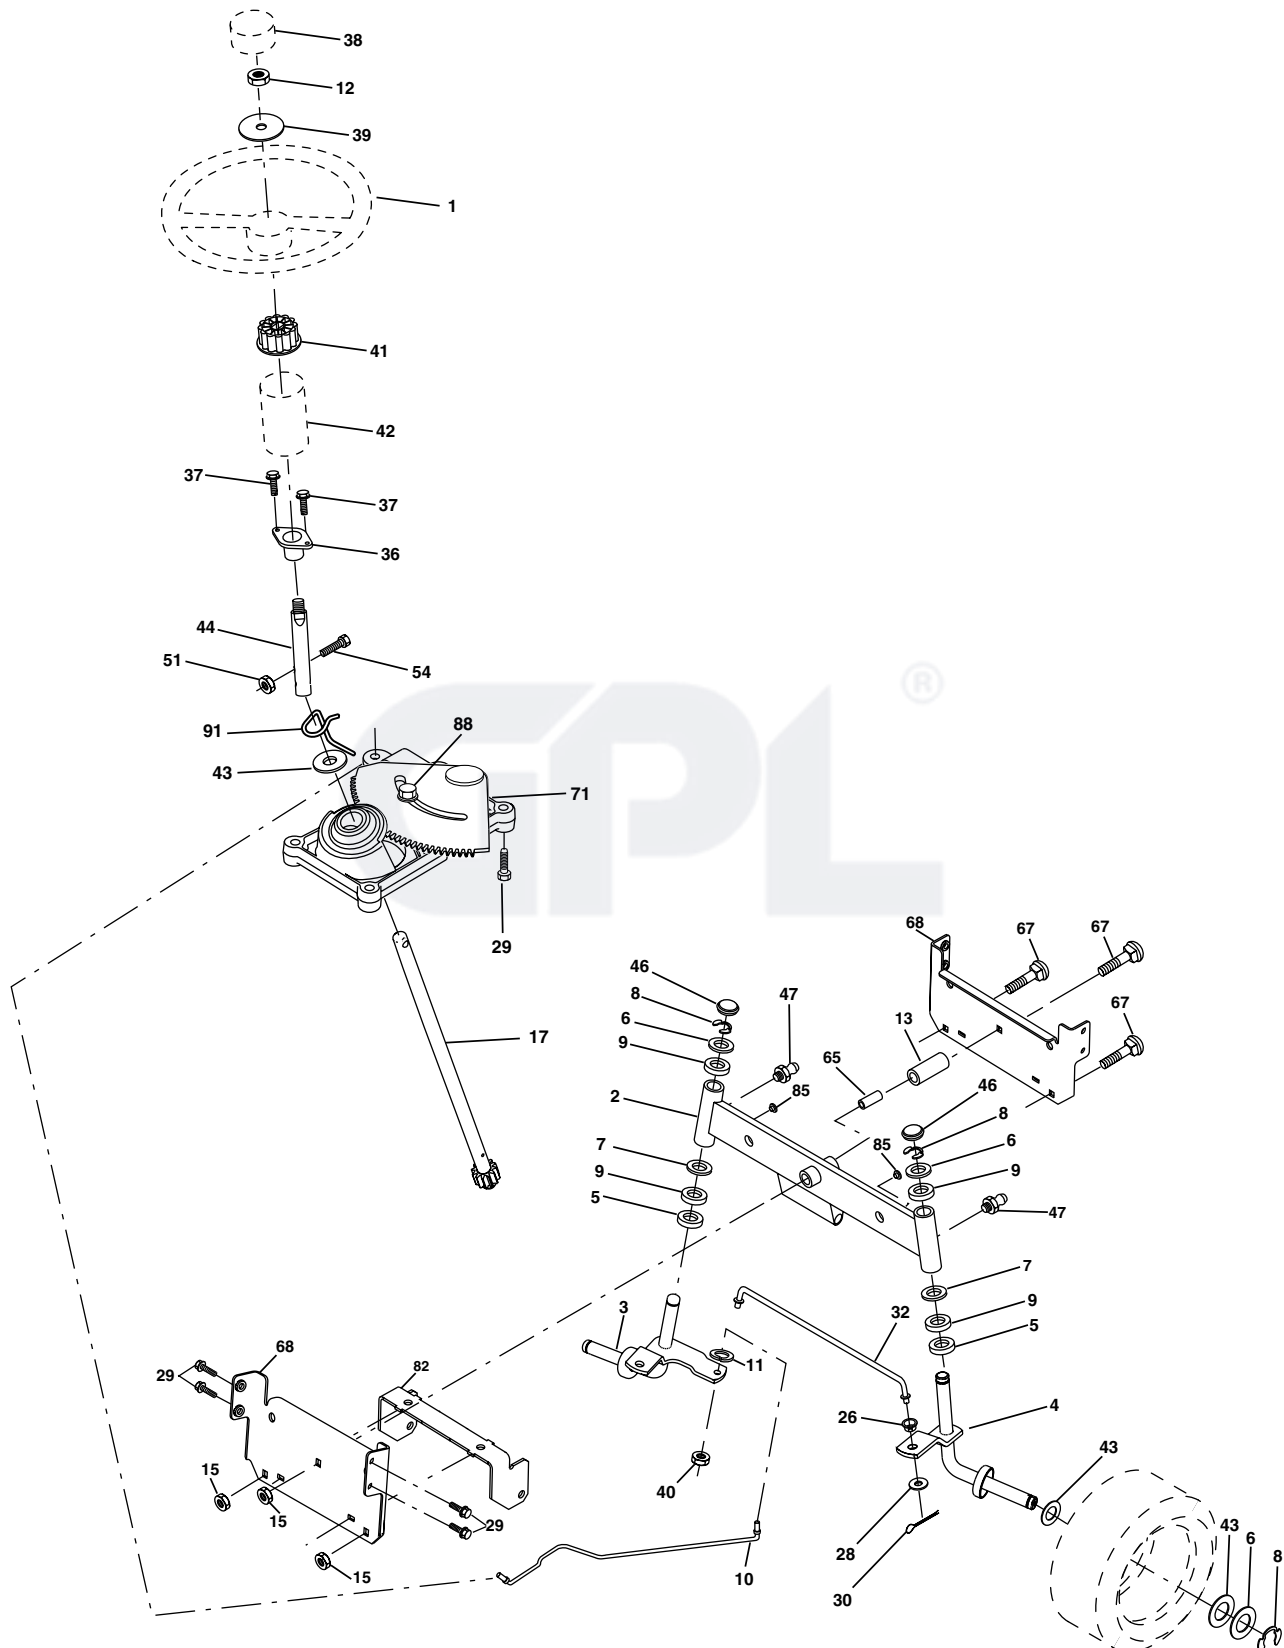

REPAIR PARTS


TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85 STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532 17 20-92	WheelSteering
2	532 17 51-31	Axle Asm
3	532 16 98-40	Spindle Asm LH
4	532 16 98-39	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
7	819 27 20-16	Washer 27/32 X 1-1/4 X 16 Ga
8	812 00 00-29	Ring Klip #t5304-75
9	532 12 49-37	Bearing Col Strg Blk
10	532 17 51-21	Link Drag
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
12	873 94 08-00	Nut Hex Jam Toplock 1/2-20 Unf
13	532 13 65-18	Spacer Brg Axle Front
15	532 14 52-12	Nut Hex Flange Lock
17	532 18 06-41	Shaft Asm Strg
26	532 12 68-47	Bushing Link Drag Blk LR
28	819 13 14-16	Washer 13/32 X 7/8 X 16 Ga
29	817 06 06-12	Screw 3/8-16x3/4
30	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
32	532 13 04-65	Rod Tie Wire Form 19 75 Mech
36	532 15 50-99	Bushing Strg
37	532 15 29-27	Screw
38	532 17 20-93	Cap Wheel Steering
39	819 18 24-11	Washer 9/16 x 1 1/2 x 11 Ga.
40	532 12 47-01	Lock nut
41	532 15 99-45	Adaptor Wheel Strg
42	532 16 96-33	Boot Steering Shaft
43	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
44	532 18 06-40	Extension Steering Shaft
46	532 12 12-32	Cap Spindle Fr Top Blk
47	532 12 48-36	Fitting Grease
51	873 54 04-00	Nut Crownlock 1/4-28
54	871 13 04-20	Bolt Hex 1/4-28 Unf x 1 1/4
65	532 16 03-67	Spacer Brace Axle
67	872 14 06-18	Bolt Rdhd Sq 3/8-16 x 2-1/4
68	532 16 98-27	Axle, Brace
71	532 17 51-46	Steering Asm
82	532 16 98-35	Bracket Susp Chassis Front
85	532 13 38-35	Fastner Christmas Tree
88	532 17 51-18	Bolt Shoulder 7/16-20
91	532 17 55-53	Clip Steering

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
SEAT ASSEMBLY

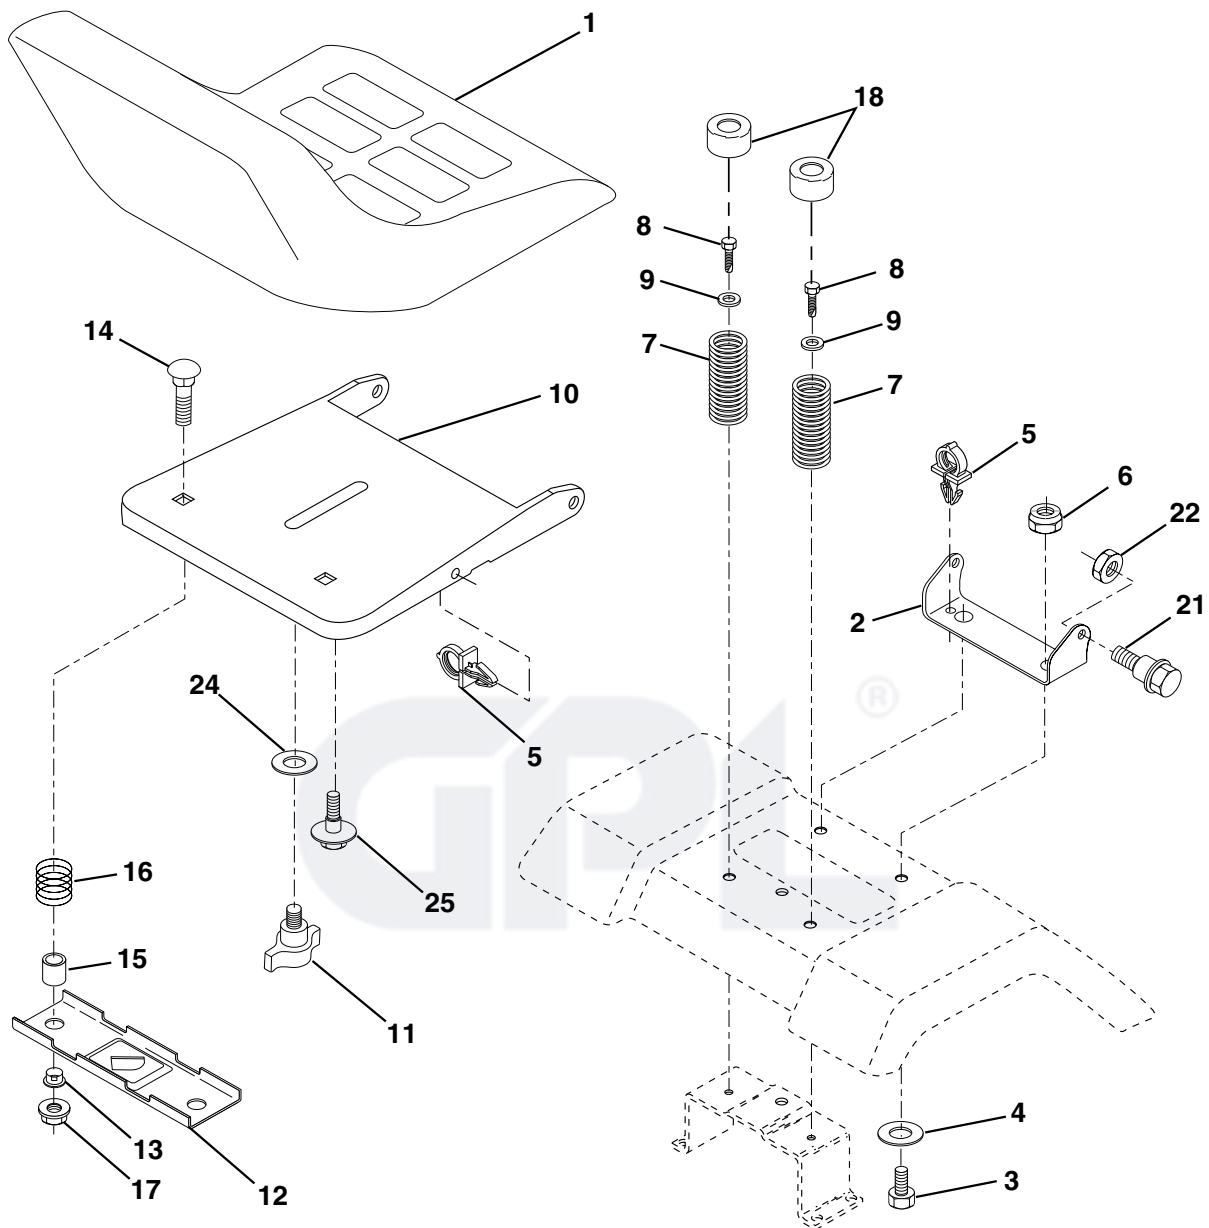


KEY NO.	PART NO.	DESCRIPTION
1	532 14 01-17	Seat
2	532 14 05-51	Bracket Pivot Seat 8 720
3	871 11 06-16	Bolt Fin Hex 3/8-16unc X 1
4	819 13 16-10	Washer 13/32 X 1 X 10 Ga
5	532 14 50-06	Clip Push-In
6	87380 06-00	Nut Hex w/Ins. 3/8-16 Unc
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 00 06-16	Screw 3/8-16 X 1
9	819 13 16-14	Washer 13/32 X 1 X 14 Ga.
10	532 18 24-93	Pan Seat
11	532 16 63-69	Knob Seat
12	532 12 12-46	Bracket Mounting Switch
13	532 12 12-48	Bushing Snap Blk Nyl 50 Id

KEY NO.	PART NO.	DESCRIPTION
14	872 05 04-12	Bolt Rdhd Sqnk 1/4-20x1-1/2
15	532 13 43-00	Spacer Split 28x 96 Yel Zinc
16	532 12 12-50	Spring Cprsn 1 27 Blk Pnt
17	532 12 39-76	Nut Lock 1/4 Lge Flg Gr 5 Zinc
18	532 12 42-38	Cap Spring Seat
21	532 17 18-52	Bolt Shoulder 5/16-18 Unc-2A
22	87380 05-00	Nut Hex Lock W/Ins 5/16-18
23	871 11 08-14	Bolt, Hex Black
24	819 17 19-12	Washer 17/32 X 1-3/16 X 12 Ga.
25	532 12 70-18	Bolt Shoulder 5/16-18 X 62

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS


TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
DECALS

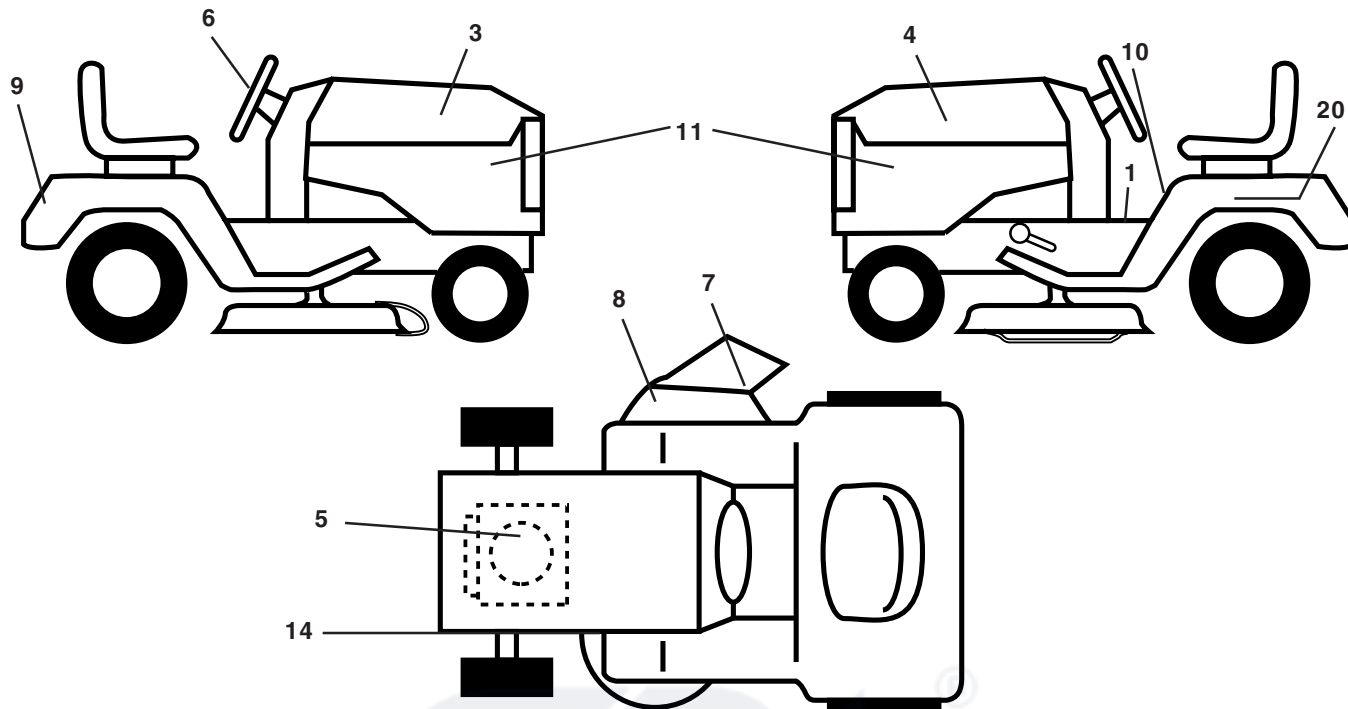

KEY NO.	PART NO.	DESCRIPTION
1	532 15 63-69	Decal Oper. Step Thru Eng/Fr
3	532 17 96-35	Decal Hood RH
4	532 17 96-36	Decal Hood LH
5	532 18 04-34	Decal Hood
6	532 17 05-65	Decal Wheel Steering
7	532 17 91-28	Decal Deck B 42
8	532 17 05-63	Decal Warning
9	532 14 17-61	Decal Fender
10	532 15 71-40	Decal Fender Danger Eng/Fr

KEY NO.	PART NO.	DESCRIPTION
11	532 16 29-27	Decal Hood Side Panel
14	532 16 03-96	Decal V-Belt Schematic
20	532 14 50-05	Decal Bat Dan/Psn
--	532 13 83-11	Decal Handle Lft Height Adjust
--	532 17 12-85	Pad Footrest RH
--	532 17 12-84	Pad Footrest LH
--	532 18 27-45	Manual Owner's (English)
--	532 18 27-46	Manual Owner's (French)

WHEELS & TIRES

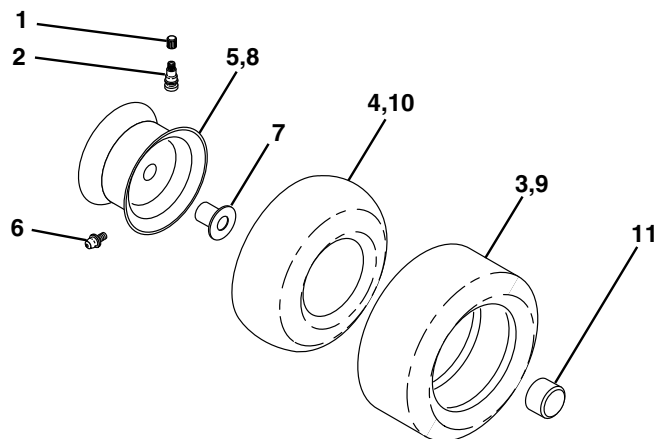


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 X 6 0 - 6 Service
4	532 05 99-04	Tube Front (Service Item Only)
5	532 13 83-36	Rim Asm 6"front Silver Service
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 13 83-37	Rim Asm 8"rear Silver Service
9	532 10 62-68	Tire R Ts 18x9 5-8 C Service
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 17 50-39	Cap Axle Blk 1 50 X 1 00
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
ENGINE

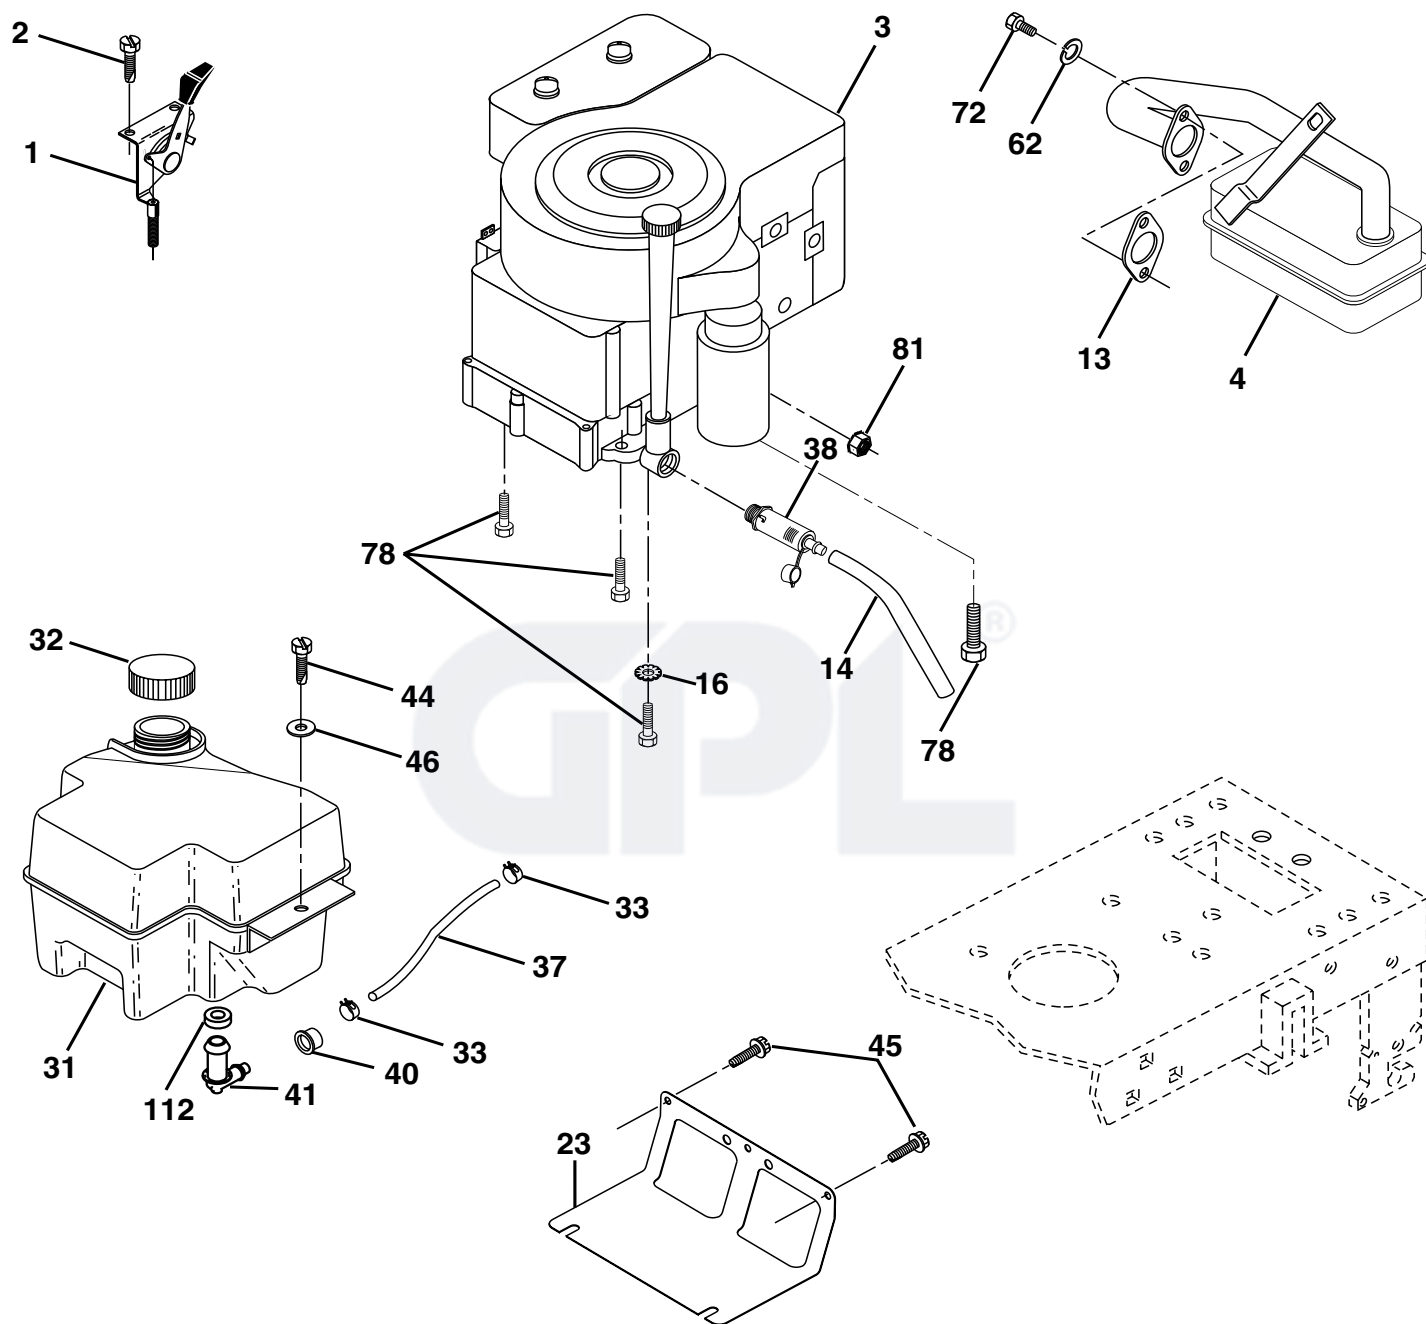

OPTIONAL EQUIPMENT
Spark Arrester

REPAIR PARTS


TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	532 17 05-51	Control Th/ch Flag
2	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 1/2
3	-----	Engine, B & S 31G777 (Order parts from engine manufacturer)
4	532 13 73-52	Muffler
13	532 16 52-91	Gasket Eng
14	532 14 84-56	Tube Drain Oil Easy
16	811 05 06-00	Washer Lock Ext Tooth 3/8
23	532 16 98-37	Shield Brn/Dbr Guard
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)
31	532 18 06-45	Tank Fuel Front
32	532 14 05-27	Cap Asm Fuel W/sym Vented
33	532 12 34-87	Clamp Hose Black
37	532 13 70-40	Line Fuel 20"
38	532 14 83-15	Plug Drain Oil Easy
40	532 12 40-28	Bushing Snap Nyl Blk Fuel Line
41	532 13 92-77	Stem Fuel Tank
44	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
45	817 00 06-12	Screw Hexwsh Thdr 3/8-16 x 3/4
46	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga
62	810 04 05-00	Washer Lock 5/16
72	871 07 05-12	Screw Hex Hd Cap 5/16-18 x 3/4
78	817 06 06-20	Screw 3/8-16 x 1 1/4
81	873 51 04-00	Nut Keps Hex 1/4-20 Unc
112	532 12 49-52	Bushing

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
MOWER DECK

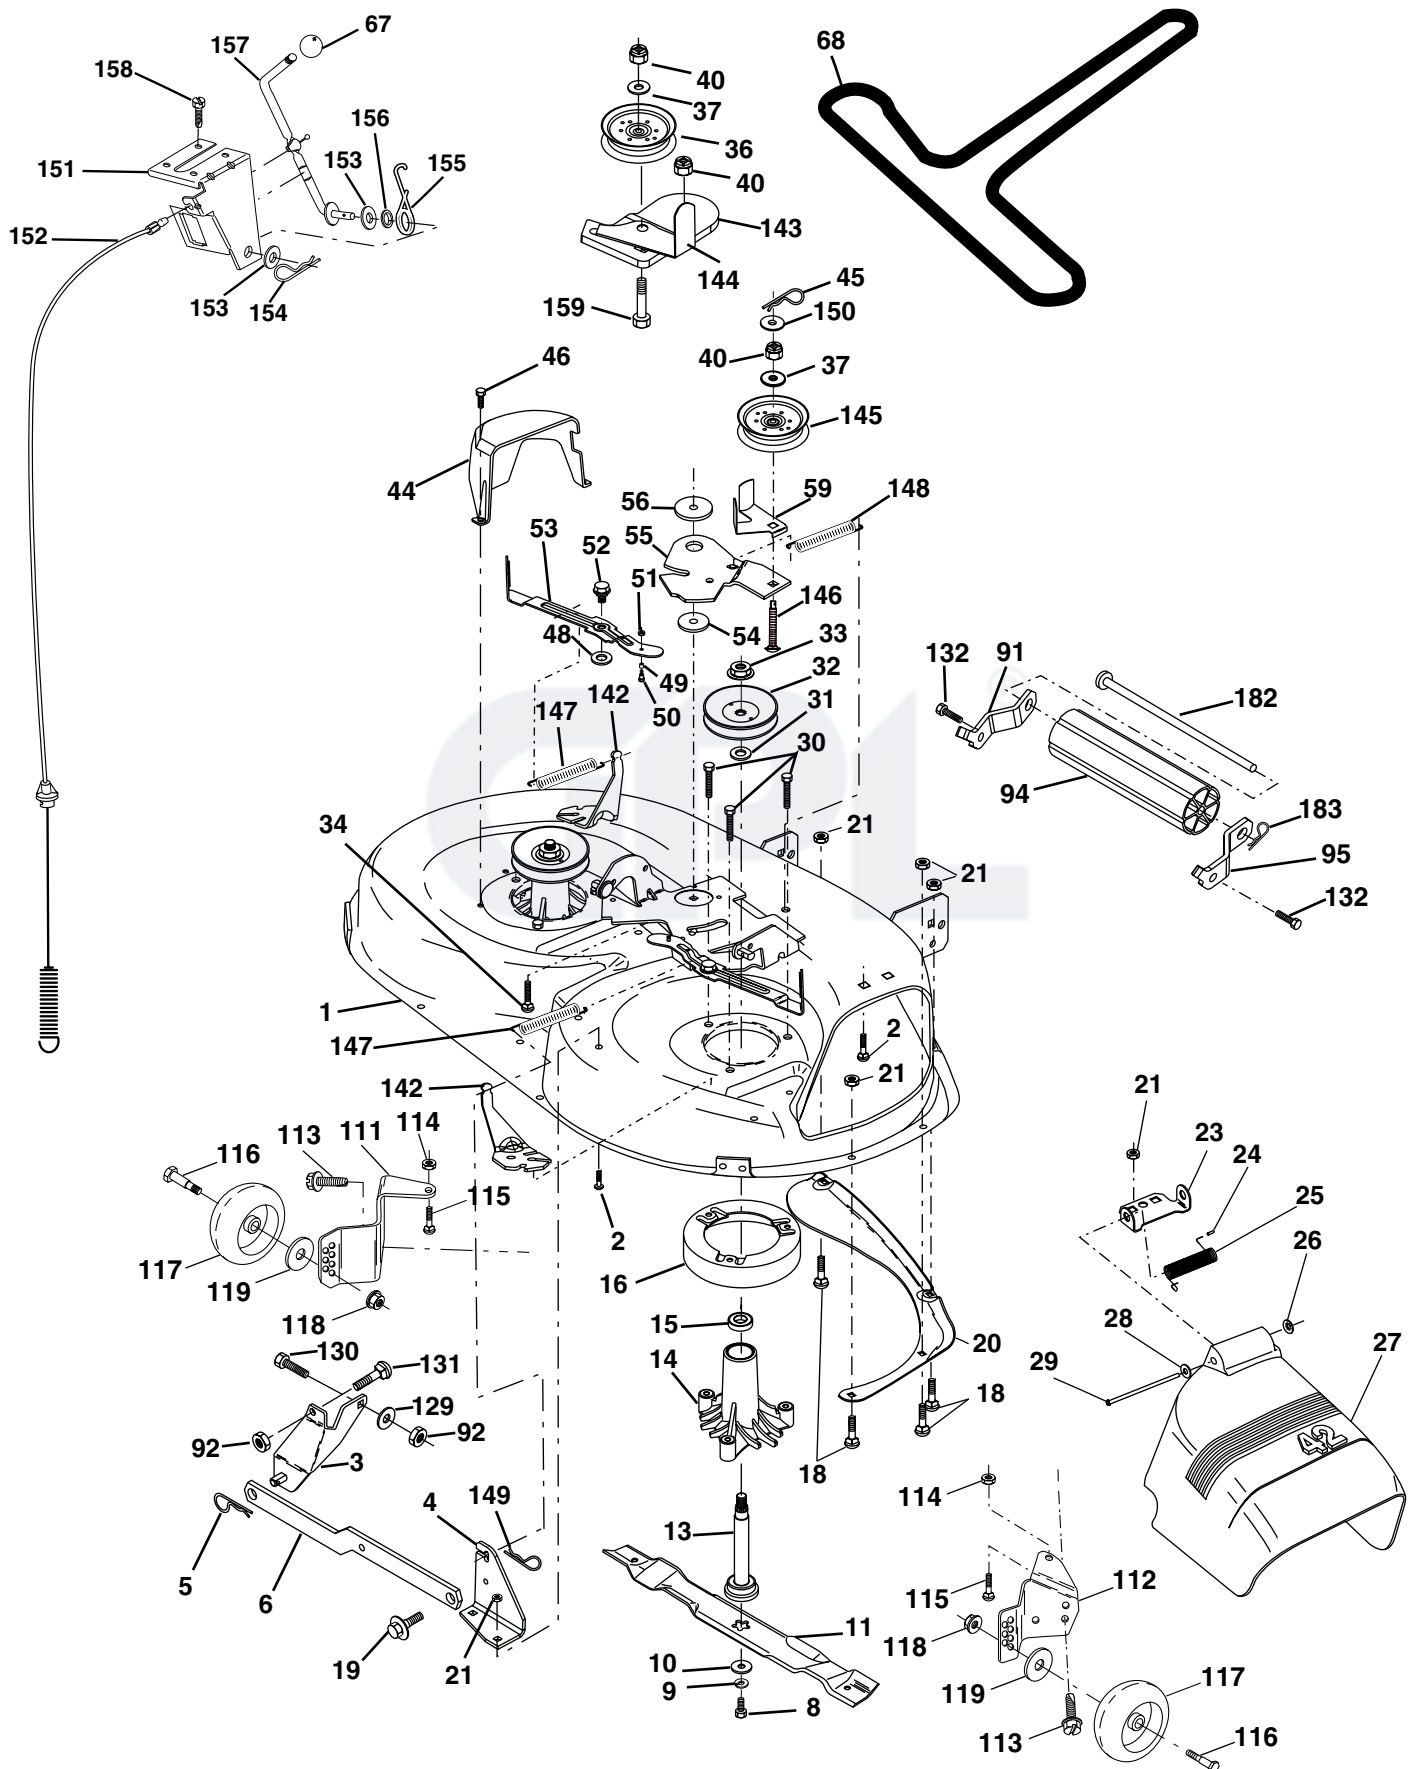

REPAIR PARTS


TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85 MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 16 58-92	Deck Asm MWR 42"weldment	54	532 13 39-43	Washer Hardened
2	872 14 05-06	Bolt Rdhd Sqnk 5/16-18unc X3/4	55	532 15 50-46	Arm Idler 42"mower LT/YT
3	532 13 80-17	Bracket Asm Fr Sway Bar 38/42	56	532 16 57-23	Spacer Retainer Mower
4	532 16 54-60	Bracket Asm Deck 42"sway Bar	59	532 14 10-43	Guard TUV Idler
5	532 12 46-70	Retainer Spring	67	532 10 69-32	Knob Rd 3/8-16 Plstc Thds Blk
6	532 17 80-24	Deck Sway Bar	68	532 14 49-59	V-Belt Mower 42"
8	532 85 08-57	Bolt 3/8 - 24 X 1.25 Gr 8	91	532 18 05-32	Bracket Roller Nose LH
9	810 03 06-00	Washer Lock Hvy 3/8	92	873 80 06-00	Nut Lock w/Ins 3/8-16
10	532 14 02-96	Washer Hard Blade Mower Vented	94	532 13 22-64	Roller Nose
11	532 13 84-98	Blade Mower 42"	95	532 18 05-33	Bracket Roller Nose RH
13	532 13 76-45	Shaft Asm W/lower Bearing	111	532 17 92-92	Bracket Wheel Gauge LH 42" Deck
14	532 12 87-74	Housing Mandrel Vented	112	532 17 92-93	Bracket Gauge Wheel RH 42" Deck
15	532 11 04-85	Bearing Ball Mandrel	113	817 06 05-10	Screw Tapping 3/8-16 x .625
16	532 17 44-93	Stripper Mower	114	873 51 05-00	Nut Keps 5/16-18 Unc
18	872 14 05-05	Bolt Rdhd Sqnk 5/16-18 X 5/8	115	872 11 05-05	Bolt Carriage 5/16-Unc x 5/8
19	532 13 28-27	Bolt Shoulder	116	532 12 48-42	Bolt Shoulder
20	532 15 97-70	Baffle Vortex 42	117	532 16 57-46	Wheel Gauge
21	873 68 05-00	Nut Crownlock 5/16-18 UNC	118	873 93 06-00	Nut Centerlock 3/8-16 UNC
23	532 17 75-63	Bracket Deflector Mower 42"	119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
24	532 10 53-04	Cap Sleeve 80x 112 Blk Mower	129	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
25	532 12 37-13	Spring Torsion Deflector 2 52	130	874 78 06-16	Bolt Fin 3/8-16 x 1
26	532 11 04-52	Nut Push Phos & Oil	131	872 14 06-08	Bolt Carr 3/8-16 x 1
27	532 17 18-59	Shield Deflector Mower 42" Blk	132	817 06 06-12	Screw 3/8-16 x 3/4
28	819 11 10-16	Washer 11/32 X 5/8 X 16 Ga	142	532 16 58-90	Arm Spring Brake Mower
29	532 13 14-91	Rod Hinge 42"6 75 Wlg	143	532 15 71-09	Bracket Arm Idler 42"
30	532 17 39-84	Screw Thd Rolling	144	532 15 86-34	Keeper Belt 42" Clutch
31	532 12 99-63	Washer Spacer Mower Vented	145	532 16 58-88	Pulley Idler Flat
32	532 15 35-35	Pulley Mandrel 42"	146	532 17 19-77	Bolt Carriage Idler
33	532 17 83-42	Nut Toplock Fling	147	532 17 97-48	Spring Extension
34	872 11 06-14	Bolt Rdhd 3/8-16uncx1-3/4 Gr5	148	532 16 90-22	Spring Return Idler
36	532 13 14-94	Pulley Idler Flat 3 060	149	532 16 58-98	Retainer Spring Yellow
37	819 13 13-16	Washer 13/32 X 13/16 X 16	150	819 09 12-16	Washer 9/32 x 3/4 x 16 Ga.
40	873 68 06-00	Nut Crownlock 3/8-16 UNC	151	532 16 96-70	Bracket Clutch Cable
44	532 14 00-88	Guard Mandrel LH Black	152	532 16 96-76	Clutch Cable 42"
45	532 12 47-88	Spring Retainer 1" Zinc/cad	153	532 16 96-74	Washer Flat 3/8" Type B
46	532 13 77-29	Screw Hex Thd Cut 1/4-20 x 5/8 T	154	532 16 96-75	Spring Retainer
48	532 13 39-44	Washer Hardened Smaller	155	532 16 96-71	Spring Retention Lvr Cltch Cab
49	532 17 42-84	Roller Asm Cam Follower 42"dec	156	532 16 96-72	Spacer Clutch Cable
50	532 13 13-40	Bolt Shldr 10-24 Zinc Gr 5 42"	157	532 16 96-69	Rod Clutch Cable 3/8"
51	532 06 9180	Nut Lock #10-24 Unc	158	817 72 04-08	Screw Hex Thd Cut 1/4-20 x 1/2
52	532 13 98-88	Bolt Shoulder 5/16-18 Unc Blkz	159	872 14 06-14	Bolt Rdhd Sqn 3/8-16 Unc x 1-3/4
53	532 13 18-45	Arm Asm Pad Brake	182	532 17 91-26	Rod Roller Nose
			183	532 16 35-52	Retainer Spring
			--	532 17 14-91	Replacement Mower, Complete
			--	532 13 07-94	Mandrel Assembly(Includes Housing, Shaft and Shaft Hardware Only-Pulley not Included)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
MOWER LIFT

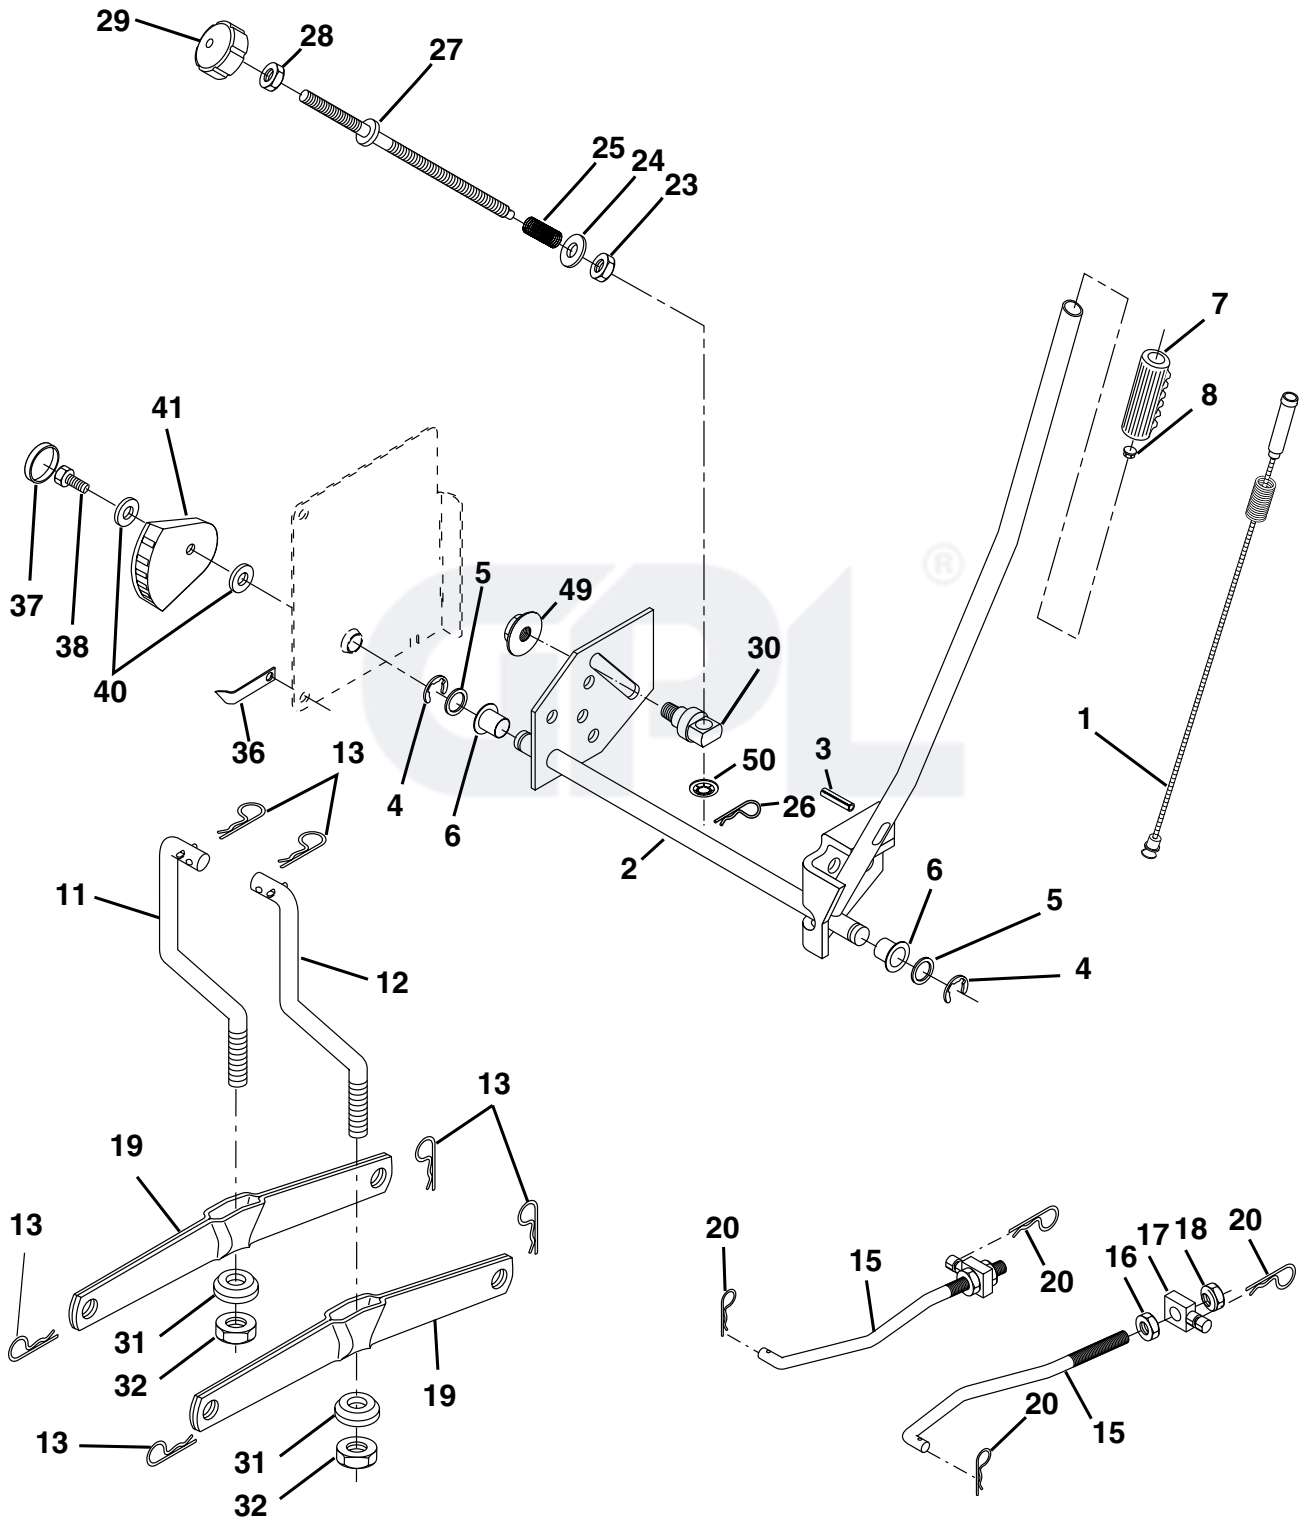

REPAIR PARTS

TRACTOR - MODEL NO. LT16 (JNA1642A), PRODUCT NO. 954 13 00-85
MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	532 15 94-60	Wire Asm Inner W/plunger LT
2	532 15 94-71	Shaft Asm Lift
3	532 10 57-67	Pin Groove
4	812 00 00-02	E Ring #5133-62
5	819 21 16-21	Washer PLTD 21/32 X 1 X 21ga
6	532 12 01-83	Bearing Nylon Blk 629 Id
7	532 12 56-31	Grip Handle Fluted
8	532 12 23-65	Button Plunger Red
11	532 13 98-65	Link Lift LH
12	532 13 98-66	Link Lift RH
13	532 12 46-70	Retainer Spring
15	532 17 32-88	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 Unc
17	532 17 56-89	Trunnion
18	873 80 08-00	Nut Lock W/Wsh 1/2-13 Unc
19	532 13 98-68	Arm Suspension Rear
20	532 16 35-52	Spring, Retainer
23	532 11 08-07	Nut Special
24	819 13 10-16	Washer 13/32 x 5/8 x 16 Ga.
25	532 12 48-74	Spring 2 1/8
26	532 16 94-84	Retainer Clip
27	532 12 69-71	Rod Adj Lift 3/8-16
28	873 35 06-00	Nut Hex Jam
29	532 13 80-57	Knob Inf 3/8-16
30	532 15 02-33	Trunnion Infin Height
31	532 16 98-65	Bearing Pvt. Lift
32	873 54 06-00	Nut Crownlock 3/8-24
36	532 15 50-97	Pointer Inf Height
37	532 12 39-35	Plug Hole Blk
38	817 06 05-16	Screw 5/16-18 x 1
40	819 11 24-10	Washer 11/32 x 1 1/2 x 10 Ga
41	532 15 50-98	Indicator Height
49	532 14 52-12	Nut Hex Flg Lock
50	532 11 04-52	Nut Push

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm