

# LT2122 A

**Spare parts**

**Ersatzteile**

**Pièces détachées**


**Reserve onderdelen**

**Repuestos**

**Reservdelar**

**GPL®**

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
SCHEMATIC

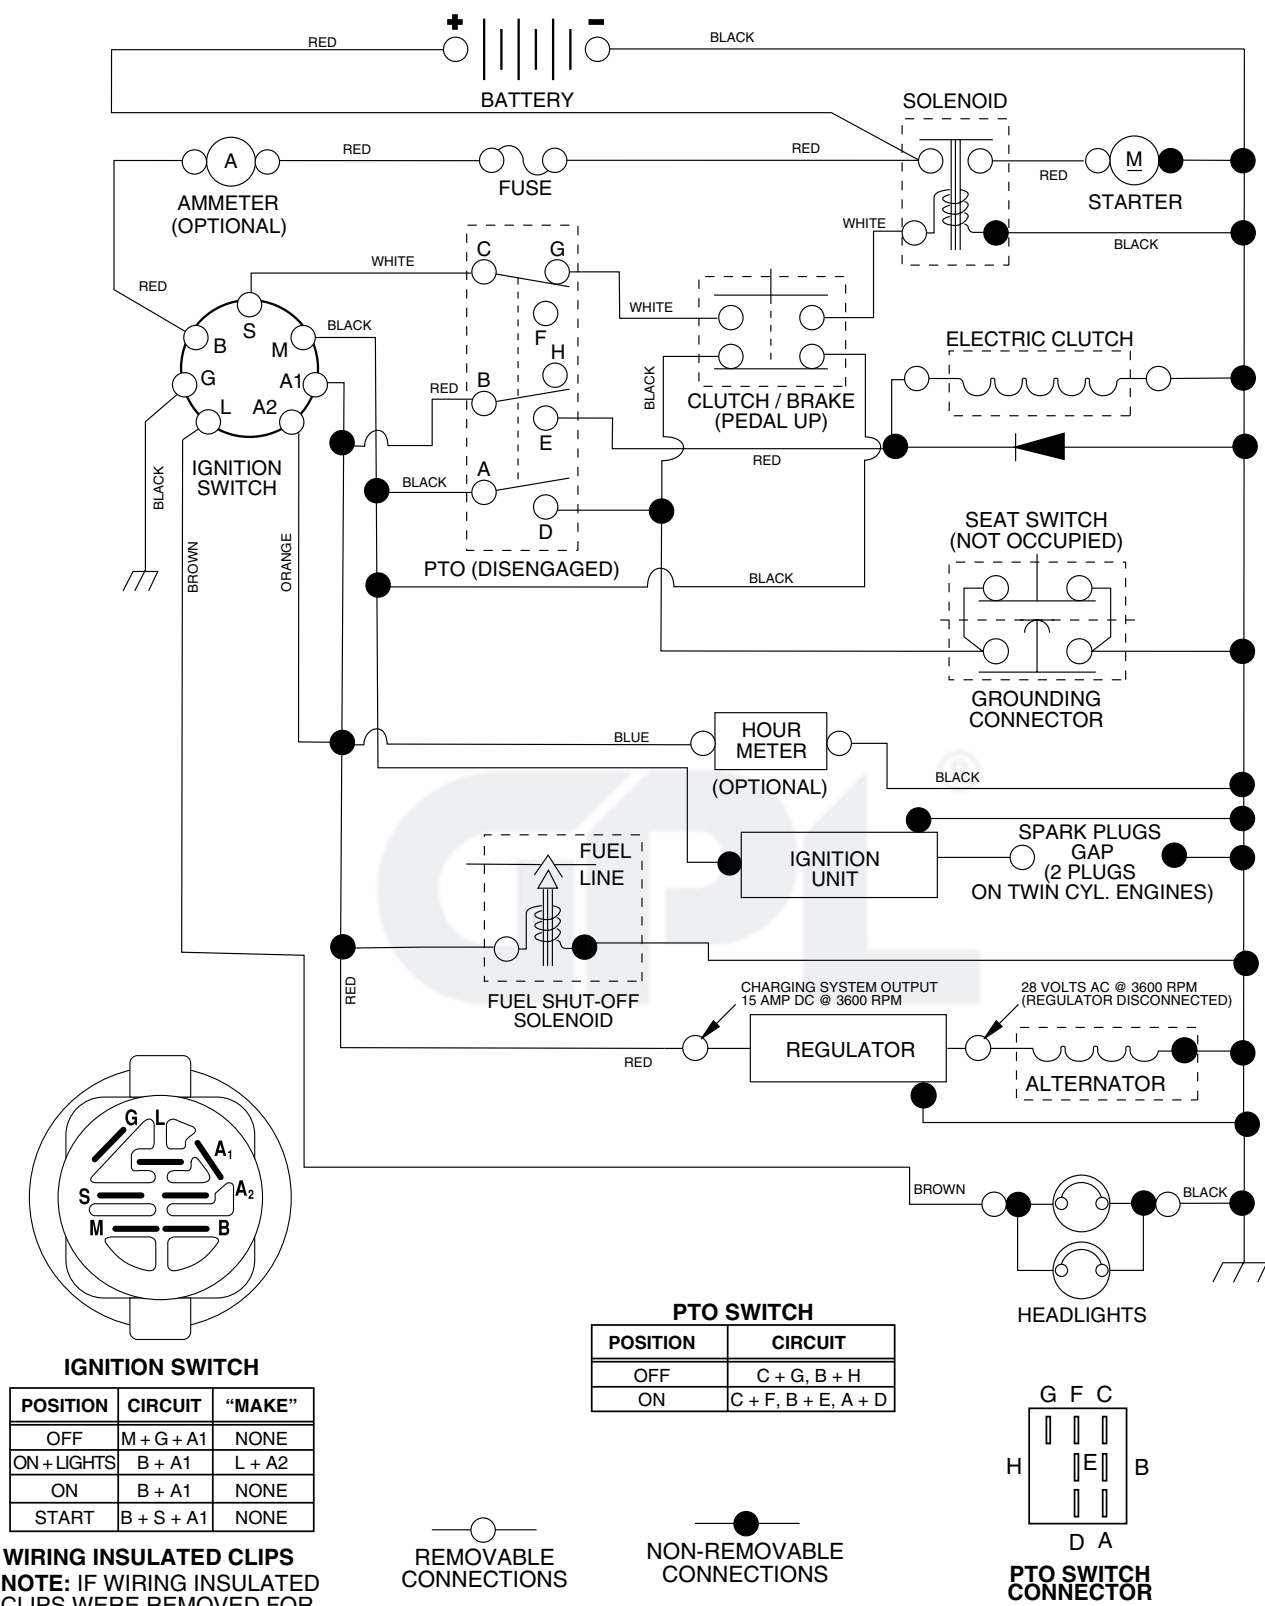

# REPAIR PARTS


TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14

## ELECTRICAL

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14

## ELECTRICAL

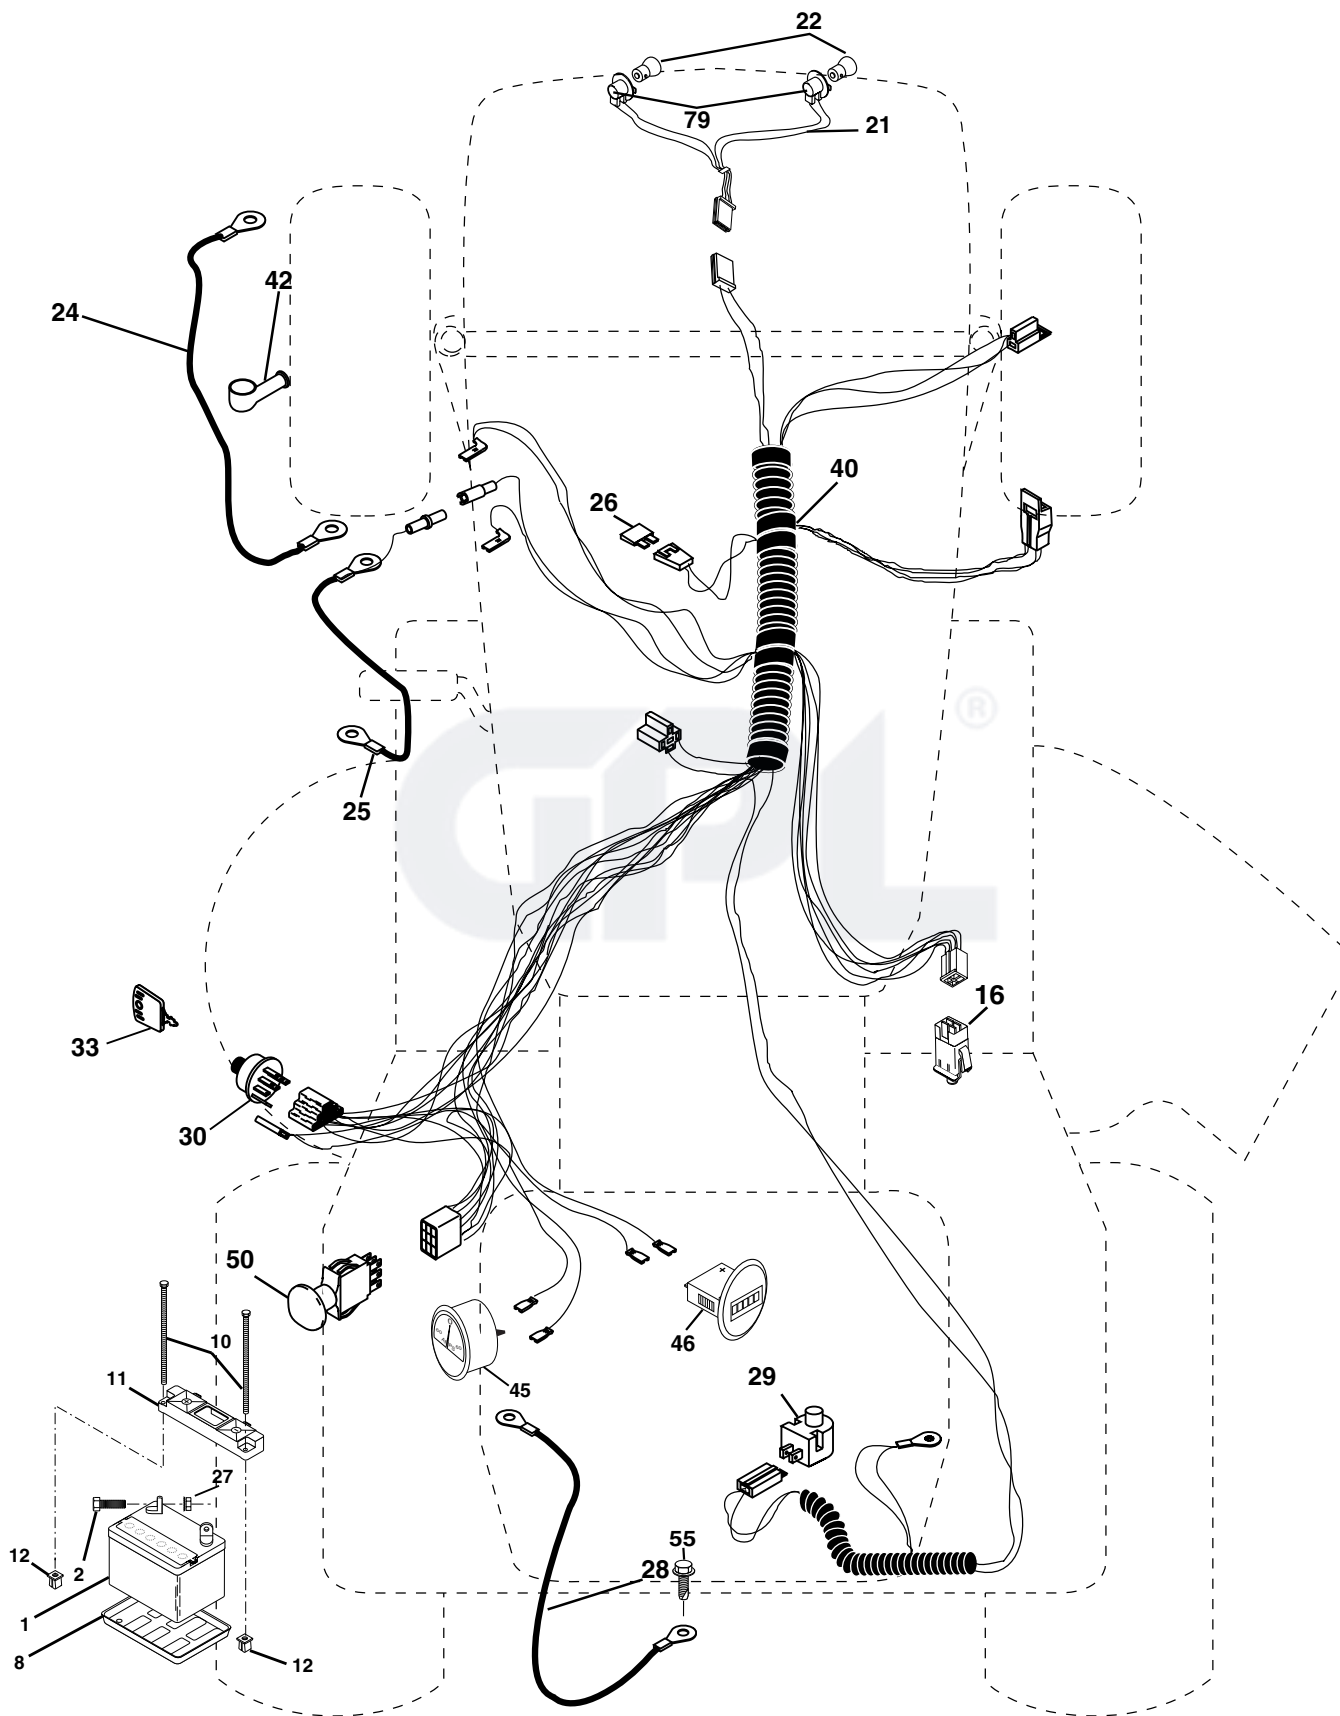

# REPAIR PARTS


TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
ELECTRICAL

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                     |
|------------|--------------|---------------------------------|
| 1          | 532 14 49-27 | Battery                         |
| 2          | 874 76 04-12 | Bolt Hex Hd 1/4-20 unc x 3/4    |
| 8          | 532 12 48-86 | Tray Brty 7.80 x 5.25 Blk       |
| 10         | 532 14 52-11 | Bolt Btr Frt 1/4-20 x 7.5 zinc  |
| 11         | 532 15 01-09 | Holddown Battery mount          |
| 12         | 532 14 57-69 | Nut Push Nylon 1/4 Battery Frt. |
| 16         | 532 17 61-38 | Switch Interlock Push-In        |
| 21         | 532 17 56-88 | Harness Asm Light W/4152j       |
| 22         | 532 00 41-52 | Bulb Light #1156                |
| 24         | 532 00 88-60 | Cable Battery 6 Ga 17" red      |
| 25         | 532 18 68-46 | Cable Battery 6 Ga w/Pos Wire   |
| 26         | 532 17 51-58 | Fuse                            |
| 27         | 873 51 04-00 | Nut Keps Hex 1/4-20 unc         |
| 28         | 532 14 54-91 | Cable Ground 21" Blk 6 Ga 90T   |
| 29         | 532 16 07-84 | Switch Plunger Normal OP Olive  |
| 30         | 532 17 55-66 | Switch Ign                      |
| 33         | 532 14 04-01 | Key Ign                         |
| 40         | 532 18 80-30 | Harness Ign.                    |
| 42         | 532 15 43-36 | Cover Terminal Red              |
| 45         | 532 17 75-00 | Ammeter                         |
| 46         | 532 17 75-01 | Meter Hour                      |
| 50         | 532 17 46-51 | Switch PTO                      |
| 55         | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 Typ  |
| 79         | 532 17 52-42 | Bulbholder                      |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
CHASSIS AND ENCLOSURES

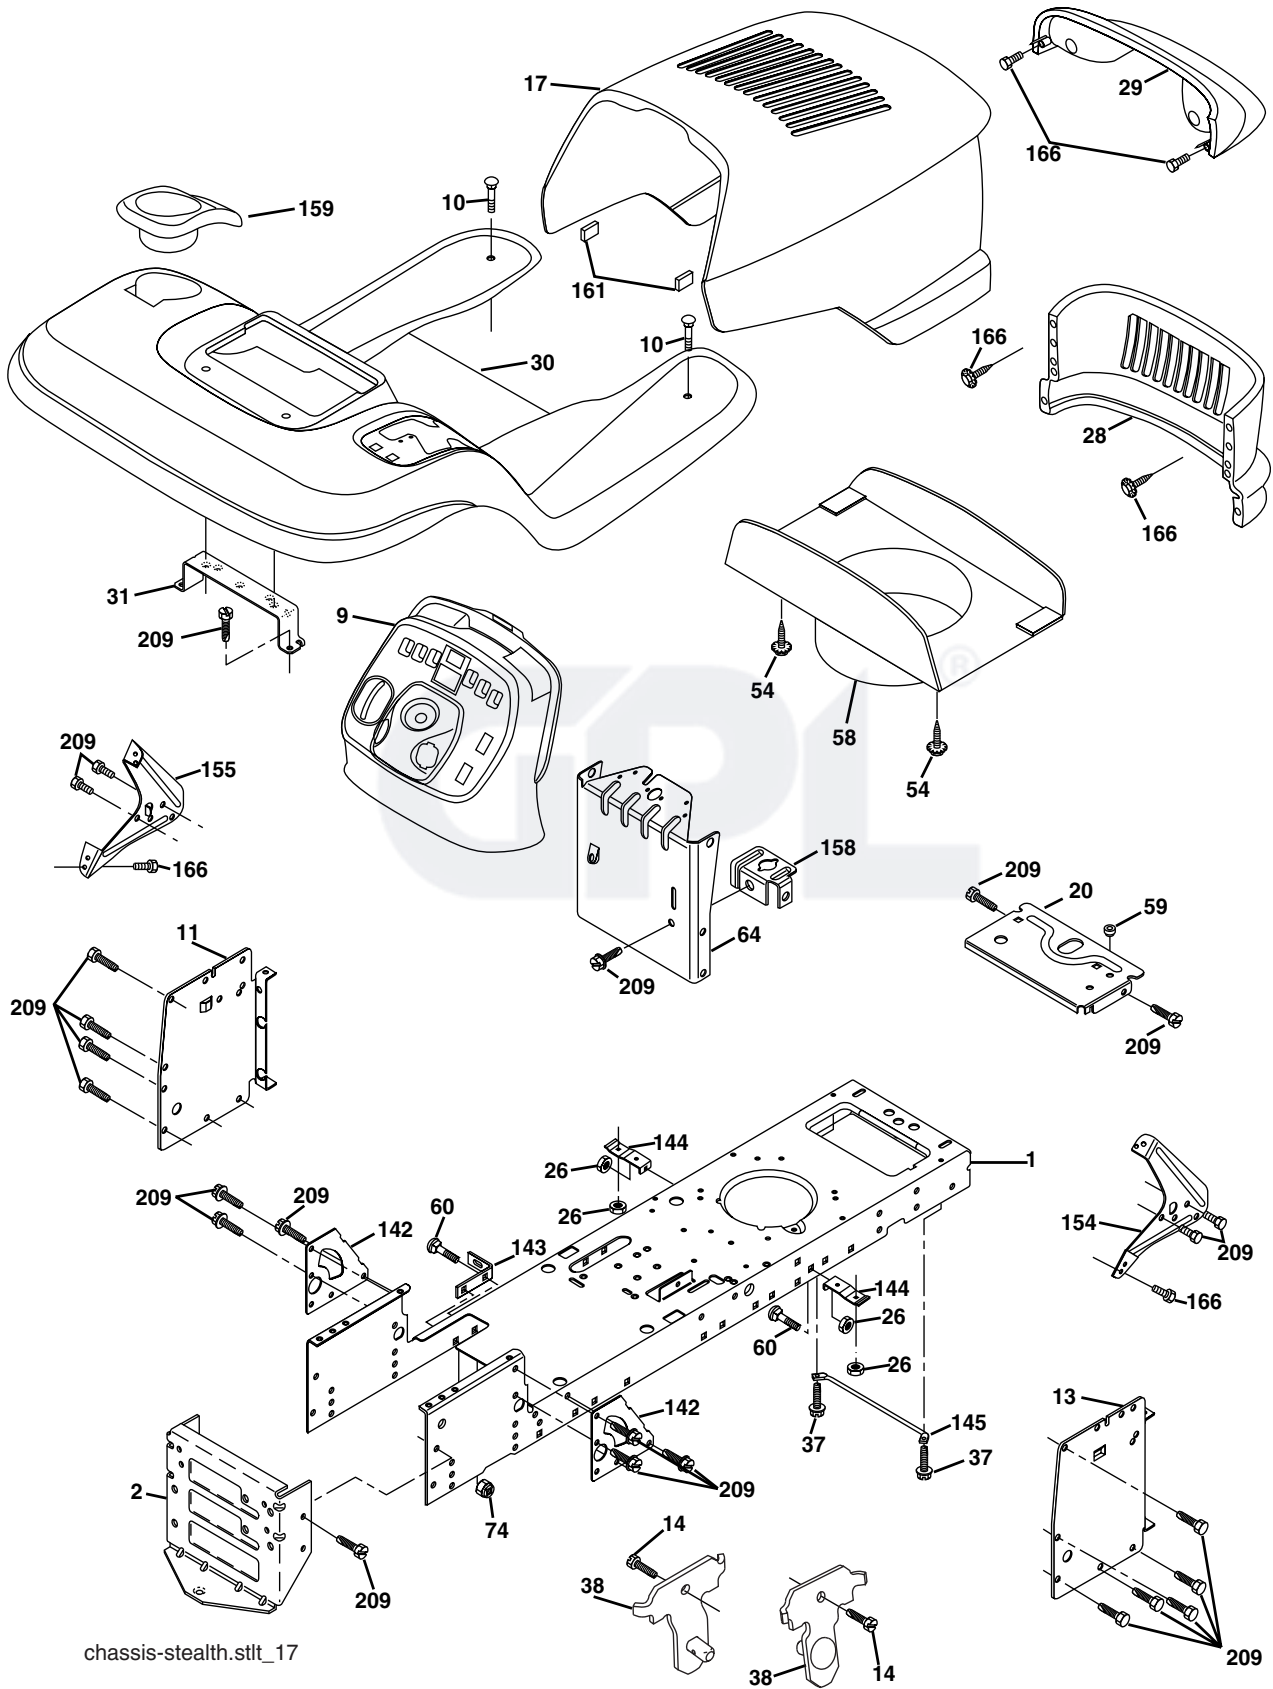


# REPAIR PARTS

## TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14 CHASSIS AND ENCLOSURES

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                      |
|------------|---------------------|----------------------------------|
| 1          | 532 17 46-19        | Chassis Stamping                 |
| 2          | 532 17 65-54        | Drawbar                          |
| 9          | <b>532 19 13-39</b> | Dashboard                        |
| 10         | 872 14 06-08        | Bolt Rdhd Sqnk 3/8-16 unc x 1    |
| 11         | 532 16 72-03        | Panel Dash Lh                    |
| 13         | 532 17 82-98        | Panel Dash Rh                    |
| 14         | 817 49 06-08        | Screw Thdrol 3/8-16 x 1/2        |
| 17         | 532 18 13-51        | Hood                             |
| 20         | 532 16 20-26        | Plate Mtg Battery/Fuel Tank      |
| 26         | 873 80 06-00        | Nut Lock w/Insert 3/8-16 unc     |
| 28         | 532 18 13-52        | Grille Lens Asm                  |
| 29         | 532 17 97-61        | Light Box Asm (w/Lens)           |
| 30         | 532 18 13-53        | Fender                           |
| 31         | 532 13 99-76        | Bracket                          |
| 37         | 817 49 05-08        | Screw Thdrol 5/16-18 x 1/2       |
| 38         | 532 17 57-10        | Bracket Asm Pivot Mower Rear     |
| 54         | 532 16 14-64        | Screw Hex Wshd 8-18 x 7/8        |
| 58         | 532 17 53-51        | Duct Air                         |
| 59         | 532 18 74-95        | Bushing Snap                     |
| 60         | 872 14 06-06        | Bolt RDHD SQNK 3/8-16 x 3/4      |
| 64         | 532 17 49-97        | Dash Lower Stlt                  |
| 74         | 873 68 06-00        | Nut Crownlock 3/8-16             |
| 142        | 532 17 57-02        | Plate Reinforcement              |
| 143        | 532 18 66-89        | Bracket Swaybar Chassis          |
| 144        | 532 17 55-82        | Bracket Ft Rest                  |
| 145        | 532 15 65-24        | Rod Pivot Chassis Hood           |
| 154        | 532 16 18-97        | Bracket Dash RH                  |
| 155        | 532 16 19-00        | Bracket Dash LH                  |
| 158        | 532 16 20-37        | Parking Brake Brkt               |
| 159        | 532 18 13-55        | Cupholder YTGT Grey              |
| 161        | 532 16 46-55        | Extrusion Bumper                 |
| 166        | 532 17 18-75        | HWHDH:-Lo. #13-16 x 3/4          |
| 209        | 817 00 06-12        | Screw Hexwsh Thdr 3/8-16 c-x 3/4 |
| - -        | <b>532 18 78-01</b> | Plug Dome                        |

**NOTE:** All component dimensions given in U. S. inches  
1 inch = 25.4 mm

 **TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14 DRIVE**



# REPAIR PARTS


## TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14 DRIVE

| KEY NO. | PART NO.     | DESCRIPTION                                                                           | KEY NO. | PART NO.     | DESCRIPTION                     |
|---------|--------------|---------------------------------------------------------------------------------------|---------|--------------|---------------------------------|
| 1       | - - - - -    | Transaxle (Order parts from trans-<br>axle manufacturer)<br>Hydro Gear Model 336-0510 | 78      | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga.   |
| 6       | 817 06 05-12 | Screw 5/16-18 x 3/4                                                                   | 89      | 532 18 14-53 | Console, Shift                  |
| 9       | 532 17 93-34 | Clutch Elec                                                                           | 90      | 532 12 43-46 | Nut Self-Thd Wsh-hd 1/4 Zinc    |
| 15      | 874 49 05-44 | Bolt Hex Flghd 5/16-18 Gr. 5                                                          | 95      | 532 18 08-25 | Bypass Asm                      |
| 16      | 873 80 05-00 | Nut Lock Hex W/Ins. 5/16-18 unc                                                       | 96      | 532 12 47-88 | Retainer Spring 1" Zinc/Cad     |
| 17      | 532 12 61-97 | Washer 1-1/2 OD x 15/32 ID x .250                                                     | 116     | 872 14 06-08 | Bolt RDHD SQNK 3/8-16 unc x 1   |
| 19      | 873 80 06-00 | Nut Lock Hex W/Wsh 3/8-16 Unc                                                         | 120     | 873 90 06-00 | Nut Lock Flg 3/8-16 unc         |
| 20      | 532 17 39-37 | Bolt Hex 7/16-20 x 4 x Gr. 5-1.5                                                      | 150     | 532 17 54-56 | Spacer Retainer                 |
| 21      | 532 18 14-54 | Knob Custom Control Cruise                                                            | 151     | 819 13 32-10 | Washer 13/32 x 2 x 10 Ga.       |
| 22      | 532 17 58-96 | Rod, Brake                                                                            | 202     | 872 11 06-14 | Bolt Rdhd 3/8-16 x 1-3/4 Gr. 5  |
| 24      | 873 35 06-00 | Nut, Hex Jam 3/8-16 unc                                                               | 212     | 532 14 52-12 | Nut HexFlange Lock              |
| 25      | 532 10 68-88 | Spring, Brake Rod                                                                     | 214     | 532 17 47-35 | Link Transaxle                  |
| 26      | 819 13 13-16 | Washer                                                                                | 217     | 532 17 94-33 | Pedal Reverse Asm               |
| 27      | 876 02 04-12 | Pin Cotter 1/8 x 3/4 CAD.                                                             | 218     | 532 17 47-13 | Arm Control Pedal Reverse       |
| 28      | 532 17 57-65 | Rod, Parking Brake                                                                    | 219     | 532 17 48-39 | Bracket Frest Pdl Ctrl. Hyd     |
| 29      | 532 07 16-73 | Cap, Brake, Park                                                                      | 220     | 532 17 47-11 | Bracket Mtg. Pedal Control      |
| 30      | 532 16 95-92 | Bracket, Transaxle                                                                    | 221     | 872 14 06-06 | Bolt Rdhd Sqnk 3/8-16 unc x 3/4 |
| 32      | 874 76 05-12 | Bolt Hex Hd 5/16-18 unc x 3/4                                                         | 222     | 873 68 07-00 | Nut Crownlock 7/16-14 unc       |
| 33      | 872 14 05-06 | Bolt Rdhd Sqnk 5/16-18 unc x 3/4                                                      | 223     | 532 17 48-40 | Washer Nylon 11/16 ID x .060    |
| 34      | 532 17 55-78 | Shaft, Foot Pedal                                                                     | 224     | 532 17 47-36 | Pedal Forward                   |
| 35      | 532 12 01-83 | Bearing, Nylon                                                                        | 225     | 532 17 47-12 | Arm Control Pedal Forward       |
| 36      | 819 21 16-16 | Washer                                                                                | 226     | 532 17 49-02 | Bolt Pivot Spacer               |
| 37      | 532 12 49-63 | Pin, Roll                                                                             | 227     | 532 17 47-10 | Cam Reverse Pedal LT            |
| 38      | 532 17 91-14 | Pulley, Composite, Flat                                                               | 228     | 532 17 90-32 | Bolt Shoulder 5/16-18           |
| 39      | 872 11 06-22 | Bolt Rdhd 3/8-16 unc x 2-3/4 Gr. 5                                                    | 229     | 532 17 64-51 | Washer Serrated 5/16 x .75      |
| 41      | 532 17 55-56 | Keeper, Belt Idler Flat                                                               | 231     | 532 17 45-73 | Strap Torque                    |
| 47      | 532 12 77-83 | Pulley, Idler, V-Groove                                                               | 232     | 532 17 55-70 | Actuator Cruise Disengage       |
| 48      | 532 15 44-07 | Bellcrank Clutch Grnd Drw Stl                                                         | 233     | 532 17 48-56 | Pawl Control Cruise             |
| 49      | 532 12 32-05 | Retainer, Belt                                                                        | 234     | 532 17 48-58 | Lever Control Cruise            |
| 50      | 872 11 06-12 | Bolt                                                                                  | 235     | 532 17 48-57 | Sector Control Cruise           |
| 51      | 873 68 06-00 | Nut Crownlock 3/8-16 unc                                                              | 236     | 532 12 89-03 | Bolt Shoulder 3/8-16 unc 1/44   |
| 52      | 873 68 05-00 | Nut, Crownlock 5/16-18 unc                                                            | 237     | 532 17 01-65 | Bolt Shoulder 5/16-18           |
| 53      | 532 10 57-10 | Link, Clutch                                                                          | 238     | 532 17 58-07 | Arm Mtg. Cruise Sector          |
| 55      | 532 10 57-09 | Spring, Return, Clutch                                                                | 239     | 817 49 05-08 | Screw Thdrol 5/16 x 1/2         |
| 56      | 817 06 06-20 | Screw 3/8-16 x 1-1/4                                                                  | 240     | 532 17 56-10 | Spring Return Cruise Control    |
| 57      | 532 14 02-94 | V-Belt, Ground Drive                                                                  | 241     | 873 93 04-00 | Nut Centerlock 1/4-20 unc       |
| 59      | 532 16 96-91 | Keeper, Center Span                                                                   | 242     | 874 78 04-12 | Bolt Fin Hex 1/4-20 unc x .75   |
| 61      | 817 12 06-14 | Screw 3/8-16 x .875                                                                   | 243     | 532 17 82-89 | Bracket Anti-Rotation CVX       |
| 62      | 532 12 48-72 | Cover, Pedal                                                                          | 244     | 817 49 05-10 | Screw 5/16-18 x 5/8             |
| 63      | 532 17 46-07 | Pulley, Engine                                                                        | 251     | 817 06 05-16 | Screw 5/16-18 x 1               |
| 65      | 810 04 07-00 | Washer                                                                                | 253     | 532 17 94-22 | Washer .3125 x .615 x 16 Ga.    |
| 66      | 532 15 47-78 | Keeper Belt Engine                                                                    | 254     | 532 17 80-62 | Clip Retainer                   |
| 74      | 532 13 70-57 | Spacer, Axle                                                                          | 271     | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4  |
| 75      | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga.                                                         | 272     | 817 67 05-08 | Screw Thdrol 5/16-18 x 1/2      |
| 76      | 812 00 00-01 | E-Ring                                                                                | 273     | 532 17 96-10 | Pad Pedal Reverse               |
| 77      | 532 12 35-83 | Key, Square                                                                           | 274     | 532 17 56-46 | Cover Pedal Forward             |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
STEERING ASSEMBLY

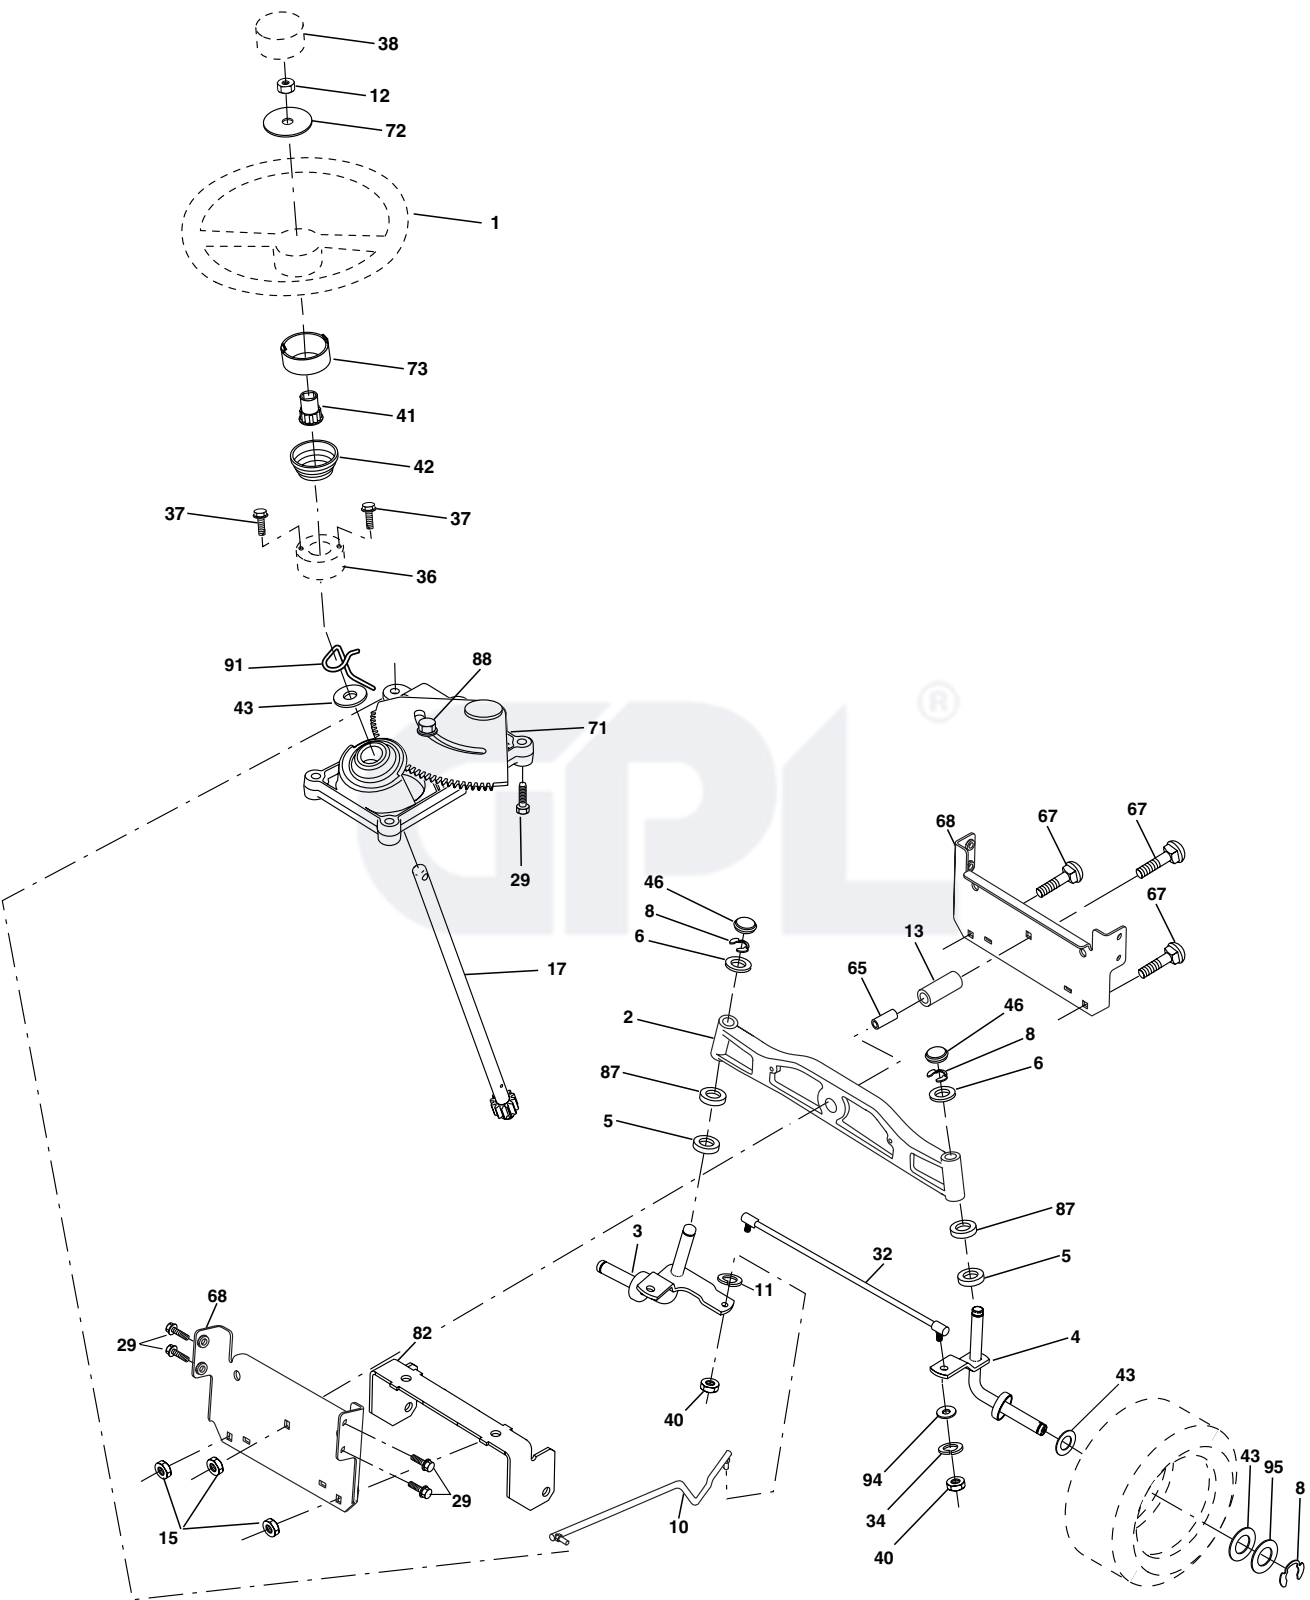

steering\_stealth\_prem\_7

# REPAIR PARTS


## TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14 STEERING ASSEMBLY

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                       |
|------------|--------------|-----------------------------------|
| 1          | 532 17 20-92 | Wheel Steering                    |
| 2          | 532 18 47-06 | Axle Casting Iron Lt              |
| 3          | 532 16 98-40 | Spindle Asm LH                    |
| 4          | 532 16 98-39 | Spindle Asm RH                    |
| 5          | 532 12 49-31 | Washer Thrust .75 x 1.230         |
| 6          | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga      |
| 8          | 812 00 00-29 | Ring Klip #t5304-75               |
| 10         | 532 17 51-21 | Draglink                          |
| 11         | 810 04 06-00 | Washer Lock Hvy Hlcl Spr 3/8      |
| 12         | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf    |
| 13         | 532 13 65-18 | Spacer Bearing Axle Front         |
| 15         | 532 14 52-12 | Nut Hex Flange Lock               |
| 17         | 532 17 78-83 | Shaft Asm Strg                    |
| 29         | 817 00 06-12 | Screw 3/8-16 x 3/4                |
| 32         | 532 18 05-80 | Rod Asm Tie                       |
| 34         | 810 04 06-00 | Washer Lock Hvy HLCL Spr. 3/8     |
| 36         | 532 15 51-05 | Bushing Strg                      |
| 37         | 532 15 29-27 | Screw TT #32.5 x 5 x 3/8 Flange   |
| 38         | 532 17 20-93 | Insert Cap Strg Wh                |
| 40         | 873 54 06-00 | Nut Crownlock 3/8-24              |
| 41         | 532 15 99-45 | Adaptor Wheel Strg                |
| 42         | 532 17 71-49 | Boot Steering                     |
| 43         | 532 12 17-49 | Washer 25/32 x 1 1/4 x 16 Ga.     |
| 46         | 532 12 12-32 | Cap Spindle Fr Top Blk            |
| 65         | 532 16 03-67 | Spacer Axle Brace                 |
| 67         | 872 11 06-18 | Bolt Rdhd Sqnk 3/8-16 unc x 2-1/4 |
| 68         | 532 16 98-27 | Brace Axle                        |
| 71         | 532 17 51-46 | Steering Asm.                     |
| 72         | 819 18 24-11 | Washer 9/16ID x 1-1/2 OD 11G Zin  |
| 73         | 532 18 14-49 | Extension Steering Premuim        |
| 82         | 532 16 98-35 | Bracket Susp Chassis Front        |
| 87         | 532 17 39-66 | Washer Flat .781 x 1-1/2 x .14    |
| 88         | 532 17 51-18 | Bolt Shoulder 7/16-20             |
| 91         | 532 17 55-53 | Clip Steering                     |
| 94         | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga.         |
| 95         | 532 18 89-67 | Washer Harden .793 x 1.637 x 060  |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
SEAT ASSEMBLY

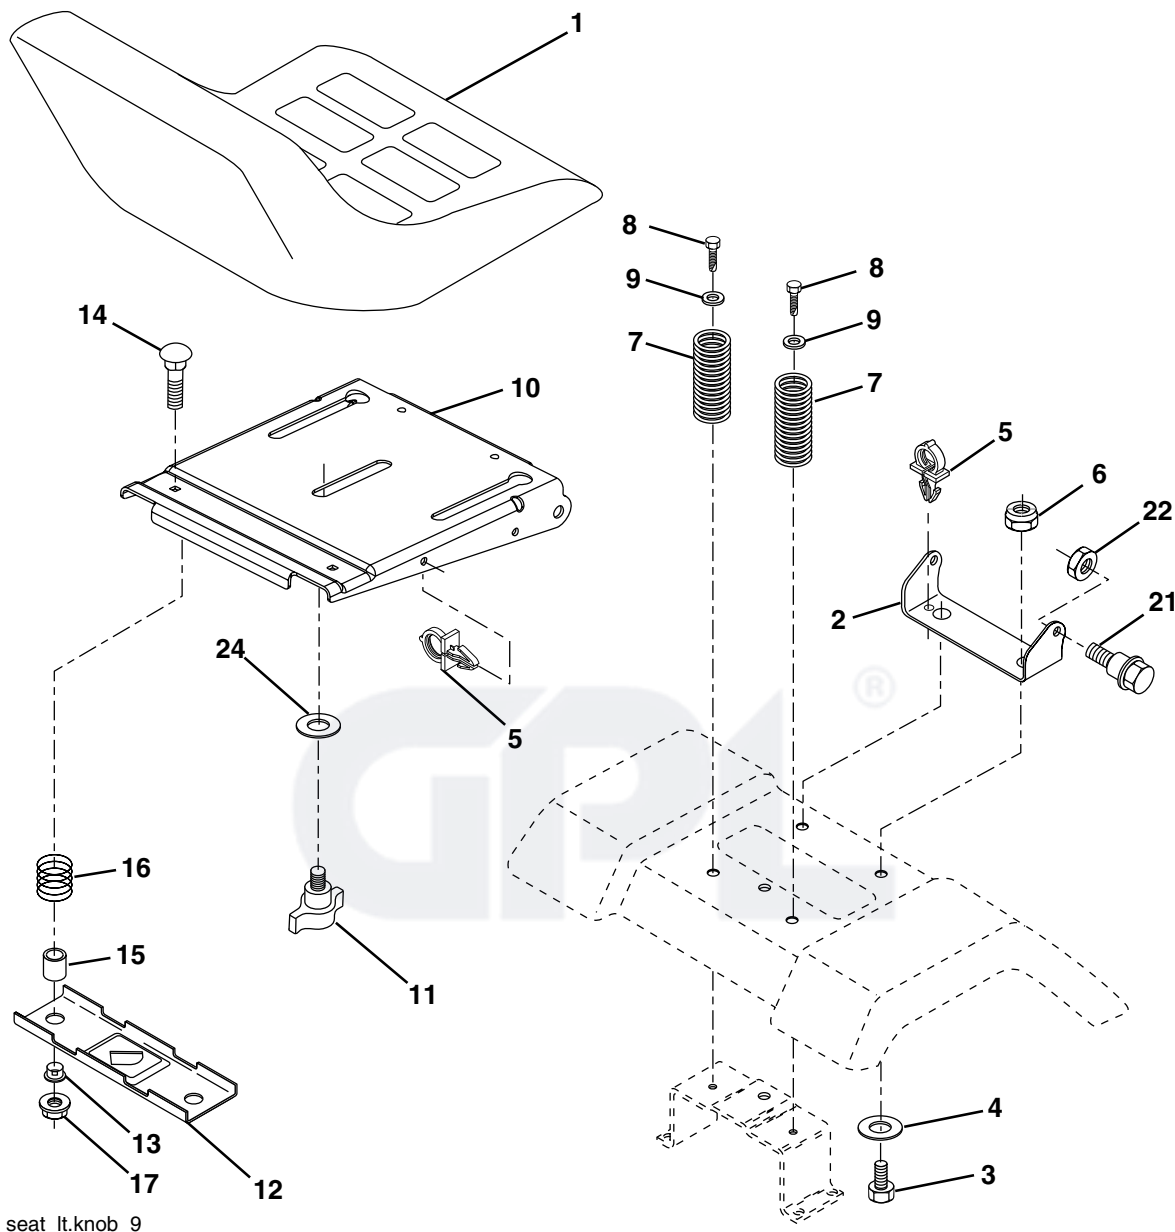

seat\_lt.knob\_9

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------|
|---------|----------|-------------|

|    |              |                                |
|----|--------------|--------------------------------|
| 1  | 532 18 87-06 | Seat                           |
| 2  | 532 18 01-66 | Bracket Pivot                  |
| 3  | 871 11 06-16 | Bolt Hex 3/8-16 unc x 1        |
| 4  | 819 13 16-10 | Washer 13/32 x 1 x 10 Ga       |
| 5  | 532 14 50-06 | Clip Push-In Hinged            |
| 6  | 873 80 06-00 | Nut Lock Hex w/Ins. 3/8-16 unc |
| 7  | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi |
| 8  | 817 00 06-16 | Screw 3/8-16 x 1               |
| 9  | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga.      |
| 10 | 532 18 01-86 | Pan Seat                       |
| 11 | 532 16 63-69 | Knob Seat                      |


| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------|
|---------|----------|-------------|

|    |              |                                 |
|----|--------------|---------------------------------|
| 12 | 532 12 12-46 | Bracket Mounting Switch         |
| 13 | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id      |
| 14 | 872 05 04-12 | Bolt Rdhd Sht Nk 1/4-20 x 1-1/2 |
| 15 | 532 12 12-49 | Spacer Split 28x 88 Yel Zinc    |
| 16 | 532 12 37-40 | Spring Cprsn 1 310 Blk Pnt      |
| 17 | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr. 5 Zinc |
| 21 | 532 17 18-52 | Bolt Shoulder 5/16-18 unc-2A    |
| 22 | 873 80 05-00 | Nut Lock Hx W/Ins 5/16-18 unc   |
| 24 | 819 17 19-12 | Washer 17/32 x 1-3/16 x 12 Ga.  |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm.

# REPAIR PARTS


TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
DECALS

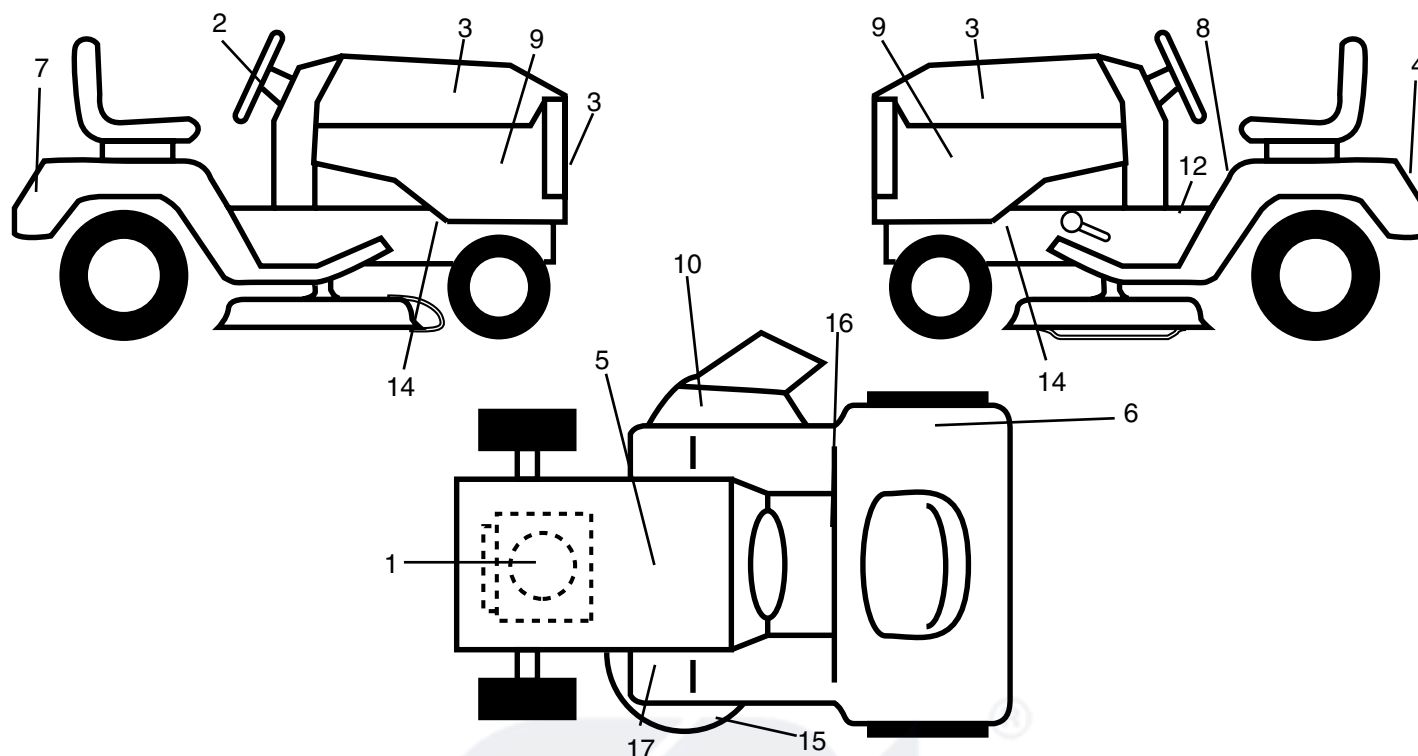

| KEY NO. | PART NO.     | DESCRIPTION                  |
|---------|--------------|------------------------------|
| 1       | 532 18 91-55 | Decal Engine                 |
| 2       | 532 18 57-73 | Decal Ins. Strg. Whl.        |
| 3       | 532 18 95-53 | Decal Hood                   |
| 4       | 532 18 88-34 | Decal Fender                 |
| 5       | 532 14 50-05 | Decal Btry DNGR/PSN P/L Sym. |
| 6       | 532 18 04-33 | Decal 105 DBA                |
| 7       | 532 18 39-30 | Decal Fender                 |
| 8       | 532 14 54-98 | Decal Read Owners Manual     |
| 9       | 532 18 88-76 | Decal Side Panel             |
| 10      | 532 18 21-66 | Decal Mower Cutting          |
| 12      | 532 14 08-37 | Decal Saddle Brake Parking   |

| KEY NO. | PART NO.     | DESCRIPTION                  |
|---------|--------------|------------------------------|
| 14      | 532 15 97-36 | Decal Chassis Hot Muffler    |
| 15      | 532 17 52-91 | Decal V-Belt                 |
| 16      | 532 17 83-02 | Decal Oper Cruise            |
| 17      | 532 15 97-37 | Decal Brake/Clutch Symbol LT |
| --      | 532 16 25-98 | Decal Drawbar Load Limit     |
| --      | 532 16 69-60 | Decal By Pass Lt Hydro       |
| --      | 532 18 14-47 | Pad Footrest LH STLT         |
| --      | 532 18 14-48 | Pad Footrest RH STLT         |
| --      | 532 19 15-91 | Manual Oper. Euro.           |
| --      | 532 19 15-92 | Manual Oper. Scan.           |

## WHEELS & TIRES

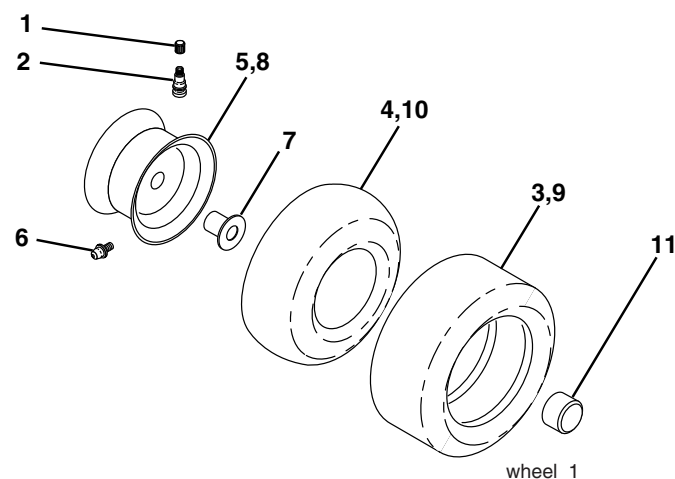


| KEY NO. | PART NO.     | DESCRIPTION                       |
|---------|--------------|-----------------------------------|
| 1       | 532 05 91-92 | Cap Valve Tire                    |
| 2       | 532 06 51-39 | Stem Valve                        |
| 3       | 532 10 62-22 | Tire F Ts 15 x 6 0 - 6 Service    |
| 4       | 532 05 99-04 | Tube Front (Service Item Only)    |
| 5       | 532 13 83-36 | Rim Asm 6" front Silver Service   |
| 6       | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7       | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8       | 532 13 83-37 | Rim Asm 8" rear Silver Service    |
| 9       | 532 12 20-82 | Tire R Ts 20 10 C Service         |
| 10      | 532 12 49-26 | Tube Rear (Service Item Only)     |
| 11      | 532 17 50-39 | Cap, Hub Axle Blk 1.50 x 1.00     |
| --      | 532 14 43-34 | Tire, Sealant (10 oz. Tube)       |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
ENGINE

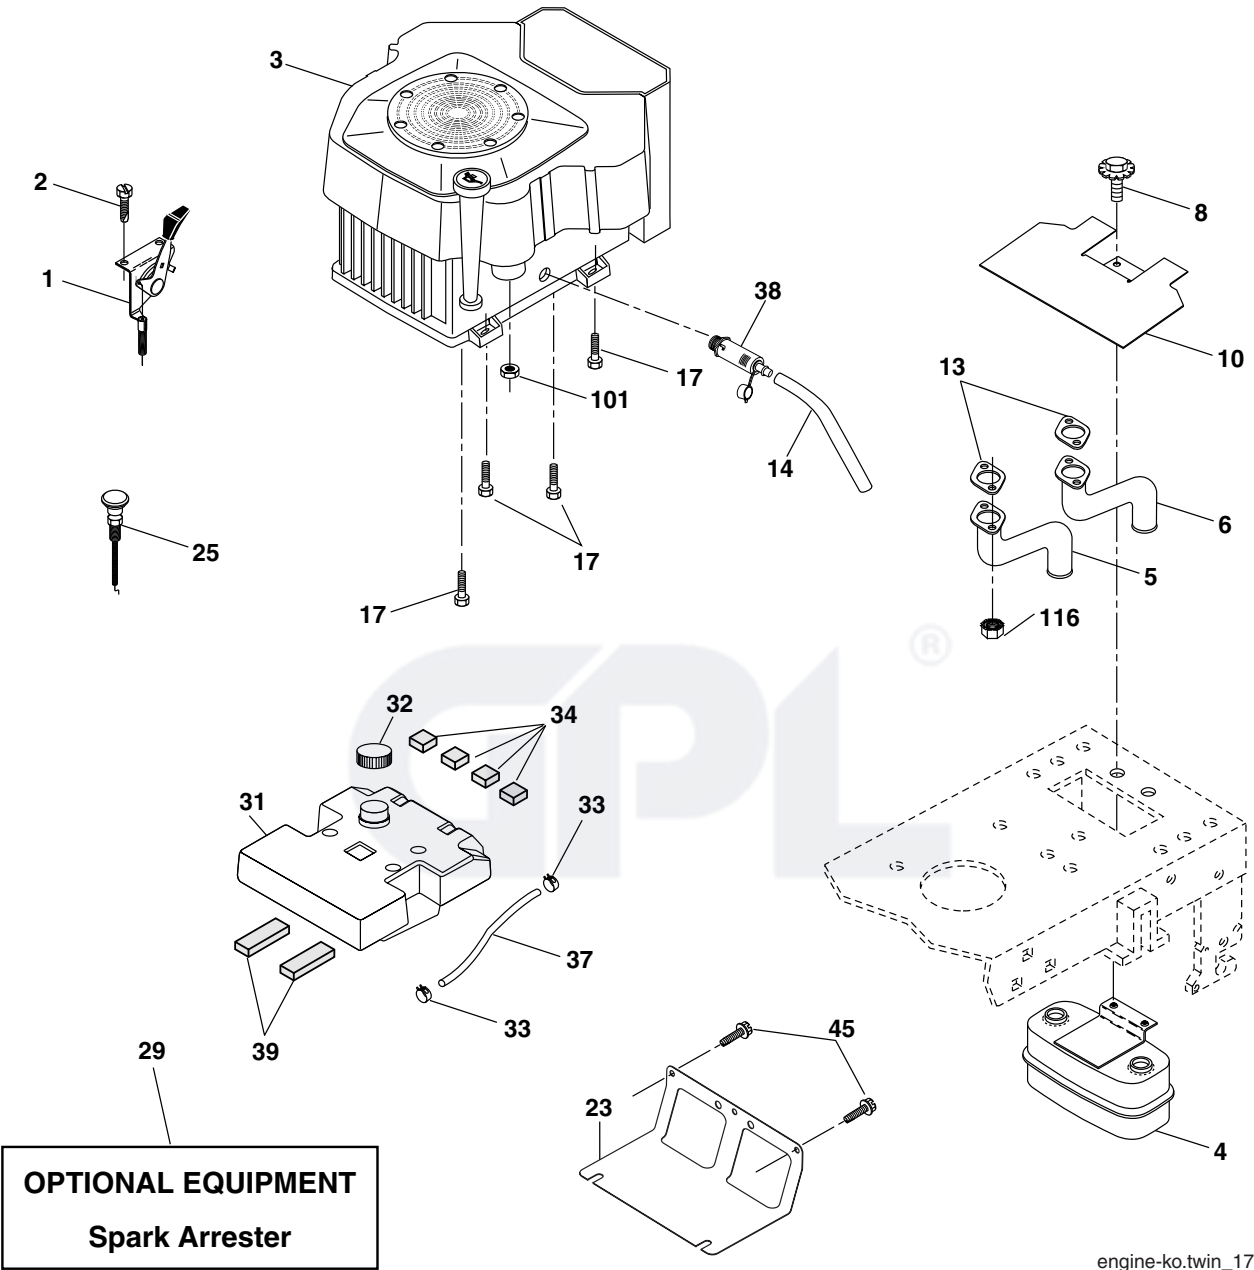

engine-ko.twin\_17


# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
ENGINE

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                                                        |
|------------|---------------------|--------------------------------------------------------------------|
| 1          | 532 17 81-47        | Control Throttle                                                   |
| 2          | 532 17 18-75        | Screw Hwhd Hi-Lo #13-16 x 3/4                                      |
| 3          | -----               | Engine Kohler Model #CV674<br>Order parts from engine manufacturer |
| 4          | 532 14 97-23        | Muffler Twin Lo-Twin                                               |
| 5          | 532 14 66-99        | Tube, Manifold Lh                                                  |
| 6          | 532 14 67-00        | Tube, Manifold Rh                                                  |
| 8          | 532 17 18-77        | Bolt 5/16-18 Unc x 3/4 w/Sems                                      |
| 10         | 532 14 66-29        | Shield Heat Muffler                                                |
| 13         | 532 18 60-54        | Gasket Muffler                                                     |
| 14         | 532 14 84-56        | Tube Drain Oil Easy                                                |
| 17         | 817 06 06-24        | Screw, Thdrol 3/8-16 x 1-1/2 Tap/R                                 |
| 23         | 532 16 98-37        | Shield Brn/Dbr Guard                                               |
| 25         | <b>532 18 95-41</b> | Choke Control                                                      |
| 29         | 532 13 71-80        | Kit Spark Arrestor (Flat Scrn)                                     |
| 31         | 532 15 71-03        | Tank Fuel 3 50 STLT w/o Sensor                                     |
| 32         | 532 14 05-27        | Cap Asm Fuel W/sym Vented                                          |
| 33         | 532 12 34-87        | Clamp Hose Blk                                                     |
| 34         | 532 10 60-82        | Pad, Spacer                                                        |
| 37         | 532 14 21-58        | Line Fuel                                                          |
| 38         | 532 18 16-54        | Plug Drain Oil Easy                                                |
| 39         | 532 10 92-27        | Pad, Idler                                                         |
| 45         | 817 00 06-12        | Screw Hex Wsh Thdrol 3/8-16                                        |
| 101        | 532 16 33-05        | Nut Flange M8-1.25                                                 |
| 116        | 532 18 43-62        | Nut Hex Flange Toplock M8-1.25                                     |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**REPAIR PARTS**  
**TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14**  
**MOWER DECK**

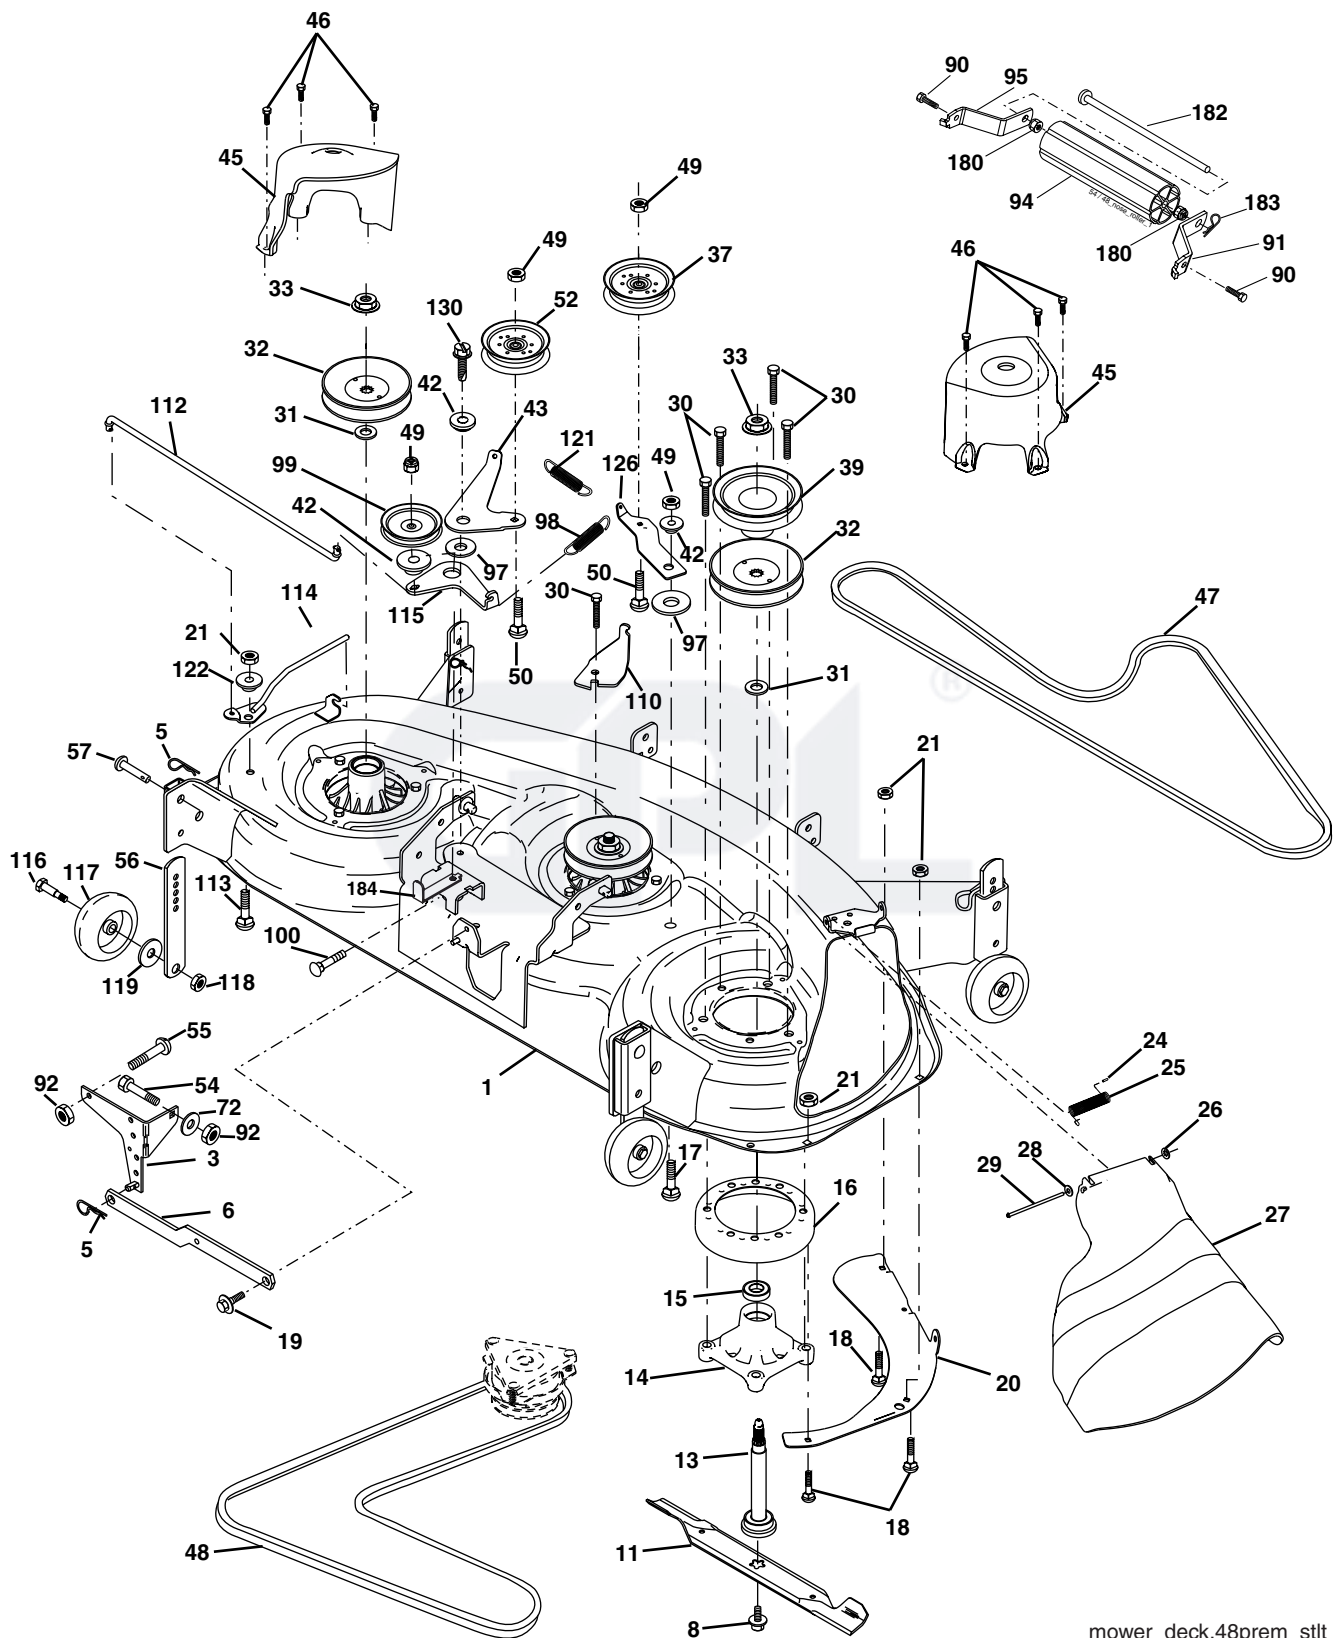

mower\_deck.48prem\_stlt

# REPAIR PARTS

## TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14 MOWER DECK


| KEY NO. | PART NO.     | DESCRIPTION                         |
|---------|--------------|-------------------------------------|
| 1       | 532 18 03-58 | Deck Weldment Mower 48              |
| 3       | 532 13 80-17 | Bracket Asm., Sway Bar              |
| 5       | 532 12 46-70 | Retainer Spring                     |
| 6       | 532 17 80-24 | Bar Sway Deck                       |
| 8       | 532 17 43-65 | Bolt, 7/16 Asm. Blade               |
| 11      | 532 18 00-54 | Blade                               |
| 13      | 532 17 43-60 | Shaft Asm. greaseable               |
| 14      | 532 17 43-58 | Housing Mandrel 48"                 |
| 15      | 532 11 04-85 | Bearing, Ball, Mandrel              |
| 16      | 532 17 44-93 | Stripper, Mower                     |
| 17      | 872 11 06-10 | Bolt Rdhd Sq Neck 3/8-16 x 1.25     |
| 18      | 872 14 05-05 | Bolt, Carriage 5/16-18 x 5/8        |
| 19      | 532 13 28-27 | Bolt, Hex Head, Shoulder 5/16-18    |
| 20      | 532 17 43-78 | Baffle, Vortex Mower                |
| 21      | 873 68 05-00 | Nut, Crownlock 5/16-18 unc          |
| 24      | 532 10 53-04 | Cap, Sleeve                         |
| 25      | 532 17 81-02 | Spring, Torsion                     |
| 26      | 532 11 04-52 | Nut, Push                           |
| 27      | 532 18 17-07 | Shield, Deflector Mower             |
| 28      | 819 11 10-16 | Washer 11/32 x 5/8 x 16 Ga.         |
| 29      | 532 13 14-91 | Rod, Hinge                          |
| 30      | 532 17 39-84 | Screw, Thdroll, Washer Head         |
| 31      | 532 18 76-90 | Washer, Spacer Mower Vented         |
| 32      | 532 17 78-65 | Pulley, Mandrel                     |
| 33      | 532 17 83-42 | Nut, Flg. Top Lock Cntr. 9/16       |
| 36      | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga.       |
| 37      | 532 17 79-68 | Pulley, Idler, Flat                 |
| 39      | 532 17 43-75 | Pulley, Idler, Driven               |
| 42      | 532 16 57-23 | Spacer, Retainer                    |
| 43      | 532 17 43-73 | Arm, Idler Secondary                |
| 45      | 532 18 08-06 | Cover, Mandrel Deck                 |
| 46      | 532 13 77-29 | Screw, Thdroll. 1/4-20 x 5/8        |
| 47      | 532 18 08-08 | V-Belt, Mower, Secondary            |
| 48      | 532 17 43-68 | V-Belt, Mower, Primary              |
| 49      | 873 68 06-00 | Nut, Crownlock 3/8-16 unc           |
| 50      | 872 11 06-12 | Bolt, Carriage 3/8-16 x 1-1/2 Gr. 5 |
| 52      | 532 17 58-20 | Pulley Idler Flat 46 Pri. Drive     |
| 54      | 874 78 06-16 | Bolt Fin Hex 3/8-16 x 1             |

| KEY NO. | PART NO.     | DESCRIPTION                                                                            |
|---------|--------------|----------------------------------------------------------------------------------------|
| 55      | 872 14 06-08 | Bolt Rdhd Sqnk 3/8-16 x 1                                                              |
| 56      | 532 15 59-86 | Bar Pnt Adjusting Wheel Gauge                                                          |
| 57      | 532 15 69-41 | Pin Head Rivet                                                                         |
| 72      | 819 13 13-12 | Washer 13/32 x 13/16 x 12                                                              |
| 90      | 874 76 05-16 | Bolt, Fin, Hex 5/16-18 x 1.0                                                           |
| 91      | 532 18 05-35 | Bracket, Asm Noseroller, RH 48                                                         |
| 92      | 873 80 06-00 | Nut Lock Hex w/Ins 3/8-16                                                              |
| 94      | 532 17 60-66 | Roller, Nose 48"                                                                       |
| 95      | 532 18 05-34 | Bracket, Asm Noseroller LH 48                                                          |
| 97      | 532 17 85-15 | Washer Hardened                                                                        |
| 98      | 532 17 94-79 | Spring Primary Drive                                                                   |
| 99      | 532 18 40-58 | Pulley Idler "V"                                                                       |
| 100     | 872 11 06-16 | Bolt RDHD Sqnk 3/8-16 unc x 2                                                          |
| 110     | 532 17 50-16 | Arm Spring Secondary                                                                   |
| 112     | 532 17 43-87 | Link Tension Relief Lever                                                              |
| 113     | 872 11 05-06 | Bolt RdhdSqnk 5/16-18 unc x 3/4                                                        |
| 114     | 532 17 43-84 | Tension Asm Relief Lever                                                               |
| 115     | 532 17 46-09 | Arm Spring Tension Relief                                                              |
| 116     | 532 18 42-19 | Bolt, Shoulder                                                                         |
| 117     | 532 17 48-73 | Gauge Wheel                                                                            |
| 118     | 873 93 06-00 | Nut, Centerlock 3/8-16 unc                                                             |
| 119     | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga.                                                              |
| 121     | 532 17 43-71 | Spring Secondary Drive                                                                 |
| 122     | 532 17 46-06 | Bushing Pivot Tension Relief                                                           |
| 126     | 532 17 43-72 | Arm, Idler, Primary Deck                                                               |
| 130     | 817 00 06-16 | Screw 3/8-16 x 1.0                                                                     |
| 180     | 873 80 05-00 | Nut Lock 5/16-18                                                                       |
| 182     | 532 17 91-27 | Rod Roller Nose                                                                        |
| 183     | 532 16 35-52 | Retainer Spring                                                                        |
| 184     | 532 17 39-79 | Keeper Belt Idler                                                                      |
| --      | 532 18 15-79 | Replacement Mower, Complete                                                            |
| --      | 532 17 43-56 | Mandrel Assembly (Includes Housing, Shaft and Shaft Hardware Only-Pulley Not Included) |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
MOWER LIFT

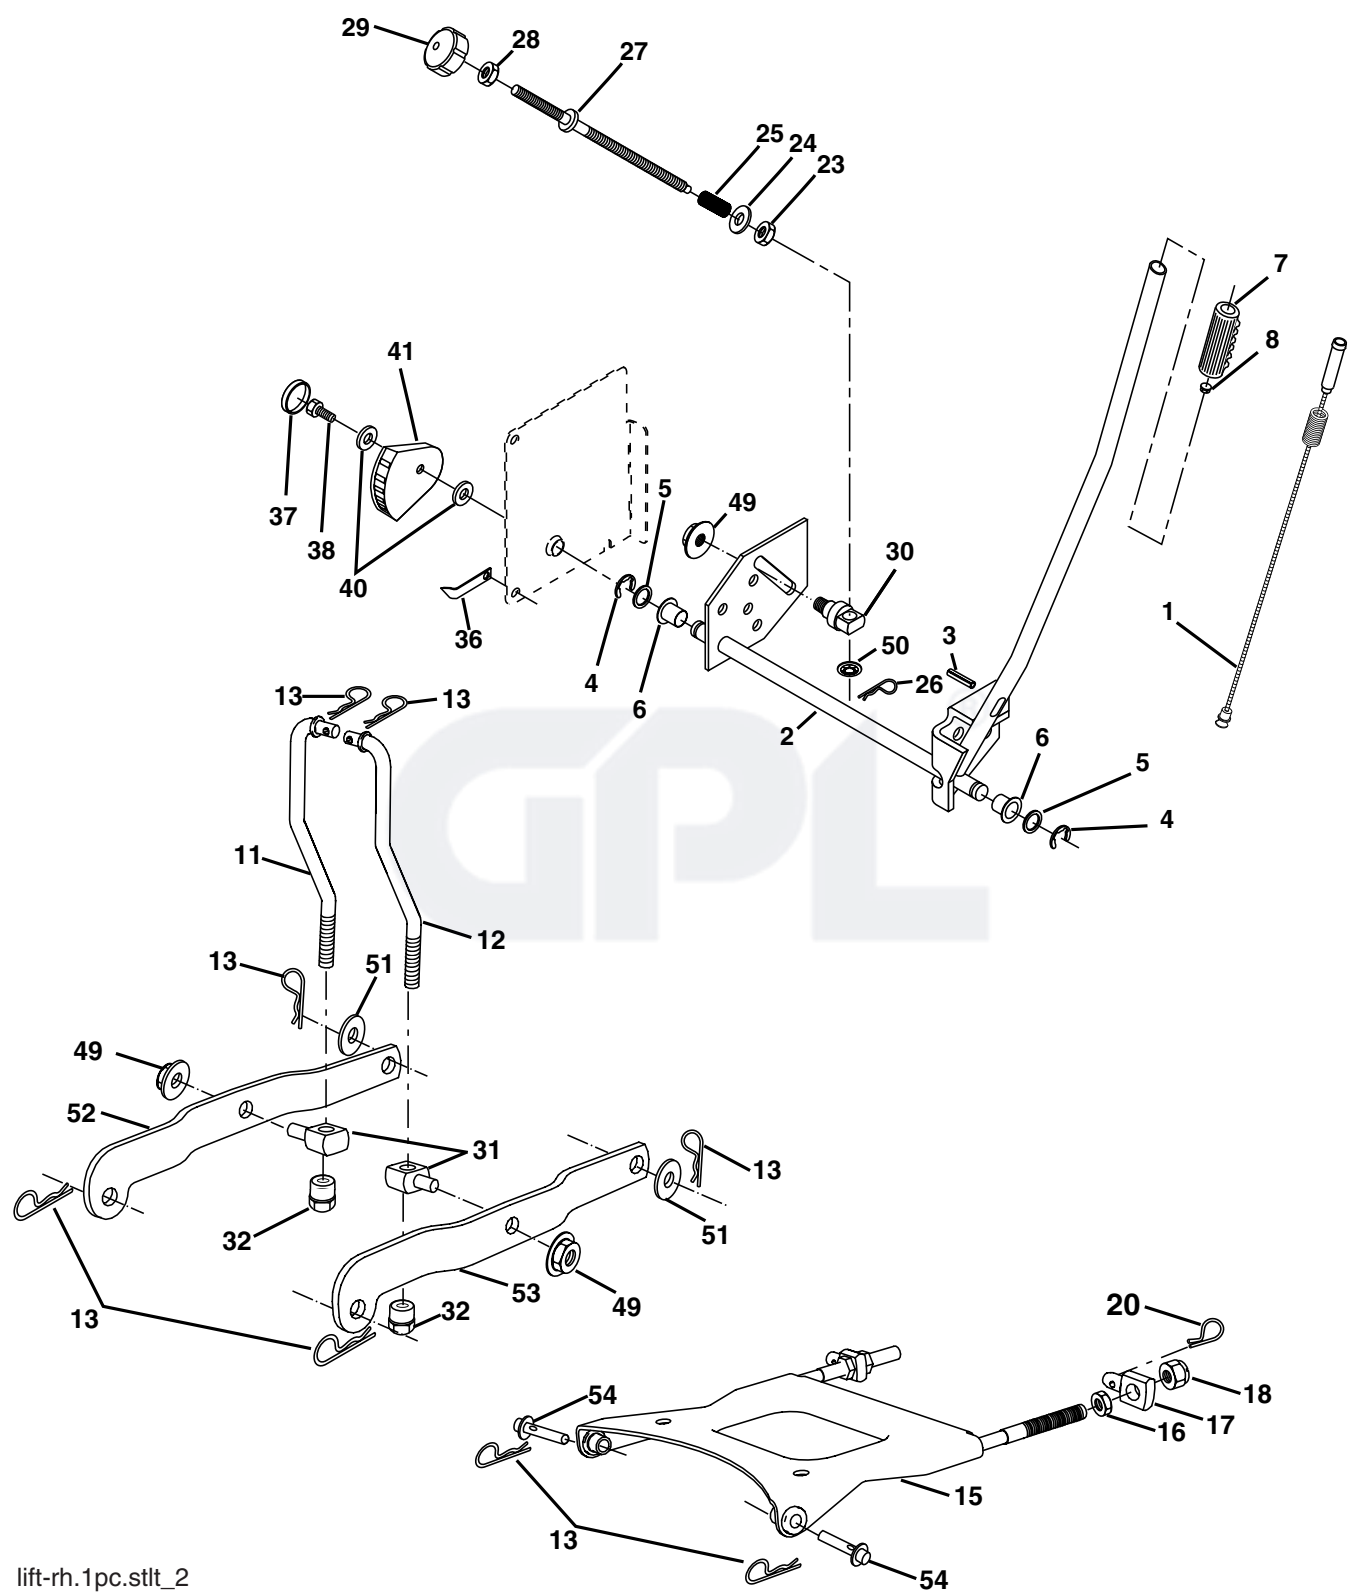

lift-rh.1pc.stlt\_2

# REPAIR PARTS

TRACTOR - MODEL NUMBER LT2122A (J2122AB), PRODUCT NO. 954 13 02-14  
MOWER LIFT

| KEY NO. | PART NO.     | DESCRIPTION                        |
|---------|--------------|------------------------------------|
| 1       | 532 15 94-61 | Wire Asm Inner/Spring W/Plunger LT |
| 2       | 532 15 94-76 | Shaft Asm Lift RH w/Inf            |
| 3       | 532 17 89-81 | Pin Groove                         |
| 4       | 812 00 00-02 | E Ring #5133-62                    |
| 5       | 819 21 16-21 | Washer 21/32 x 1 x 21 Ga.          |
| 6       | 532 12 01-83 | Bearing Nylon Blk 629 Id           |
| 7       | 532 12 56-31 | Grip Handle Fluted Blk             |
| 8       | 532 12 23-65 | Button Plunger Black               |
| 11      | 532 17 53-70 | Link Lift LH                       |
| 12      | 532 17 53-71 | Link Lift RH                       |
| 13      | 532 12 46-70 | Retainer Spring                    |
| 15      | 532 17 55-62 | Plate Asm Susp Front               |
| 16      | 873 35 08-00 | Nut Jam Hex 1/2-13 unc             |
| 17      | 532 17 56-89 | Trunnion                           |
| 18      | 873 80 08-00 | Nut Lock w/Wsh 1/2-13 unc          |
| 20      | 532 16 35-52 | Retainer Spring                    |
| 23      | 532 11 08-07 | Nut Special                        |
| 24      | 819 13 10-16 | Washer 13/32 x 5/8 x 16 Ga.        |
| 25      | 532 16 40-24 | Spring                             |
| 26      | 532 16 94-84 | Retainer Clip                      |
| 27      | 532 16 45-43 | Rod Adj Lift                       |
| 28      | 873 35 06-00 | Nut Hex Jam 3/8-16 unc             |
| 29      | 532 13 80-57 | Knob Inf 3/8-16 unc Blk W/sym      |
| 30      | 532 15 02-33 | Trunnion Infin Height              |
| 31      | 532 17 62-05 | Trunnion                           |
| 32      | 532 17 59-94 | Nut Lift Link 7/16-20              |
| 36      | 532 15 50-97 | Indicator Height STLT              |
| 37      | 532 12 39-35 | Plug Hole Blk 1.485/1.515 Dia.     |
| 38      | 817 06 05-16 | Screw 5/16-18 x 1                  |
| 40      | 819 11 24-10 | Washer 11/32 x 1-1/2 10 Ga.        |
| 41      | 532 15 50-98 | Scale Ind. Height Blk.             |
| 49      | 532 14 52-12 | Nut Hex Flange Lock                |
| 50      | 532 11 04-52 | Nut, Push Phos & Oil               |
| 51      | 819 17 14-16 | Washer 17/32 x 7/8 x 16 Ga.        |
| 52      | 532 17 53-78 | Arm Susp. Rear Lh                  |
| 53      | 532 17 58-02 | Arm Susp. Rear Rh                  |
| 54      | 532 17 55-60 | Pin Flange                         |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm