

LT2218 A2

Spare parts
Ersatzteile
Pièces détachées
Reserve onderdelen
Repuestos
Reservdelar


GPL®

ILLUSTRATED PARTS LIST

MFG. ID NO. 96041010900


CUSTOMER CATALOG NO. LT2218A2

PRODUCT NO. 960 41 01-09

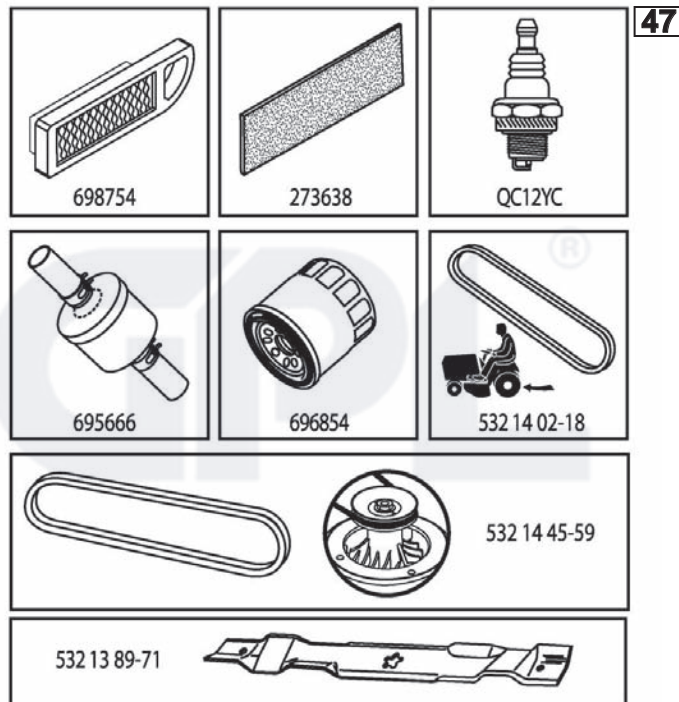

416464


**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
DECALS 27**

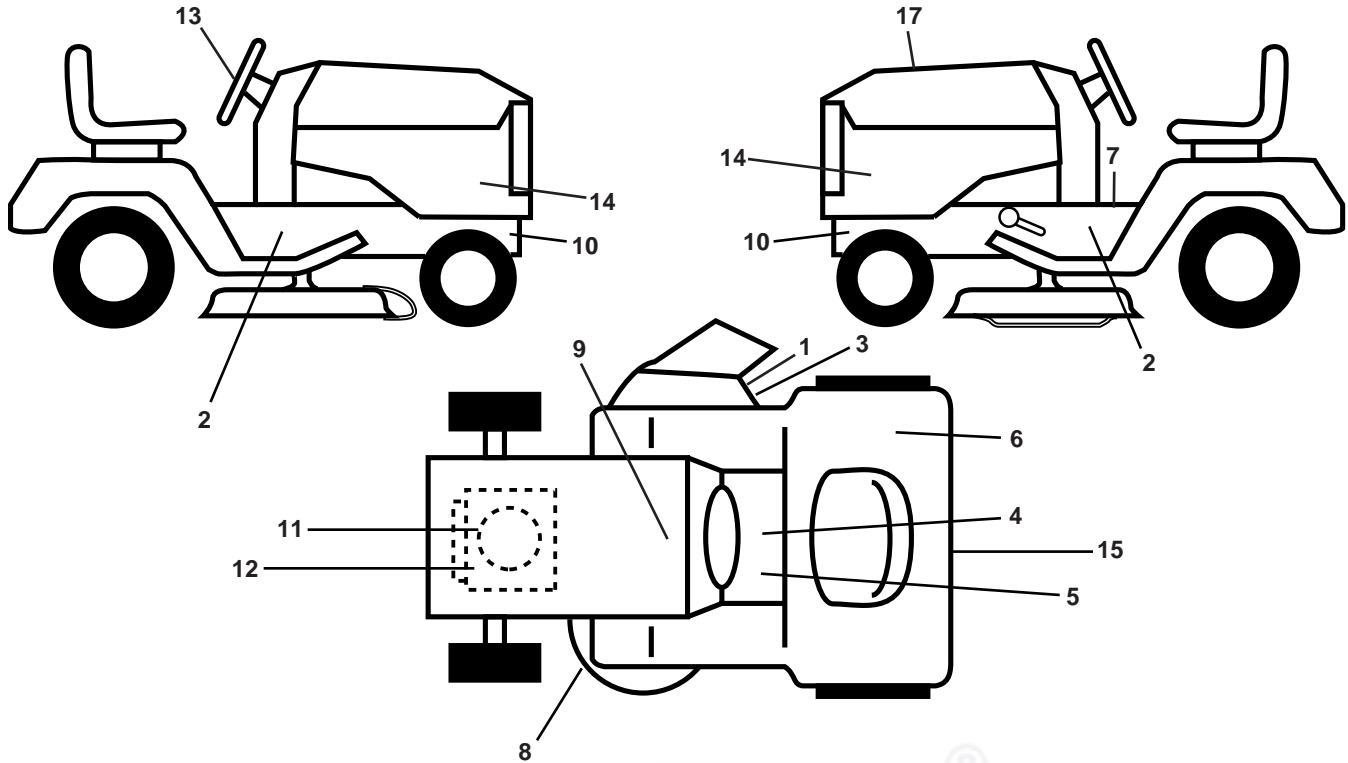

KEY NO.	PART NO.	DESCRIPTION
1	532 18 21-66	Decal, Cutoff Warning
2	532 40 11-46	Decal, Warning Service/Fire
3	532 19 63-57	Decal, Warning Symbol
4	532 14 08-37	Decal, Brake Parking
5	532 40 03-89	Decal, Warning Symbol CE
6	532 18 04-32	Decal, Fender DB/CE
7	532 15 97-37	Decal, Brake/Clutch Symbol
8	532 16 03-96	Decal, Mower Sch.
9	532 14 50-05	Decal, Battery Dnge/Poi
10	532 15 97-36	Decal, Hot Muffler
11	532 19 68-41	Decal, Warning Engine Sym

KEY NO.	PART NO.	DESCRIPTION
12	532 41 64-73	Decal, Engine HP
13	532 42 26-85	Decal, Steering Whl
14	532 42 71-17	Decal, Panel Side
15	532 18 39-30	Decal, Cover/Belt
17	532 41 64-64	Decal, Replacement
--	532 16 69-60	Decal, Bypass
--	532 16 25-98	Decal, Load Limit
--	532 41 19-03	Pad, Footrest, LH
--	532 41 19-02	Pad, Footrest, RH
--	532 41 66-39	Manual Oper. Euro

WHEELS AND TIRES

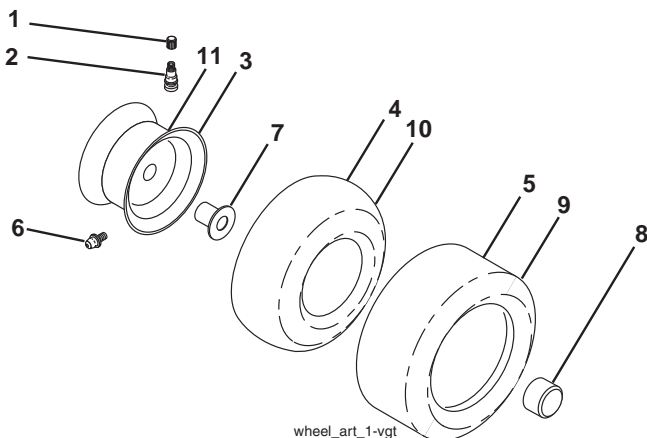


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap, Valve, Tire
2	532 06 51-39	Stem, Valve
3	532 13 83-36	Rim Assembly, Front
4	532 05 99-04	Tube, Front (Service Item Only)
5	532 10 62-22	Tire, Front
6	532 12 49-57	Fitting, Grease (Front Wheel Only)
7	532 12 49-59	Bearing, Flange (Front Wheel Only)
8	532 17 50-39	Cap, Axle (Front Wheel Only)
9	532 12 20-82	Tire, Rear
10	532 12 49-26	Tube, Rear (Service Item Only)
11	532 13 83-37	Rim Assembly, Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09

SCHEMATIC **38**

SCH12

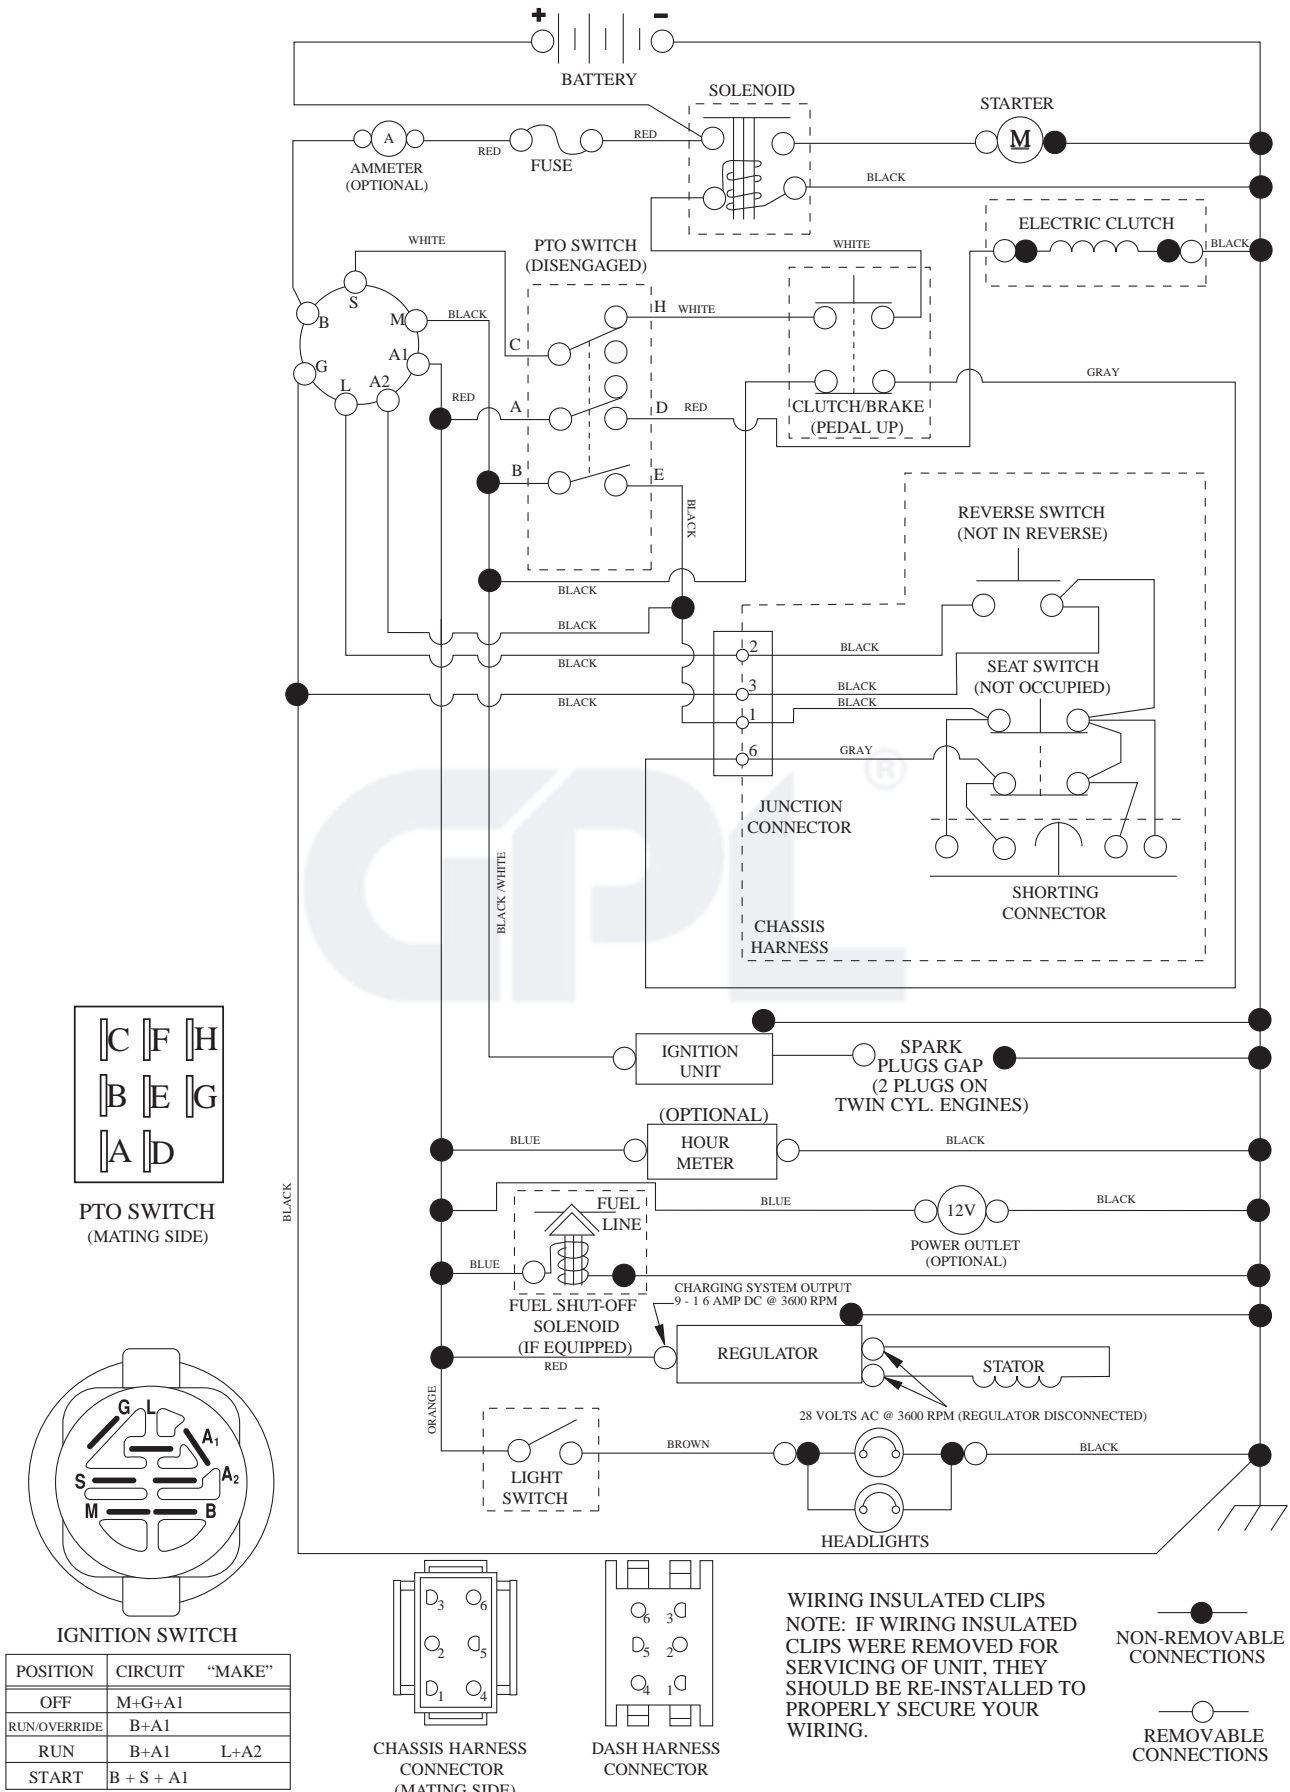

TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
 ELECTRICAL **32**

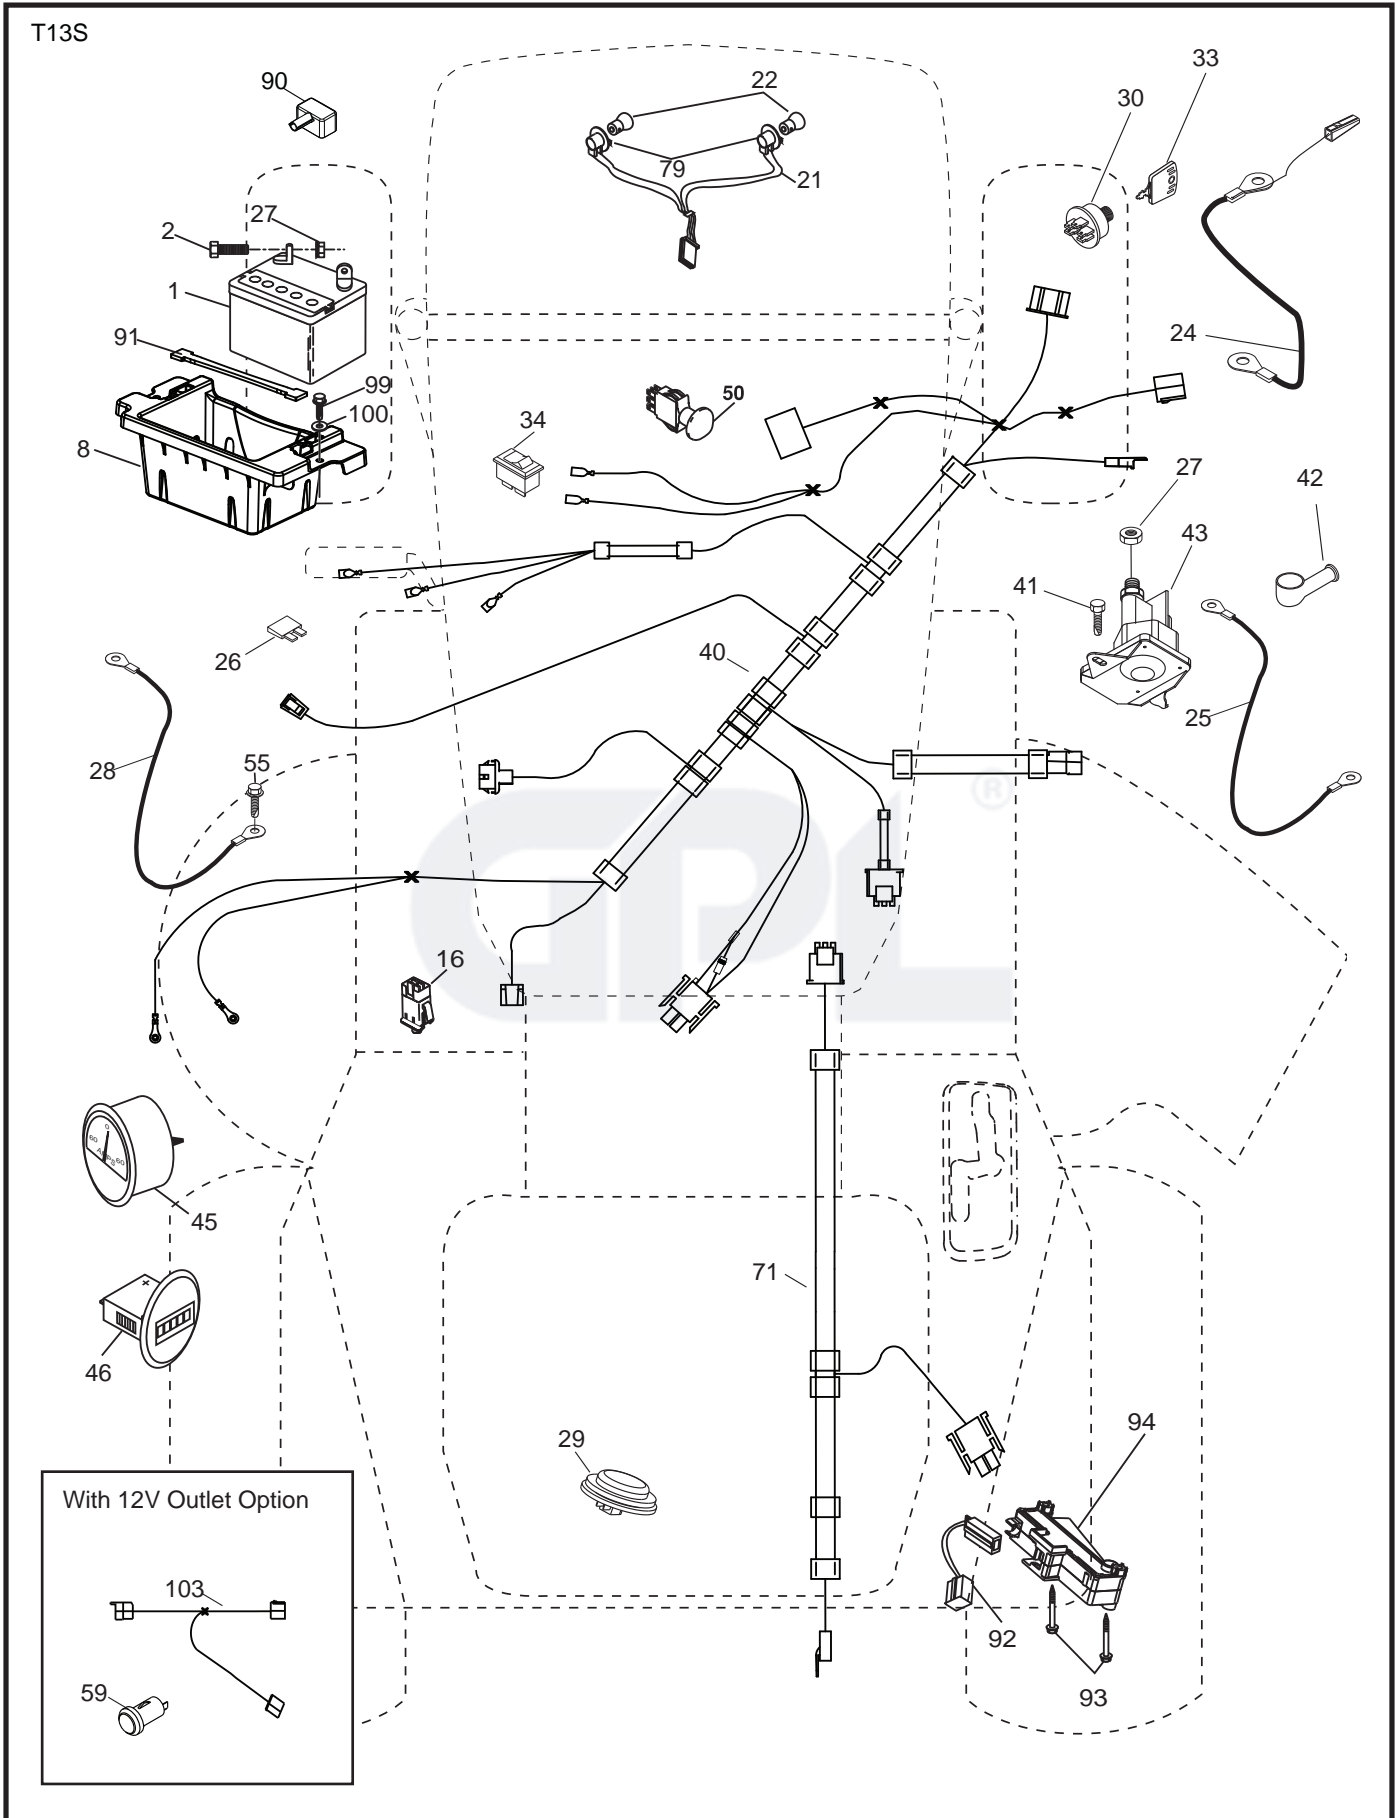


**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
ELECTRICAL 32**

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Hd 1/4-20 unc x 3/4
8	532 18 64-91	Battery Box
16	532 17 61-38	Switch Interlock
21	532 40 02-52	Harness Socket Light
22	532 00 41-52	Bulb, Light #1156
24	532 40 02-53	Cable Battery
25	532 41 28-95	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 14 54-91	Cable Ground 21" Blk 6 Ga.
29	532 40 15-45	Switch Seat
30	532 19 33-50	Switch Ign
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 40 21-67	Harness Ign. Dash
41	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 19 25-07	Solenoid
45	532 42 29-43	Ammeter
46	532 42 29-44	Gauge Hourmeter
50	532 17 46-51	Switch PTO
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4
71	532 19 42-76	Harness Chassis
79	532 17 52-42	Socket Asm Bulb Twistlock
90	532 40 07-24	Cover Terminal Battery
91	532 19 02-70	Strap Battery
92	532 19 66-15	Harness Pigtail Console
93	532 19 25-40	Screw Plastic 10-14 x 2.0
94	532 19 18-34	Module Reverse
99	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
100	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
CHASSIS AND ENCLOSURES **39**

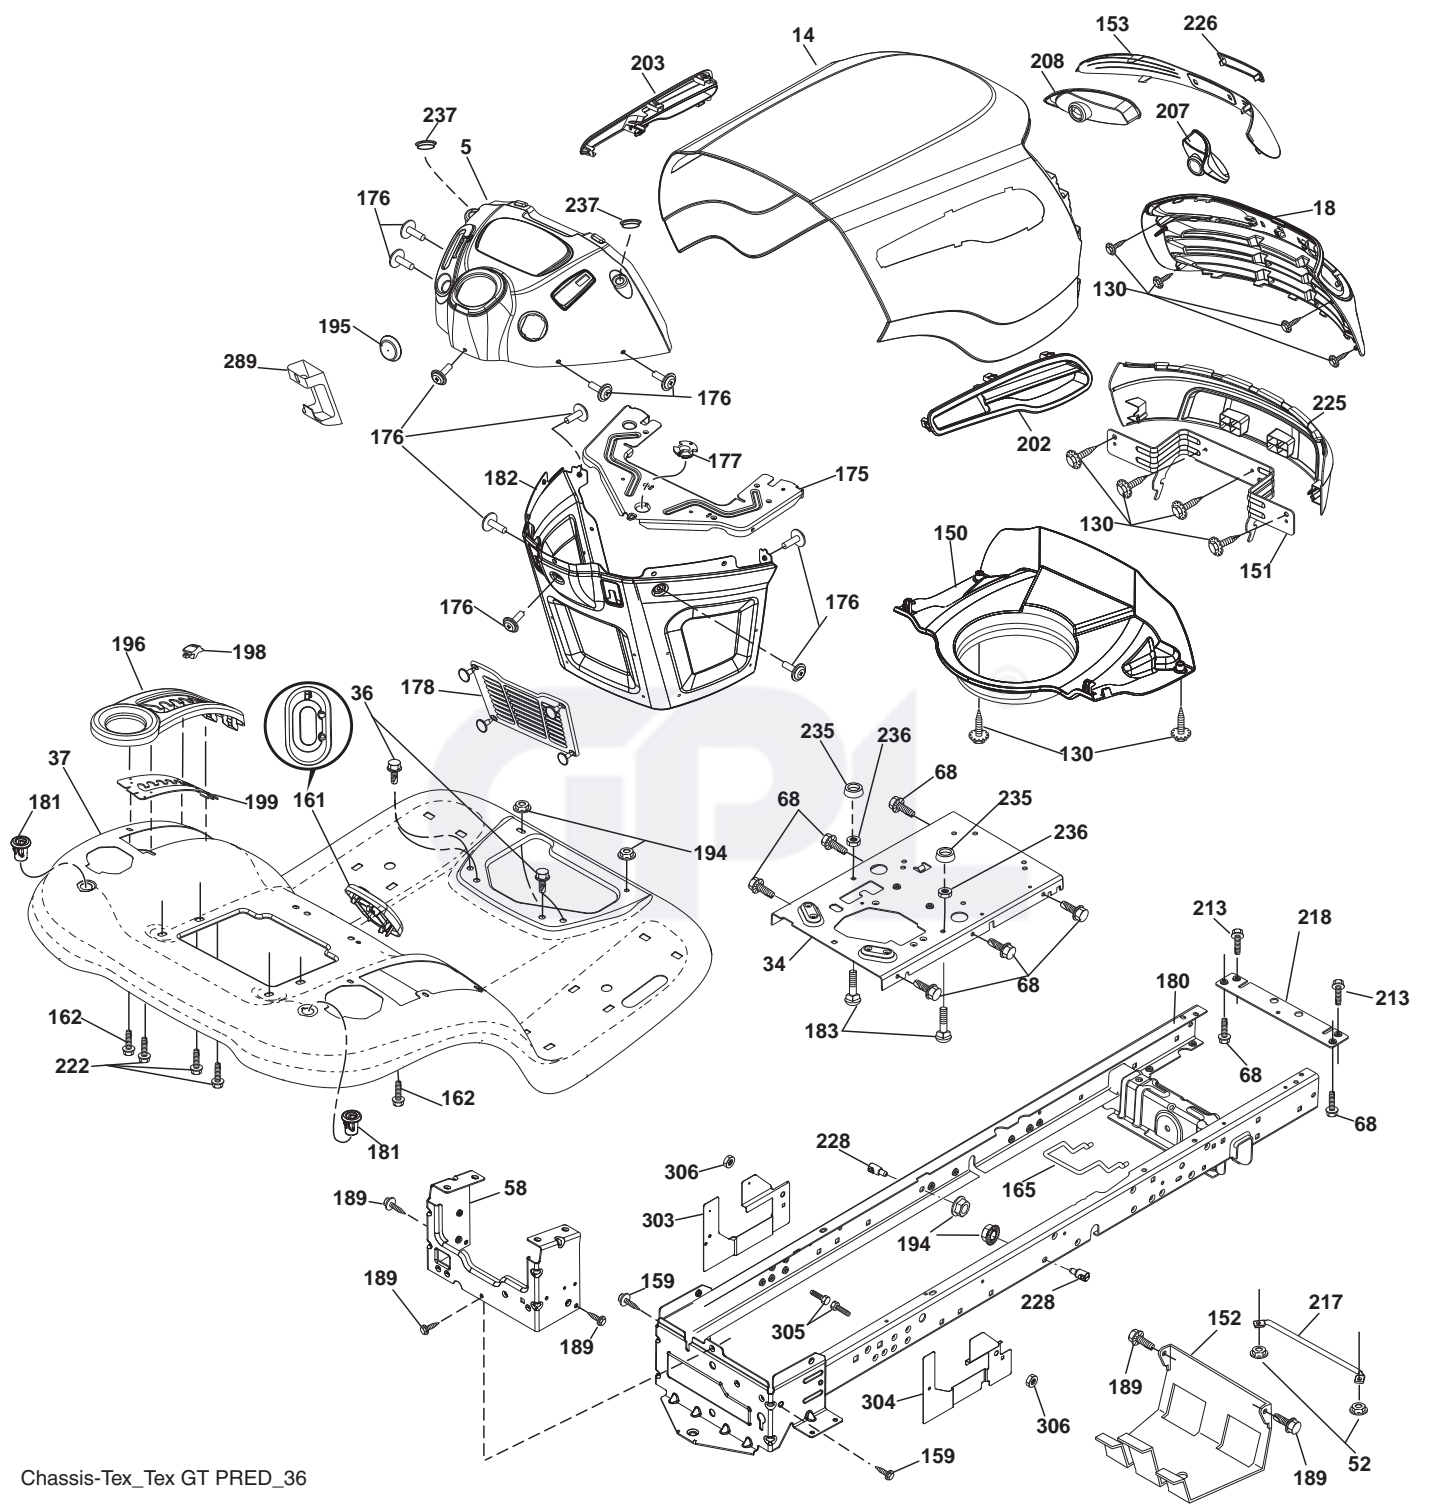


Chassis-Tex_Tex GT PRED_36

**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
CHASSIS AND ENCLOSURES 39**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
5	532 42 46-99	Dash	195	532 40 41-37	Plug Hole Dash Lower
14	532 42 47-01	Hood	196	532 41 18-78	Console Asm. Deck Lift
18	532 42 73-33	Grille	198	532 41 18-81	Indicator Deck Lift
34	532 19 61-25	Plate Engine	199	532 19 63-77	Plate Deck Lift
36	817 06 05-12	Screw 5/16-18 x 3/4	202	532 42 32-72	Vent Side RH
37	532 41 18-77	Fender	203	532 42 32-71	Vent Side LH
52	873 68 05-00	Nut Crown Lock 5/16-18	207	532 19 89-63	Bezel RH
58	532 41 22-81	Large Support Fender	208	532 19 89-64	Bezel LH
68	817 49 05-08	Screw 5/16-18 x 1/2	213	874 76 05-12	Bolt Hex Hd. 5/16-18 unc x 3/4
130	532 41 63-58	Screw 10 x .750 BOS Thread	217	532 40 91-67	Rod Pivot Hood
150	532 19 94-11	Air Duct	218	532 19 63-95	X-Piece Hood Stop
151	532 19 63-32	Bracket Pivot	222	532 13 77-29	Screw 1/4-20 x 5/8
152	532 19 95-35	Shield Browning	225	532 42 32-26	Bumper Grille
153	532 42 47-17	Lens Bar	226	532 42 47-16	Logo Predator
159	817 00 06-12	Screw 3/8-16 x 3/4	228	532 19 51-61	Stud Fastner
161	532 41 18-79	Window Fuel	235	532 40 61-29	Spacer Fender
162	532 14 24-32	Screw	236	873 93 05-00	Nut Lock 5/16-18 unc
165	532 19 68-26	Support Tank Rear	237	532 40 37-04	Plug Mount Cargo
175	532 19 63-04	Crossmember	289	532 40 35-71	Plug Cruise/Phone
176	532 40 07-76	Screw 10-24 x 5/8	303	532 42 09-59	Shield Chassis French LH
177	532 19 52-27	Bushing Steering	304	532 42 15-09	Shield Chassis French RH
178	532 19 97-82	Cargo Asm. Net	305	872 11 06-06	Bolt 3/8-16 x 3/4
180	532 41 50-64	Chassis	306	873 90 06-00	Nut Lock 3/8-16
181	532 40 47-96	Bushing Mtg. Fender Crgo			
182	532 40 68-59	Dash Lower			
183	874 78 05-20	Bolt Fin Hex 5/16-18 unc x 1-1/4			
189	817 00 05-12	Screw 5/16-18 x 3/4			
194	873 90 05-00	Nut Lock Hex Flange 5/16-18			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
DRIVE **40**

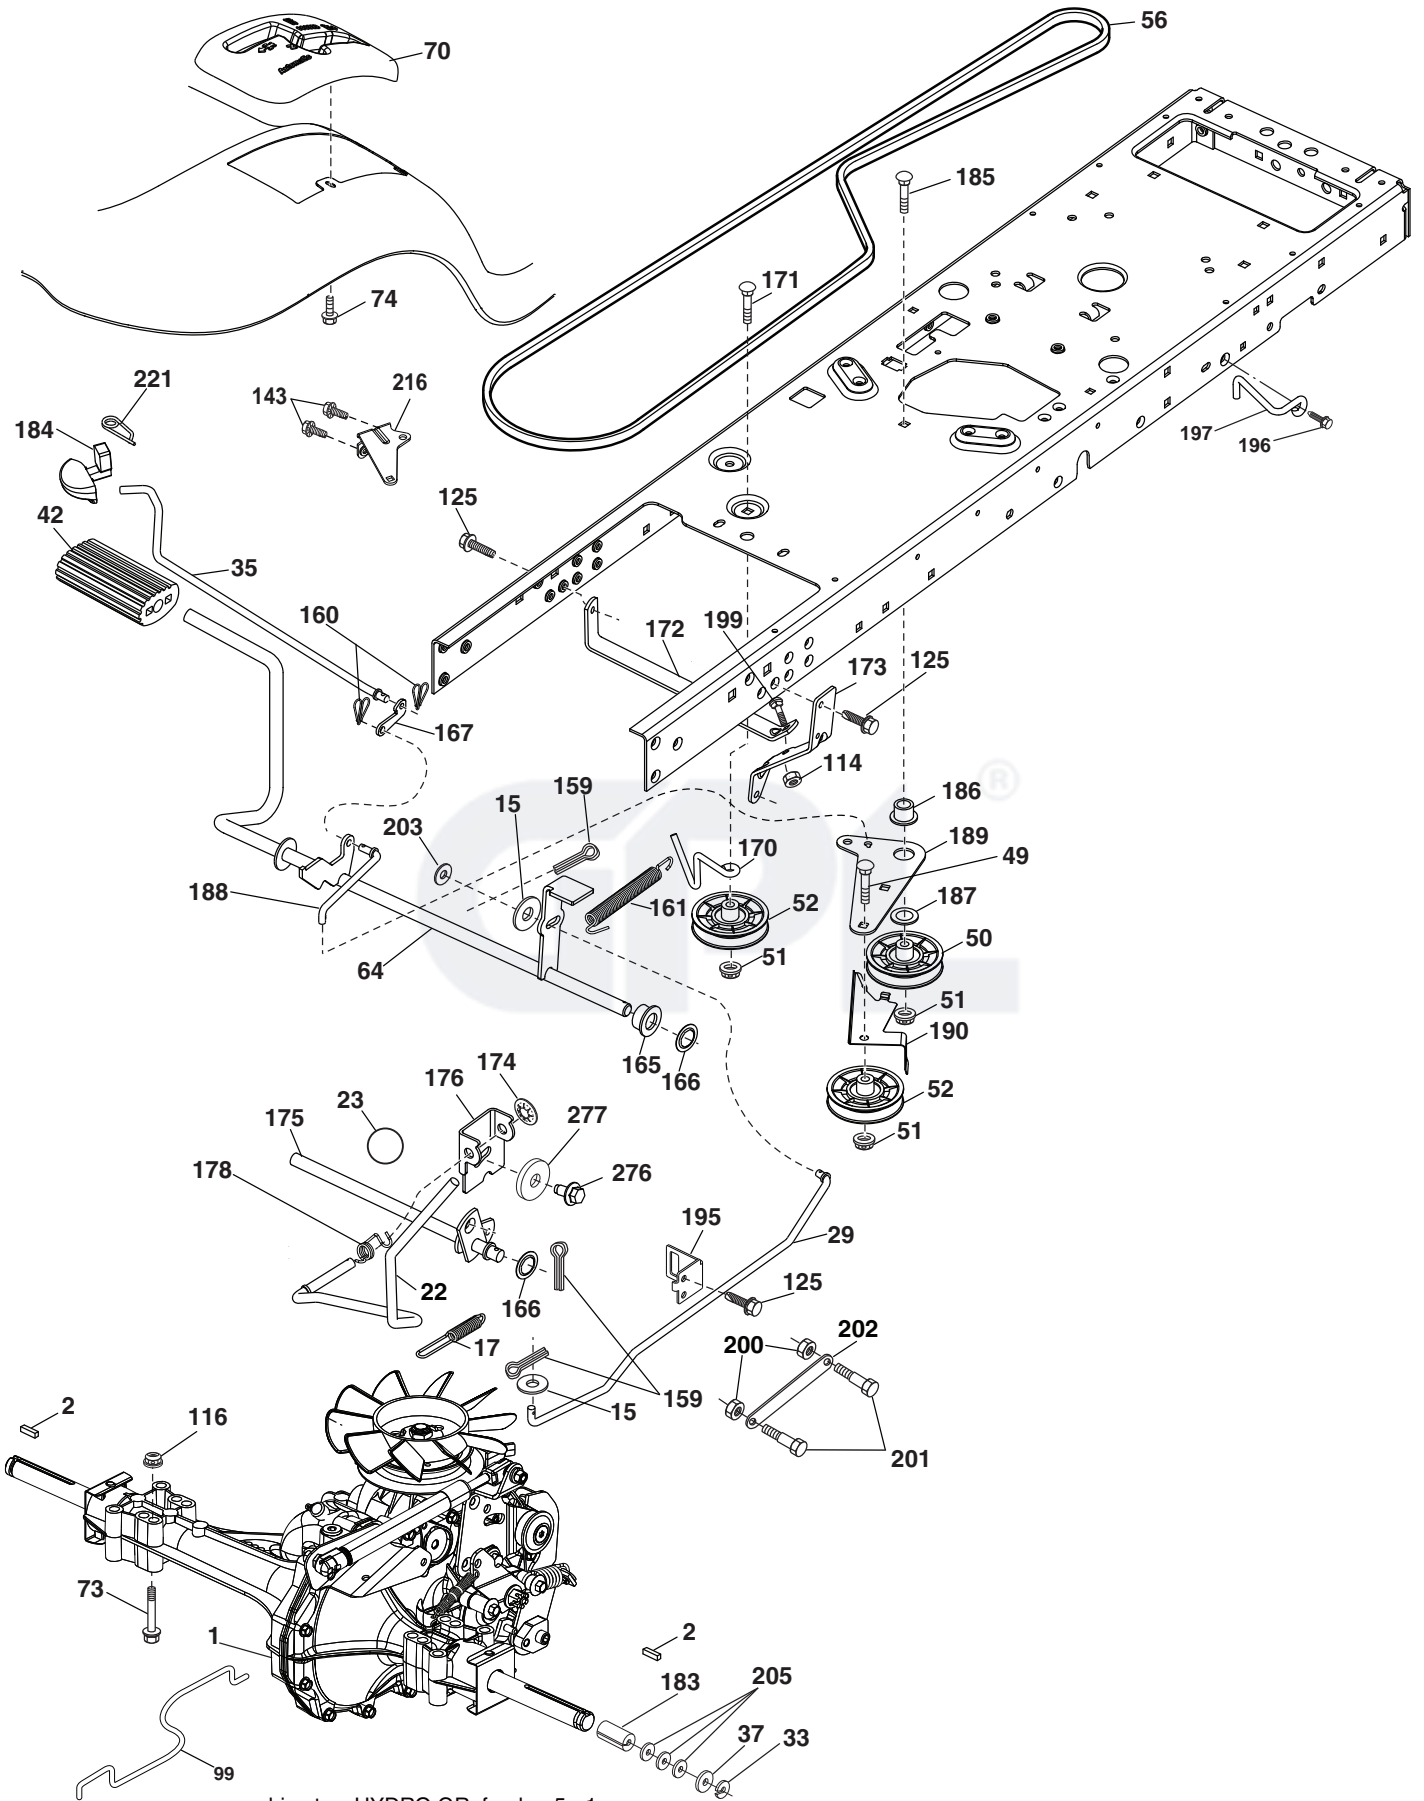


drive-tex_HYDRO GR_fender_5_r1

**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
DRIVE 40**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	---	Transaxle, Hydro 351-0510	172	532 19 76-56	Strap Torque LH
2	532 12 35-83	Key	173	532 19 76-55	Strap Torque RH
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	174	532 19 72-89	Nut Push
17	532 19 72-96	Spring, Brake	175	532 19 76-53	Shaft Asm
22	532 19 73-29	Rod Shift	176	532 19 62-14	Asm Clevis Rod Shift
23	532 13 05-64	Knob	178	532 19 74-56	Spring Shift
29	532 19 76-59	Rod, Brake	183	532 13 70-57	Spacer Axle
33	812 00 00-01	Ring E	184	532 40 31-18	Handle Parking Brake
35	532 19 95-91	Rod, Brake, Park	185	872 11 06-22	Bolt
37	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.	186	532 19 43-21	Spacer Retainer
42	532 12 48-72	Cover, Foot Pedal	187	819 13 32-10	Washer
49	872 11 06-14	Bolt	188	532 19 43-23	Link Clutch Ground Drive
50	532 19 43-27	Pulley Idler Flat	189	532 19 43-17	Bellcrank Ground Drive
51	873 90 06-00	Lock Nut 3/8-16	190	532 19 43-18	Keeper Bellcrank Ground Drive
52	532 19 43-26	Idler V-Groove 910" Offset	195	532 19 80-12	Bracket Rod Brake
56	532 14 02-18	V-Belt, Drive	196	817 00 07-16	Screw 3/8-16 x 1
64	532 19 62-00	Shaft Asm. Pedal Brake Control	197	532 19 58-04	Link Clutch
70	532 41 19-01	Console Shift	199	872 14 05-08	Bolt RDHD SQNK 5/16-18 unc x 1
73	874 49 05-44	Bolt Hex Flghd 5/16-18 Gr. 5	200	873 93 05-00	Nut Center Lock 5/16-18 unc
74	532 14 24-32	Screw Hex Wsh Hi-Lo 1/4 x 1/2 unc	201	532 16 96-12	Bolt Shoulder 5/16-18 unc
99	532 40 50-92	Rod Asm. Bypass	202	532 19 77-14	Link Trans
114	873 80 05-00	Nut Lock Hex w/INS 5/16-18 unc	203	819 11 11-16	Washer 11/32 x 11/16 x 16 Ga.
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	205	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
125	817 00 05-12	Screw 5/16-18 x 3/4	216	532 19 61-31	Bracket Pulley Idler
143	817 49 05-08	Screw 5/16-18 x 1/2	221	532 40 31-87	Retainer Spring Clip Handle
159	876 02 04-12	Pin Cotter 1/8 x 3/4	276	874 78 07-16	Bolt 7/16-14 x 1 Gr. 5
160	532 16 94-84	Retainer Clip	277	532 40 52-96	Washer Serrated
161	532 10 57-09	Spring, Return, Clutch			
165	532 19 62-12	Bushing			
166	532 19 72-90	Nut Push .625			
167	532 40 52-57	Latch Brake Parking			
170	532 19 43-22	Keeper Belt Centerspan			
171	872 11 06-16	Bolt			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
MOWER DECK 44

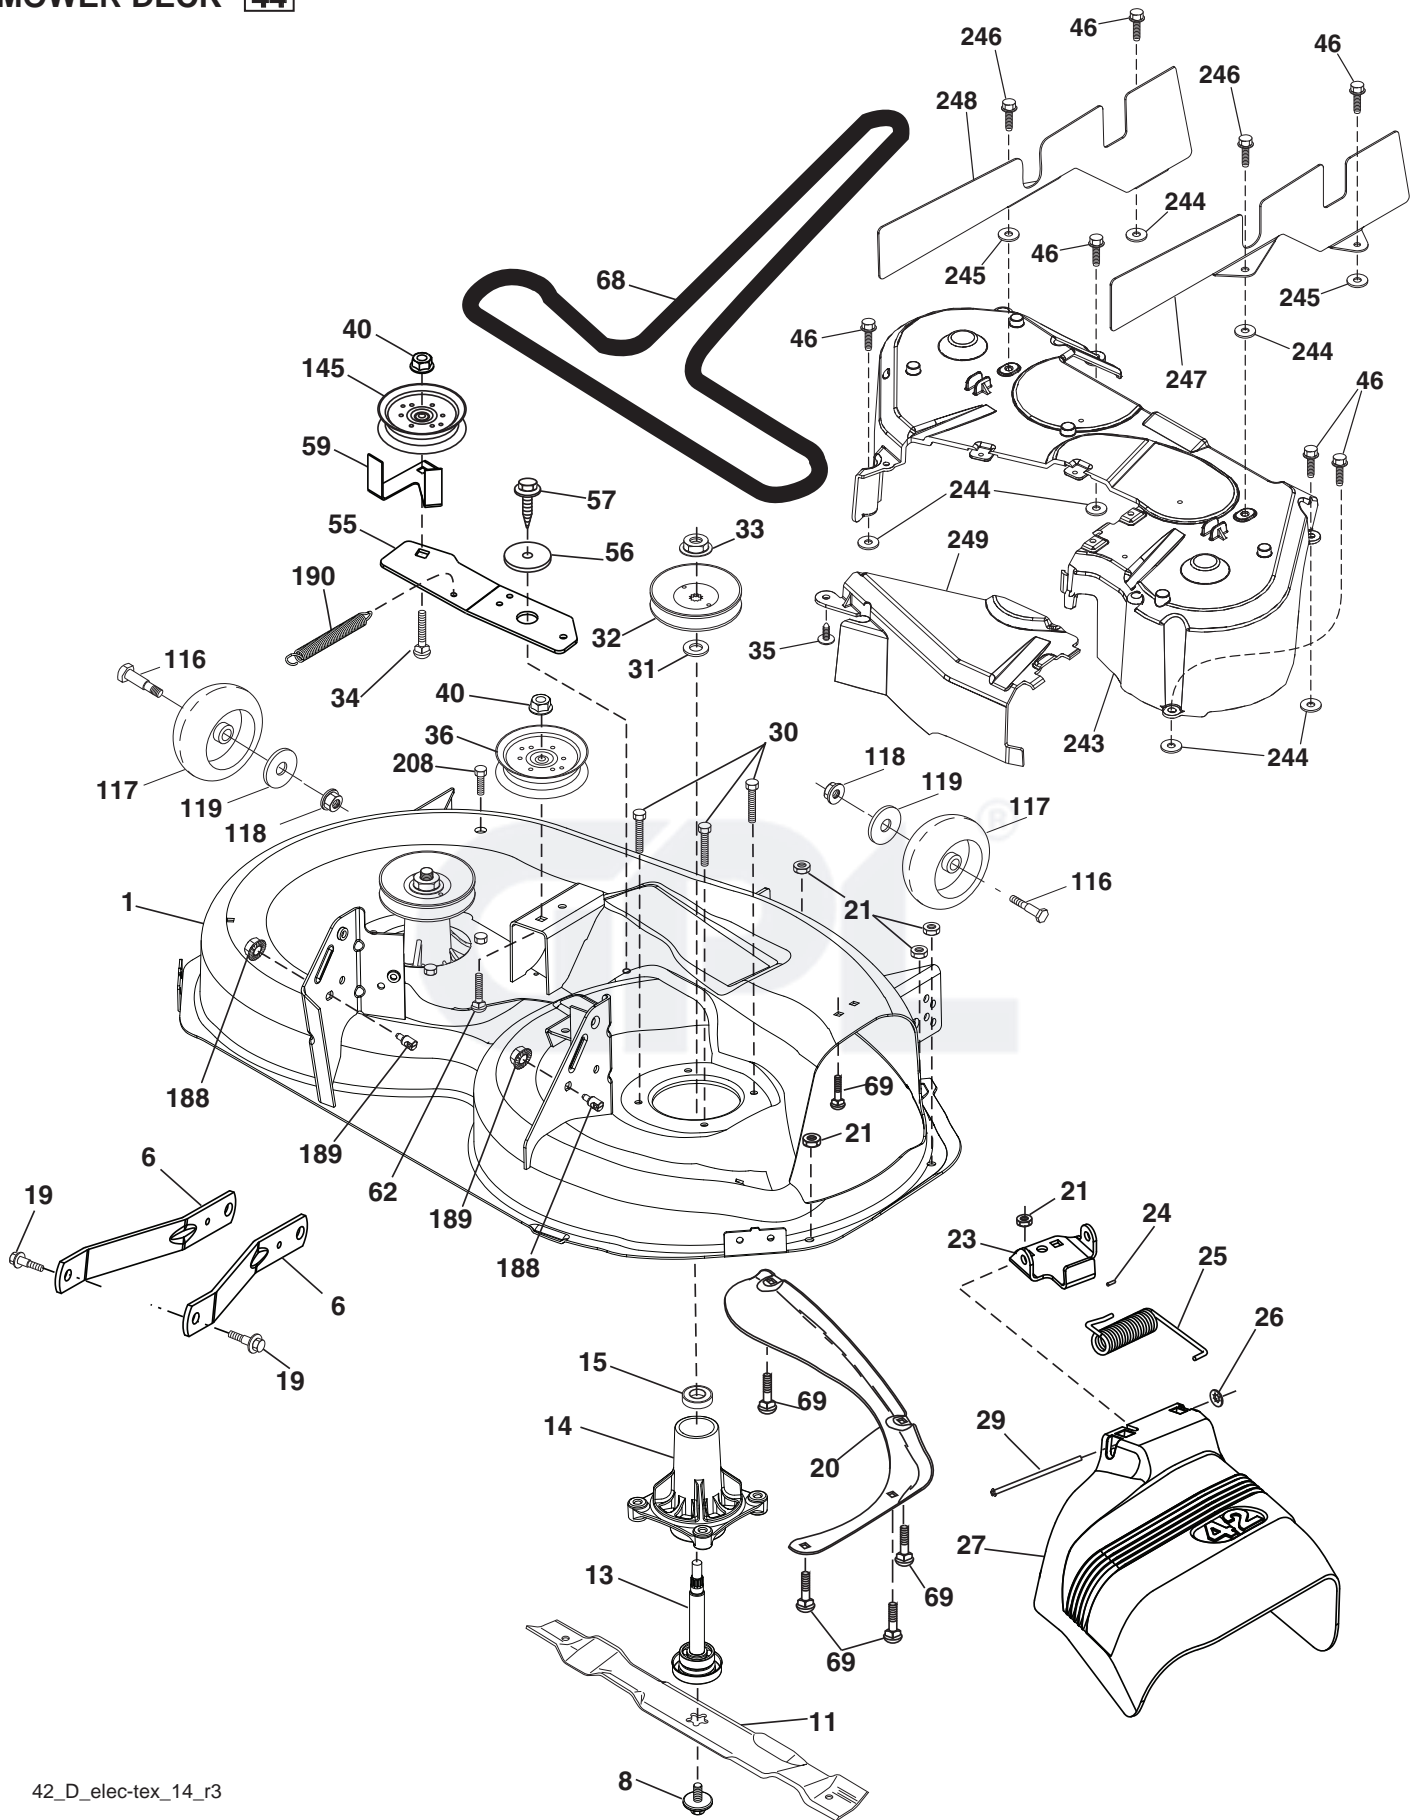

**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
MOWER DECK 44**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 64-95	Mower Housing	59	532 14 10-43	Guard, Tuv Idler
6	532 19 51-86	Arm Suspension	62	872 11 06-12	Bolt Carr SH 3/8-16 x 1-1-1/2 Gr. 5
8	532 19 30-03	Bolt/Washer asm 7/16-20 unf	68	532 14 49-59	V-Belt
11	532 13 89-71	Blade	69	872 14 05-05	Bolt
13	532 19 28-72	Shaft Assembly, Mandrel	116	532 12 48-42	Bolt, Shoulder
14	532 18 72-81	Housing, Mandrel	117	532 18 86-06	Wheel, Gauge
15	532 11 04-85	Bearing, Ball, Mandrel	118	873 93 06-00	Nut Lock 3/8-16
19	532 19 65-39	Bolt, Shoulder	119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
20	532 15 97-70	Baffle, Vortex	145	532 19 31-97	Pulley, Idler, Primary
21	873 68 05-00	Nut, Crownlock 5/16-18 unc	188	532 19 51-61	Stud Fastener
23	532 19 25-57	Bracket, Deflector	189	873 90 05-00	Nut Lock Hex Flange
24	532 10 53-04	Cap, Sleeve	190	532 19 72-51	Spring Mower Drive Electric
25	532 19 70-26	Spring, Torsion, Deflector	208	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
26	532 11 04-52	Nut, Push	243	532 40 65-08	Cover Deck 42"
27	532 41 14-85	Shield, Deflector	244	532 42 30-62	Palnut 1/4"
29	532 13 14-91	Rod, Hinge	245	532 42 30-63	Palnut 5-16
30	532 17 39-84	Screw Thdrol Rolling Wsh Hd	246	817 67 05-08	Screw Thdrol 5/16-18 x 1/2
31	532 18 76-90	Washer, Spacer	247	532 42 16-68	Shield Deck RH
32	532 15 35-35	Pulley, Mandrel	248	532 42 16-69	Shield Deck LH
33	532 40 02-34	Nut, Toplock, Flanged	249	532 40 65-14	Cover Cable Clutch
34	872 11 06-16	Bolt Carr Sh. 3/8-16 unc x 2	--	532 19 28-70	Mandrel Assembly (Includes housing, shaft and shaft hardware only-pulley not included)
35	532 13 38-35	Fastener, Christmas Tree	--	532 40 85-50	Replacement Mower, Complete
36	532 19 73-79	Pulley Idler			
40	873 90 06-00	Nut, Lock Flg. 3/8-16 unc			
46	532 13 77-29	Screw 1/4-20 x 5/8			
55	532 19 72-49	Arm, Idler			
56	532 19 90-92	Spacer, Retainer			
57	817 00 06-16	Screw 3/8-16 x 1			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

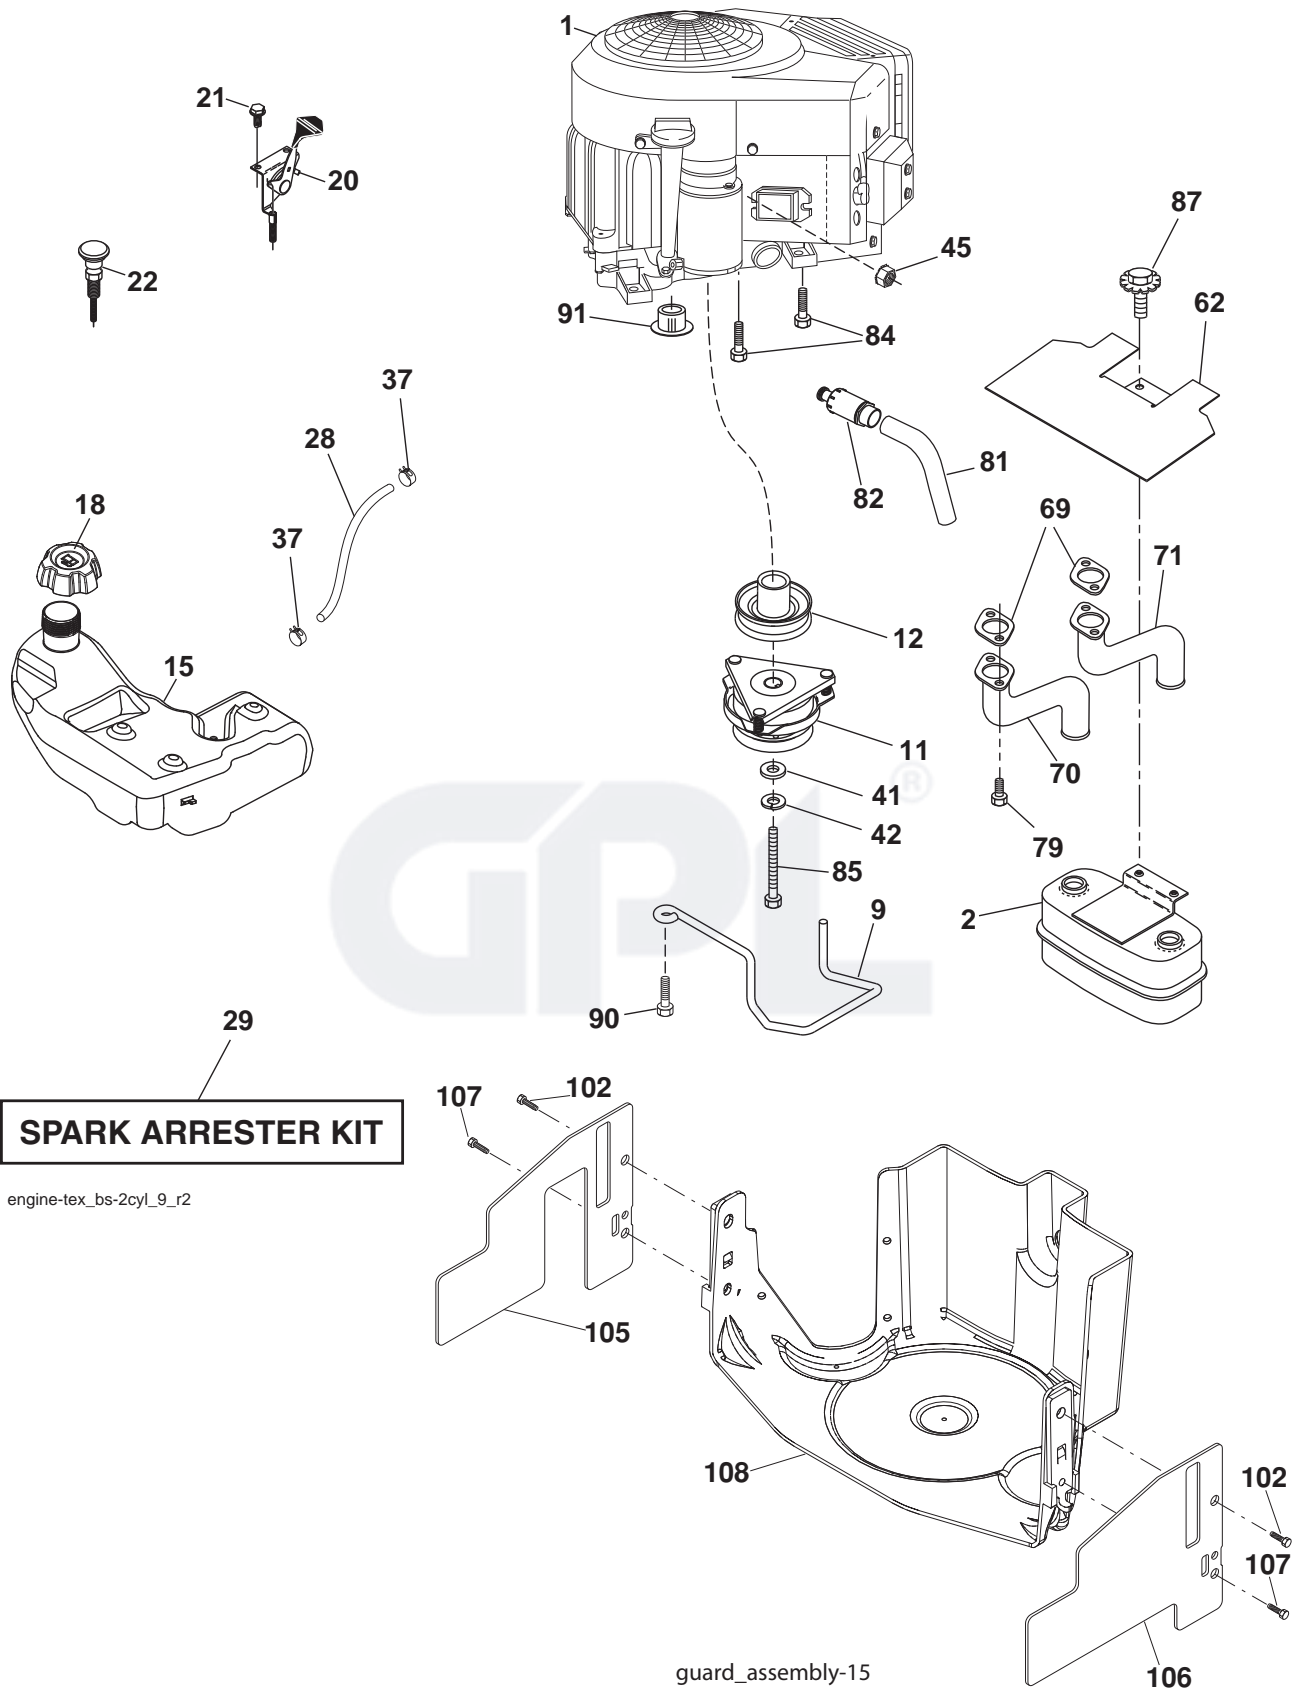

**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
ENGINE 24**


KEY NO.	PART NO.	DESCRIPTION
1	- - - - -	Engine Briggs Model No. 405577
2	532 14 97-23	Muffler
9	532 19 43-19	Keeper Belt Engine
11	532 18 05-05	Clutch Electric
12	532 19 43-38	Pulley Engine
15	532 19 34-99	Tank Fuel
18	532 19 59-51	Cap Asm
20	532 17 83-85	Control Throttle
21	532 41 63-58	Screw #10 x 0.750
22	532 19 15-96	Control Choke
28	532 13 70-40	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
41	532 12 61-97	Washer 1-1/2 OD x 15/32 ID x .250
42	810 04 07-00	Washer Lock 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
62	532 14 66-29	Shield Heat Muffler
69	532 16 53-91	Gasket Muffler
70	532 15 99-55	Tube Exhaust LH
71	532 16 05-89	Tube Exhaust RH
79	532 18 39-06	Screw Socket Head 5/16-18 x 1
81	532 14 84-56	Tube Drain Oil Easy
82	532 18 16-54	Plug Drain Oil Easy
84	817 06 06-20	Screw 3/8-16 x 1-1/4
85	532 17 39-37	Bolt Hex 7/16-20 x 4 x Gr. 5-1.5
87	532 17 18-77	Bolt 5/16-18 x 3/4 w/Sems
90	817 00 06-16	Screw 3/8-16 x 1
91	532 18 74-95	Bushing
102	817 00 05-12	Screw 5/16-18 x 3/4
105	532 41 05-28	Shield Side LH
106	532 41 05-29	Shield Side RH
107	532 13 77-29	Screw 1/4-20 x 5/8
108	532 42 17-94	Cover Asm. Engine

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
STEERING ASSEMBLY **41**

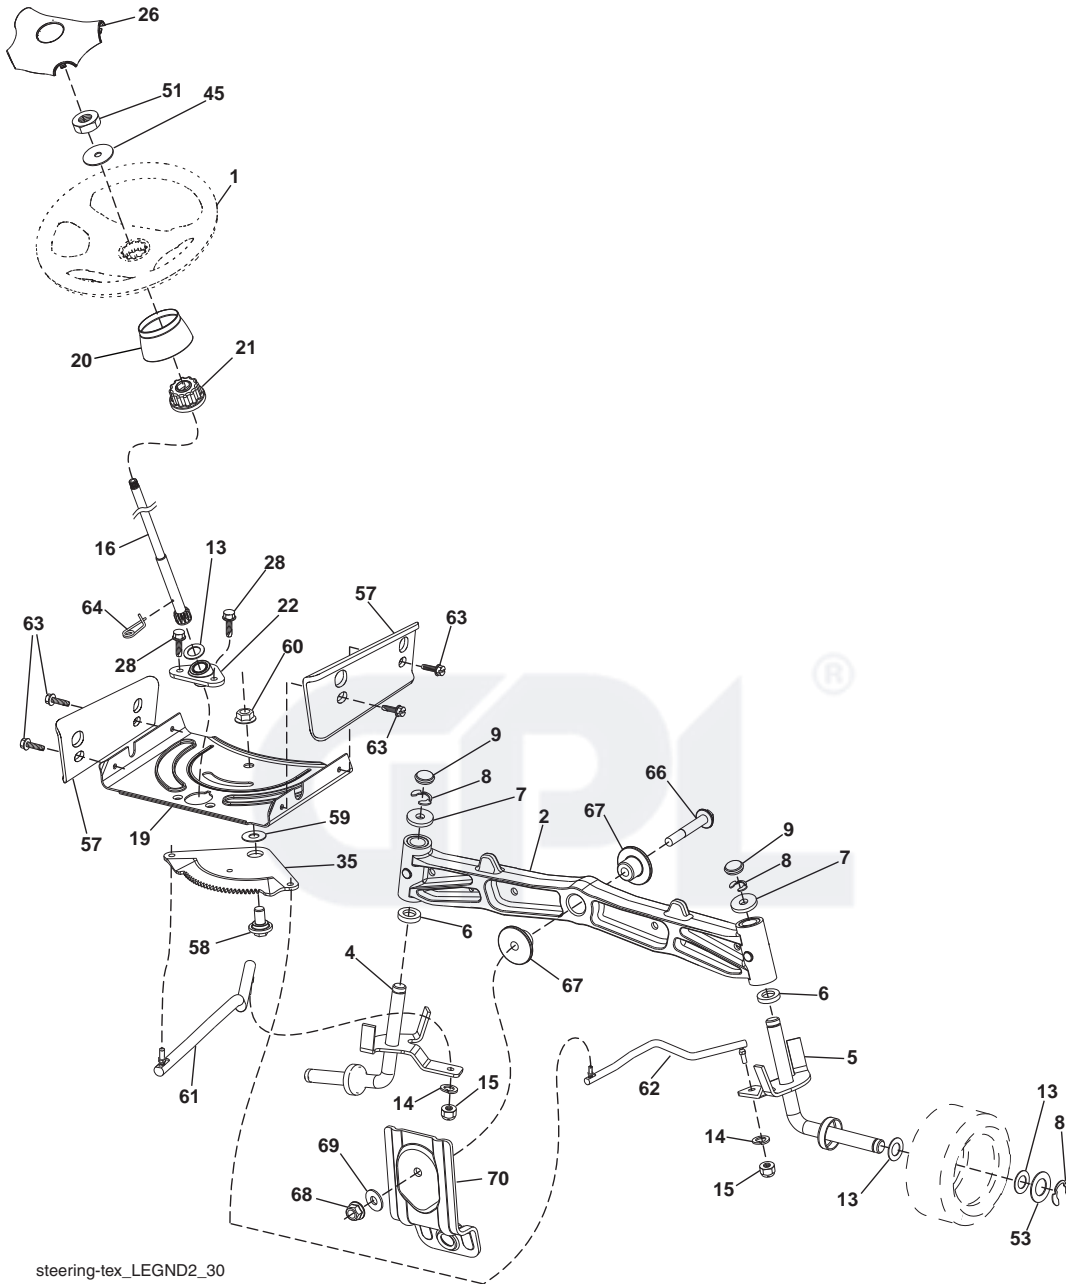


**TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
STEERING ASSEMBLY **41****

KEY NO.	PART NO.	DESCRIPTION
1	532 42 41-46	Wheel, Steering
2	532 19 59-68	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Hardened
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy. Hlcl. Spr. 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 19 47-46	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 42 47-40	Boot Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 19 48-45	Bushing, Strg. Blk.
26	532 42 41-47	Insert, Wheel Steering
28	817 00 06-12	Screw 3/8-16 x 3/4
35	532 19 47-32	Gear, Sector Plate
45	819 11 38-12	Washer 11/32 x 2-3/8 x 12 Ga.
51	873 94 08-00	Nut Hex Jam Toplock 1/2-20 unf
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd. 7/16-14 x 3 Serr.
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
SEAT ASSEMBLY 42

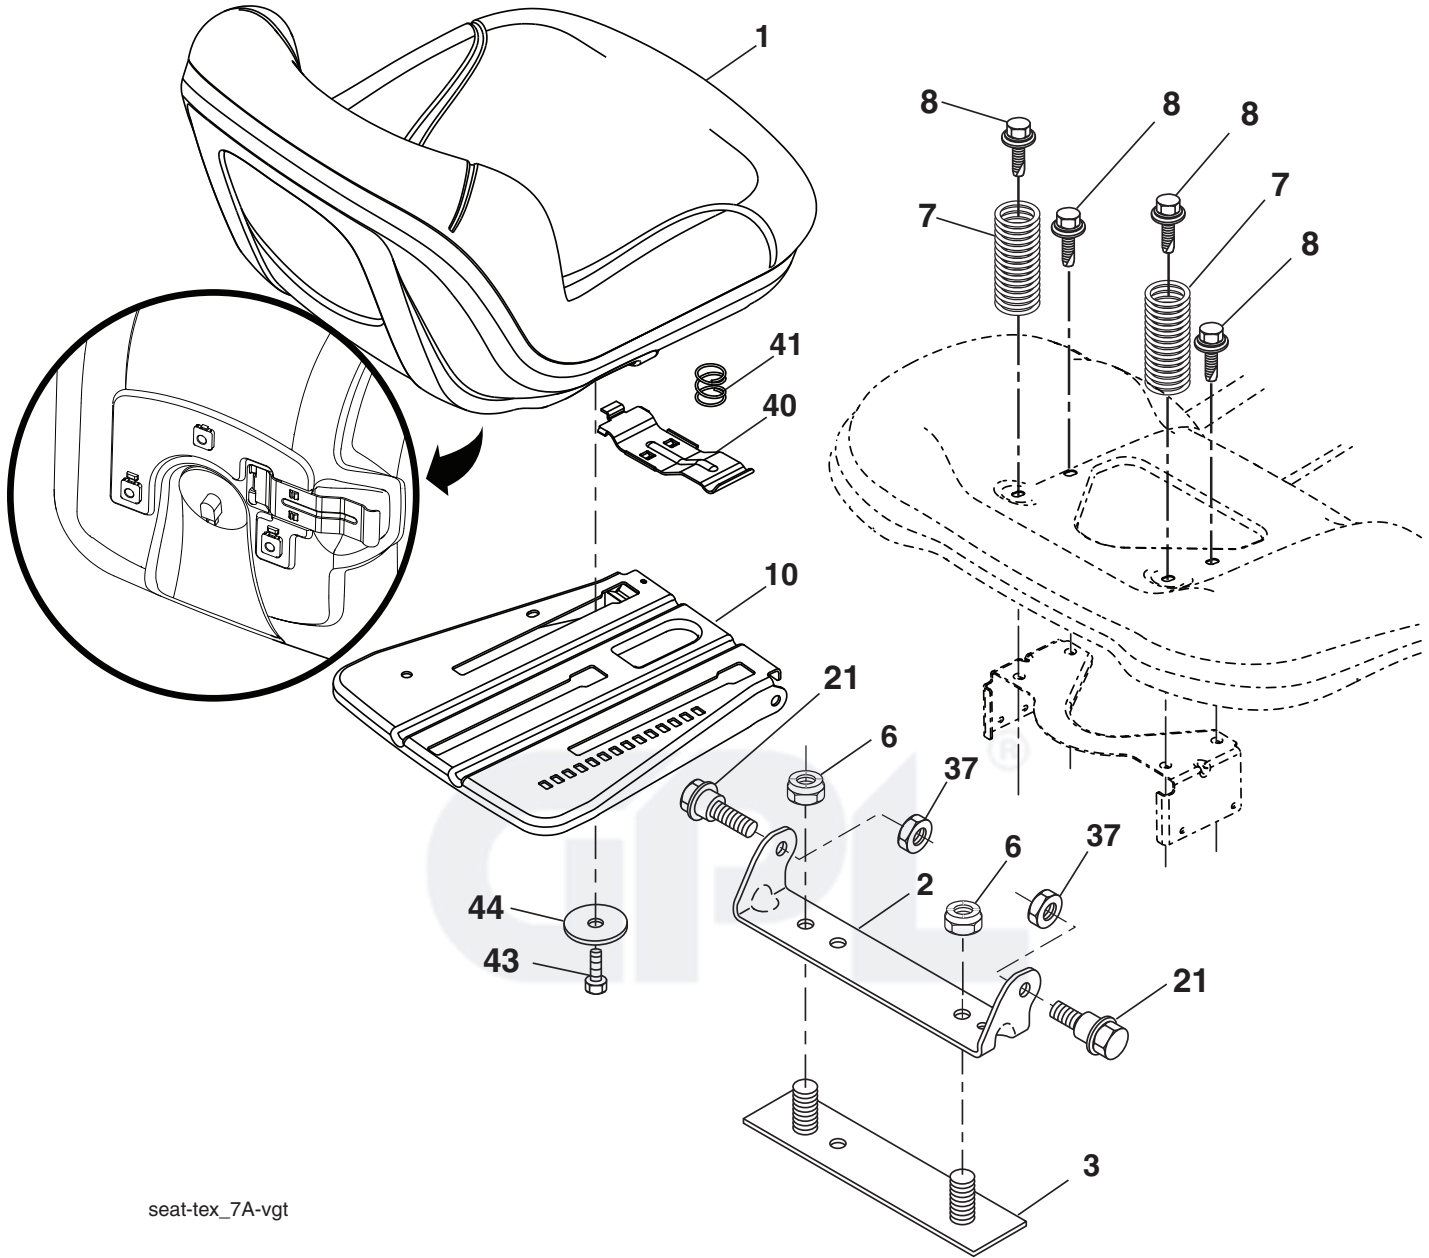


seat-tex_7A-vgt

KEY NO.	PART NO.	DESCRIPTION
1	532 40 66-25	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt, Shoulder 5/16-18

KEY NO.	PART NO.	DESCRIPTION
37	873 80 05-00	Nut, Lock 5/16-18 unc
40	532 19 76-61	Handle Slide Seat
41	532 19 82-00	Spring Latch Seat
43	874 76 06-12	Bolt 3/8-16 x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2218A2 (96041010900), PRODUCT NO. 960 41 01-09
MOWER LIFT 45

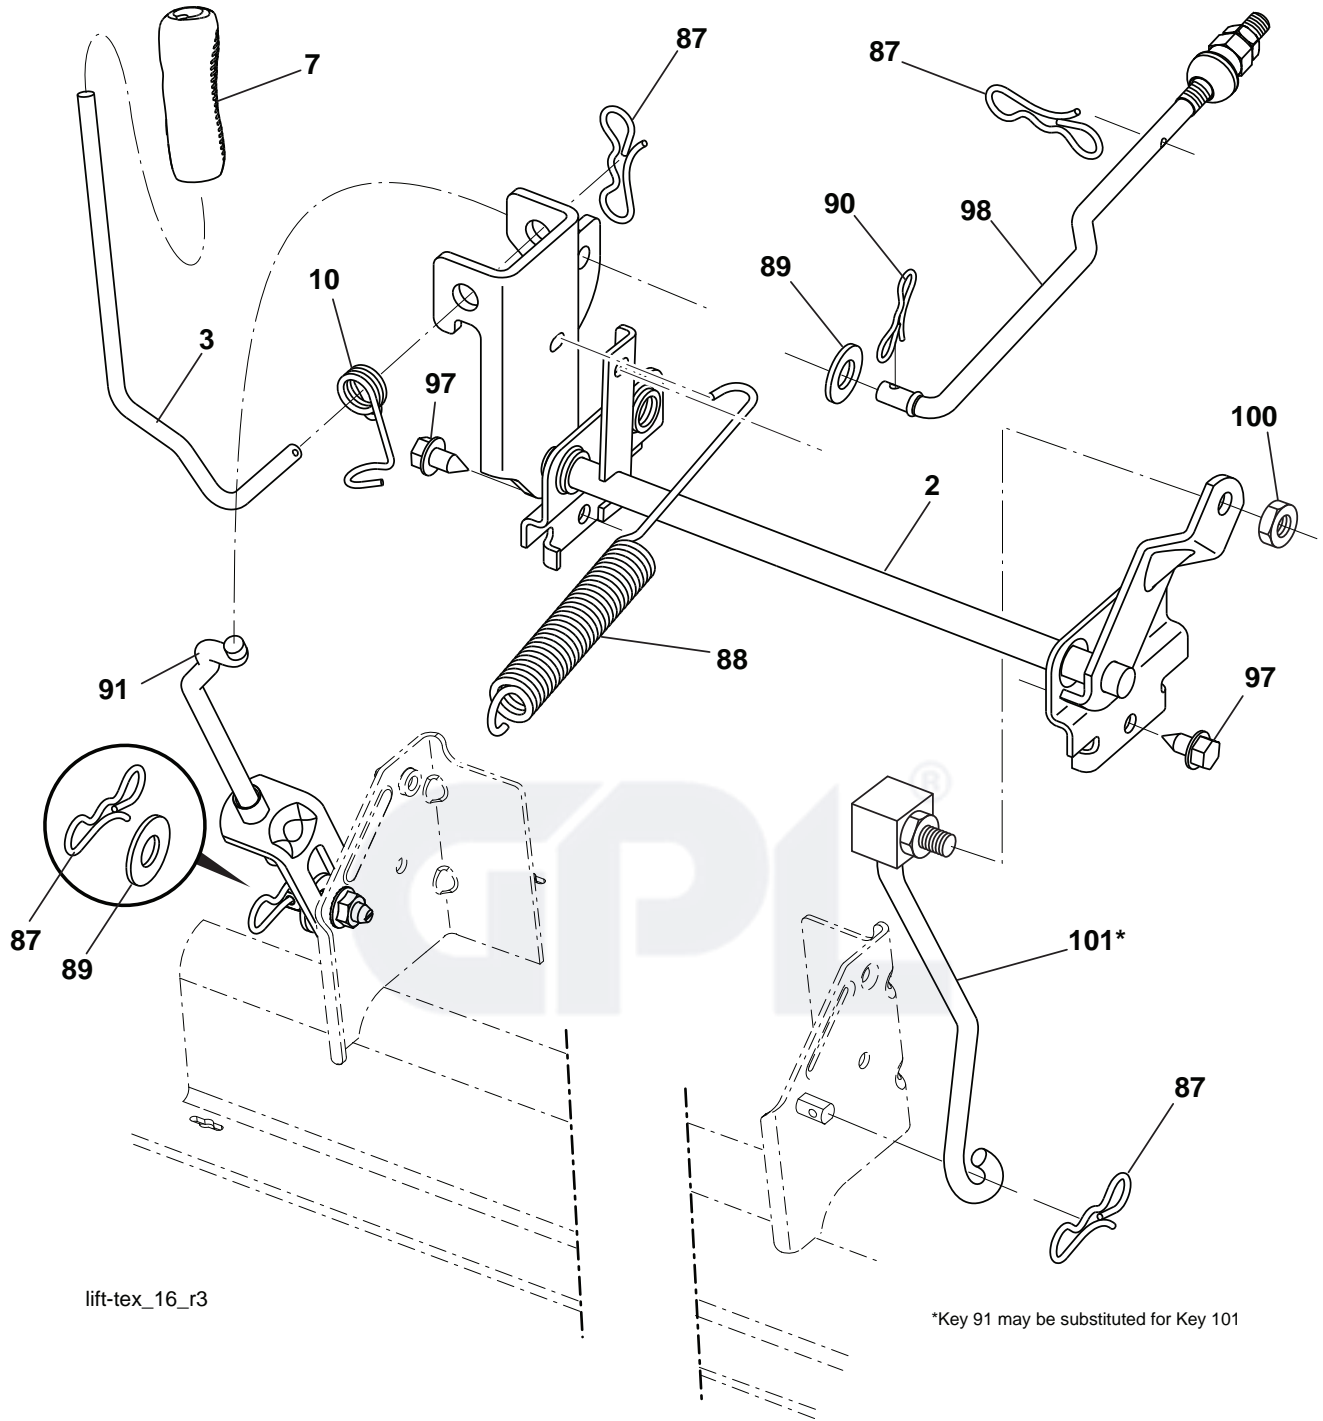

lift-tex_16_r3

*Key 91 may be substituted for Key 101

KEY NO.	PART NO.	DESCRIPTION
2	532 19 52-23	Shaft Asm., Lift
3	532 19 52-30	Lever Asm., Lift RH
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 41 07-10	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	532 19 51-81	Link Lift Susp Mower Rear

KEY NO.	PART NO.	DESCRIPTION
97	817 00 06-12	Screw 3/8-16 x 3/4
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Lock 3/8-16 unc
101	532 40 70-03	Link Asm. Lift Fixed

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm

