

LT2223 A2

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar


GPL[®]

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69 DECALS

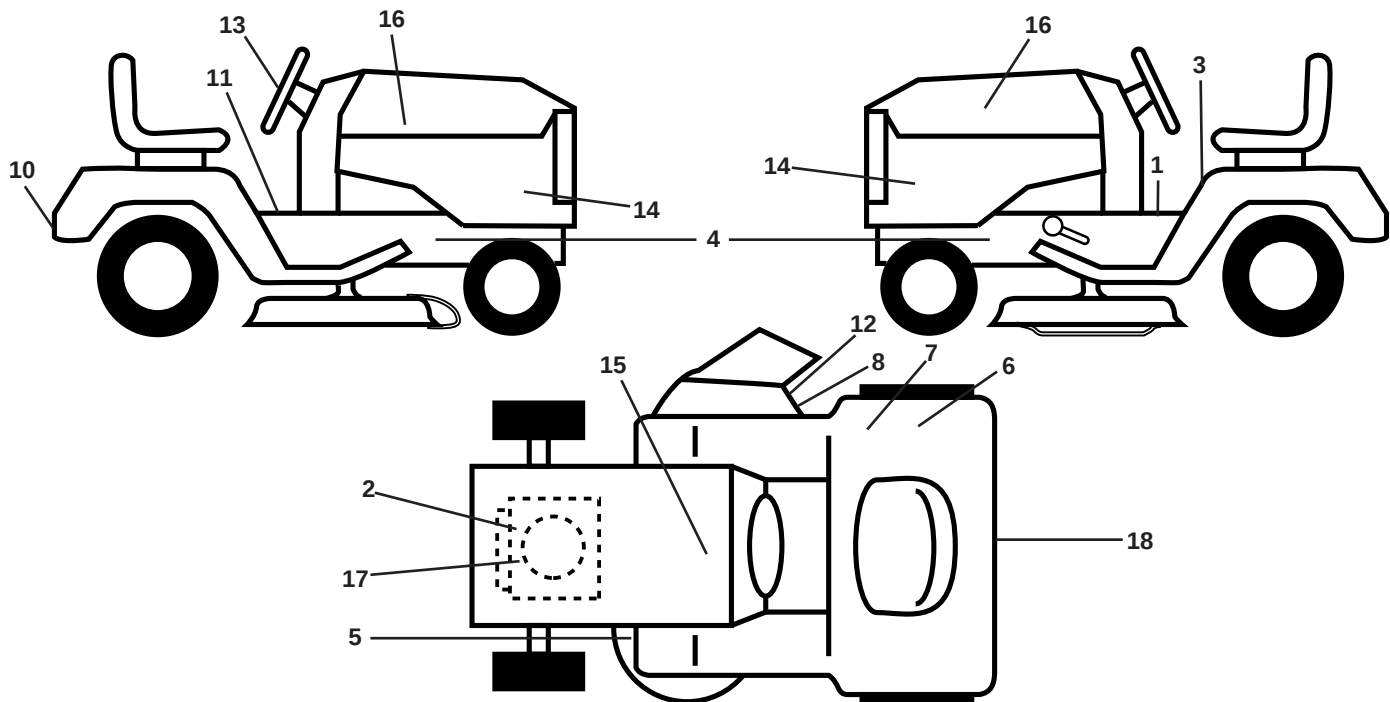

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 14 08-37	Decal, Saddle	13	532 18 57-73	Decal, Steering Whl
2	532 19 68-41	Decal, Warn. Eng. Sym.	14	532 40 93-74	Decal, Panel Side
3	532 40 03-89	Decal, Warn. Sym.	15	532 14 50-05	Decal, Decal, Battery Dan/Poi
4	532 15 97-36	Decal, Chassis Hot	16	532 18 95-53	Decal, Hood Logo
5	532 16 03-96	Decal, V Belt Schem	17	532 40 91-53	Decal, Engine HP
6	532 16 88-69	Decal, Tick Mark	18	532 18 39-30	Decal, Fender Logo
7	532 12 44-33	Decal, 80 DBA	--	532 16 69-60	Decal, Bypass
8	532 19 63-57	Decal, Deflect	--	532 40 95-05	Pad, Footrest, LH
10	532 16 25-98	Decal, Drawbar	--	532 41 12-73	Pad, Footrest, RH
11	532 15 97-37	Decal, Brake/Clutch	--	532 41 93-15	Manual, Operator's (Eng)
12	532 18 21-66	Decal, Cutfinger			

WHEELS AND TIRES

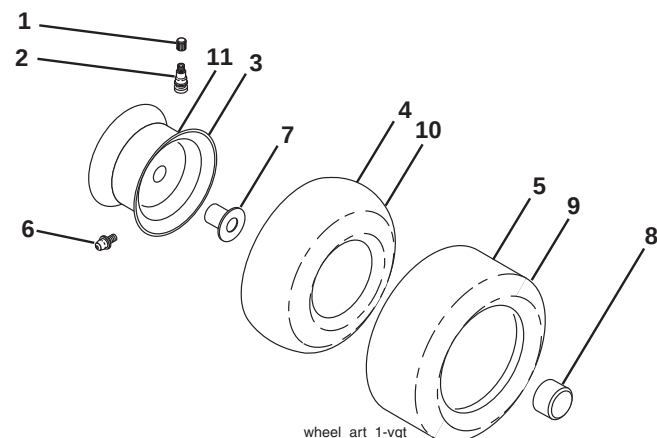


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap, Valve, Tire
2	532 06 51-39	Stem, Valve
3	532 13 83-36	Rim Assembly, Front
4	532 05 99-04	Tube, Front (Service Item Only)
5	532 10 62-22	Tire, Front
6	532 12 49-57	Fitting, Grease (Front Wheel Only)
7	532 12 49-59	Bearing, Flange (Front Wheel Only)
8	532 17 50-39	Cap, Axle (Front Wheel Only)
9	532 12 20-82	Tire, Rear
10	532 12 49-26	Tube, Rear (Service Item Only)
11	532 13 83-37	Rim Assembly, Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
SCHEMATIC

SCH10

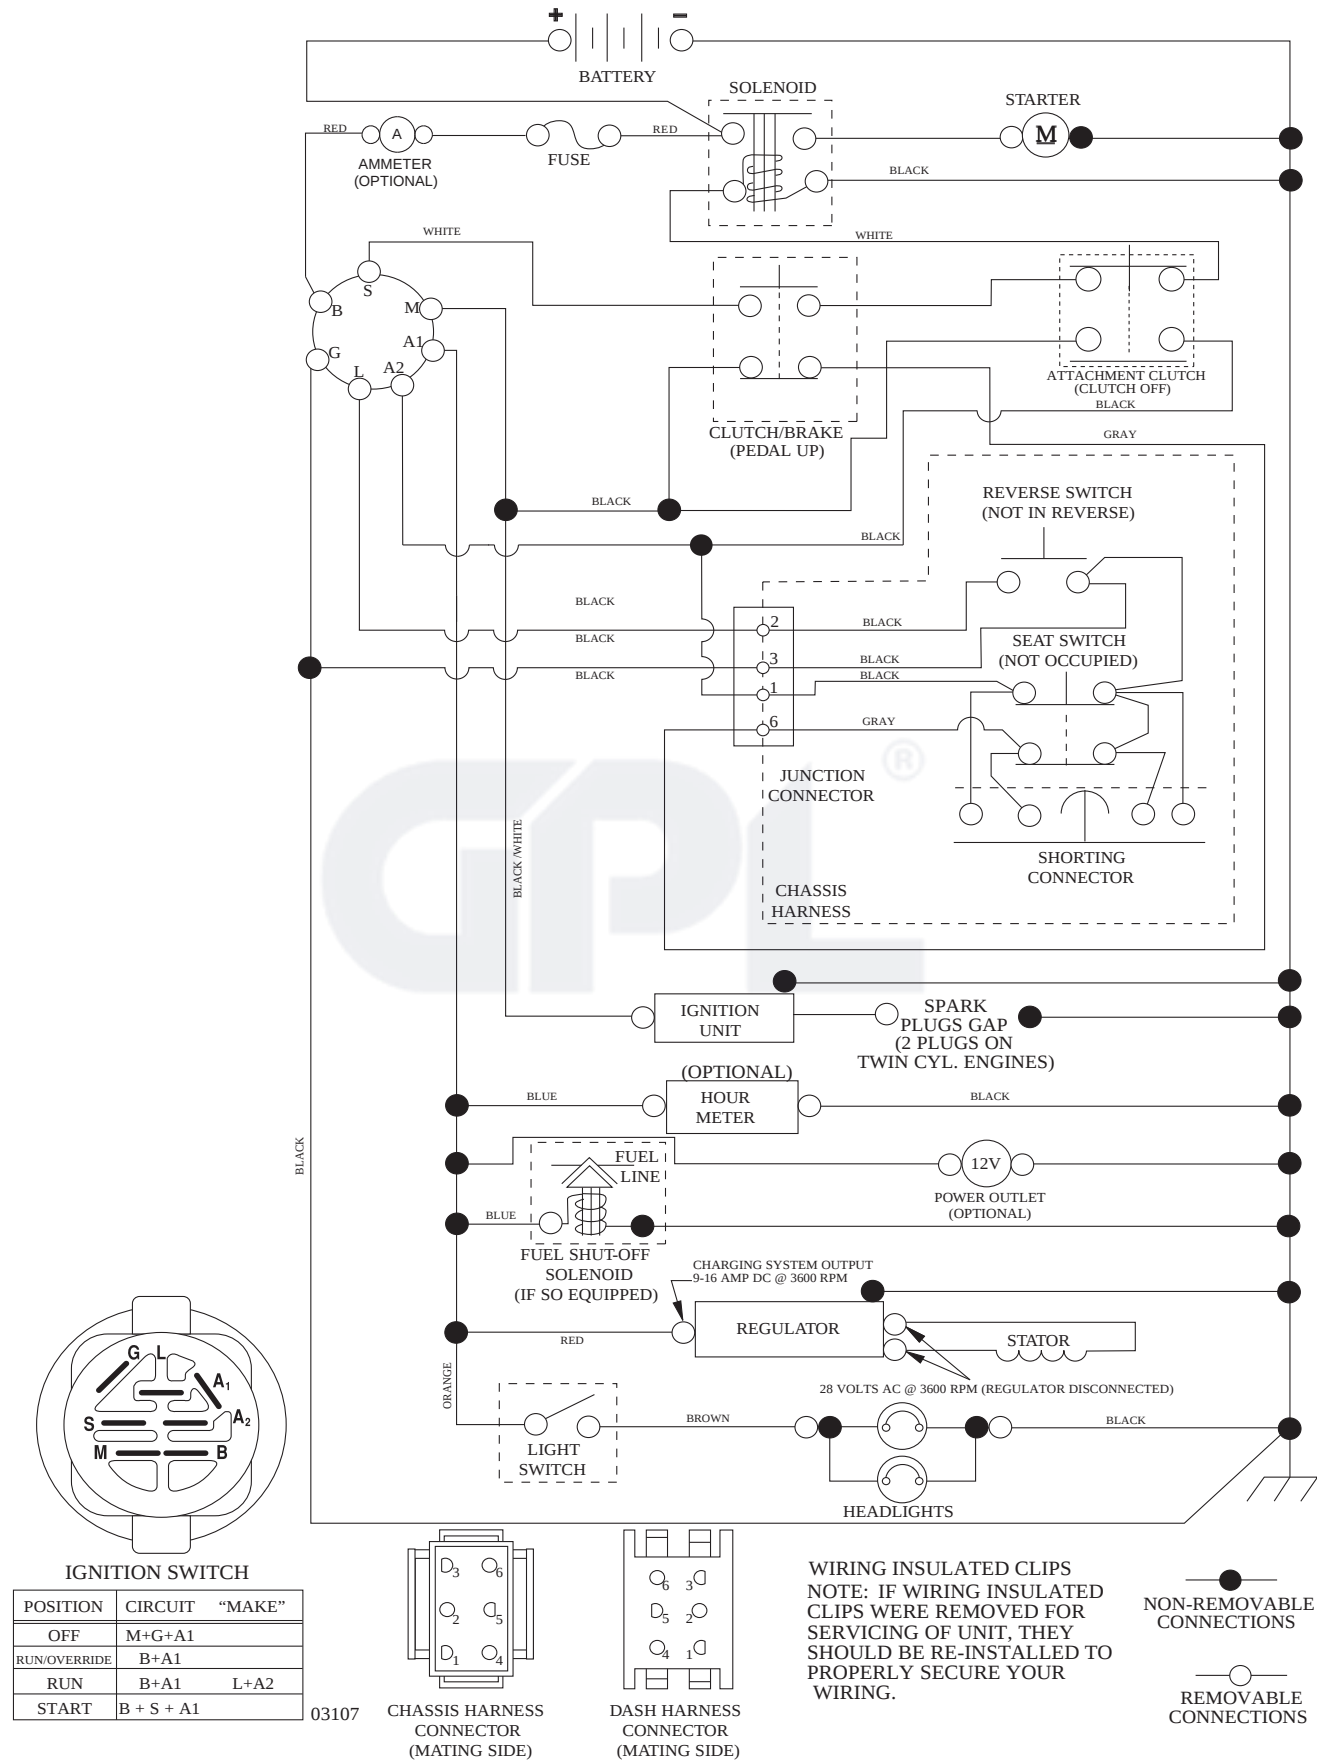

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
ELECTRICAL

T01S

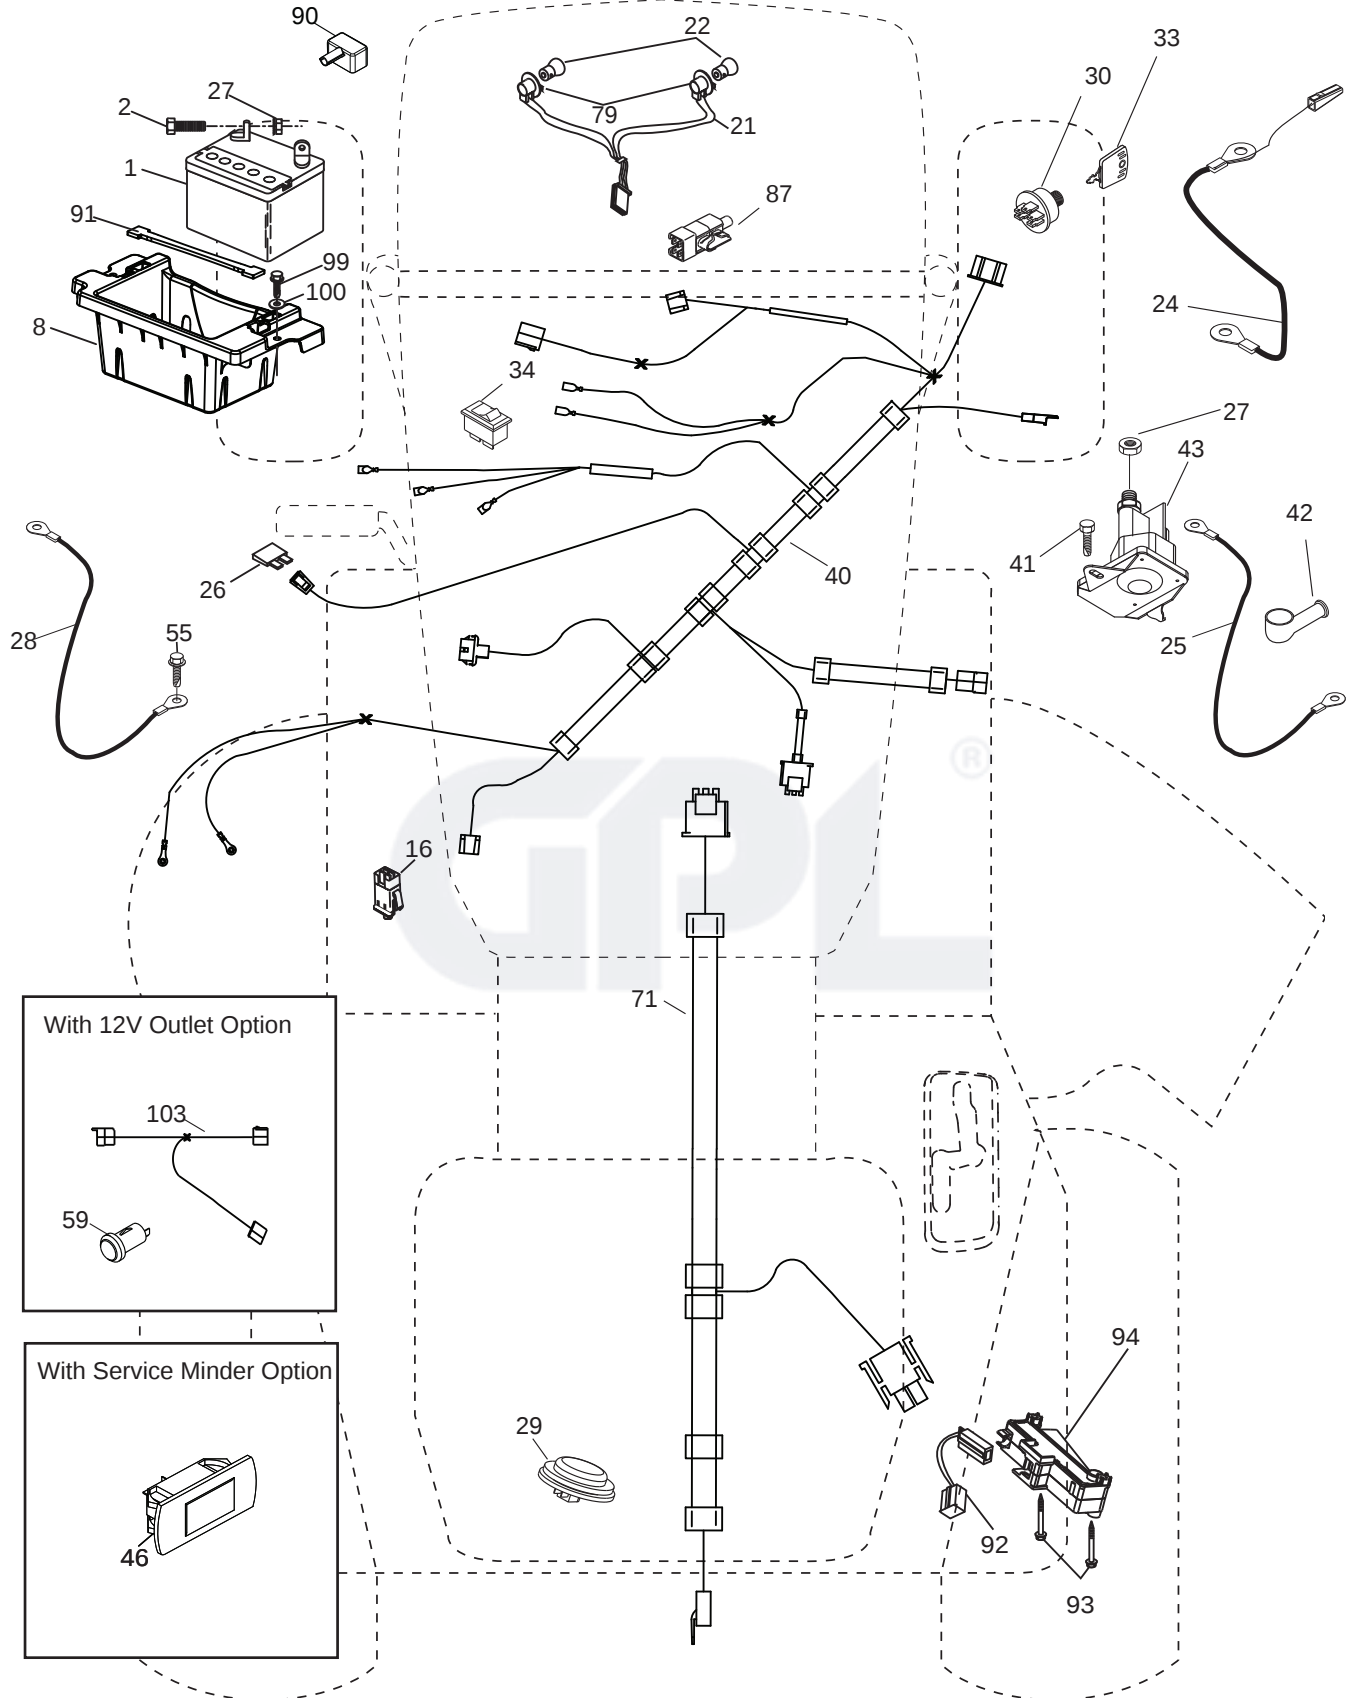


**TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
ELECTRICAL**

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Head 1/4-20 x 3/4
8	532 18 64-91	Box Battery
16	532 17 61-38	Switch Interlock Push-In
21	532 18 37-59	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
24	532 40 02-53	Cable Battery
25	532 40 16-62	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 14 54-91	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign
33	532 41 19-33	Key\Chain
34	532 11 07-12	Switch Light / Reset
40	532 40 10-98	Harness Ign. Dash
41	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
42	532 13 15-63	Cover, Terminal
43	532 19 25-07	Solenoid
46	532 41 39-31	Hourmeter
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4 TYTT
71	532 19 42-76	Harness Chassis
79	532 17 52-42	Socket Asm. Bulb Twistlock
87	532 19 78-02	Switch Interlock Clutch Cable
90	532 40 07-24	Cover Terminal
91	532 19 02-70	Strap Battery Mount Front
92	532 19 66-15	Harness Pigtail Reverse Switch
93	532 19 25-40	Screw Plastite 10-14 x 2.0
94	532 19 18-34	Module Reverse ROS
99	817 67 04-12	Screw 1/4-20 x 3/4
100	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69 CHASSIS

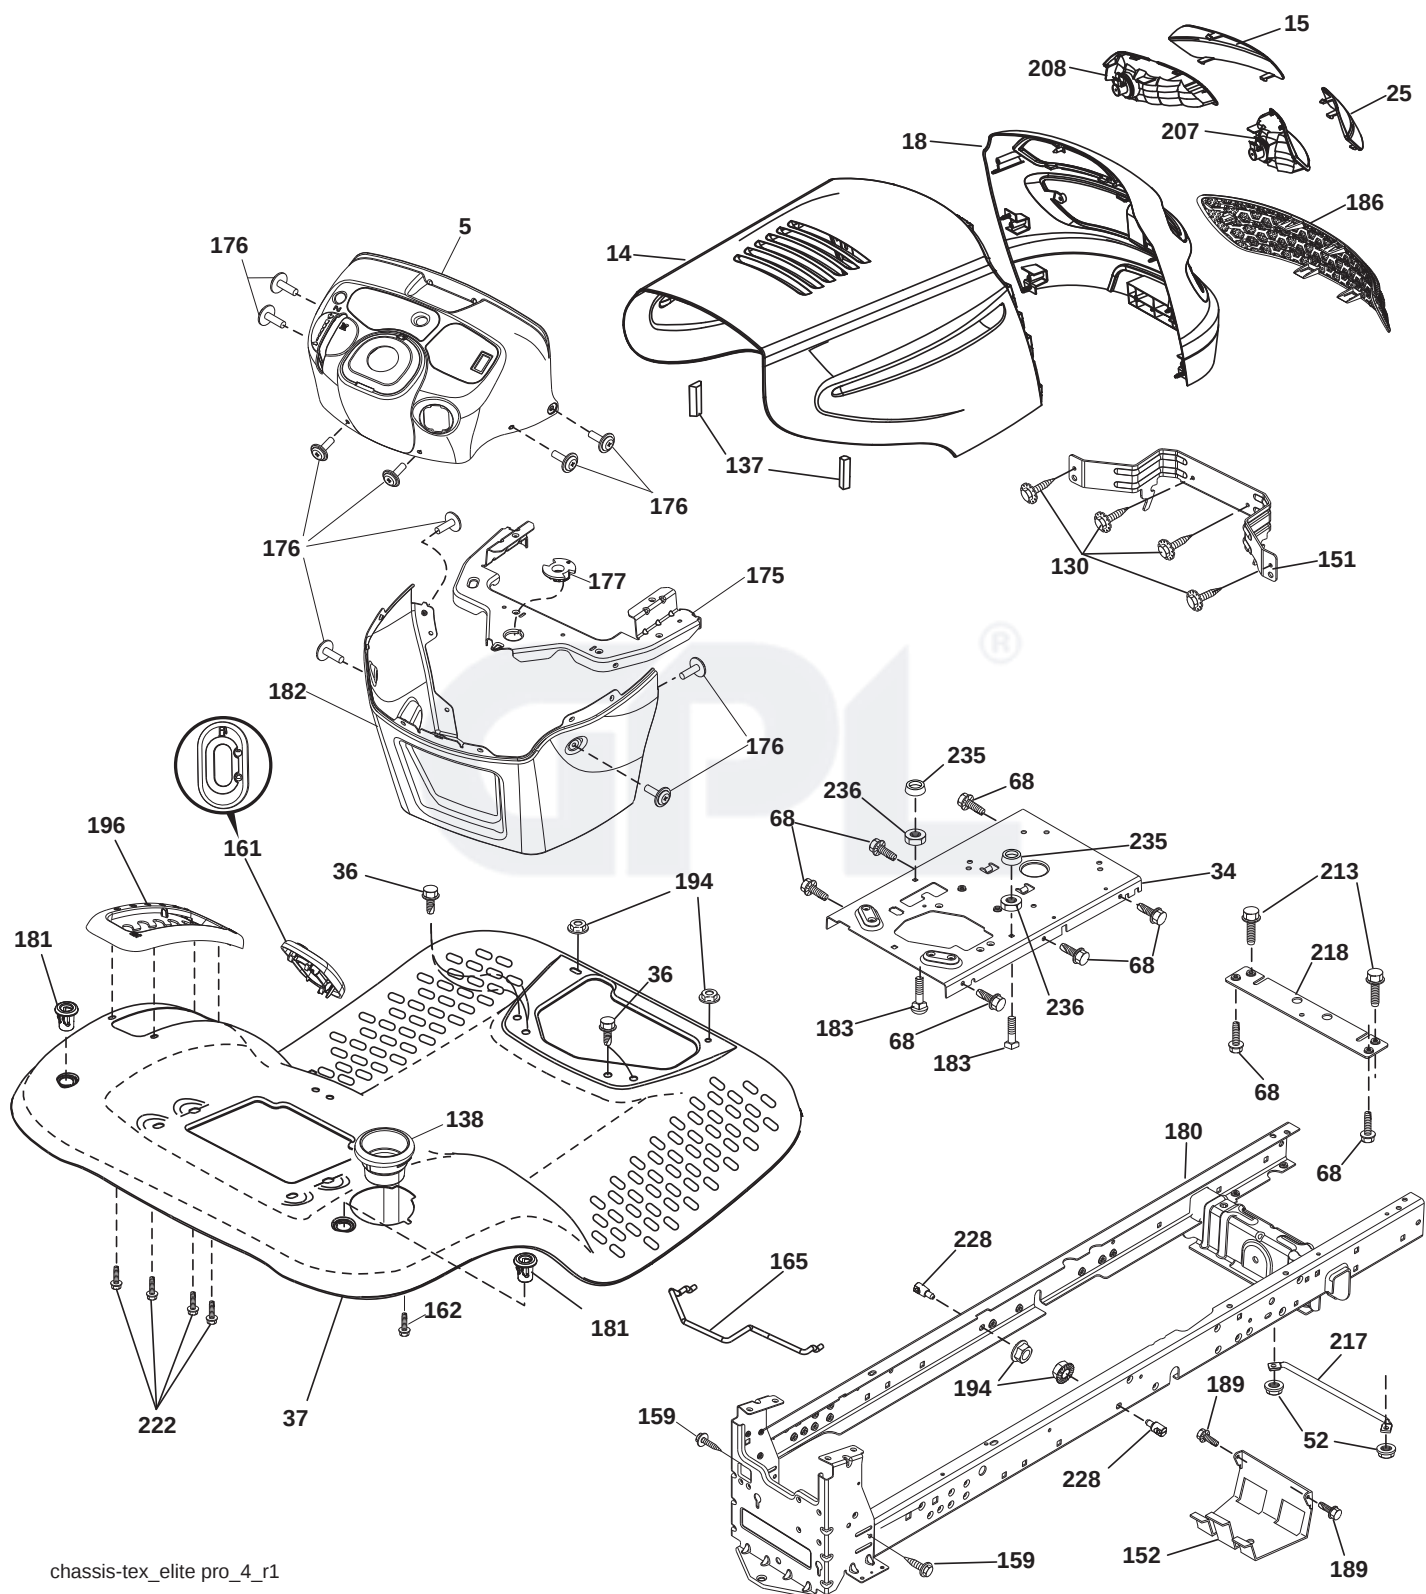


chassis-tex_elite pro_4_r1

**TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
CHASSIS**

KEY NO.	PART NO.	DESCRIPTION
5	532 41 20-69	Dash
14	532 18 67-07	Hood
15	532 18 97-54	Lens LH
18	532 19 29-15	Grille
25	532 18 97-55	Lens RH
34	532 19 61-25	Plate Engine
36	817 06 05-12	Screw 5/16-18 x 3/4
37	532 41 94-54	Fender
52	873 68 05-00	Nut Crown Lock 5/16
68	817 49 05-08	Screw THDROL 5/16-18 x 1/2
130	532 41 63-58	Screw
137	532 18 49-21	Bumper Dash
138	532 40 97-30	Cupholder
151	532 40 78-07	Bracket Pivot
152	532 19 95-35	Shield Browning
159	817 00 06-12	Screw 3/8-16 x 3/4
161	532 41 20-72	Window Fuel
162	532 14 24-32	Screw 1/4 x 1/2
165	532 19 68-26	Support Tank Rear
175	532 19 32-43	Crossmember
176	532 40 07-76	Screw 10-24 x 5/8
177	532 19 52-28	Bushing Steering
180	532 19 54-57	Chassis
181	532 40 47-96	Bushing Mtg. Fender Crgo
182	532 19 30-57	Dash Lower
183	874 78 05-20	Bolt 5/16-18 unc x 1-1/4
186	532 18 97-53	Insert Grille
189	817 00 05-12	Screw 5/16-18 x 3/4
194	873 90 05-00	Nut Lock Hex Flange 5/16-18
196	532 41 45-79	Console Asm. Deck Lift
207	532 18 38-33	Bezel RH
208	532 18 38-32	Bezel LH
213	874 76 05-12	Bolt 5/16-18 x 3/4
217	532 40 91-67	Rod Pivot Hood
218	532 19 63-95	X-Piece Hood Stop
222	532 13 77-29	Screw 1/4-20 x 5/8
228	532 19 51-61	Stud Fastener
235	532 40 61-29	Spacer Fender
236	873 93 05-00	Nut Lock 5/16-18 unc

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
DRIVE**

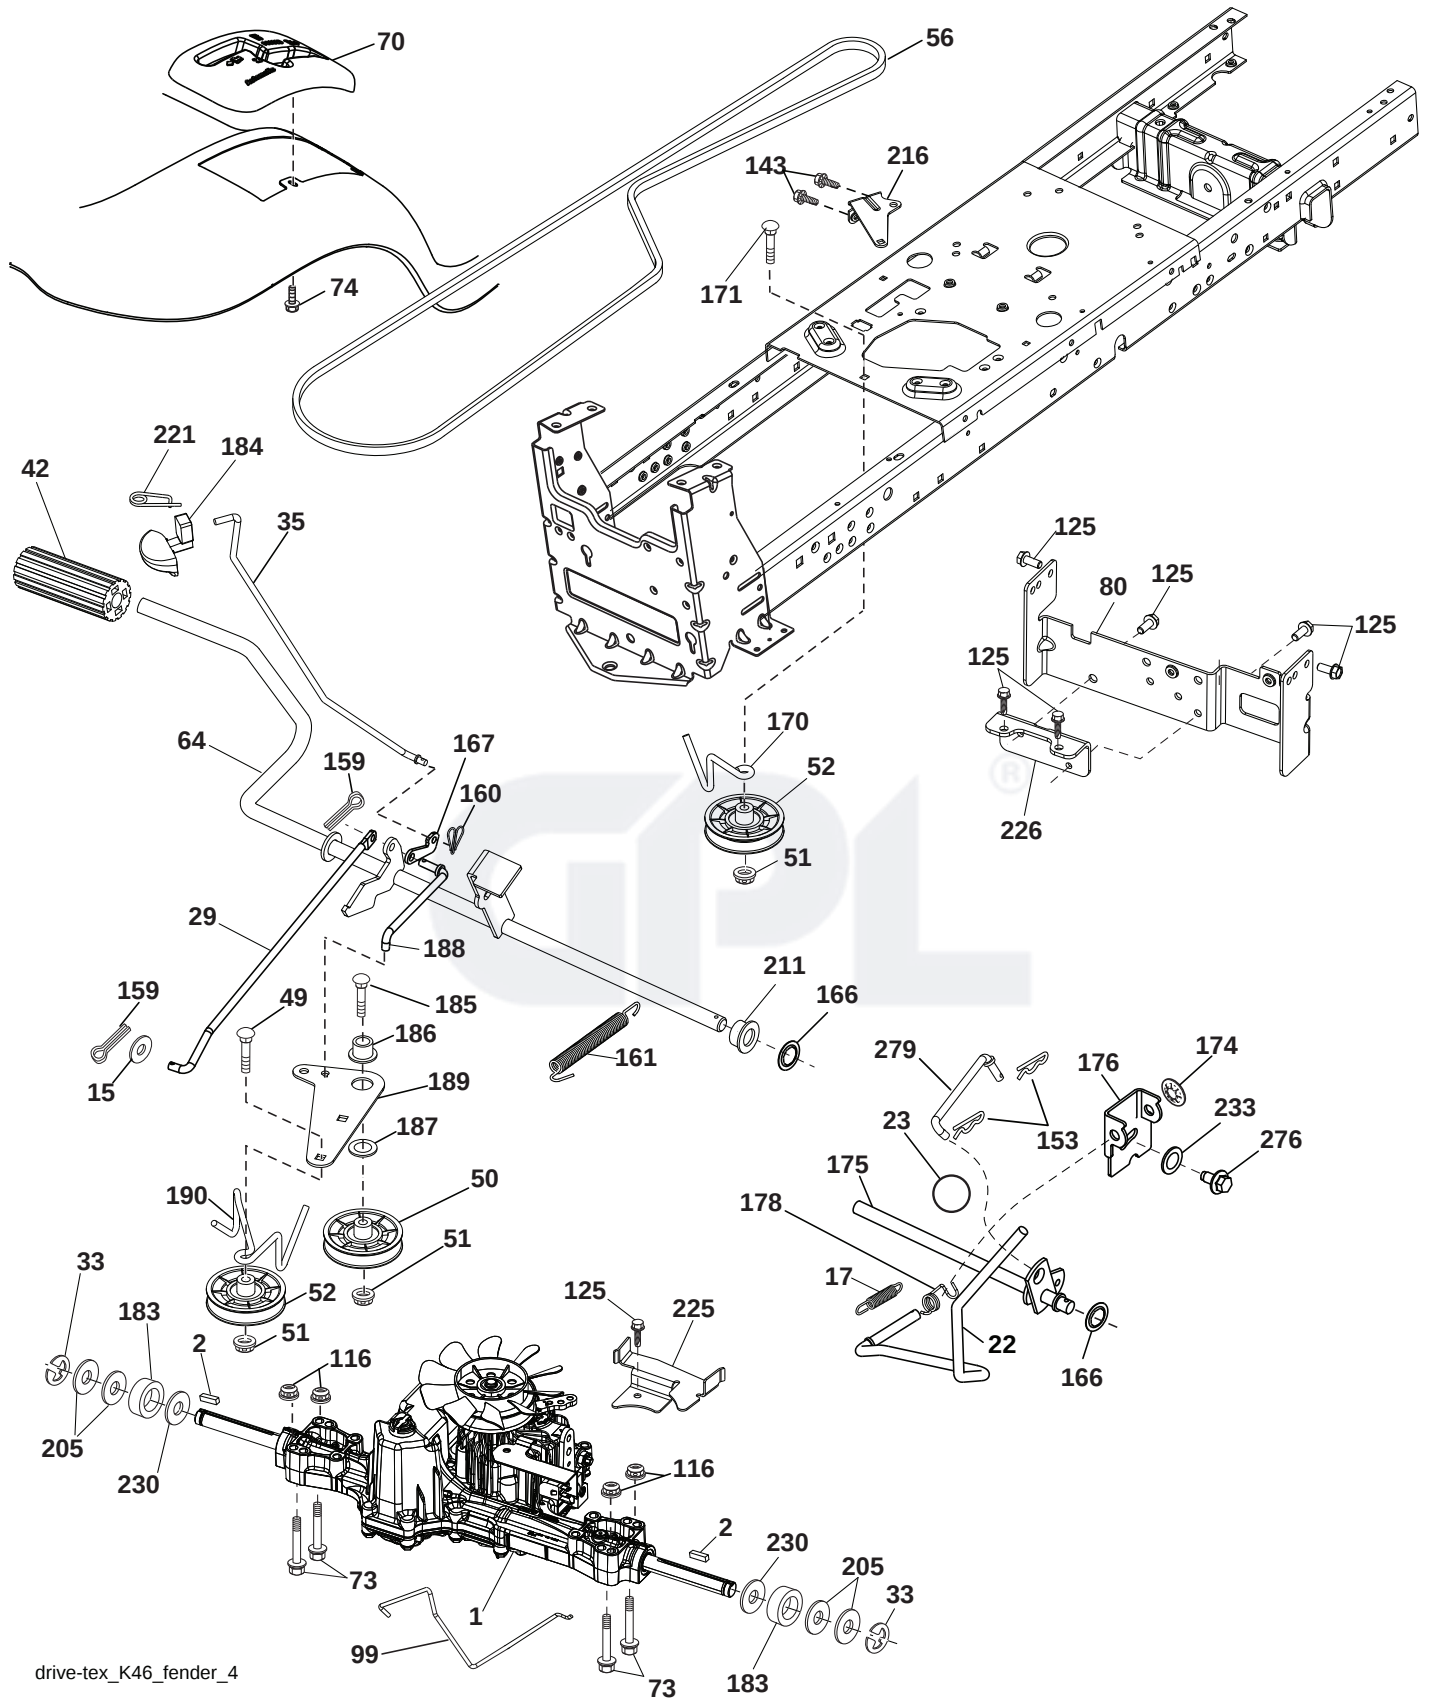


drive-tex_K46_fender_4

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69 DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	---	Transaxle, Tufftorq K46 BA (Internal Parts Not Available)	162	532 19 57-85	Spacer Transaxle
2	532 12 35-83	Key	166	532 19 72-90	Nut Push .625
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	167	532 40 52-57	Latch Brake Parking
17	532 41 36-78	Spring, Brake	170	532 19 43-22	Keeper Belt Centerspan
22	532 19 76-60	Rod Shift	171	872 11 06-16	Bolt
23	532 13 05-64	Knob	174	532 19 72-89	Nut Push
29	532 40 38-06	Rod, Brake	175	532 40 62-08	Shaft Asm.
33	812 00 00-01	Ring E	176	532 19 62-14	Asm Clevis Rod Shift
35	532 19 77-22	Rod, Brake, Park	178	532 19 74-56	Spring Shift
42	532 12 48-72	Cover, Foot Pedal	183	532 13 70-57	Spacer Axle
49	872 11 06-14	Bolt	184	532 41 12-89	Handle Parking Brake
50	532 19 43-27	Pulley Idler Flat	185	872 11 06-20	Bolt
51	873 90 06-00	Lock Nut 3/8-16	186	532 19 43-21	Spacer Retainer
52	532 19 43-26	Idler V-Groove 910" Offset	187	819 13 32-10	Washer
56	532 13 09-69	V-Belt, Drive	188	532 19 43-23	Link Clutch Ground Drive
64	532 19 62-00	Shaft Asm. Pedal Brake Control	189	532 19 43-17	Bellcrank Ground Drive
70	532 41 13-29	Console, Shift	190	532 19 43-18	Keeper Bellcrank Ground Drive
73	874 49 05-44	Bolt 5/16-18 x 3.75	205	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
74	532 14 24-32	Screw Hex 1/4 x 1/2 unc	211	532 19 62-12	Bushing
80	532 41 00-24	Strap Torgue	216	532 19 61-31	Bracket Pulley
99	532 41 57-42	Rod Bypass	221	532 40 31-87	Retainer Spring Clip Handle
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	225	532 40 33-19	Keeper Belt Trans.
125	817 00 05-12	Screw 5/16-18 x 3/4	226	532 40 15-64	Bracket Mount Torque
143	817 49 05-08	Screw 5/16-18 x 1/2	230	532 18 89-67	Washer Harden .793 x 1.637 x .060
153	532 12 47-88	Retainer Spring	233	532 40 52-96	Washer Serrated
159	876 02 04-12	Pin Cotter 1/8 x 3/4	276	874 78 07-16	Bolt 7/16-14 x 1
160	532 16 94-84	Retainer Clip	279	532 40 62-07	Link Shift
161	532 10 57-09	Spring, Return, Clutch			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
ENGINE

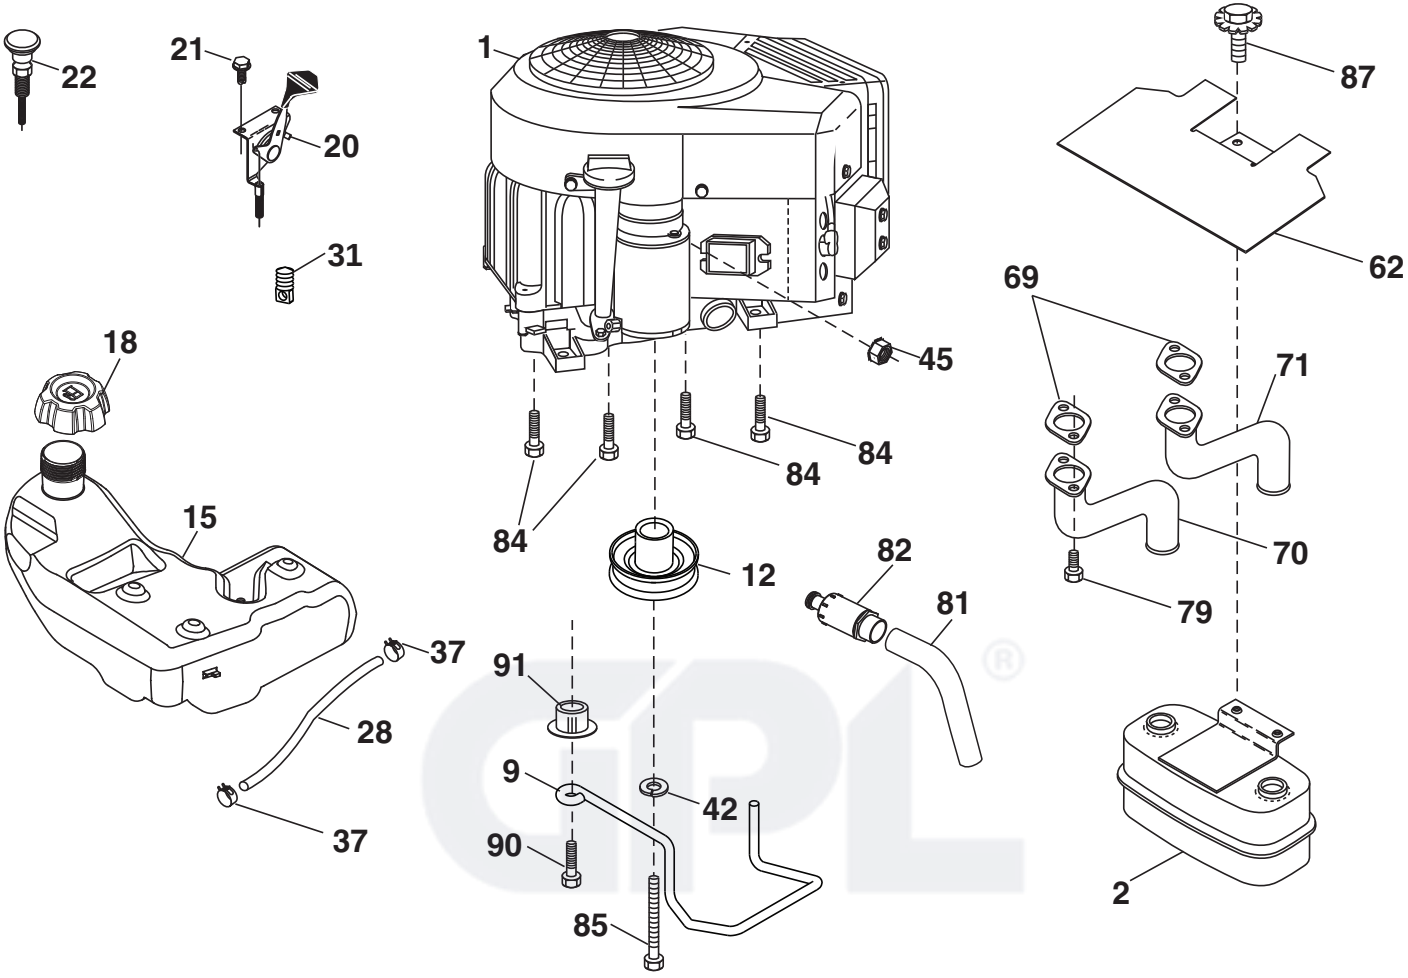

engine-tex_bs-2cyl_12

SPARK ARRESTER KIT

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69 ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	---	Briggs Model No. 445577
2	532 14 97-23	Muffler
9	532 19 43-20	Keeper Belt Engine
12	532 40 54-71	Pulley Engine
15	532 40 00-21	Tank Fuel 3.0
18	532 19 59-51	Cap Asm
20	532 17 83-85	Control Throttle
21	532 41 63-58	Screw #10 x .750 BOS Thread
22	532 19 15-96	Control Choke
28	532 14 21-58	Fuel Line
29	532 13 71-80	Spark Arrester Kit
31	532 14 50-06	Clip Push-In
37	532 12 34-87	Clamp Hose
42	810 04 07-00	Washer Lock 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
62	532 14 66-29	Shield Heat Muffler
69	532 16 53-91	Gasket
70	532 15 99-55	Tube Exhaust LH
71	532 16 05-89	Tube Exhaust RH
79	532 18 39-06	Screw Socket HD 5/16-18 x 1
81	532 14 84-56	Tube Drain Oil Easy
82	532 18 16-54	Plug Drain Oil
84	817 06 06-20	Screw 3/8-16 x 1
85	532 17 39-37	Bolt Hex 7/16-20 x 4-1/2
87	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
90	817 00 06-16	Screw 3/8-16 x 1
91	532 18 74-95	Bushing


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69

STEERING ASSEMBLY

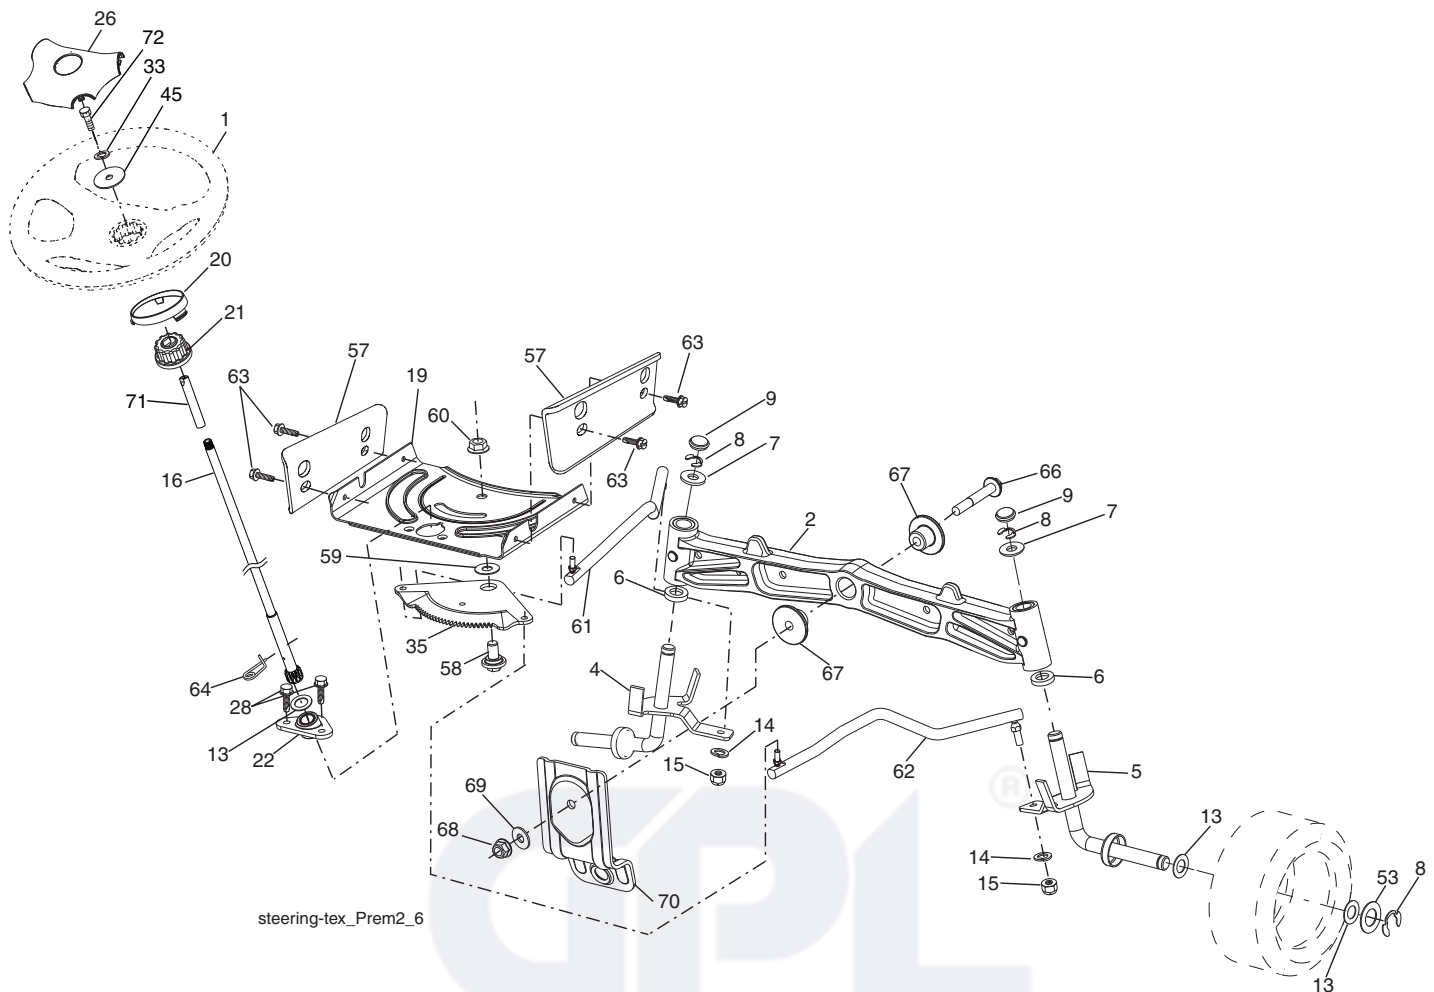


steering-tex_Prem2_6

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 46-37	Wheel, Steering	53	532 18 89-67	WasherHardened.793x1.637x.060
2	532 18 47-06	Axle Asm., Front	57	532 40 74-65	Bracket Upstop
4	532 40 30-87	Spindle Asm., LH	58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
5	532 40 30-88	Spindle Asm., RH	59	532 19 47-48	Washer Thrust Sector Steering
6	532 12 49-31	Bearing, Race Thrust Harden	60	873 97 10-00	Nut Flange Lock 5/8-11
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.	61	532 19 47-40	Draglink, LH
8	812 00 00-29	Ring, Klip #T5304-75	62	532 19 47-41	Draglink, RH
9	532 12 12-32	Cap, Spindle	63	817 00 05-12	Screw 5/16-18 x 3/4
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.	64	532 19 98-49	Retainer Clip Spring Steering
14	810 04 06-00	Washer, Lock Hvy Hlcl Spr 3/8	66	871 02 07-48	Bolt Hex Fghd 7/16-14 x 3 Serr
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf	67	532 19 47-37	Bushing PM Front Axle
16	532 19 60-74	Shaft Steering	68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
19	532 19 47-29	Plate Steering	69	532 19 91-62	Washer 1.5 x .505 x .118
20	532 41 12-91	Boot, Steering	70	532 19 61-97	Bracket Deck Susp. Front
21	532 18 67-37	Adapter, Wheel Steering	71	532 19 60-75	Shaft Extension Steering
22	532 19 48-45	Bushing, Strg. Blk	72	874 78 05-72	Bolt 5/16-18 unc x 4.5. Gr. 5
26	532 19 46-03	Insert, Wheel Steering			
28	817 00 06-12	Screw 3/8-16 x 3/4			
33	810 04 05-00	Washer Lock 5/16			
35	532 19 47-32	Gear, Sector Plate			
45	819 11 38-12	Washer 11/32 x 3/8 x 12 Ga.			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
SEAT ASSEMBLY

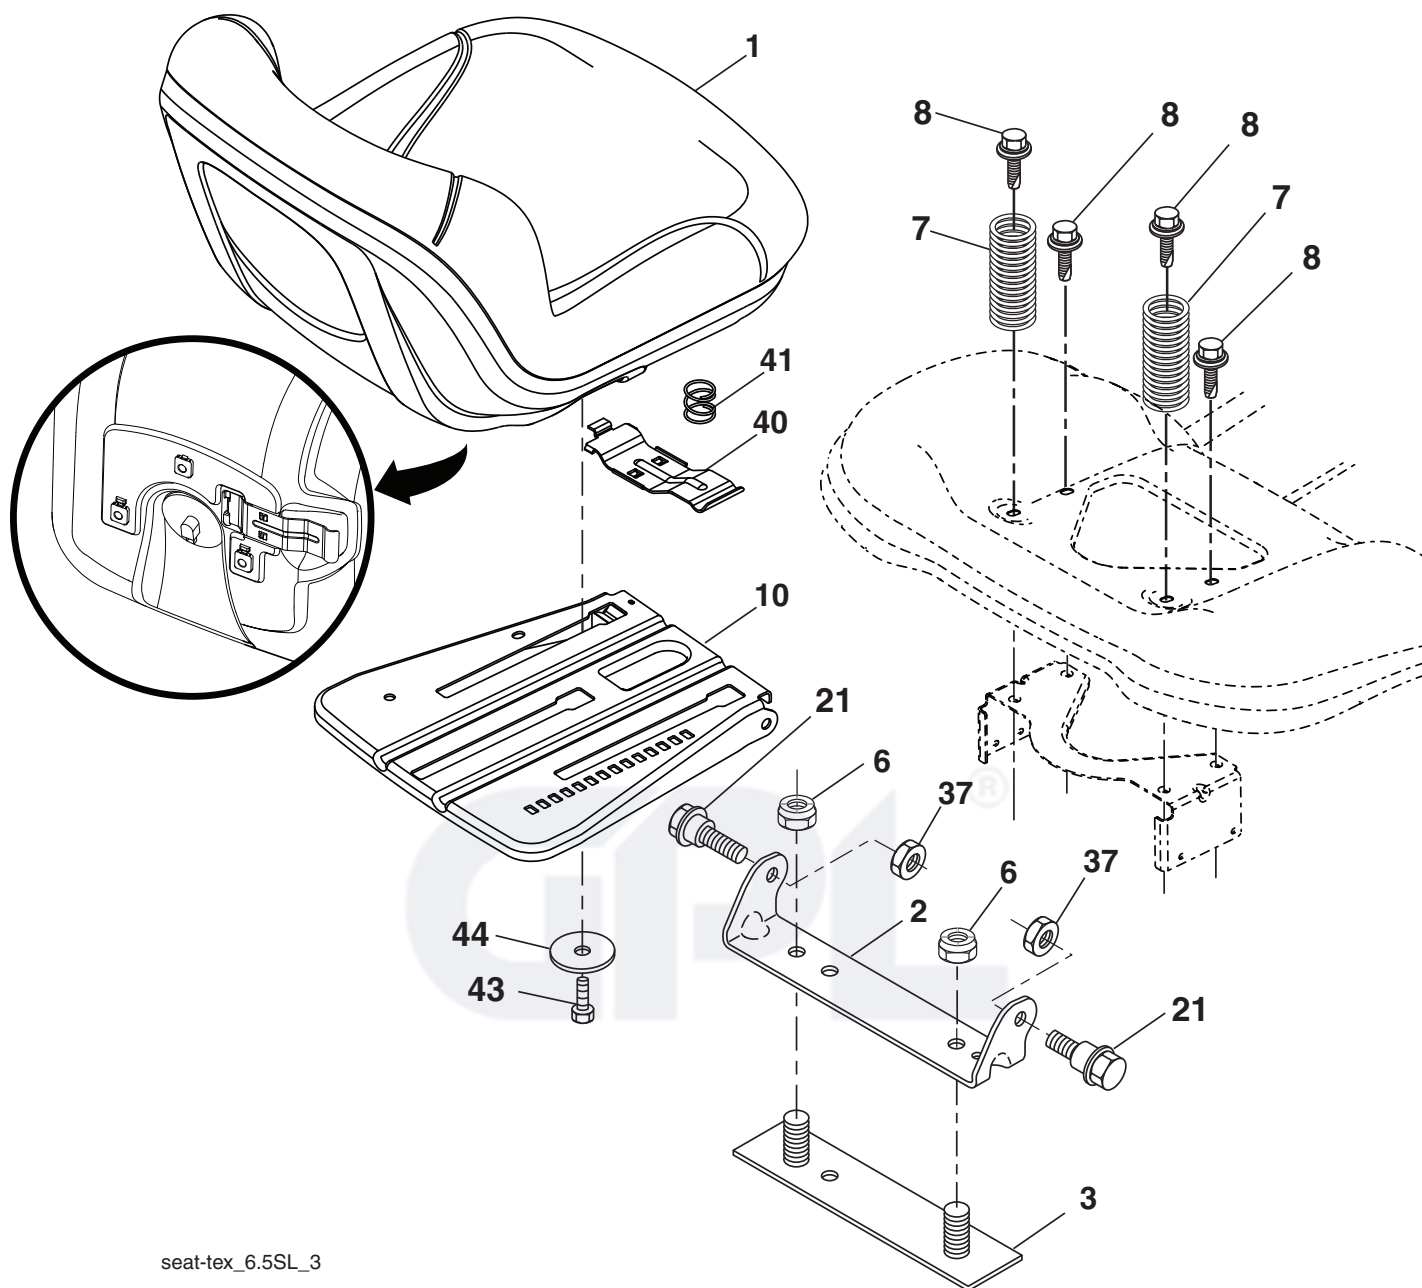


seat-tex_6.5SL_3

KEY NO.	PART NO.	DESCRIPTION
1	532 40 66-25	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt Shoulder 5/16-18
37	873 80 05-00	Nut Lock w/Ins 5/16-18

KEY NO.	PART NO.	DESCRIPTION
40	532 19 76-61	Handle Slide Seat
41	532 19 82-00	Spring Latch
43	874 76 06-12	Bolt 3/8-16 x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
MOWER DECK

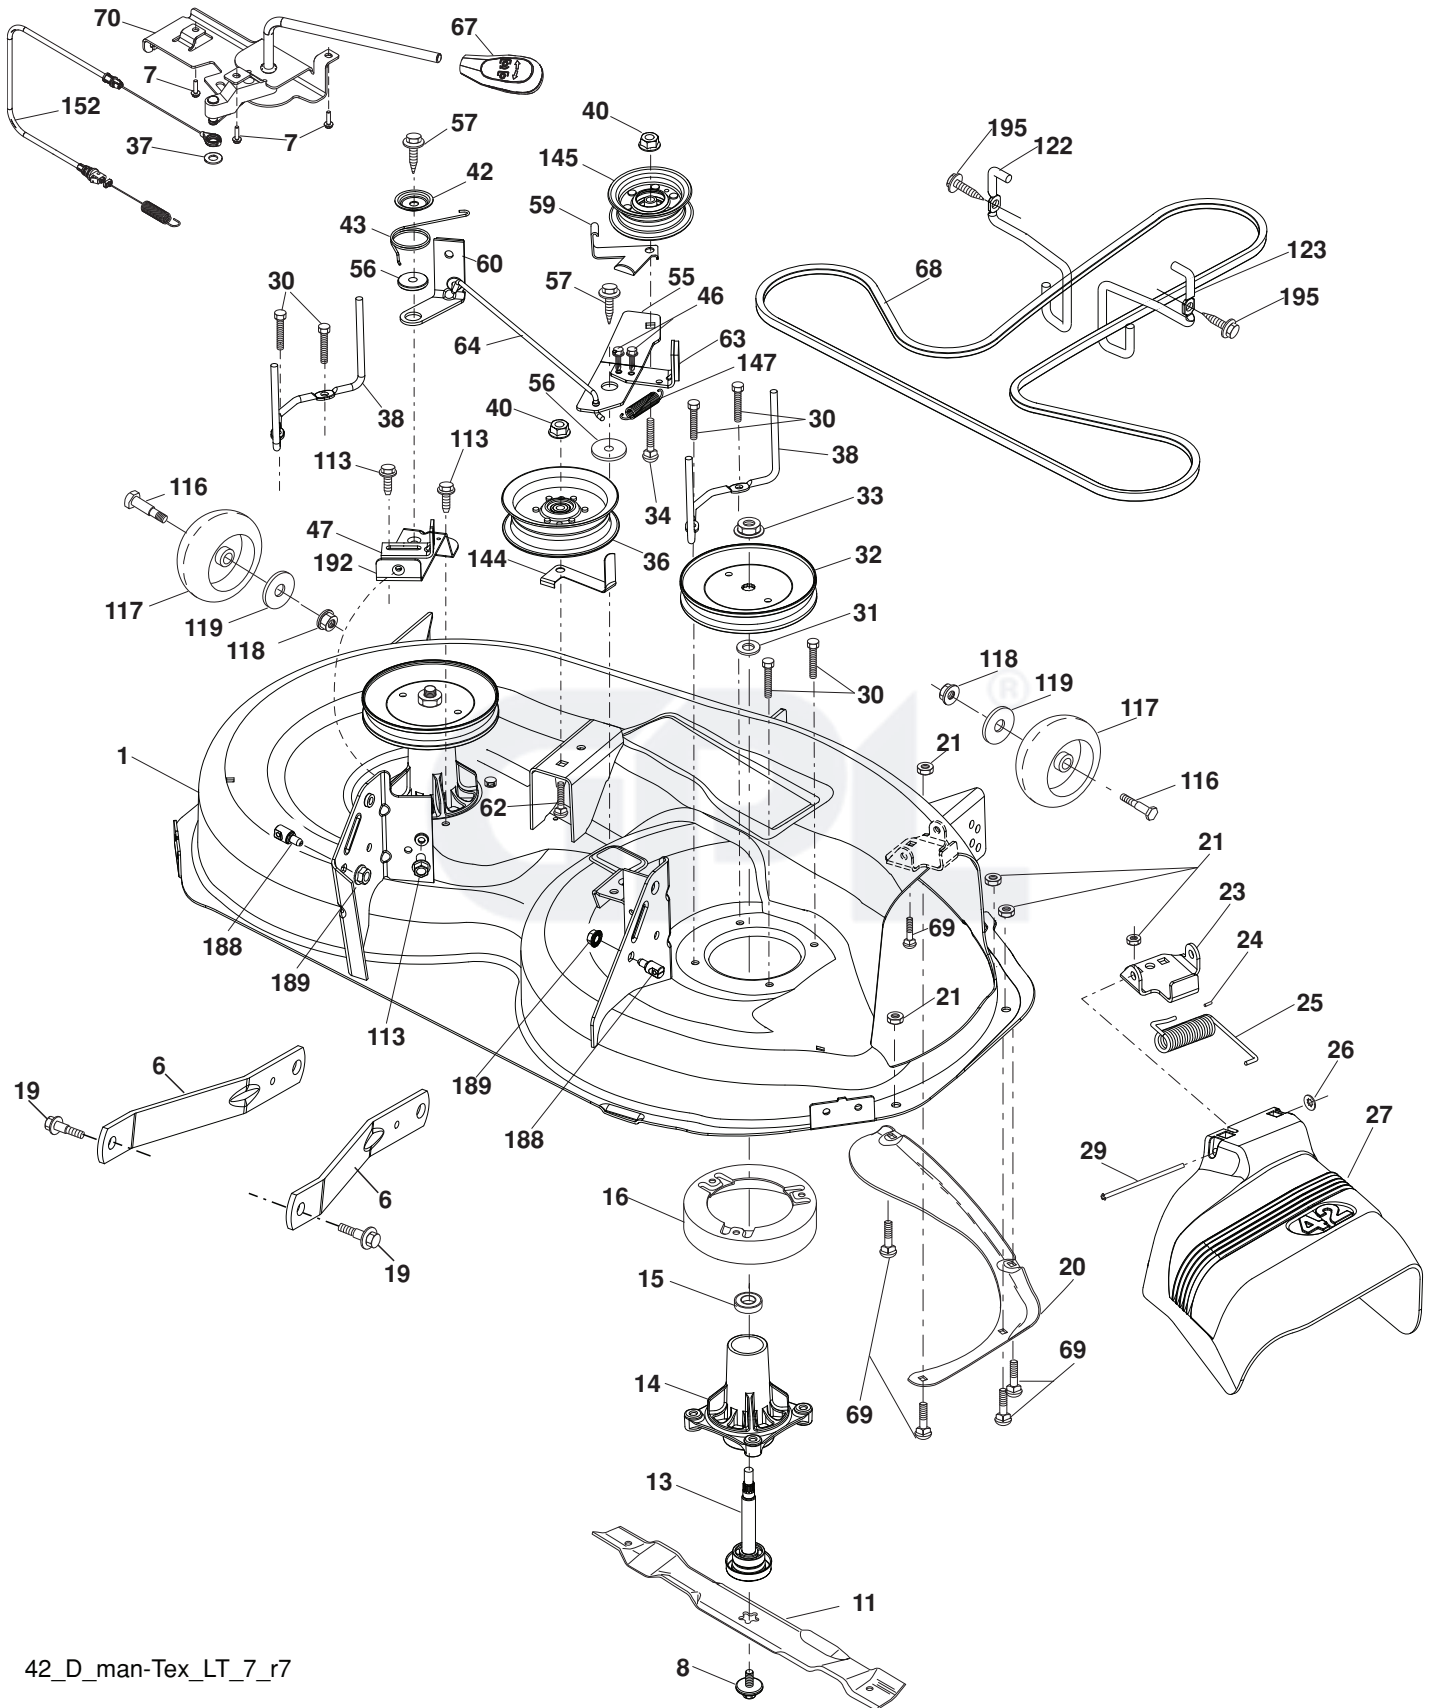


TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69 MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 64-95	Mower Housing	56	532 19 90-92	Spacer, Retainer
6	532 19 51-86	Arm Suspension	57	817 00 06-16	Screw Hexwsh Thd 3/8-16 x 1
7	532 41 63-58	Screw 10 x .750 BOS Thread	59	532 14-10-43	Guard, Tuv Idler (94)
8	532 19 30-03	Bolt/Washer Asm 7/16-20 unf	60	532 19 72-61	Arm Brake Mower
11	532 13 89-71	Blade, 42" Hi-Lift (For bagging or discharge)	62	872 11 06-16	Bolt Rdhd Sqnk 3/8-16 unc x 2
13	532 19 28-72	Shaft Assembly, Mandrel	63	532 19 94-77	Arm Brake Mower
14	532 18 72-81	Housing, Mandrel	64	532 19 97-90	Linkage Brake
15	532 11 04-85	Bearing, Ball, Mandrel	67	532 40 30-12	Handle, Clutch Cable
16	532 17 44-93	Stripper, Mower Deck	68	532 19 72-53	V-Belt
19	532 19 65-39	Bolt, Shoulder	69	872 14 05-05	Bolt Rdhd Sqnk 5/16-18 x 5/8
20	532 15 97-70	Baffle, Vortex	70	532 19 83-32	Clutch Asm. Manual
21	873 68 05-00	Nut, Crownlock 5/16-18 unc	113	817 00 05-10	Screw 5/16-18
23	532 19 25-57	Bracket, Deflector	116	532 12 48-42	Bolt Shoulder
24	532 10 53-04	Cap, Sleeve	117	532 18 86-06	Wheel Gauge
25	532 19 70-26	Spring, Torsion, Deflector	118	873 93 06-00	Nut Lock 3/8-16
26	532 11 04-52	Nut, Push	119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
27	532 40 30-04	Shield, Deflector	122	532 19 72-58	Keeper Belt Eng. LH
29	532 13 14-91	Rod, Hinge	123	532 19 72-59	Keeper Belt Eng. RH
30	532 17 39-84	Screw Thdrol Rolling Wsh Hd	144	532 19 92-04	Keeper Belt
31	532 18 76-90	Washer, Spacer	145	532 19 31-97	Pulley, Idler, Flat
32	532 19 74-73	Pulley, Mandrel	147	532 40 19-71	Spring Return
33	532 40 02-34	Nut, Toplock, Flanged	152	532 40 87-14	Cable Clutch Manual w/Spr.
34	872 11 06-12	Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5	188	532 19 51-61	Stud Fastener
36	532 19 73-79	Pulley Idler	189	873 90 05-00	Nut Lock Hex Flange
37	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	192	532 19 72-60	Bracket Brake Stand LH
38	532 19 91-89	Keeper Belt LH Mandrel	195	817 00 06-12	Screw Hexwsh Thdr 3/8-16 x 3/4
40	873 90 06-00	Nut, Lock Flg. 3/8-16 unc	--	532 19 28-70	Mandrel Assembly (Includes housing, shaft and shaft hardware only-pulley not included)
42	532 19 84-10	Spring Torsion Brake	--	532 19 96-08	Replacement Mower, Complete
43	532 19 72-56	Spring Torsion Retainer			
46	532 13 77-29	Screw Thd Roll 1/4-20 x 5/8			
47	532 19 72-50	Bracket Clutch Cable			
55	532 19 72-49	Arm, Idler			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2223A2 (96041006900), PRODUCT NO. 960 41 00-69
MOWER LIFT

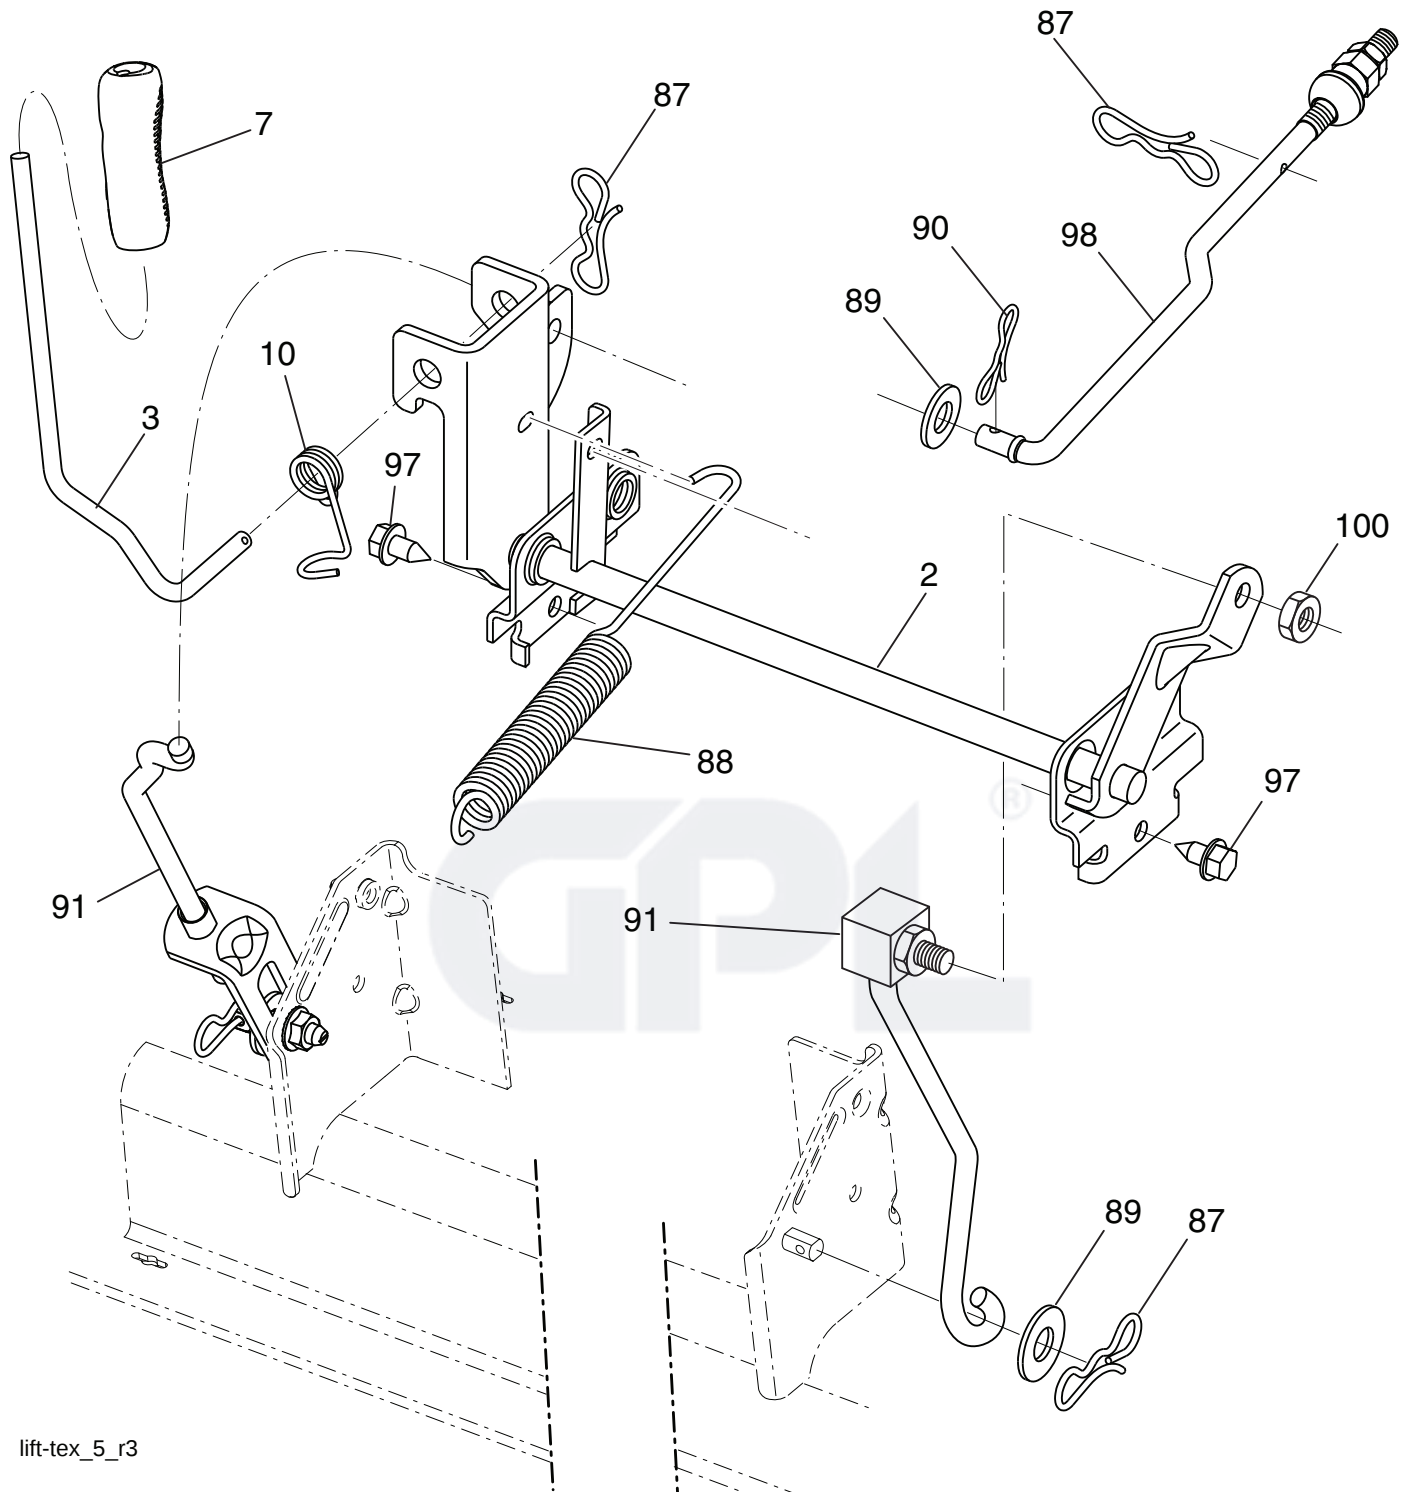

lift-tex_5_r3

KEY NO.	PART NO.	DESCRIPTION
2	532 19 52-23	Shaft Asm., Lift
3	532 19 52-31	Lever Asm., Lift RH
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 41 07-10	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc

KEY NO.	PART NO.	DESCRIPTION
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	532 19 51-81	Link Lift Susp Mower Rear
97	817 00 06-12	Screw 3/8-16 x .75
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Centerlock 3/8-16
NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm		