

# **ILLUSTRATED PARTS LIST**


**MODEL NO. 96041014601**

**CUSTOMER CATALOG NO. LT2227A2**

**PRODUCT NO. 960 41 01-46**




**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**DECALS 27**

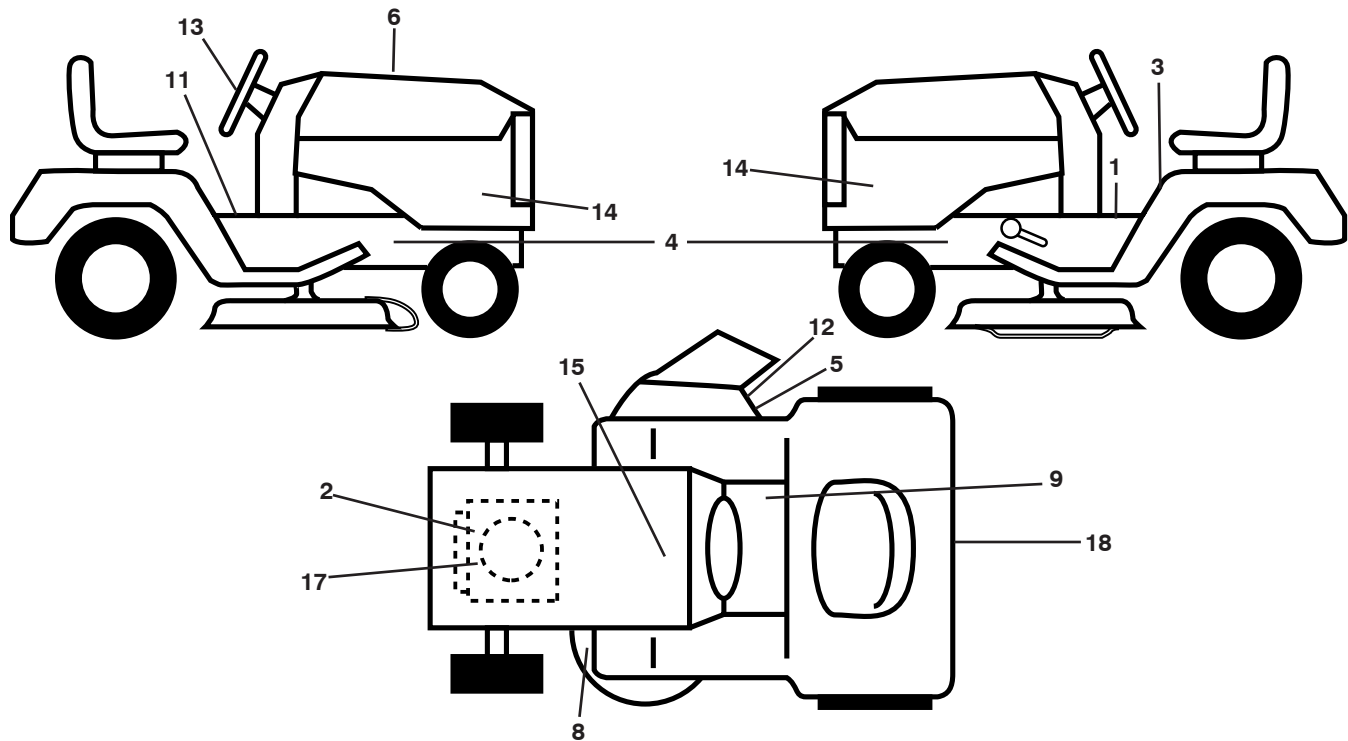

| KEY NO. | PART NO.     | DESCRIPTION            |
|---------|--------------|------------------------|
| 1       | 532 14 08-37 | Decal, Saddle          |
| 2       | 532 19 68-41 | Decal, Warn. Eng. Sym. |
| 3       | 532 40 03-89 | Decal, Warn. Sym.      |
| 4       | 532 15 97-36 | Decal, Chassis Hot     |
| 5       | 532 19 63-57 | Decal, Deflect         |
| 6       | 532 44 25-91 | Decal, RPL             |
| 8       | 532 19 87-85 | Decal, Mower Schematic |
| 9       | 532 17 83-02 | Decal, Oper. Cruise    |
| 11      | 532 15 97-37 | Decal, Brake/Clutch    |
| 12      | 532 18 21-66 | Decal, Cutfinger       |
| 13      | 532 44 26-47 | Decal, Steering Whl    |

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 14      | 532 44 27-53 | Decal, Panel Side             |
| 15      | 532 14 50-05 | Decal, Decal, Battery Dan/Poi |
| 17      | 532 44 26-76 | Decal, Engine HP              |
| 18      | 532 43 74-43 | Decal, Fender Logo            |
| --      | 532 16 25-98 | Decal, Drawbar                |
| --      | 532 16 69-60 | Decal, Bypass                 |
| --      | 532 41 19-03 | Pad, Footrest, LH             |
| --      | 532 41 22-79 | Pad, Footrest, RH             |
| --      | 532 44 36-98 | Manual, Operator's (Eng)      |

**WHEELS AND TIRES**

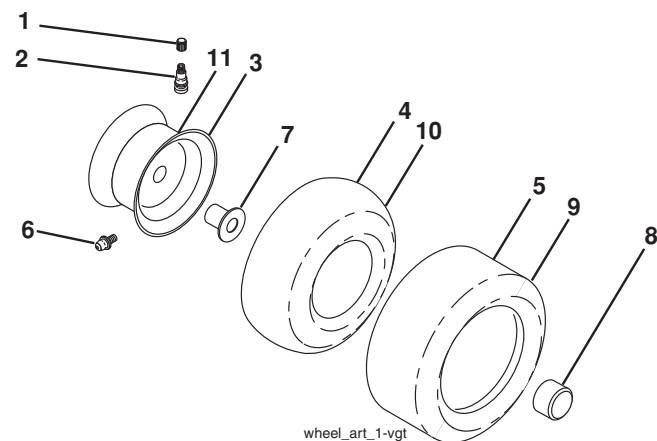


| KEY NO. | PART NO.     | DESCRIPTION                        |
|---------|--------------|------------------------------------|
| 1       | 532 05 91-92 | Cap, Valve, Tire                   |
| 2       | 532 06 51-39 | Stem, Valve                        |
| 3       | 532 18 18-39 | Rim Assembly, Front                |
| 4       | 532 00 81-34 | Tube, Front (Service Item Only)    |
| 5       | 532 10 62-30 | Tire, Front                        |
| 6       | 532 12 49-57 | Fitting, Grease (Front Wheel Only) |
| 7       | 532 12 49-59 | Bearing, Flange (Front Wheel Only) |
| 8       | 532 17 50-39 | Cap, Axle (Front Wheel Only)       |
| 9       | 532 10 55-88 | Tire, Rear                         |
| 10      | 532 00 71-54 | Tube, Rear (Service Item Only)     |
| 11      | 532 14 45-10 | Rim Assembly, Rear                 |
| --      | 532 14 43-34 | Sealant, Tire (10 oz. Tube)        |


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46  
SCHEMATIC **38**

SCH12

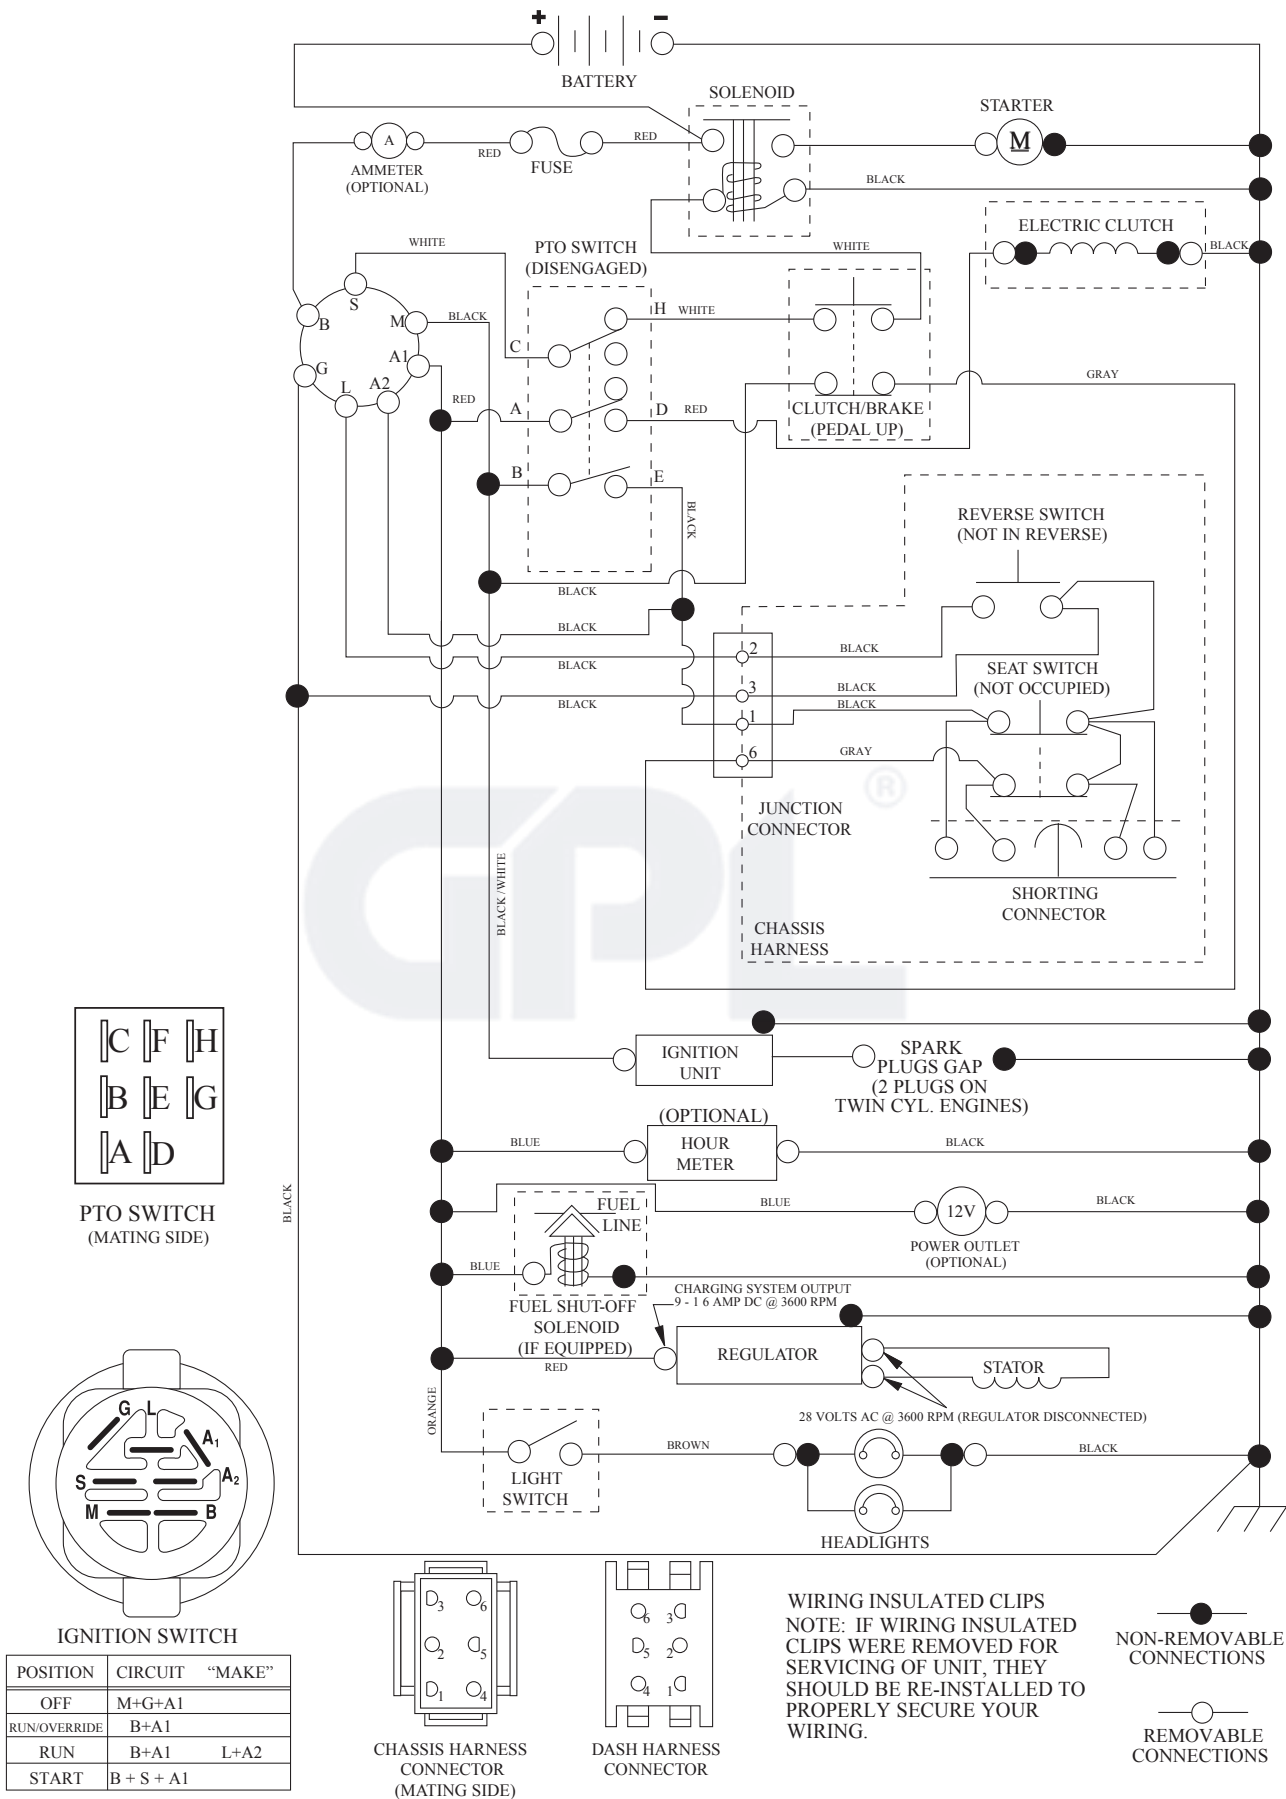

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46  
ELECTRICAL 32**

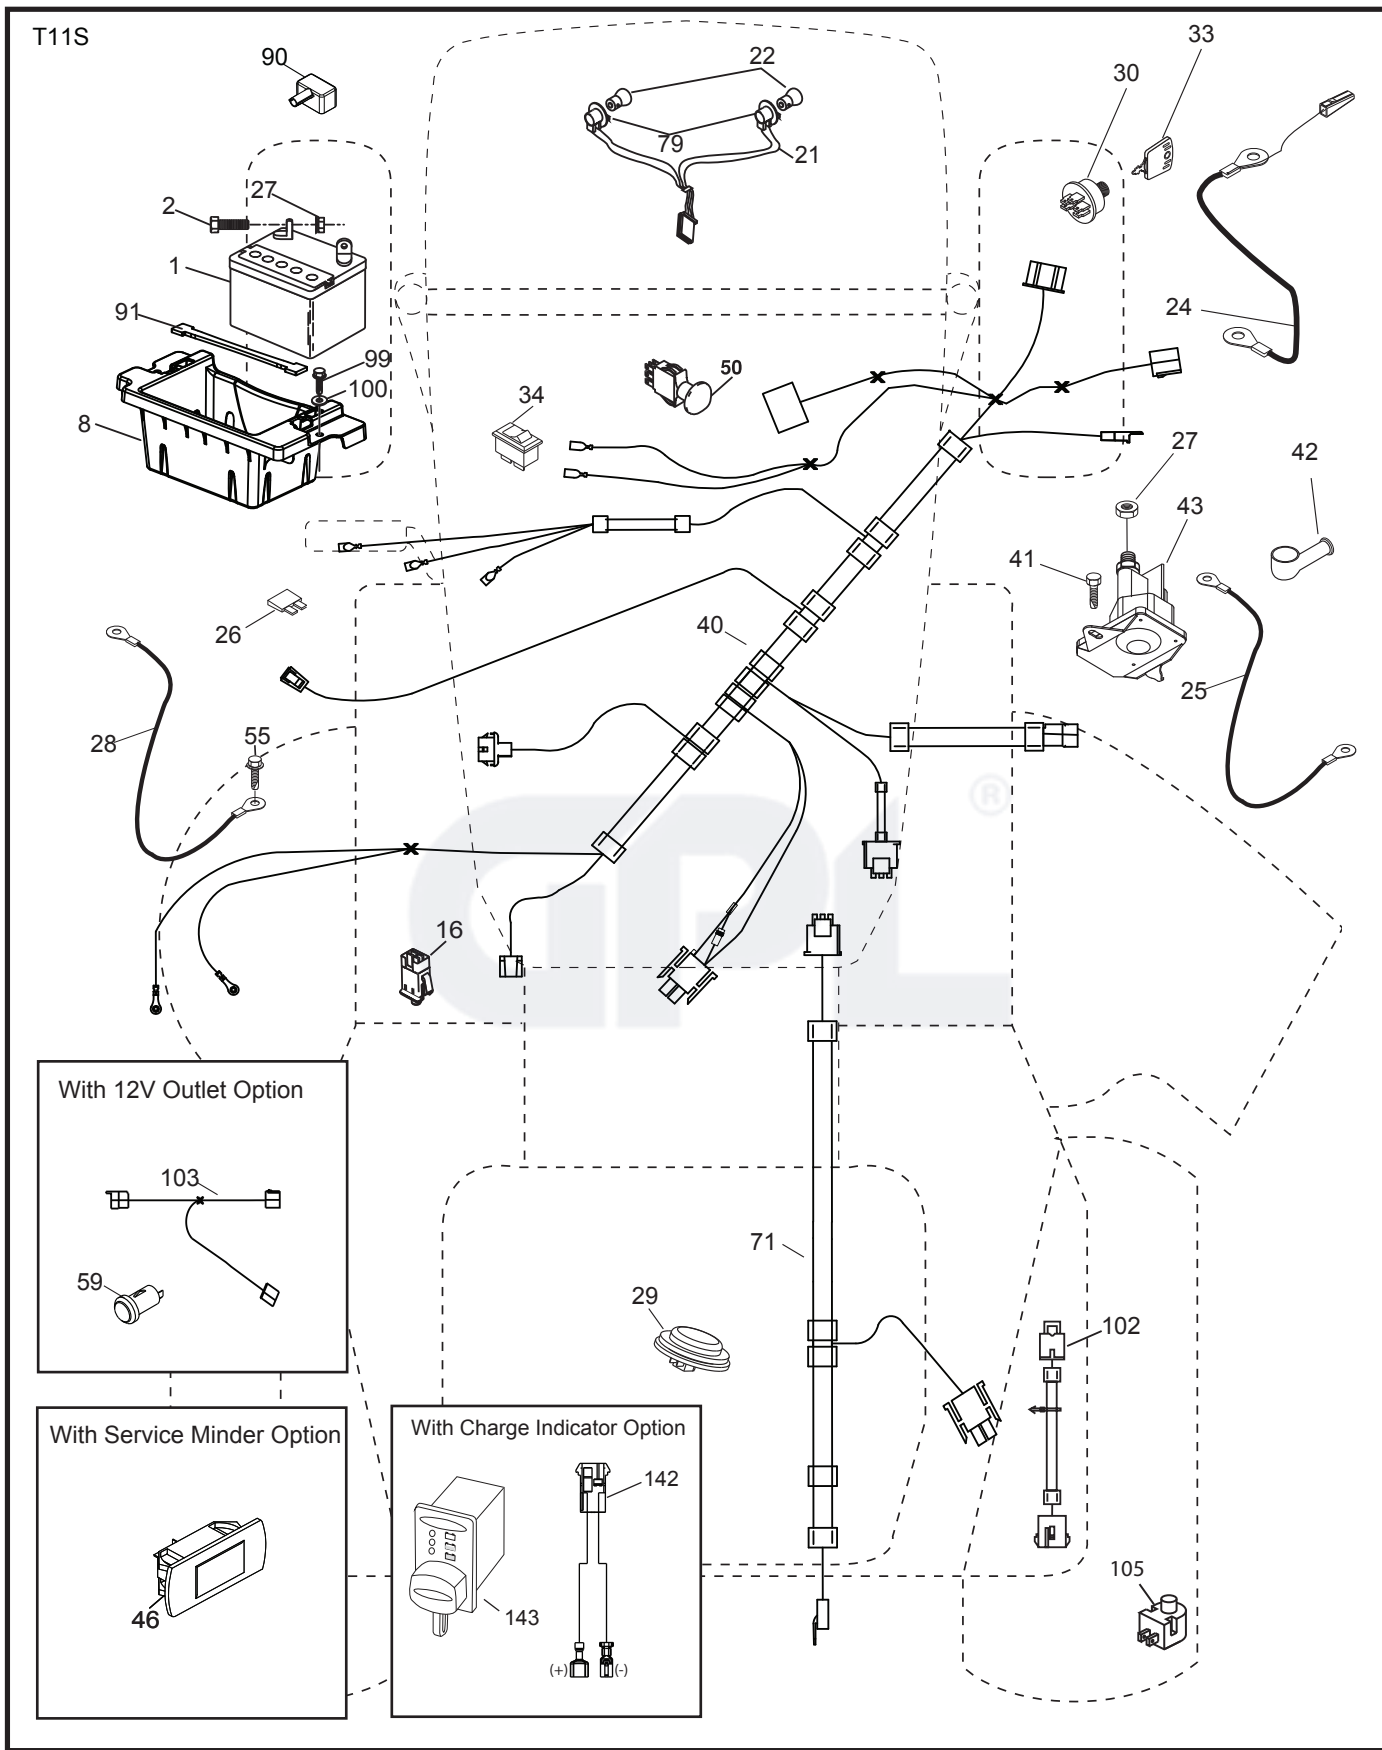


**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**ELECTRICAL 32**

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                      |
|------------|--------------|----------------------------------|
| 1          | 532 16 34-65 | Battery                          |
| 2          | 874 76 04-12 | Bolt Hex Hd 1/4-20 unc x 3/4     |
| 8          | 532 18 64-91 | Battery Box                      |
| 16         | 532 17 61-38 | Switch Interlock                 |
| 21         | 532 40 02-52 | Harness Socket Light             |
| 22         | 532 00 41-52 | Bulb, Light # 1156               |
| 24         | 532 40 02-53 | Cable Battery                    |
| 25         | 532 41 28-95 | Cable Starter                    |
| 26         | 532 17 51-58 | Fuse                             |
| 27         | 873 51 04-00 | Nut Keps Hex 1/4-20 unc          |
| 28         | 532 14 54-91 | Cable Ground 21" Blk 6 Ga.       |
| 29         | 532 40 15-45 | Switch Seat                      |
| 30         | 532 19 33-50 | Switch Ign                       |
| 33         | 532 41 19-35 | Key/Chain                        |
| 34         | 532 11 07-12 | Switch Light/Reset               |
| 40         | 532 40 11-04 | Harness Dash                     |
| 41         | 817 72 04-08 | Screw Thd Cut 1/4-20 x 1/2       |
| 42         | 532 13 15-63 | Cover Terminal Red               |
| 43         | 532 19 25-07 | Solenoid                         |
| 46         | 532 40 17-63 | Gauge Hourmeter                  |
| 50         | 532 17 46-51 | Switch PTO                       |
| 55         | 817 06 05-12 | Screw Thdrol 5/16-18 x 3/4       |
| 71         | 532 19 42-76 | Harness Chassis                  |
| 79         | 532 17 52-42 | Socket Asm Bulb Twistlock        |
| 90         | 532 43 53-95 | Cover Terminal Battery           |
| 91         | 532 19 02-70 | Strap Battery                    |
| 99         | 817 67 04-12 | Screw Hexwsh Thdrol 1/4-20 x 3/4 |
| 100        | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga.       |
| 102        | 532 40 44-54 | Harness Pigtail                  |
| 105        | 532 40 75-68 | Switch Reverse TT Pedal Control  |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**CHASSIS AND ENCLOSURES 39**

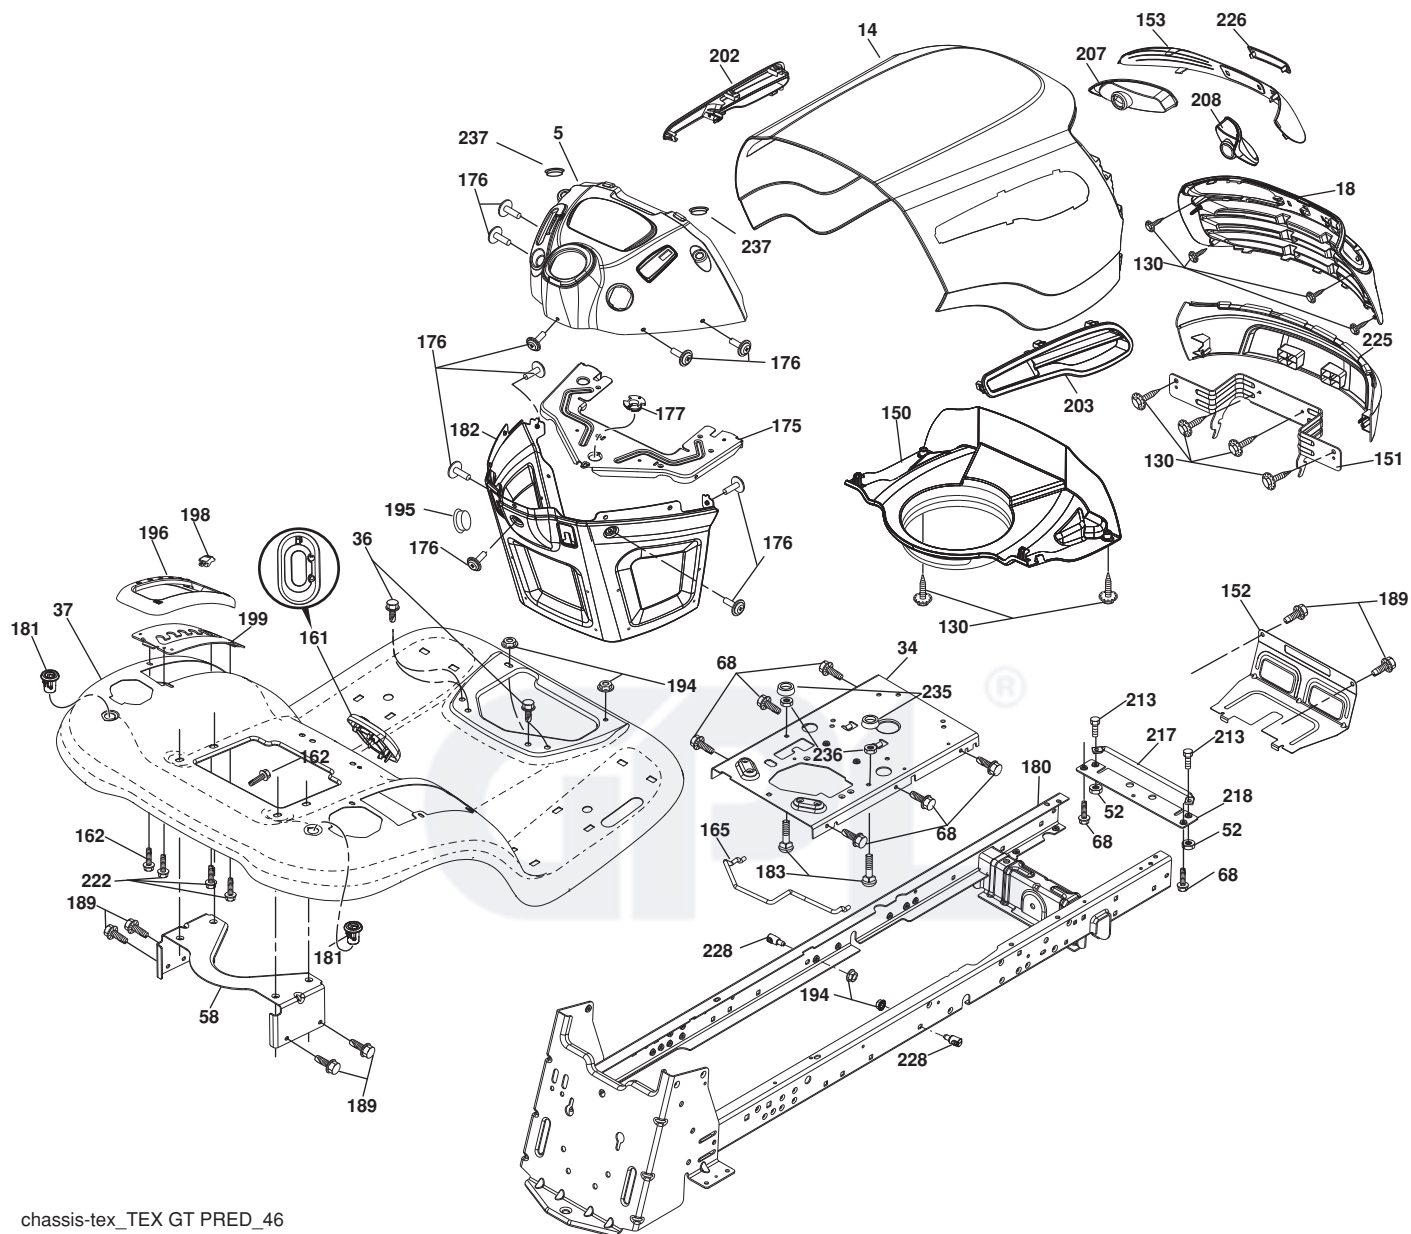

chassis-tex\_TEX GT PRED\_46


**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**CHASSIS AND ENCLOSURES** **39**

| KEY NO. | PART NO.     | DESCRIPTION                      |
|---------|--------------|----------------------------------|
| 5       | 532 42 82-71 | Dash                             |
| 14      | 532 44 38-24 | Hood                             |
| 18      | 532 42 73-33 | Grille                           |
| 34      | 532 19 61-25 | Plate Engine                     |
| 36      | 817 06 05-12 | Screw 5/16-18 x 3/4              |
| 37      | 532 44 38-16 | Fender                           |
| 52      | 873 68 05-00 | Nut Crown Lock 5/16-18           |
| 58      | 532 19 43-14 | Bracket Support Fender           |
| 68      | 817 49 05-08 | Screw 5/16-18 x 1/2              |
| 130     | 532 41 63-58 | Screw #10 x 0.750 BOS Thread     |
| 150     | 532 19 94-11 | Air Duct                         |
| 151     | 532 19 63-32 | Bracket Pivot                    |
| 152     | 532 19 95-35 | Shield Browning                  |
| 153     | 532 42 47-17 | Lens Asm                         |
| 161     | 532 41 18-79 | Window Fuel                      |
| 162     | 532 14 24-32 | Screw                            |
| 165     | 532 19 68-26 | Support Tank Rear                |
| 175     | 532 19 63-04 | Crossmember                      |
| 176     | 532 40 07-76 | Screw 10-24 x 5/8                |
| 177     | 532 19 52-27 | Bushing Steering                 |
| 180     | 532 19 54-77 | Chassis                          |
| 181     | 532 40 47-96 | Bushing Mtg. Fender Crgo         |
| 182     | 532 40 68-59 | Dash Lower                       |
| 183     | 874 78 05-20 | Bolt Fin Hex 5/16-18 unc x 1-1/4 |

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 189     | 817 00 05-12 | Screw 5/16-18 x 3/4           |
| 194     | 873 90 05-00 | Nut Lock Hex Flange 5/16-18   |
| 195     | 532 40 41-37 | Plug Hole Dash Lower          |
| 196     | 532 41 18-78 | Console Asm. Deck Lift        |
| 198     | 532 44 15-52 | Indicator Deck Lift           |
| 199     | 532 19 63-77 | Plate Deck Lift               |
| 202     | 532 42 32-72 | Vent Side RH                  |
| 203     | 532 42 32-71 | Vent Side LH                  |
| 207     | 532 19 89-64 | Bezel LH                      |
| 208     | 532 19 89-63 | Bezel RH                      |
| 213     | 874 76 05-12 | Bolt Hex HD 5/16-18 unc x 3/4 |
| 217     | 532 40 91-67 | Rod Pivot Hood                |
| 218     | 532 19 63-95 | X-Piece Hood Stop             |
| 222     | 532 13 77-29 | Screw 1/4-20 x 5/8            |
| 225     | 532 44 38-25 | Bumper                        |
| 226     | 532 42 47-16 | Logo                          |
| 228     | 532 19 51-61 | Stud Fastner                  |
| 235     | 532 40 61-29 | Spacer Fender                 |
| 236     | 873 93 05-00 | Nut Lock 5/16-18 unc          |
| 237     | 532 40 37-04 | Plug Mount Cargo              |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**DRIVE 40**

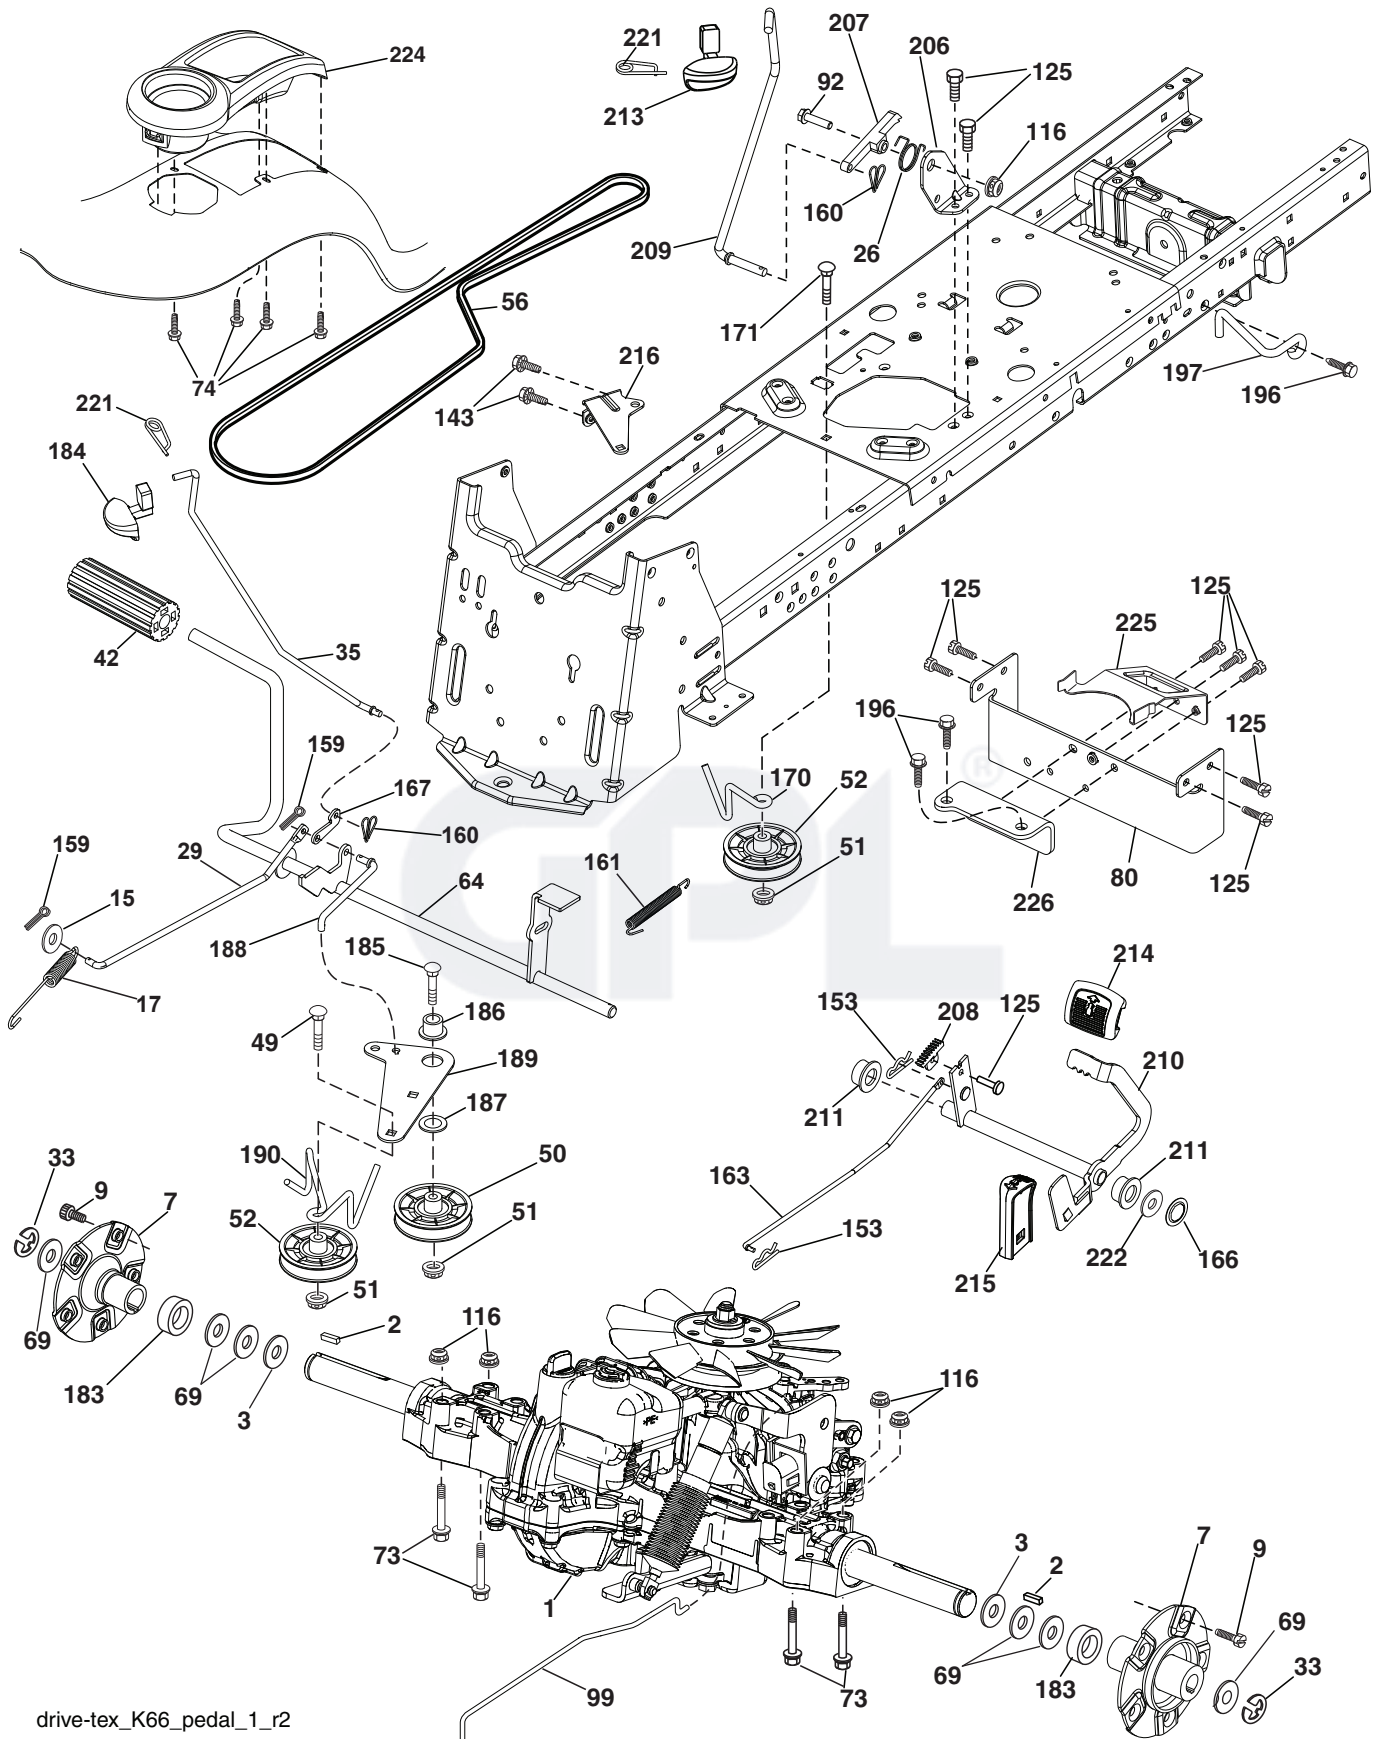


drive-tex\_K66\_pedal\_1\_r2

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**DRIVE 40**

| KEY NO. | PART NO.     | DESCRIPTION                                                                 | KEY NO. | PART NO.     | DESCRIPTION                       |
|---------|--------------|-----------------------------------------------------------------------------|---------|--------------|-----------------------------------|
| 1       | — — — — —    | Transaxle, TUFFTORQ K66 Y (426118)(Order parts from transaxle manufacturer) | 163     | 532 40 72-46 | Rod Pedal Control                 |
| 2       | 532 00 70-70 | Key 1/4 x 2.5                                                               | 166     | 532 42 91-64 | Nut Push .625                     |
| 3       | 532 00 75-63 | Washer Thrust                                                               | 167     | 532 40 52-57 | Latch Brake Parking               |
| 7       | 532 19 98-37 | Hub Asm. Wheel                                                              | 170     | 532 19 43-22 | Keeper Belt Centerspan            |
| 9       | 532 14 00-80 | Bolt Hub Wheel Rear                                                         | 171     | 872 11 06-16 | Bolt RDHD SQNK 3/8-16 unc x 2     |
| 15      | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga.                                               | 183     | 532 19 73-57 | Spacer Split                      |
| 17      | 532 40 10-72 | Spring, Brake                                                               | 184     | 532 44 14-55 | Handle Parking Brake              |
| 26      | 532 19 96-79 | Spring Return Cruise                                                        | 185     | 872 11 06-22 | Bolt Rdhd 3/8-16 unc x 2-3/4 Gr.5 |
| 29      | 532 40 72-45 | Rod, Brake                                                                  | 186     | 532 19 43-21 | Spacer Retainer                   |
| 33      | 812 00 00-53 | Ring E                                                                      | 187     | 819 13 32-10 | Washer                            |
| 35      | 583 86 45-01 | Rod, Brake, Park                                                            | 188     | 532 19 43-23 | Link Clutch Ground Drive          |
| 42      | 532 12 48-72 | Cover, Foot Pedal                                                           | 189     | 532 19 43-17 | Bellcrank Ground Drive            |
| 49      | 872 11 06-14 | Bolt                                                                        | 190     | 532 19 43-18 | Keeper Bellcrank Ground Drive     |
| 50      | 532 19 43-27 | Pulley Idler Flat                                                           | 196     | 817 00 06-16 | Screw 3/8-16 x 1                  |
| 51      | 873 90 06-00 | Lock Nut 3/8-16                                                             | 197     | 532 19 97-69 | Link Clutch Anti-Rotation         |
| 52      | 532 19 43-26 | Idler V-Groove 910" Offset                                                  | 206     | 532 19 78-67 | Bracket Mount Latch Cruise        |
| 56      | 532 12 59-07 | V-Belt, Drive                                                               | 207     | 532 19 78-68 | Latch Control Cruise              |
| 64      | 532 19 78-65 | Shaft Asm. Pedal Brake Control                                              | 208     | 532 19 78-69 | Gear Sector Control Cruise        |
| 69      | 532 12 38-00 | Washer 1-1/32 x 1-5/8 x 16 Ga.                                              | 209     | 532 19 95-92 | Rod Control Cruise                |
| 73      | 874 49 05-44 | Bolt Hex 5/16-18 Gr. 5                                                      | 210     | 532 19 78-60 | Rocker Asm. Pedal Control         |
| 74      | 532 14 24-32 | Screw 1/4 x 1/2                                                             | 211     | 532 12 01-83 | Bearing Nylon                     |
| 80      | 532 40 71-82 | Strap Torque                                                                | 213     | 532 40 31-19 | Knob Control Cruise               |
| 92      | 874 76 05-20 | Bolt Fin Hex 5/16-18 unc x 1.25                                             | 214     | 532 42 12-63 | Pedal Forward                     |
| 99      | 532 41 57-44 | Rod Bypass                                                                  | 215     | 532 40 17-23 | Pedal Reverse                     |
| 116     | 873 90 05-00 | Nut Lock Hex Flange 5/16-18                                                 | 216     | 532 19 61-31 | Bracket Pulley Idler              |
| 125     | 817 00 05-12 | Screw 5/16-18 x 3/4                                                         | 221     | 532 40 31-87 | Retainer Spring Clip Handle       |
| 143     | 817 49 05-08 | Screw 5/16-18 x 1/2                                                         | 222     | 879 21 20-10 | Washer 21/32 x 1-1/4 x 10 Ga.     |
| 153     | 532 12 47-88 | Retainer Spring                                                             | 224     | 532 41 22-98 | Console Toolbar                   |
| 159     | 876 02 04-12 | Pin Cotter 1/8 x 3/4                                                        | 225     | 532 40 73-11 | Keeper Belt Trans.                |
| 160     | 532 16 94-84 | Retainer Clip                                                               | 226     | 532 40 71-09 | Bracket Mount Torque              |
| 161     | 532 10 57-09 | Spring, Return, Clutch                                                      |         |              |                                   |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

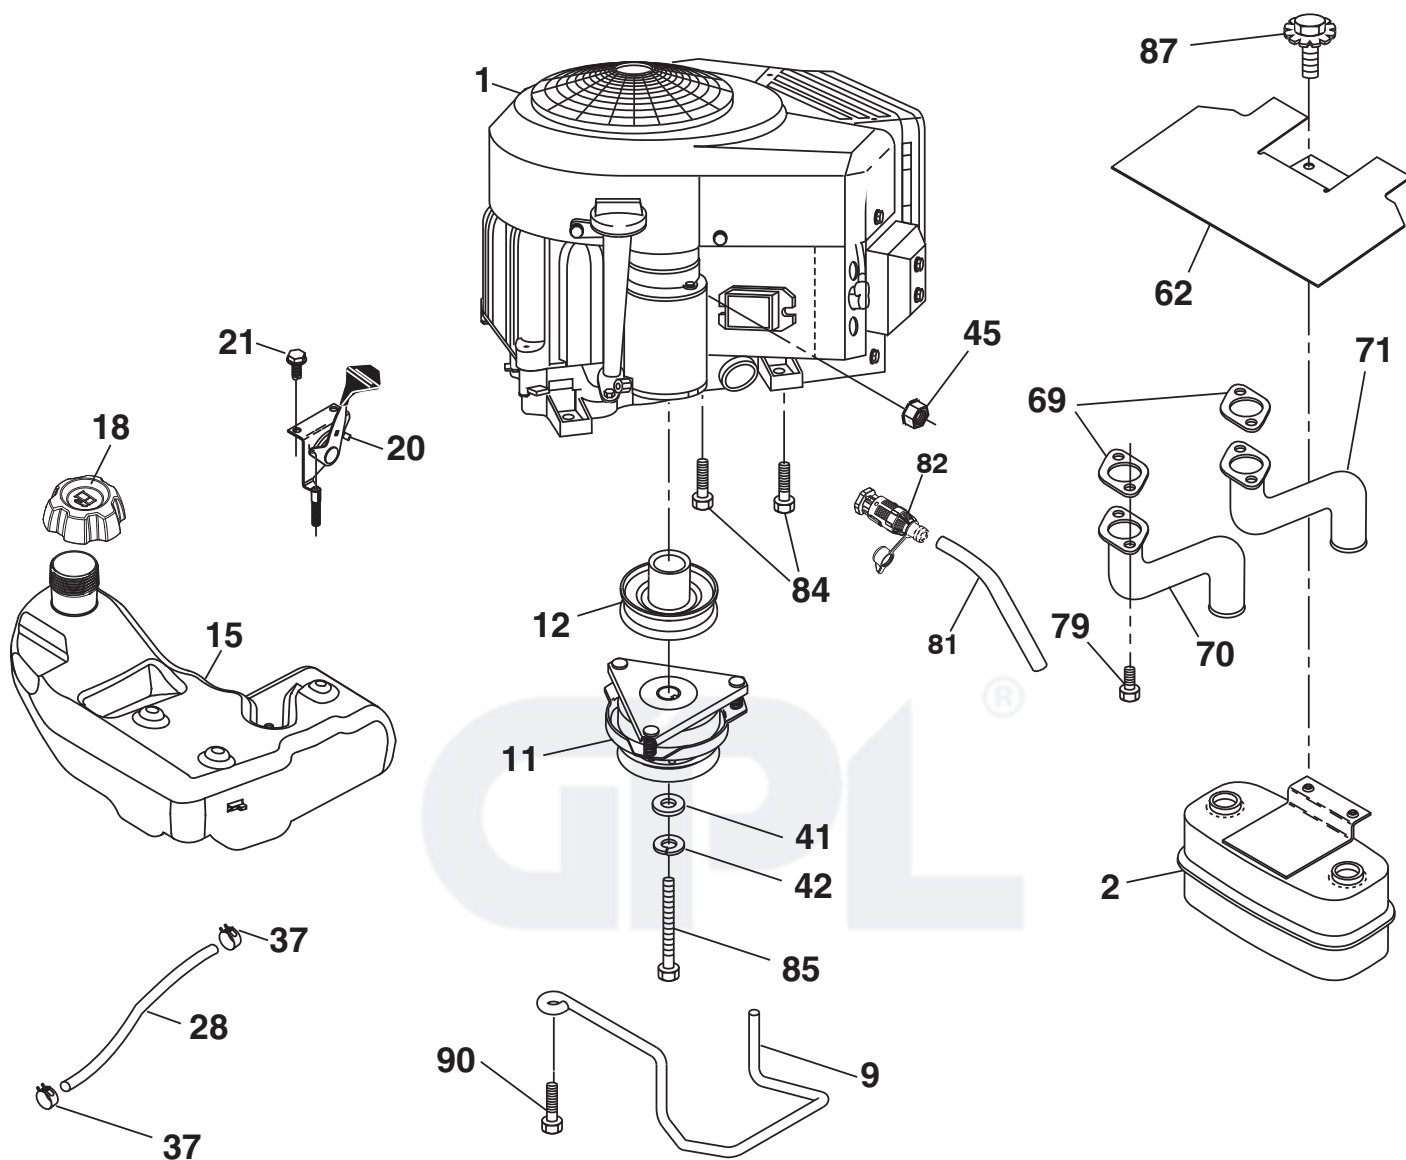

## SPARK ARRESTER KIT

engine-tex\_bs-2cyl\_65

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46  
ENGINE 24**


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                                                                        |
|------------|--------------|------------------------------------------------------------------------------------|
| 1          | - - - - -    | Briggs Model No. 44Q777-1583-G5 (442590)<br>(Order parts from engine manufacturer) |
| 2          | 532 14 97-23 | Muffler                                                                            |
| 9          | 532 19 43-20 | Keeper Belt Engine                                                                 |
| 11         | 532 17 93-35 | Clutch Ogura                                                                       |
| 12         | 532 19 43-43 | Pulley Engine                                                                      |
| 15         | 532 19 34-99 | Tank Fuel 4.0                                                                      |
| 18         | 532 43 02-18 | Cap Asm                                                                            |
| 20         | 532 42 35-02 | Control Throttle                                                                   |
| 21         | 532 41 63-58 | Screw #10 x 0.750 BOS Thread                                                       |
| 28         | 532 14 21-58 | Fuel Line                                                                          |
| 29         | 532 13 71-80 | Spark Arrester Kit                                                                 |
| 37         | 532 12 34-87 | Clamp Hose                                                                         |
| 41         | 532 12 61-97 | Washer 1-1/2 OD x 15/32 ID x .250                                                  |
| 42         | 810 04 07-00 | Washer Lock 7/16                                                                   |
| 45         | 873 51 04-00 | Nut Keps Hex 1/4-20 unc                                                            |
| 62         | 532 43 40-17 | Shield Heat Muffler                                                                |
| 69         | 532 16 53-91 | Gasket                                                                             |
| 70         | 581 88 11-01 | Tube Exhaust LH                                                                    |
| 71         | 581 88 10-01 | Tube Exhaust RH                                                                    |
| 79         | 532 18 39-06 | Screw Socket HD 5/16-18 x 1                                                        |
| 81         | 532 14 84-56 | Tube Drain Oil Easy                                                                |
| 82         | 532 42 82-87 | Plug Drain Oil                                                                     |
| 84         | 817 06 06-20 | Screw 3/8-16 x 1                                                                   |
| 85         | 532 17 99-53 | Bolt Hex 7/16-20 x 3.75 Gr. 5                                                      |
| 87         | 532 19 82-39 | Bolt 5/16-18 unc x 1 w/Sems                                                        |
| 90         | 817 00 06-16 | Screw 3/8-16 x 1                                                                   |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

### Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**STEERING ASSEMBLY [41]**

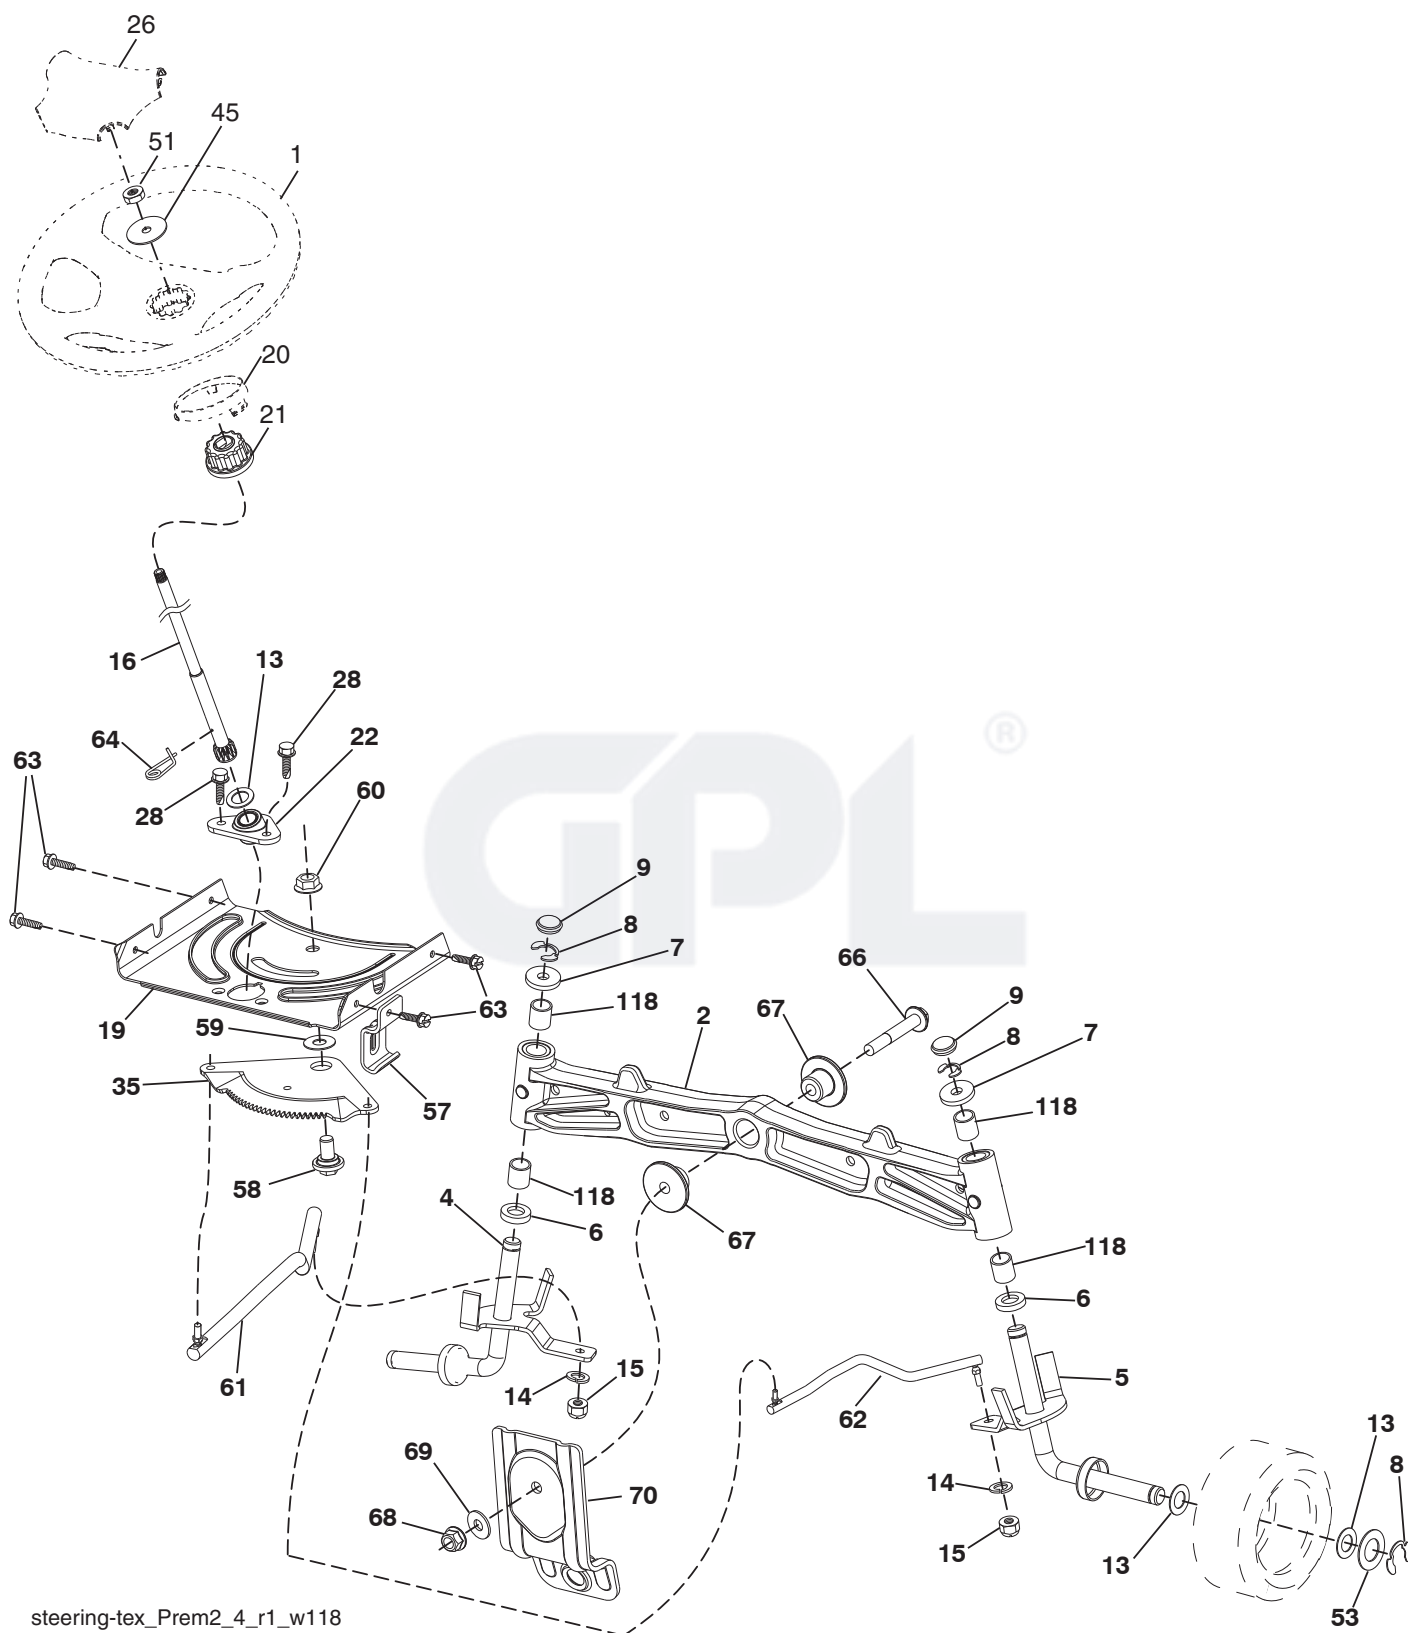

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**STEERING ASSEMBLY 41**

| KEY NO. | PART NO.     | DESCRIPTION                         |
|---------|--------------|-------------------------------------|
| 1       | 532 19 46-37 | Wheel, Steering                     |
| 2       | 532 41 35-91 | Axle Asm., Front                    |
| 4       | 532 40 30-89 | Spindle Asm., LH                    |
| 5       | 532 40 30-90 | Spindle Asm., RH                    |
| 6       | 532 12 49-31 | Bearing, Race Thrust Harden         |
| 7       | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga.       |
| 8       | 812 00 00-29 | Ring, Clip #T5304-75                |
| 9       | 532 12 12-32 | Cap, Spindle                        |
| 13      | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga.       |
| 14      | 810 04 06-00 | Washer, Lock Hvy Hlcl Spr 3/8       |
| 15      | 873 54 06-00 | Nut, Crown Lock 3/8-24 unf          |
| 16      | 532 19 47-46 | Shaft Steering                      |
| 19      | 532 19 47-29 | Plate Steering                      |
| 20      | 532 42 47-40 | Boot Steering                       |
| 21      | 532 18 67-37 | Adapter, Wheel Steering             |
| 22      | 532 42 05-37 | Bushing, Strg. Blk                  |
| 26      | 532 19 46-03 | Insert, Wheel Steering              |
| 28      | 817 00 06-12 | Screw 3/8-16 x 3/4                  |
| 35      | 532 19 47-32 | Gear, Sector Plate                  |
| 45      | 819 18 38-12 | Washer 9/16 x 2-3/8 x 12 Ga.        |
| 51      | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf      |
| 53      | 532 18 89-67 | Washer Hardened .793 x 1.637 x .060 |
| 57      | 532 19 72-46 | Bracket Upstop                      |
| 58      | 532 19 47-47 | Bolt Shoulder Sector Pivot CFM      |
| 59      | 532 19 47-48 | Washer Thrust Sector Steering       |
| 60      | 873 97 10-00 | Nut Flange Lock 5/8-11              |
| 61      | 532 19 47-40 | Draglink, LH                        |
| 62      | 532 19 47-41 | Draglink, RH                        |
| 63      | 817 00 05-12 | Screw 5/16-18 x 3/4                 |
| 64      | 532 19 98-49 | Retainer Clip Spring Steering       |
| 66      | 871 02 07-48 | Bolt Hex Fghd 7/16-14 x 3 Serr      |
| 67      | 532 19 47-37 | Bushing PM Front Axle               |
| 68      | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5       |
| 69      | 532 19 91-62 | Washer 1.5 x .505 x .118            |
| 70      | 532 19 61-97 | Bracket Deck Susp. Front            |
| 118     | 532 40 60-13 | Bushing                             |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

## 44




**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**MOWER DECK 44**

| KEY NO. | PART NO.     | DESCRIPTION                     | KEY NO. | PART NO.     | DESCRIPTION                                           |
|---------|--------------|---------------------------------|---------|--------------|-------------------------------------------------------|
| 1       | 532 19 56-32 | Deck Weldment Mower             | 58      | 532 18 73-42 | Baffle Right                                          |
| 6       | 532 19 60-66 | Cover Mandrel LH                | 59      | 532 18 73-44 | Baffle Left                                           |
| 7       | 532 19 71-81 | Cover Mandrel RH                | 60      | 532 18 76-07 | Baffle Center                                         |
| 8       | 532 19 30-03 | Bolt 7/16 Asm. Washer           | 97      | 532 17 85-15 | Washer Hardened                                       |
| 11      | 532 18 72-56 | Blade                           | 98      | 532 19 61-05 | Spring Drive                                          |
| 12      | 532 40 03-37 | Rod Anti-Sway                   | 113     | 872 11 05-08 | Bolt Rdhd. Sqnk. 5/16-18 x 3/4                        |
| 13      | 532 18 72-91 | Shaft Asm. w/Lower Bearing      | 114     | 532 18 75-56 | Rod Tension Relief                                    |
| 14      | 532 18 72-81 | Housing, Mandrel                | 116     | 532 19 34-06 | Bolt, Shoulder                                        |
| 15      | 532 11 04-85 | Bearing, Ball, Mandrel          | 117     | 532 17 48-73 | Gauge Wheel                                           |
| 16      | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga.   | 120     | 819 13 20-12 | Washer 13/32 x 1-1/4 x 12 Ga.                         |
| 18      | 872 14 05-05 | Bolt 5/16-18 unc x 5/8          | 122     | 532 18 75-57 | Bushing Tension Relief                                |
| 19      | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock    | 184     | 873 90 05-00 | Nut Lock Hex Flange                                   |
| 21      | 873 68 05-00 | Nut, Crownlock 5/16-18 unc      | 185     | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5                         |
| 24      | 532 10 53-04 | Cap Sleeve                      | 187     | 532 19 51-61 | Stud Fastener w/"D" Anti-Rotation                     |
| 25      | 532 17 81-02 | Spring, Torsion                 | 189     | 532 19 51-85 | Arm Susp. Mower Rear                                  |
| 26      | 532 11 04-52 | Nut, Push                       | 190     | 532 19 65-39 | Bolt Shoulder                                         |
| 27      | 532 18 89-38 | Deflector Shield                | 192     | 532 19 84-68 | Keeper Belt Idler                                     |
| 29      | 532 13 14-91 | Rod, Hinge                      | 194     | 874 49 07-36 | Bolt Hex HD Washer 7/16-14 x 2.25                     |
| 30      | 532 17 39-84 | Screw, Thdrol. Washer Head      | 196     | 872 14 06-20 | Bolt 3/8-16 x 2-1/2 Gr. 5                             |
| 31      | 532 18 76-90 | Washer, Spacer Mower Vented     | 208     | 817 67 06-08 | Screw 3/8-16 x 1                                      |
| 32      | 532 15 35-35 | Pulley, Mandrel                 | --      | 532 18 72-92 | Mandrel Asm. Service (Includes Key Nos. 13-15 and 33) |
| 33      | 532 40 02-34 | Nut, Flg. Top Lock              | --      | 532 19 77-01 | Replacement Mower, Complete                           |
| 34      | 873 68 06-00 | Nut Crownlock 3/8-16 unc        |         |              |                                                       |
| 39      | 532 19 73-80 | Pulley, Idler, Stationary LH    |         |              |                                                       |
| 43      | 532 19 60-65 | Arm, Idler                      |         |              |                                                       |
| 47      | 532 19 61-03 | Belt Deck Drive                 |         |              |                                                       |
| 49      | 873 90 06-00 | Nut, Lock Flg. 3/8-16 unc       |         |              |                                                       |
| 50      | 872 11 06-16 | Bolt Rdhd. Sqnk. 3/8-16 unc x 2 |         |              |                                                       |
| 52      | 532 19 73-79 | Pulley Idler                    |         |              |                                                       |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**MOWER LIFT 45**

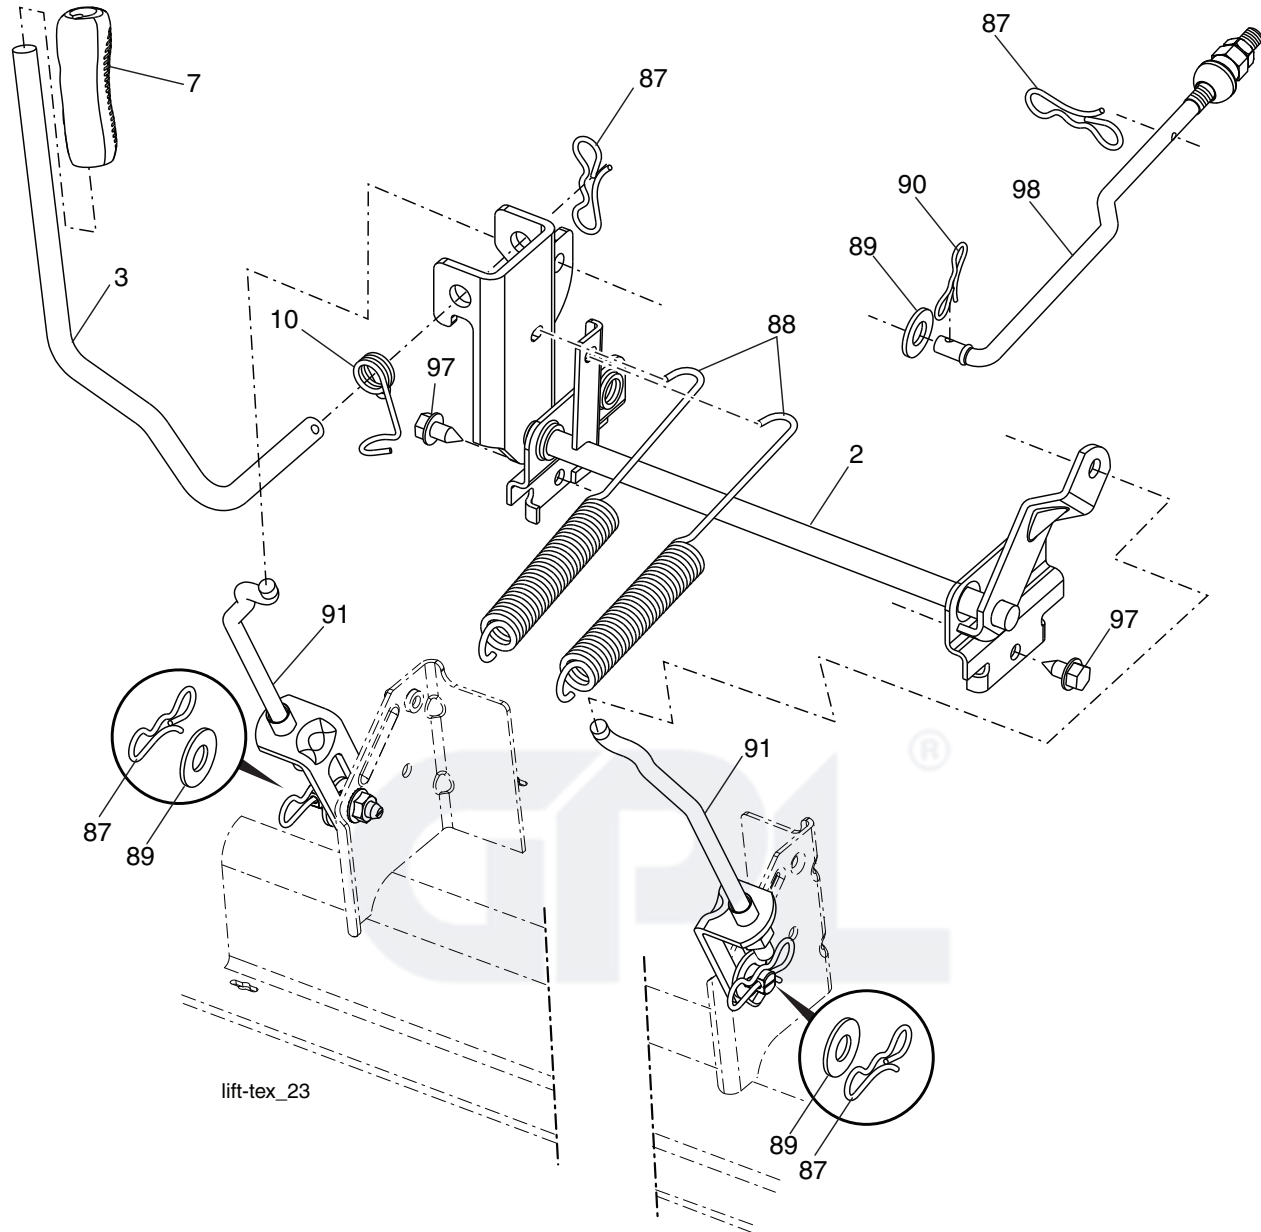


| KEY NO. | PART NO.     | DESCRIPTION                  |
|---------|--------------|------------------------------|
| 2       | 532 42 20-27 | Shaft Asm., Lift             |
| 3       | 532 19 52-30 | Lever Asm., Lift             |
| 7       | 532 41 15-55 | Grip, Lever                  |
| 10      | 532 19 63-14 | Spring Torsion               |
| 87      | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock |
| 88      | 532 19 53-04 | Spring Lift Assist           |
| 89      | 819 19 19-12 | Washer Clear Zinc            |
| 90      | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock |

| KEY NO. | PART NO.     | DESCRIPTION                      |
|---------|--------------|----------------------------------|
| 91      | 532 40 34-07 | Link Lift Susp Mower Rear        |
| 97      | 817 00 06-12 | Screw 3/8-16 x .75 Smgml Tap/R.Z |
| 98      | 532 19 52-64 | Link Lift Susp. Front Mower      |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2227A2 (96041014601), PRODUCT NO. 960 41 01-46**  
**SEAT ASSEMBLY 42**

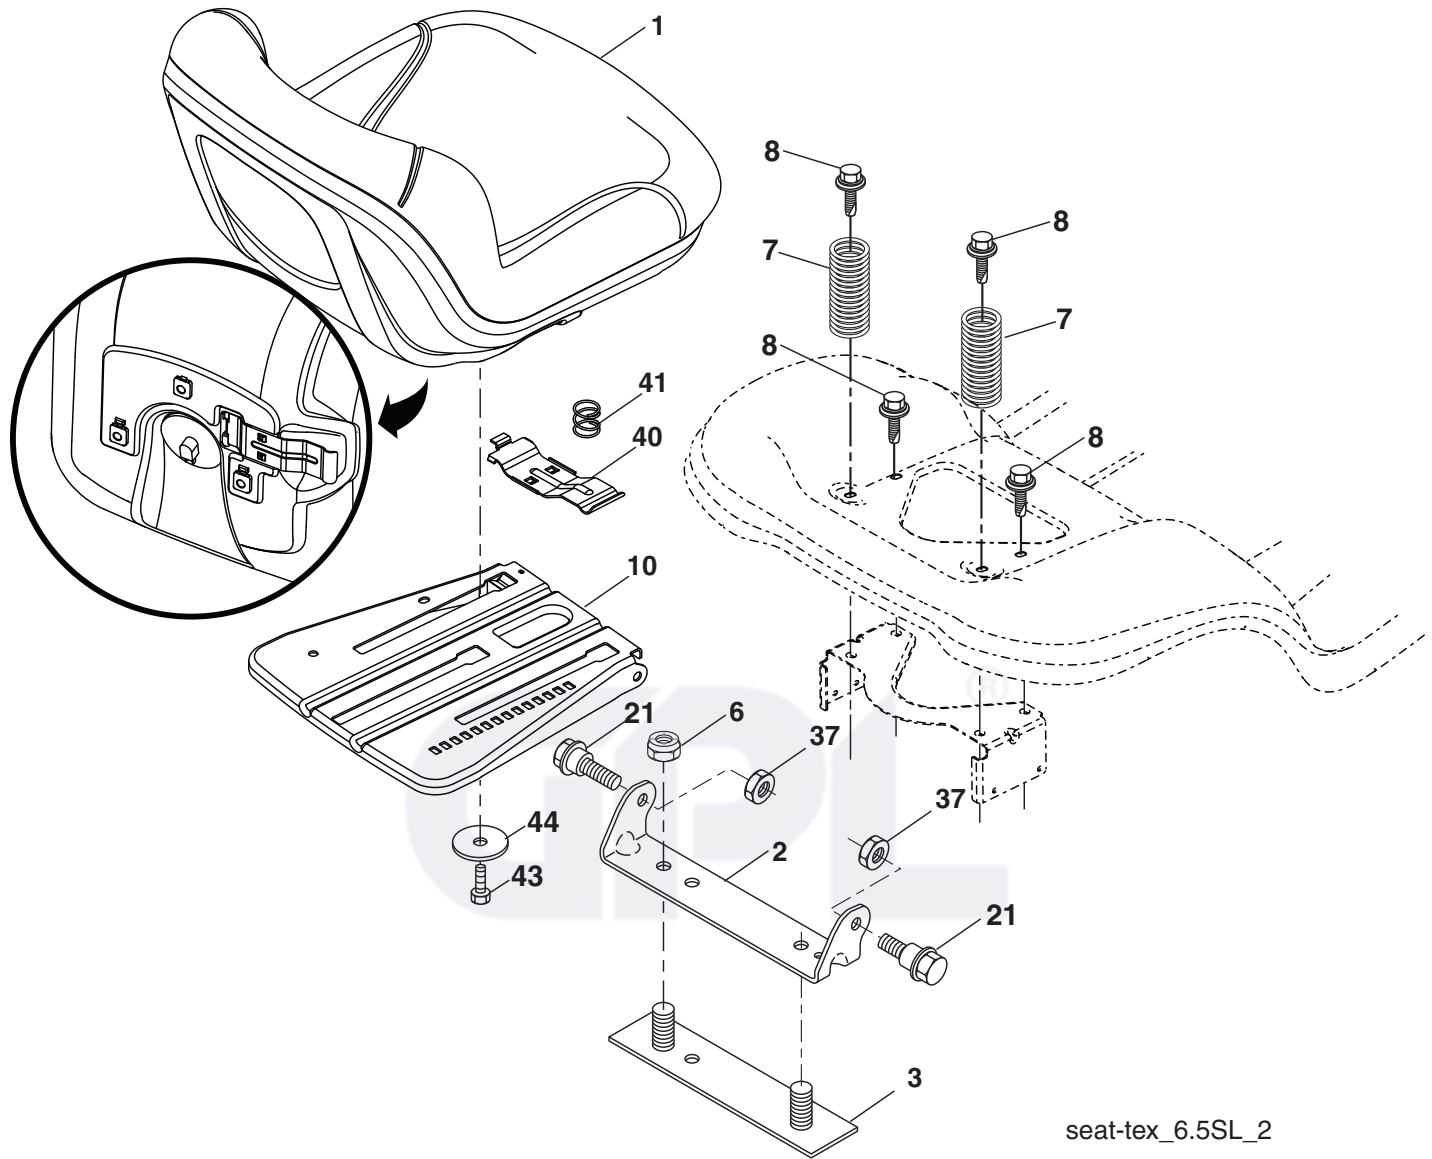

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 1       | 532 40 66-25 | Seat                          |
| 2       | 532 18 01-66 | Bracket Pivot Fender          |
| 3       | 532 14 06-75 | Strap, Asm Fender             |
| 6       | 873 80 06-00 | Nut, Lock w/Ins. 3/8-16 unc   |
| 7       | 532 12 41-81 | Spring, Seat Cprsn            |
| 8       | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 10      | 532 19 69-77 | Pan, Seat                     |
| 21      | 532 17 18-52 | Bolt, Shoulder 5/16-18        |

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 37      | 873 80 05-00 | Nut, Lock 5/16-18 unc         |
| 40      | 532 19 76-61 | Handle Slide Seat             |
| 41      | 532 19 82-00 | Spring Latch Seat             |
| 43      | 874 76 06-12 | Bolt 3/8-16 x 3/4             |
| 44      | 819 13 38-12 | Washer 13/32 x 2-3/8 x 12 Ga. |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

