

ILLUSTRATED PARTS LIST


MODEL NO. 96041014602

CUSTOMER CATALOG NO. LT2227A2

PRODUCT NO. 960 41 01-46




TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
DECALS 27

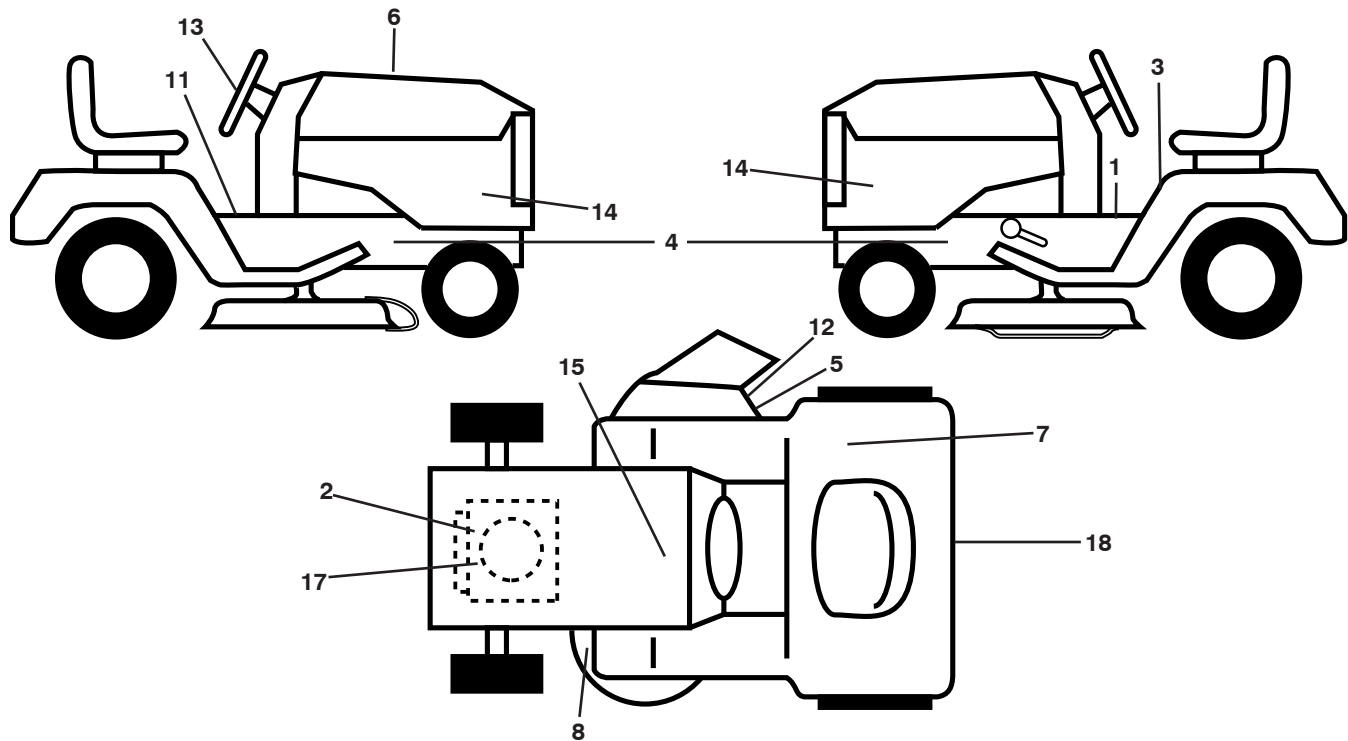

KEY NO.	PART NO.	DESCRIPTION
1	532 14 08-37	Decal, Saddle
2	532 19 68-41	Decal, Warn. Eng. Sym.
3	532 40 03-89	Decal, Warn. Sym.
4	532 15 97-36	Decal, Chassis Hot
5	532 19 63-57	Decal, Deflect
6	581 47 81-01	Decal, RPL
7	532 12 44-33	Decal, DBA
8	532 19 87-85	Decal, Mower Schematic
11	532 15 97-37	Decal, Brake/Clutch
12	532 18 21-66	Decal, Cutfinger
13	532 43 74-45	Decal, Steering Whl

KEY NO.	PART NO.	DESCRIPTION
14	532 44 27-53	Decal, Panel Side
15	532 14 50-05	Decal, Decal, Battery Dan/Poi
17	532 44 26-76	Decal, Engine HP
18	532 43 74-43	Decal, Fender Logo
--	532 16 25-98	Decal, Drawbar
--	532 16 69-60	Decal, Bypass
--	532 41 19-03	Pad, Footrest, LH
--	532 41 22-79	Pad, Footrest, RH
--	115 52 43-27	Manual, Operator's (English)

WHEELS AND TIRES

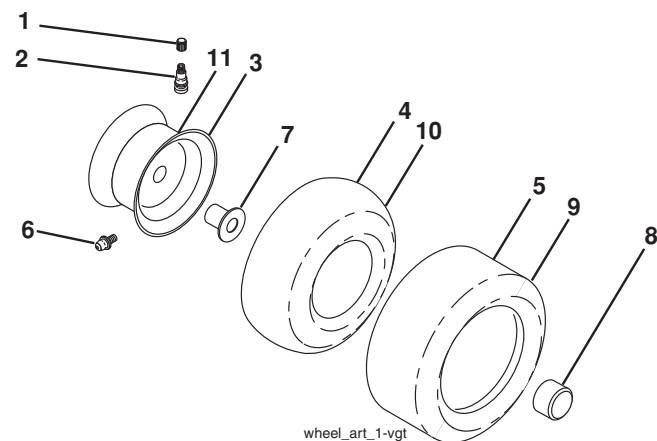


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap, Valve, Tire
2	532 06 51-39	Stem, Valve
3	532 18 18-39	Rim Assembly, Front
4	532 00 81-34	Tube, Front (Service Item Only)
5	532 10 62-30	Tire, Front
6	532 12 49-57	Fitting, Grease (Front Wheel Only)
7	532 12 49-59	Bearing, Flange (Front Wheel Only)
8	532 17 50-39	Cap, Axle (Front Wheel Only)
9	532 10 55-88	Tire, Rear
10	532 00 71-54	Tube, Rear (Service Item Only)
11	532 14 45-10	Rim Assembly, Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
SCHEMATIC 38

SCH12

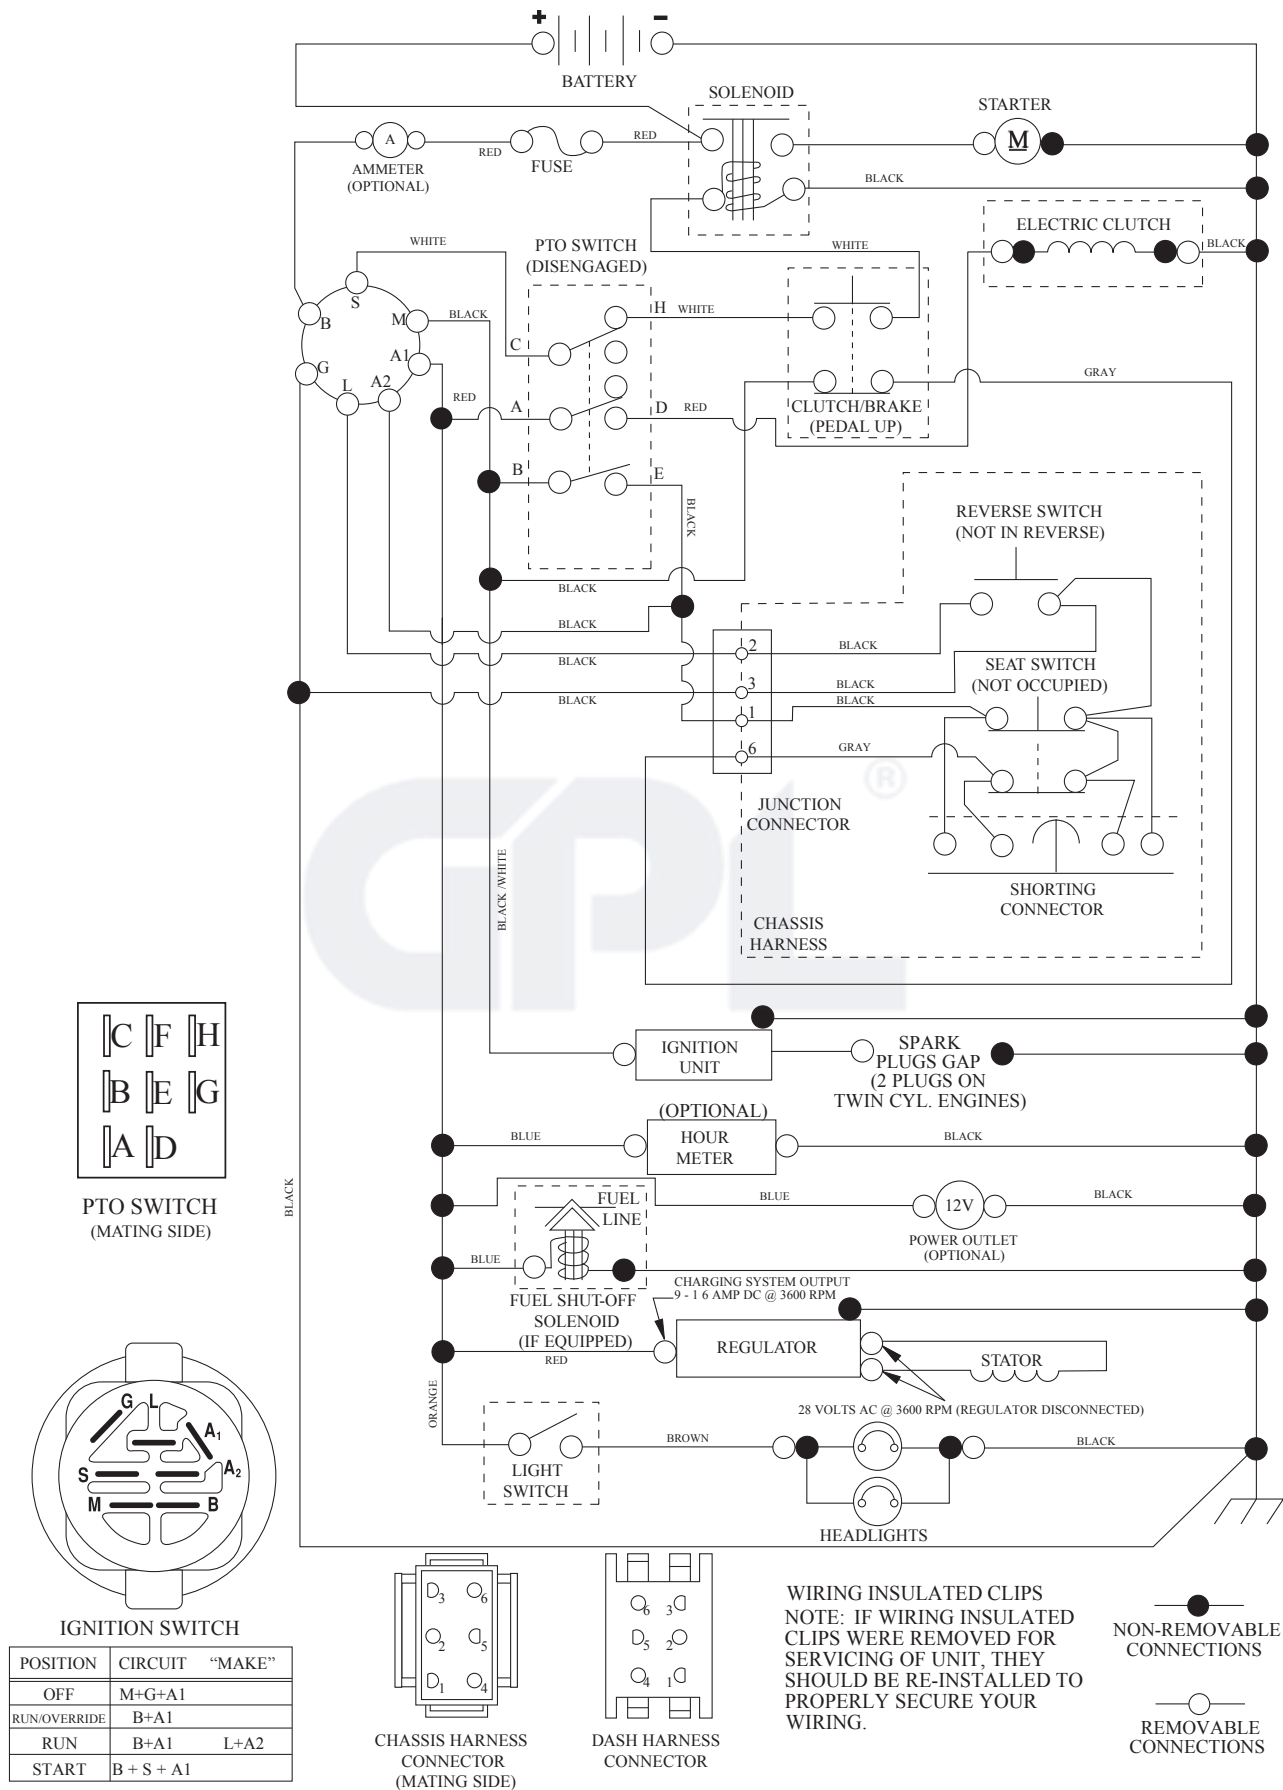

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
ELECTRICAL 32

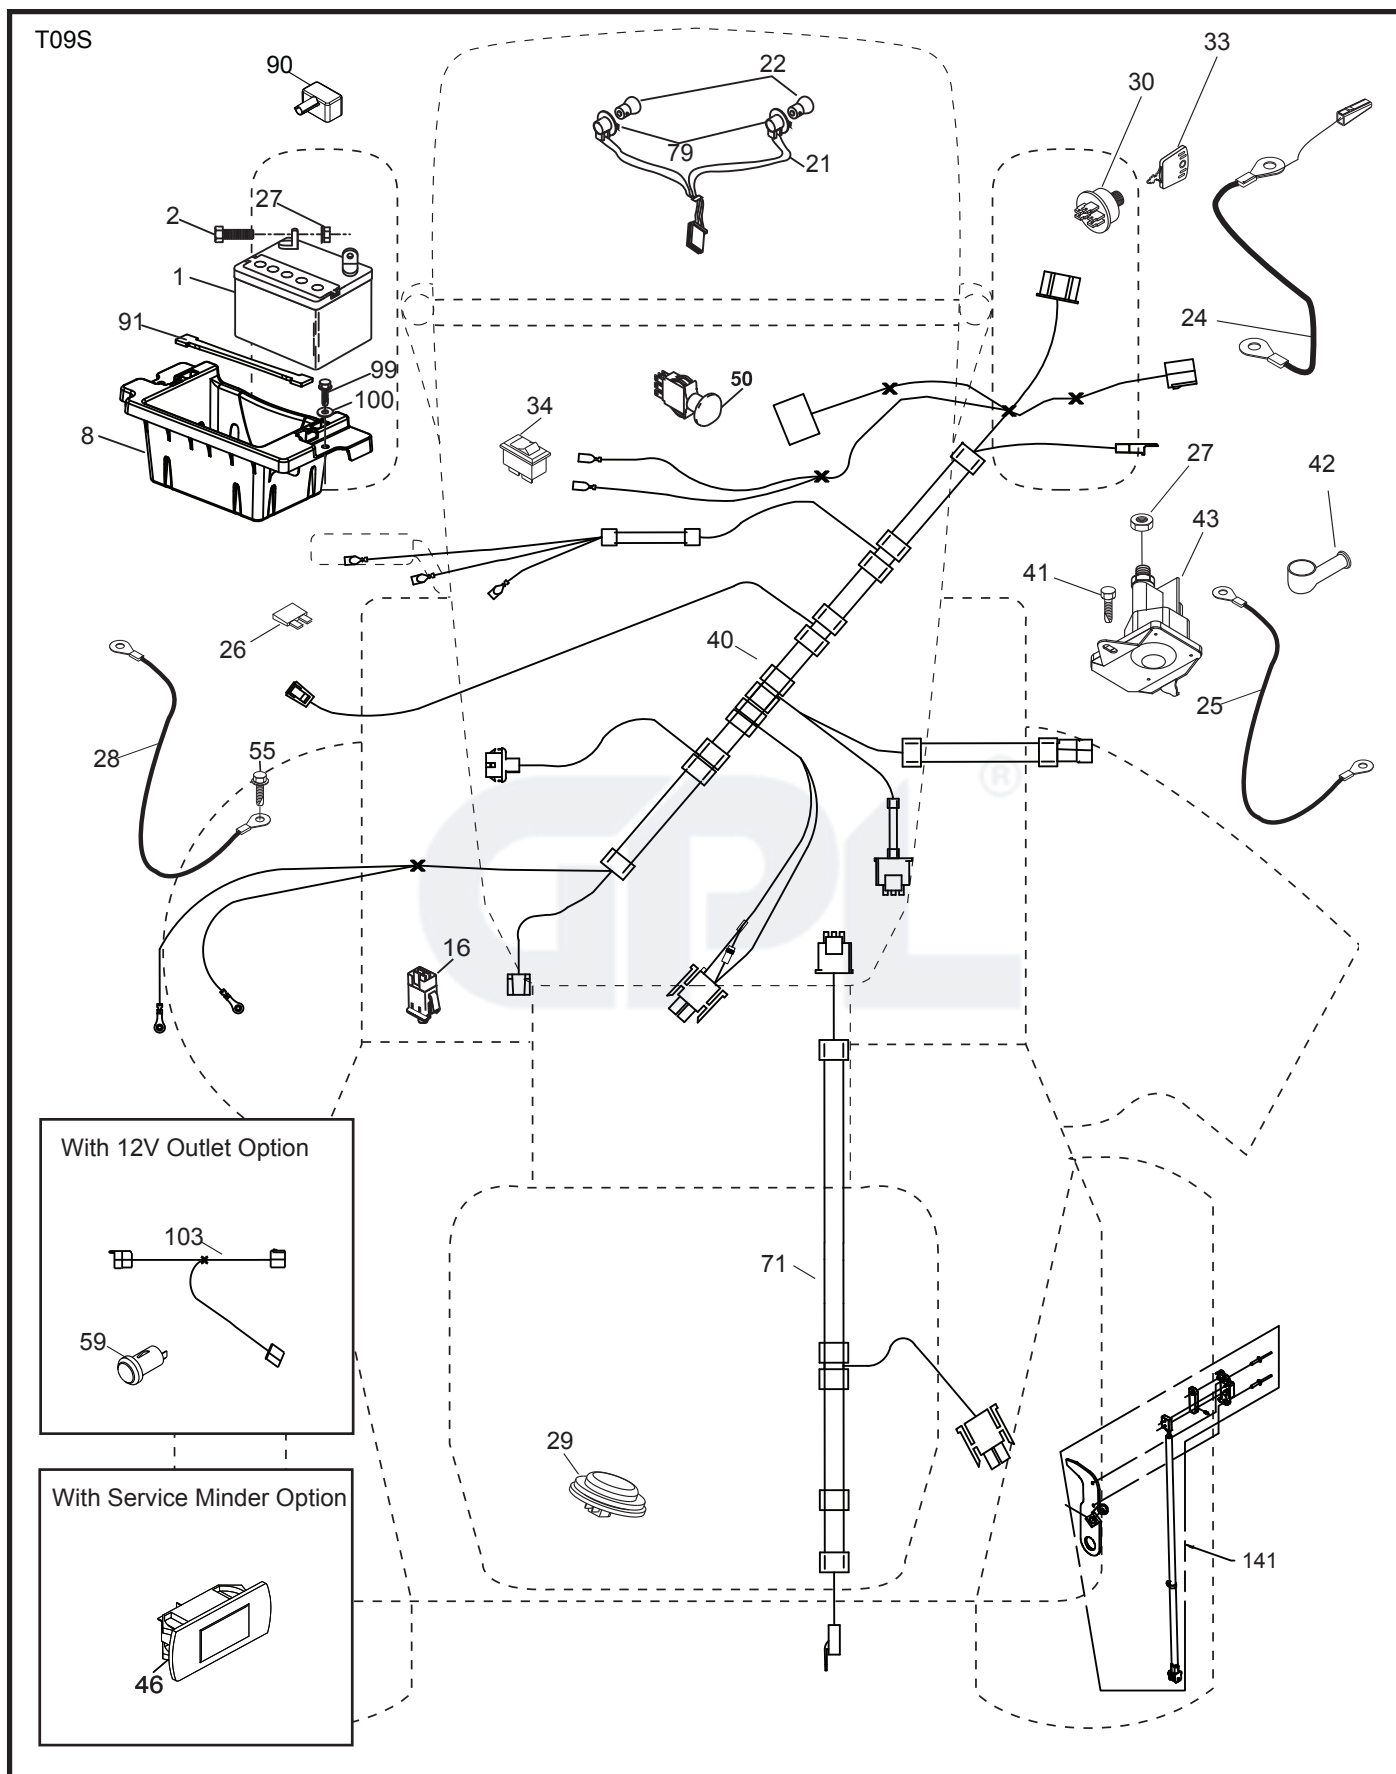


TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
ELECTRICAL 32

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Hd 1/4-20 unc x 3/4
8	532 18 64-91	Battery Box
16	532 17 61-38	Switch Interlock
21	532 40 02-52	Harness Socket Light
22	532 00 41-52	Bulb, Light # 1156
24	532 40 02-53	Cable Battery
25	585 55 55-01	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 14 54-91	Cable Ground 21" Blk 6 Ga.
29	532 40 15-45	Switch Seat
30	532 19 33-50	Switch Ign
33	532 41 19-33	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 40 11-04	Harness Dash
41	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 19 25-07	Solenoid
46	532 40 17-63	Gauge Hourmeter
50	532 17 46-51	Switch PTO
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4
71	532 19 42-76	Harness Chassis
79	532 17 52-42	Socket Asm Bulb Twistlock
90	532 43 53-95	Cover Terminal Battery
91	532 19 02-70	Strap Battery
99	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
100	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
141	532 42 12-25	Kit ROS

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
CHASSIS AND ENCLOSURES 39**

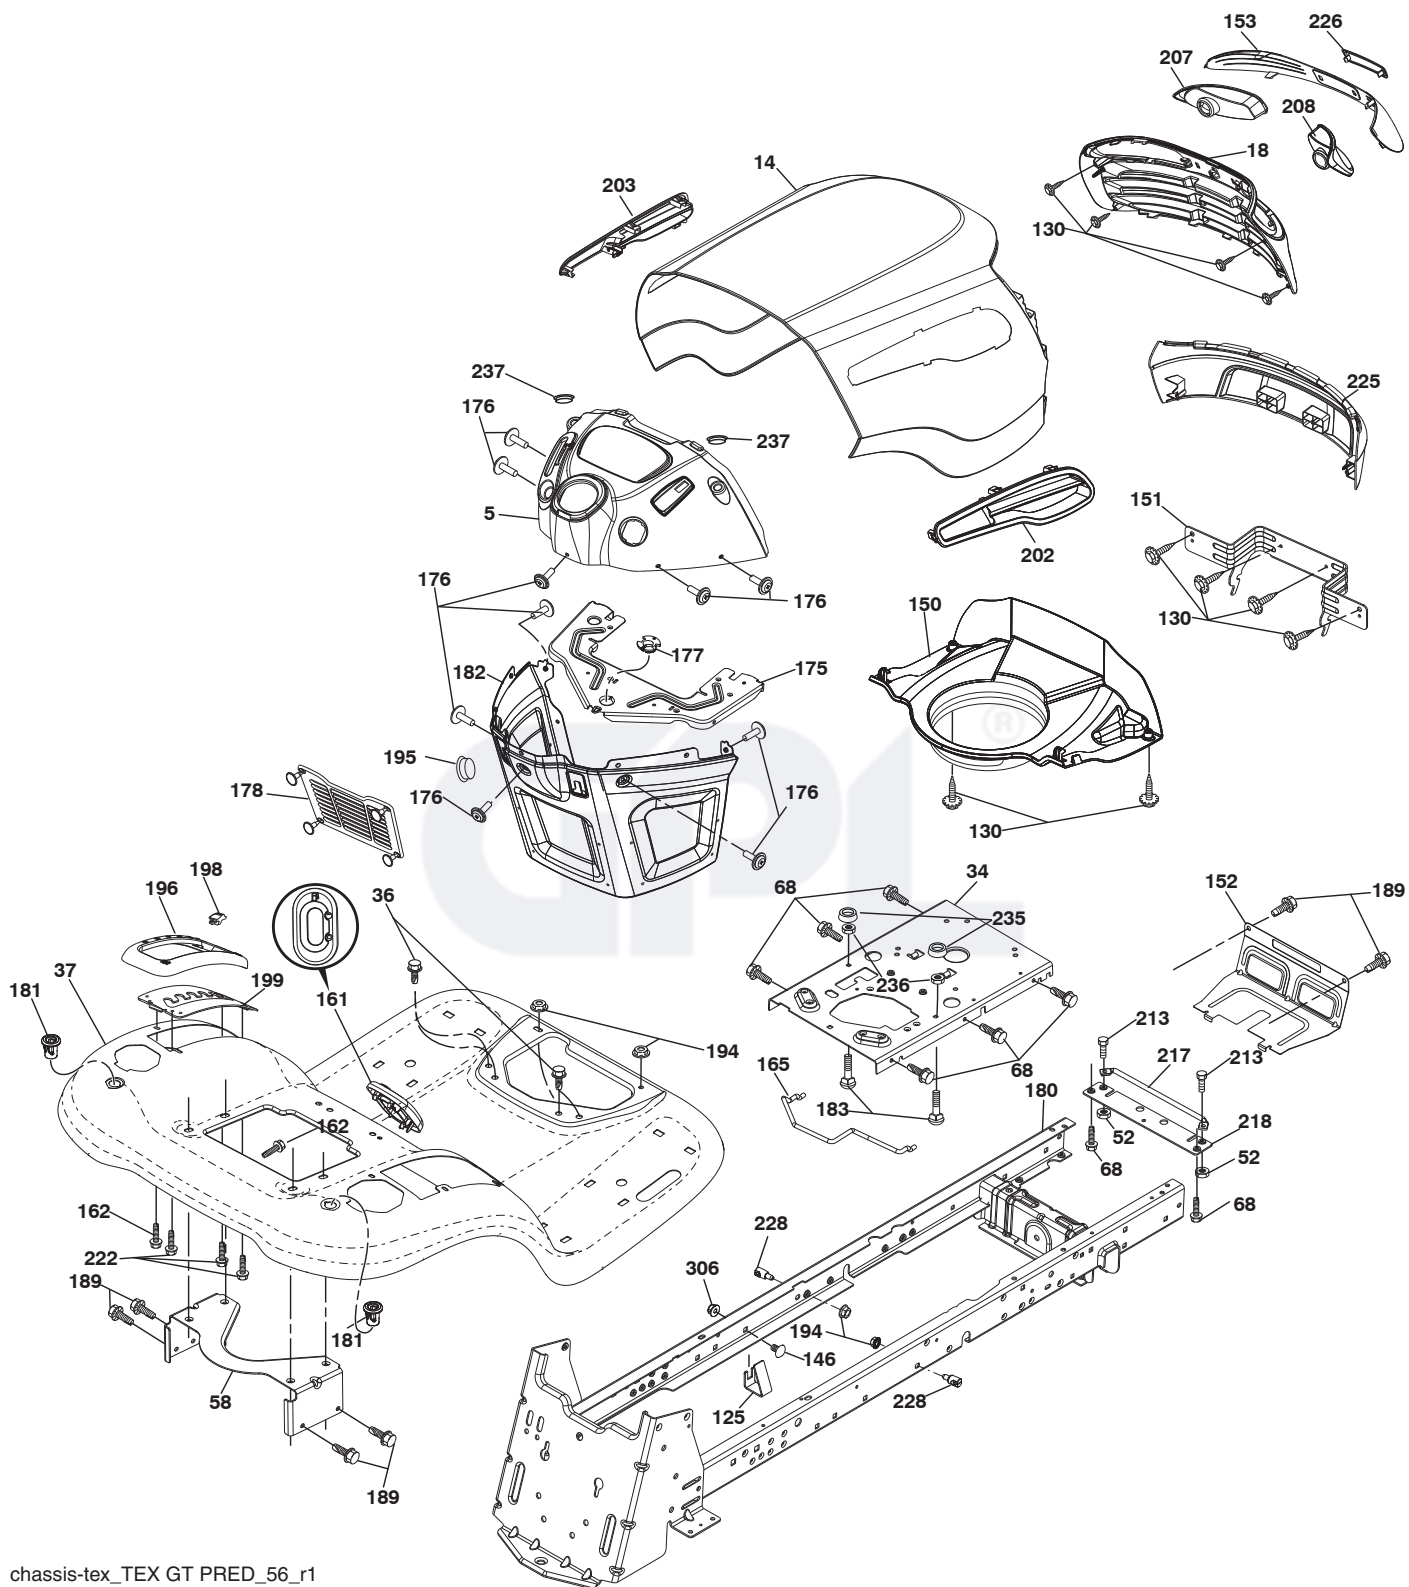


TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
CHASSIS AND ENCLOSURES 39

KEY NO.	PART NO.	DESCRIPTION
5	532 42 82-71	Dash
14	532 44 38-24	Hood
18	532 42 73-33	Grille
34	580 91 08-01	Plate Engine
36	817 06 05-12	Screw 5/16-18 x 3/4
37	532 44 38-16	Fender
52	873 68 05-00	Nut Crown Lock 5/16-18
58	532 19 43-14	Bracket Support Fender
68	817 49 05-08	Screw 5/16-18 x 1/2
125	581 68 48-01	Clip Fuel Line
130	532 41 63-58	Screw #10 x 0.750 BOS Thread
146	581 85 79-01	Bolt
150	584 86 29-01	Air Duct
151	532 44 54-94	Bracket Pivot
152	532 19 95-35	Shield Browning
153	532 42 47-17	Lens Asm
161	532 41 18-79	Window Fuel
162	532 14 24-32	Screw
165	532 19 68-26	Support Tank Rear
175	532 19 63-04	Crossmember
176	532 40 07-76	Screw 10-24 x 5/8
177	532 19 52-27	Bushing Steering
178	532 19 97-82	Cargo Asm. Net
180	532 19 54-77	Chassis
181	532 40 47-96	Bushing Mtg. Fender Crgo
182	532 40 68-59	Dash Lower
183	874 52 05-20	Bolt Fin Hex 5/16-18 unc x 1-1/4
189	817 00 05-12	Screw 5/16-18 x 3/4
194	873 90 05-00	Nut Lock Hex Flange 5/16-18
195	532 40 41-37	Plug Hole Dash Lower
196	532 41 18-78	Console Asm. Deck Lift
198	532 44 15-52	Indicator Deck Lift
199	532 19 63-77	Plate Deck Lift
202	532 44 54-26	Vent Side RH
203	532 44 55-83	Vent Side LH
207	532 19 89-64	Bezel LH
208	532 19 89-63	Bezel RH
213	874 76 05-12	Bolt Hex HD 5/16-18 unc x 3/4
217	532 40 91-67	Rod Pivot Hood
218	532 19 63-95	X-Piece Hood Stop
222	532 13 77-29	Screw 1/4-20 x 5/8
225	532 44 38-25	Bumper
226	532 42 47-16	Logo
228	532 19 51-61	Stud Fastner
235	532 40 61-29	Spacer Fender
236	873 93 05-00	Nut Lock 5/16-18 unc
237	532 40 37-04	Plug Mount Cargo
306	873 90 06-00	Nut Lock

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

 DRIVE 40



TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
DRIVE 40

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Transaxle, Hydro G7BCBB-LXDC- LEX (418183) (Order part from transaxle manufacturer.)	159	876 02 04-12	Pin Cotter 1/8 x 3/4
2	532 00 70-70	Key 1/4 x 2.5	160	532 16 94-84	Retainer Clip
3	532 00 75-63	Washer Thrust	161	532 10 57-09	Spring, Return, Clutch
7	532 19 98-37	Hub Asm. Wheel	163	532 41 81-85	Rod Pedal Control
9	532 14 00-80	Bolt Hub Wheel Rear	166	532 42 91-64	Nut Push .625
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	167	532 40 52-57	Latch Brake Parking
17	532 19 72-96	Spring, Brake	184	532 44 14-55	Handle Parking Brake
26	532 19 96-79	Spring Return Cruise	186	532 19 43-21	Spacer Retainer
29	532 41 81-86	Rod, Brake	187	819 13 32-10	Washer
33	812 00 00-53	Ring E	188	532 19 43-23	Link Clutch Ground Drive
35	583 86 45-01	Rod, Brake, Park	189	532 40 75-04	Bellcrank Ground Drive
42	532 12 48-72	Cover, Foot Pedal	190	532 40 75-05	Keeper Bellcrank Ground Drive
48	872 11 06-12	Bolt 3/8-16 x 1-1/2 Gr. 5	196	817 00 06-16	Screw 3/8-16 x 1
49	872 11 06-14	Bolt	197	585 65 86-01	Link Clutch Anti-Rotation
50	532 19 43-27	Pulley Idler Flat	203	819 11 11-16	Washer 11/32 x 11/16 x 16 Ga.
51	873 90 06-00	Lock Nut 3/8-16	206	532 19 78-67	Bracket Mount Latch Cruise
52	532 19 43-26	Idler V-Groove	207	532 19 78-68	Latch Control Cruise
56	532 14 02-94	V-Belt, Drive	208	532 19 78-69	Gear Sector Control Cruise
64	532 19 78-65	Shaft Asm. Pedal Brake Control	209	532 19 95-92	Rod Control Cruise
69	532 12 38-00	Washer 1-1/32 x 1-5/8 x 16 Ga.	210	532 19 78-60	Rocker Asm. Pedal Control
73	874 49 05-48	Bolt Hex 5/16-18 x 3 Gr. 5	211	532 12 01-83	Bearing Nylon
74	532 14 24-32	Screw 1/4 x 1/2	213	532 40 31-19	Knob Control Cruise
80	532 41 81-84	Strap Torque	214	532 42 12-63	Pedal Forward
92	874 76 05-20	Bolt Fin Hex 5/16-18 unc x 1.25	215	532 40 17-23	Pedal Reverse
99	532 41 81-88	Rod Bypass	221	532 40 31-87	Retainer Spring Clip Handle
114	873 80 05-00	Nut 5/16-18	222	879 21 20-10	Washer 21/32 x 1-1/4 x 10 Ga.
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	224	532 41 22-98	Console Toolbar
121	532 17 56-11	Bracket Strap Torque	225	532 41 81-87	Keeper Belt Trans.
122	872 01 05-20	Bolt 5/16-18 x 2.50	306	876 02 04-16	Pin Cotter 1/8 x 1
125	817 00 05-12	Screw 5/16-18 x 3/4			
145	532 16 31-68	Washer Axle Flange			
153	532 12 47-88	Retainer Spring			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm



engine-tex_bs-2cyl_65

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46 ENGINE **24**

KEY PART NO.	PART NO.	DESCRIPTION
1	- - - - -	Briggs Model No. 44Q777-1583-G5 (442590) (Order parts from engine manufacturer)
2	532 14 97-23	Muffler
9	532 40 86-67	Keeper Belt Engine
11	587 24 14-01	Clutch Ogura
12	532 19 43-43	Pulley Engine
15	532 19 34-99	Tank Fuel 4.0
18	532 43 02-18	Cap Asm
20	532 42 35-02	Control Throttle
21	532 41 63-58	Screw #10 x 0.750 BOS Thread
28	532 14 21-58	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
41	532 12 61-97	Washer 1-1/2 OD x 15/32 ID x .250
42	810 04 07-00	Washer Lock 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
62	532 43 40-17	Shield Heat Muffler
69	532 16 53-91	Gasket
70	581 88 11-01	Tube Exhaust LH
71	581 88 10-01	Tube Exhaust RH
79	532 18 39-06	Screw Socket HD 5/16-18 x 1
81	532 14 84-56	Tube Drain Oil Easy
82	532 42 82-87	Plug Drain Oil
84	817 06 06-20	Screw 3/8-16 x 1
85	581 63 62-01	Bolt Hex 7/16-20 x 3.0 x Gr. 5
87	532 19 82-39	Bolt 5/16-18 unc x 1 w/Sems
90	817 00 06-16	Screw 3/8-16 x 1

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.


[illegible]

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
STEERING ASSEMBLY 41

KEY NO.	PART NO.	DESCRIPTION
1	532 42 41-46	Wheel, Steering
2	532 41 35-91	Axle Asm., Front
4	532 40 30-89	Spindle Asm., LH
5	532 40 30-90	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Harden
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy Hlcl Spr 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 19 47-46	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 42 47-40	Boot Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 42 05-37	Bushing, Strg. Blk
26	532 42 41-47	Insert, Wheel Steering
28	817 00 06-12	Screw 3/8-16 x 3/4
35	532 19 47-32	Gear, Sector Plate
45	819 18 38-12	Washer 9/16 x 2-3/8 x 12 Ga.
51	873 94 08-00	Nut Hex Jam Toplock 1/2-20 unf
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 19 72-46	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd 7/16-14 x 3 Serr
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front
118	532 40 60-13	Bushing
122	532 44 49-62	Cap Gear Sector

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
MOWER DECK 44

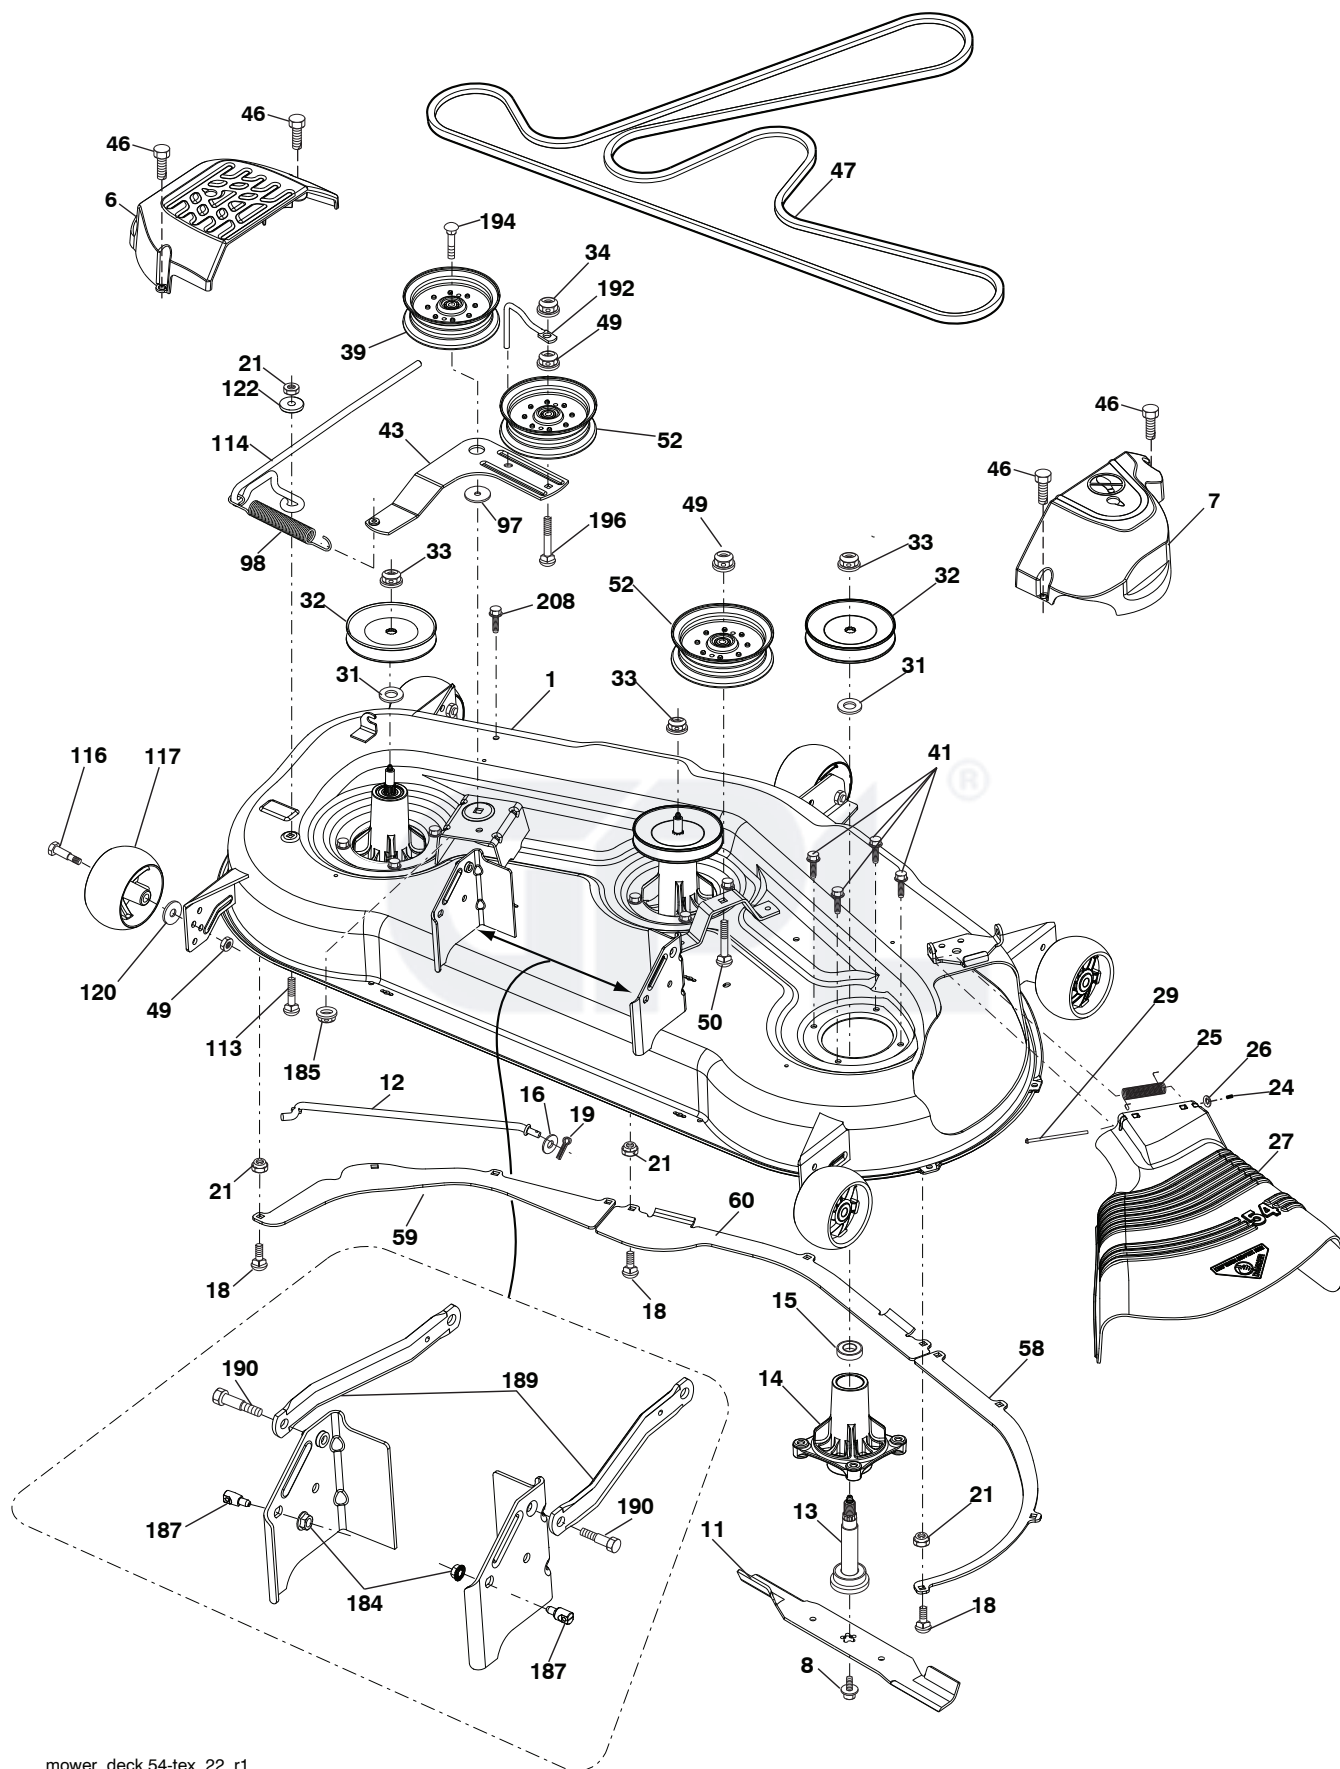


mower_deck 54-tex_22_r1

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
MOWER DECK **44**

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	532 19 56-32 Deck Weldment Mower	52	532 19 73-79 Pulley Idler
6	532 19 60-66 Cover Mandrel LH	58	532 18 73-42 Baffle Right
7	532 19 71-81 Cover Mandrel RH	59	532 18 73-44 Baffle Left
8	532 19 30-03 Bolt 7/16 Asm. Washer	60	532 18 76-07 Baffle Center
11	532 18 72-56 Blade	97	532 17 85-15 Washer Hardened
12	532 40 03-37 Rod Anti-Sway	98	532 19 61-05 Spring Drive
13	532 18 72-91 Shaft Asm. w/Lower Bearing	113	872 11 05-08 Bolt Rdhd. Sqnk. 5/16-18 x 3/4
14	532 18 72-81 Housing, Mandrel	114	532 18 75-56 Rod Tension Relief
15	532 11 04-85 Bearing, Ball, Mandrel	116	532 19 34-06 Bolt, Shoulder
16	819 13 13-12 Washer 13/32 x 13/16 x 12 Ga.	117	532 17 48-73 Gauge Wheel
18	872 14 05-05 Bolt 5/16-18 unc x 5/8	120	819 13 20-12 Washer 13/32 x 1-1/4 x 12 Ga.
19	532 19 42-08 Pin Cotter 5/16 Bow Tie Lock	122	532 18 75-57 Bushing Tension Relief
21	873 68 05-00 Nut, Crownlock 5/16-18 unc	184	873 90 05-00 Nut Lock Hex Flange
24	532 10 53-04 Cap Sleeve	185	873 90 07-00 Nut Lock Flange 7/16-14 Gr. 5
25	532 17 81-02 Spring, Torsion	187	532 19 51-61 Stud Fastener w/"D" Anti-Rotation
26	532 11 04-52 Nut, Push	189	532 19 51-85 Arm Susp. Mower Rear
27	532 18 89-38 Deflector Shield	190	532 19 65-39 Bolt Shoulder
29	532 13 14-91 Rod, Hinge	192	532 19 84-68 Keeper Belt Idler
31	532 18 76-90 Washer, Spacer Mower Vented	194	874 49 07-36 Bolt HexHD Washer 7/16-14 x 2.25
32	532 15 35-35 Pulley, Mandrel	196	872 14 06-20 Bolt 3/8-16 x 2-1/2 Gr. 5
33	532 40 02-34 Nut, Flg. Top Lock	208	817 67 06-08 Screw 3/8-16 x 1
34	873 68 06-00 Nut Crownlock 3/8-16 unc	--	532 18 72-92 Mandrel Asm. Service (Includes
39	532 19 73-80 Pulley, Idler, Stationary LH	--	Key Nos. 13-15 and 33)
41	584 95 39-01 Bolt Hex Wshr	--	532 19 77-01 Replacement Mower, Complete
43	532 19 60-65 Arm, Idler		
46	532 13 77-29 Screw Thd Roll 1/4-20 x 5/8		
47	532 19 61-03 Belt Deck Drive		
49	873 90 06-00 Nut, Lock Flg. 3/8-16 unc		
50	872 11 06-16 Bolt Rdhd. Sqnk. 3/8-16 unc x 2		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
MOWER LIFT 45

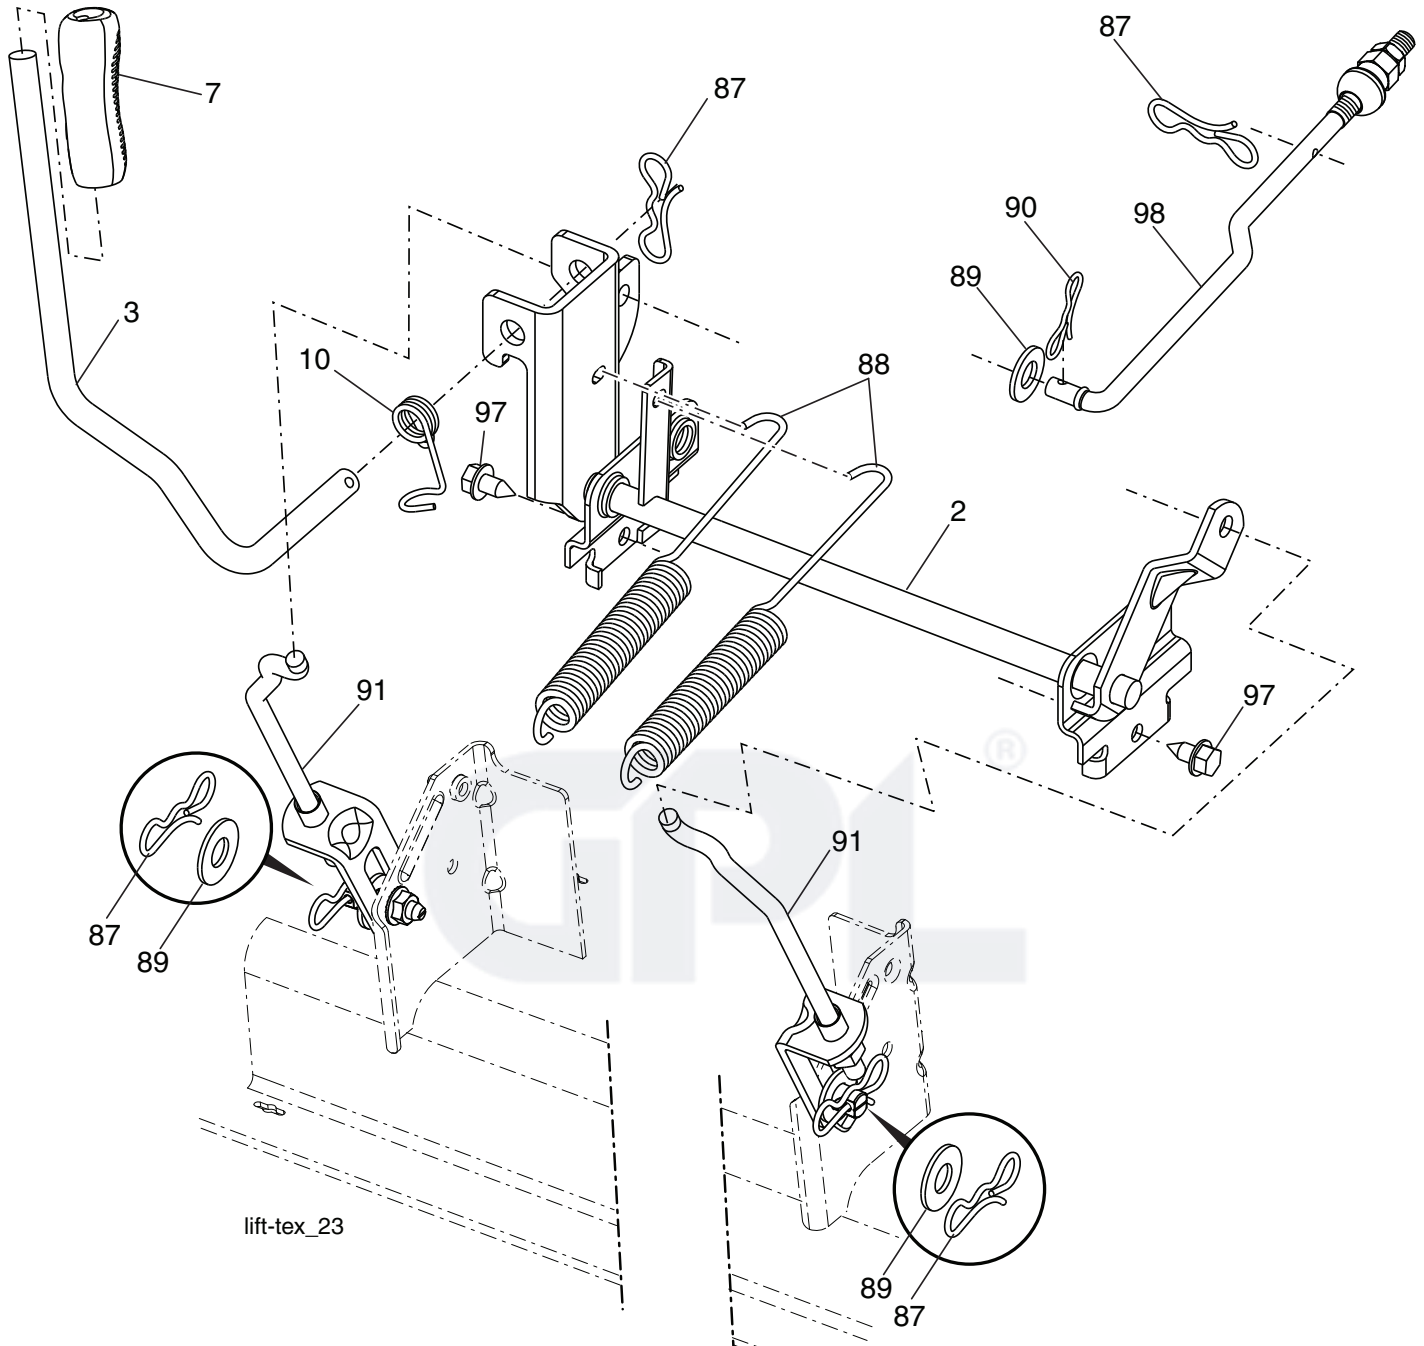


lift-tex_23

KEY NO.	PART NO.	DESCRIPTION
2	532 42 20-27	Shaft Asm., Lift
3	532 19 52-30	Lever Asm., Lift
7	580 96 23-01	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 19 53-04	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock

KEY NO.	PART NO.	DESCRIPTION
91	532 40 34-07	Link Lift Susp Mower Rear
97	817 00 06-12	Screw 3/8-16 x .75 Smgml Tap/R.Z
98	532 19 52-64	Link Lift Susp. Front Mower

NOTE: All component dimensions given in U.S. inches
 1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2227A2 (96041014602), PRODUCT NO. 960 41 01-46
SEAT ASSEMBLY 42

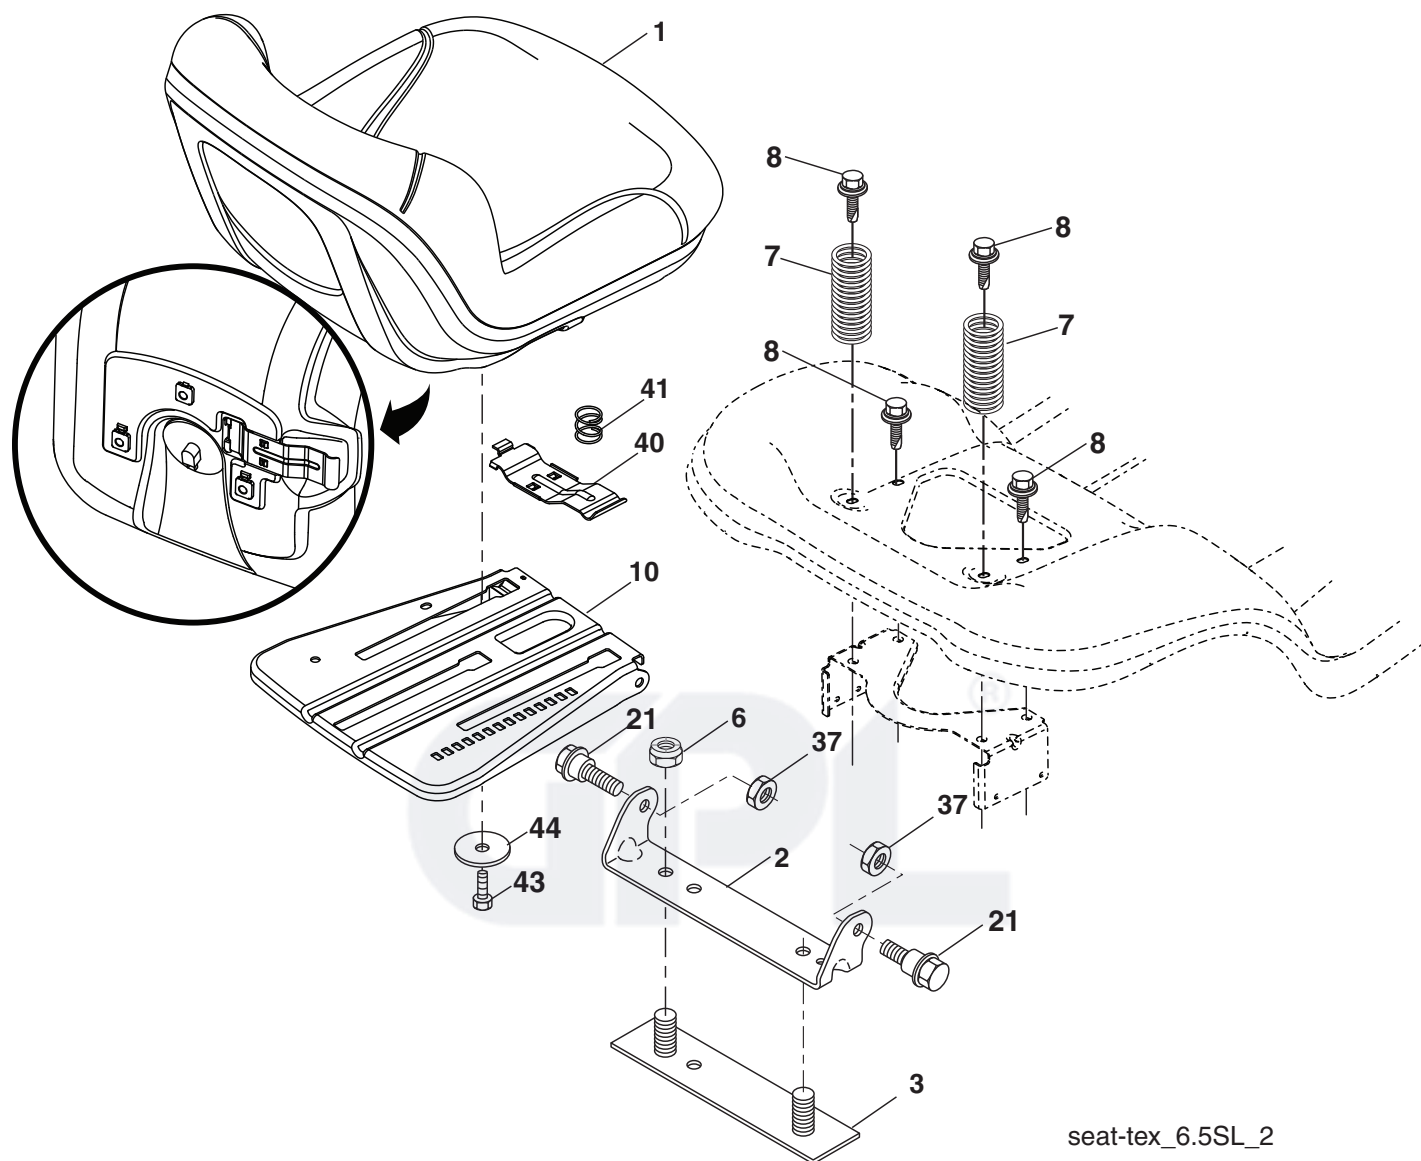

KEY PART NO. NO.	DESCRIPTION
1 532 40 66-25	Seat
2 532 18 01-66	Bracket Pivot Fender
3 532 14 06-75	Strap, Asm Fender
6 873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7 532 12 41-81	Spring, Seat Cprsn
8 532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10 532 19 69-77	Pan, Seat
21 532 17 18-52	Bolt, Shoulder 5/16-18

KEY PART NO. NO.	DESCRIPTION
37 873 80 05-00	Nut, Lock 5/16-18 unc
40 532 19 76-61	Handle Slide Seat
41 532 19 82-00	Spring Latch Seat
43 874 76 06-12	Bolt 3/8-16 x 3/4
44 819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

