

# LTH125

**Spare parts**

**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**


**Repuestos**

**Reservdelar**

**GPL®**

## REPAIR PARTS

**TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72**  
**ELECTRICAL**

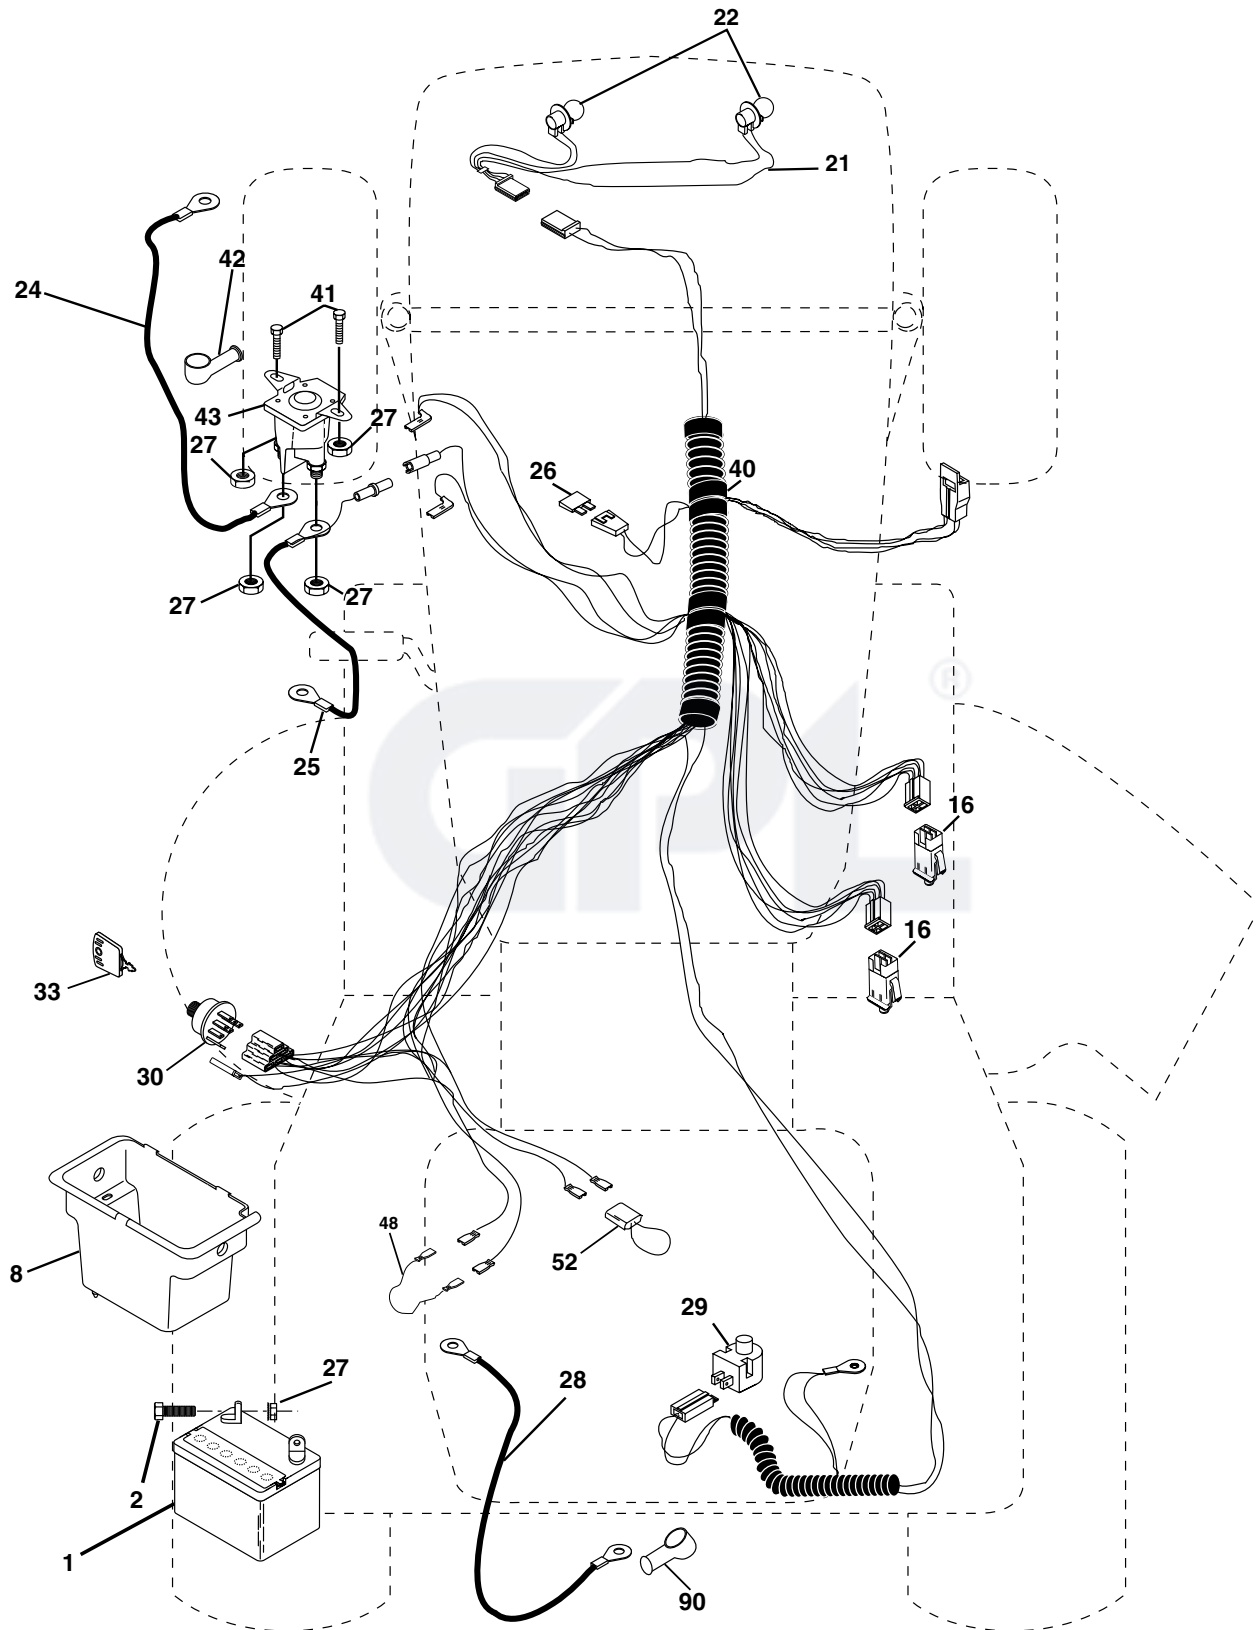


# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
ELECTRICAL

| KEY NO. | PART NO.            | DESCRIPTION                          |
|---------|---------------------|--------------------------------------|
| 1       | 532 16 34-65        | Battery 12 Volt 25 AMP               |
| 2       | 874 76 04-12        | Bolt Hex Hd 1/4-20unc X 3/4          |
| 8       | 532 17 66-89        | Box Battery                          |
| 16      | 532 17 61-38        | Switch Interlock Push-In             |
| 21      | <b>532 17 56-85</b> | Harness Asm Light W/4152j            |
| 22      | 532 00 41-52        | Bulb Light #1156                     |
| 24      | 532 12 47-80        | Cable Battery 6 Ga 11" red           |
| 25      | 532 14 61-47        | Cable Battery 6 Ga 44" red w/16 wire |
| 26      | 532 17 51-58        | Fuse 20 AMP                          |
| 27      | 873 51 04-00        | Nut Keps Hex 1/4-20 Unc              |
| 28      | 532 12 47-73        | Cable Ground 6 Ga 12" black          |
| 29      | 532 12 13-05        | Switch Plunger Nc Gray               |
| 30      | 532 17 55-66        | Switch Ign                           |
| 33      | 532 14 04-01        | Key Ign Molded Generic               |
| 40      | 532 17 97-20        | Harness Ign.                         |
| 41      | 871 11 04-08        | Bolt Blk Fin Hex 1/4 - 20 x 1/2      |
| 42      | 532 13 15-63        | Cover Terminal Red                   |
| 43      | 532 17 88-61        | Solenoid                             |
| 48      | 532 14 08-44        | Adapter Ammeter Rectangular          |
| 52      | 532 14 19-40        | Protection Wire Loop                 |
| 90      | 532 18 04-49        | Cover Terminal Battery               |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

**TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72**  
**CHASSIS AND ENCLOSURES**

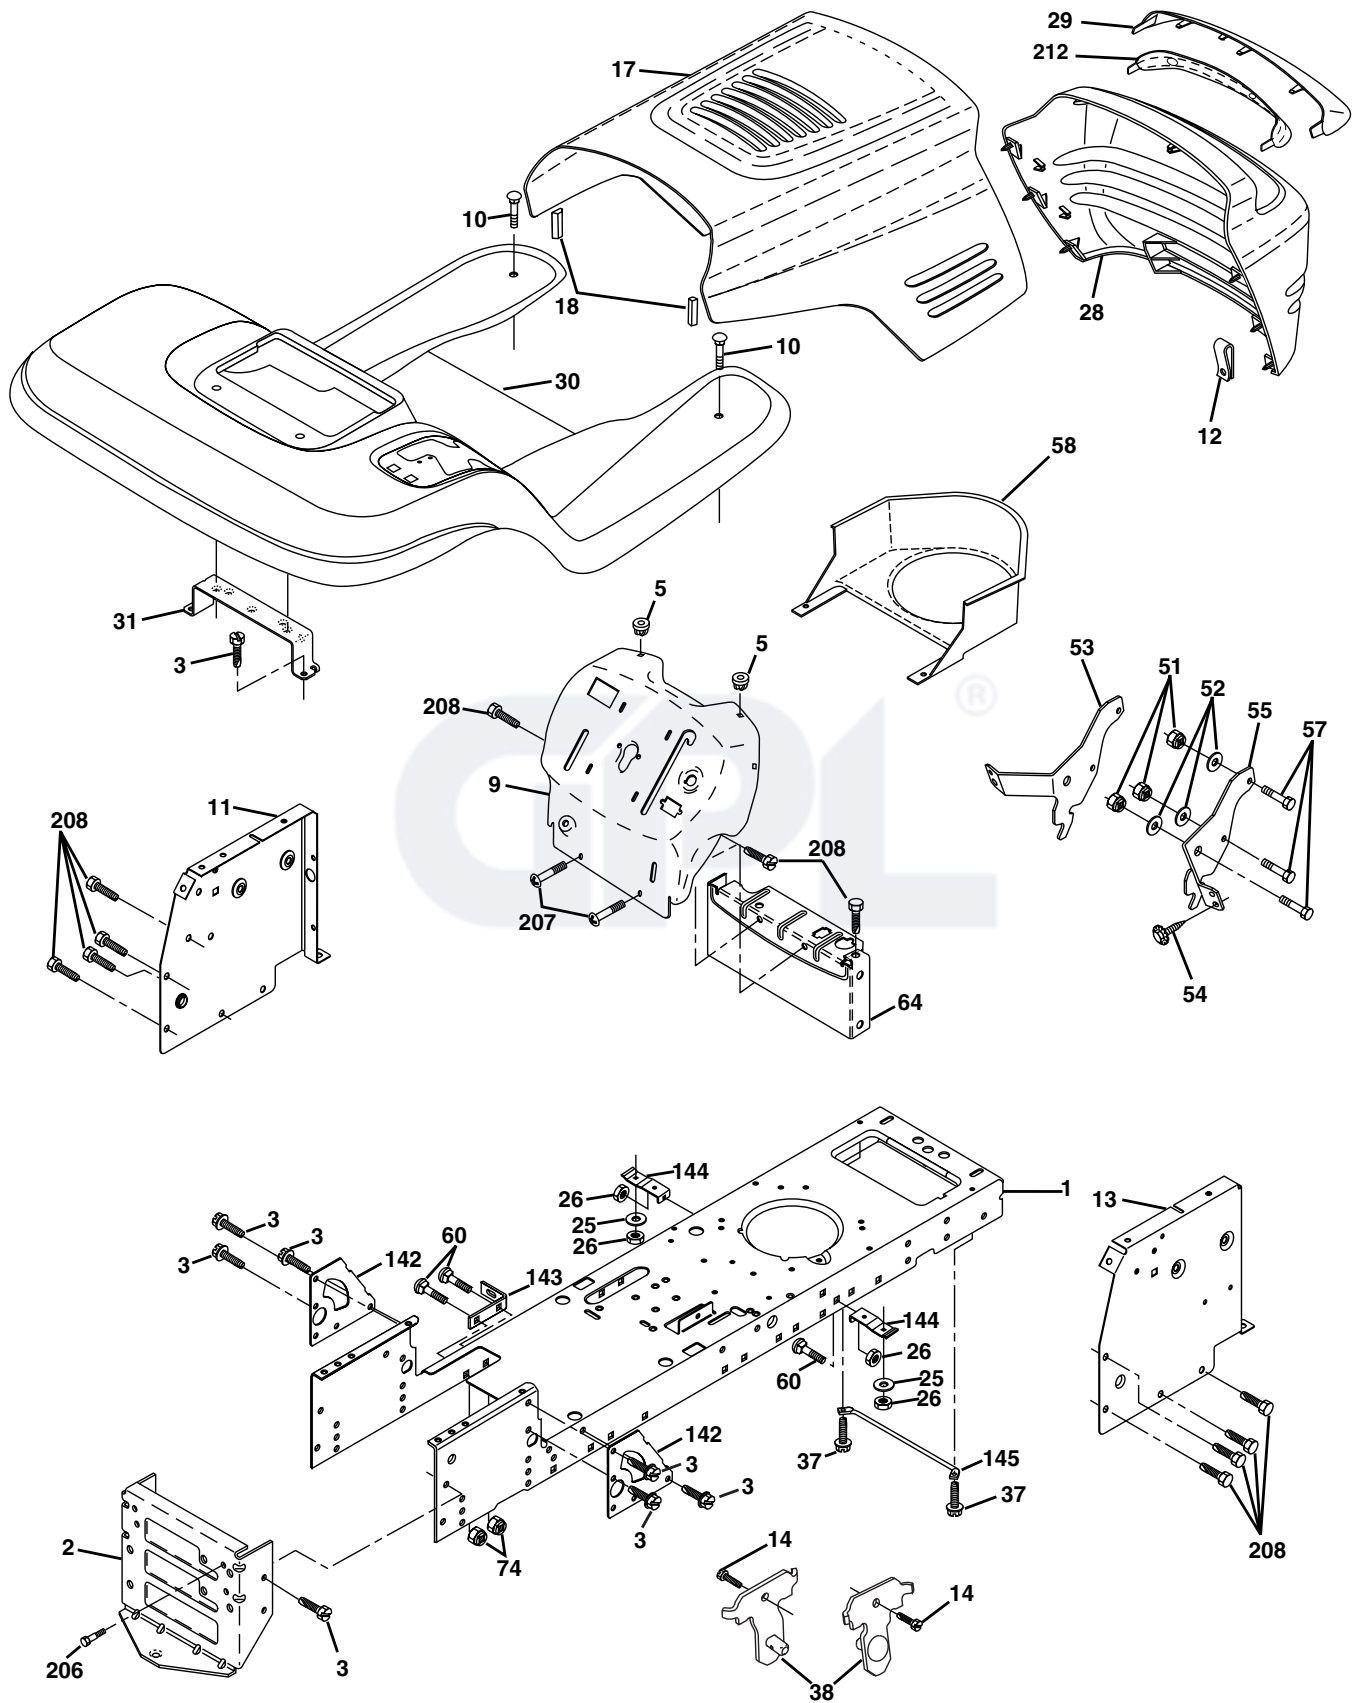

# REPAIR PARTS


## TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72 CHASSIS AND ENCLOSURES

| KEY NO. | PART NO.            | DESCRIPTION                     |
|---------|---------------------|---------------------------------|
| 1       | 532 17 46-19        | Chassis Stamping                |
| 2       | 532 17 65-54        | Drawbar                         |
| 3       | 817 06 06-12        | Screw 3/8-16x3/4                |
| 5       | 532 15 52-72        | Bumper Hood/Dash                |
| 9       | 532 17 18-53        | Dash P/L                        |
| 10      | 872 14 06-08        | Bolt Carriage 3/8-16 x 1        |
| 11      | <b>532 17 49-96</b> | Panel Dash Lh                   |
| 12      | 532 14 56-60        | Clip Tinnerman                  |
| 13      | <b>532 18 17-19</b> | Panel Dash Rh                   |
| 14      | 817 49 06-08        | Screw Thdrol 3/8-16 x 1/2       |
| 17      | 532 16 22-37        | Hood LT/PL Husqvarna            |
| 18      | 532 12 69-38        | Bumper Hood                     |
| 25      | 819 13 13-12        | Washer 13/32 X 13/16 X 12 Ga    |
| 26      | 873 80 06-00        | Nut Lock Hex W/Ins 3/8-16 Unc   |
| 28      | 532 17 98-45        | Grille/Lens                     |
| 29      | 532 17 66-45        | Lens LT/PL                      |
| 30      | 532 18 05-07        | Fender Footrest STLT Pnt        |
| 31      | 532 13 99-76        | Bracket Support Fender          |
| 37      | 817 49 05-08        | Screw Thdrol 6/16-18 x 1/2 TYT  |
| 38      | 532 17 57-10        | Bracket, Asm. Pivot, Mower Rear |
| 51      | 873 80 04-00        | Nut Lock Hex W/Ins 1/4-20       |
| 52      | 819 09 14-16        | Washer 9/32 x 7/8 x 16 Ga.      |
| 53      | 532 14 46-97        | Bracket Grille LH               |
| 54      | 532 16 14-64        | Screw Hex Wshd 8-18 x 7/8       |
| 55      | 532 14 46-96        | Bracket Grille RH               |
| 57      | 874 78 04-12        | Bolt Hex 1/4-20 x 3/4           |
| 58      | 532 15 01-27        | Air Duct Engine P/L             |
| 60      | 872 14 06-06        | Bolt Rdhd Sqnk 3/8-16unc x 3/4  |
| 64      | 532 15 47-98        | Dash Lower STLT                 |
| 74      | 873 68 06-00        | Nut Crownlock 3/8-16 UNC        |
| 142     | 532 17 57-02        | Plate Reinforcement STLT        |
| 143     | 532 15 49-66        | Bracket Swaybar Chassis         |
| 144     | 532 17 55-82        | Bracket Pnt Footrest STLT       |
| 145     | 532 15 65-24        | Rod Pivot Chassis/Hood          |
| 206     | 532 17 01-65        | Bolt Shoulder 5/16-18 TT        |
| 207     | 817 67 05-08        | Screw Thdrol 5/16-18 x 1/2      |
| 208     | 817 67 06-08        | Screw Thdrol 3/8-16 x 1/2       |
| 212     | 532 15 62-29        | Insert Lens Reflect             |
| --      | 532 00 54-79        | Plug Button                     |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

## REPAIR PARTS

**TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
DRIVE**

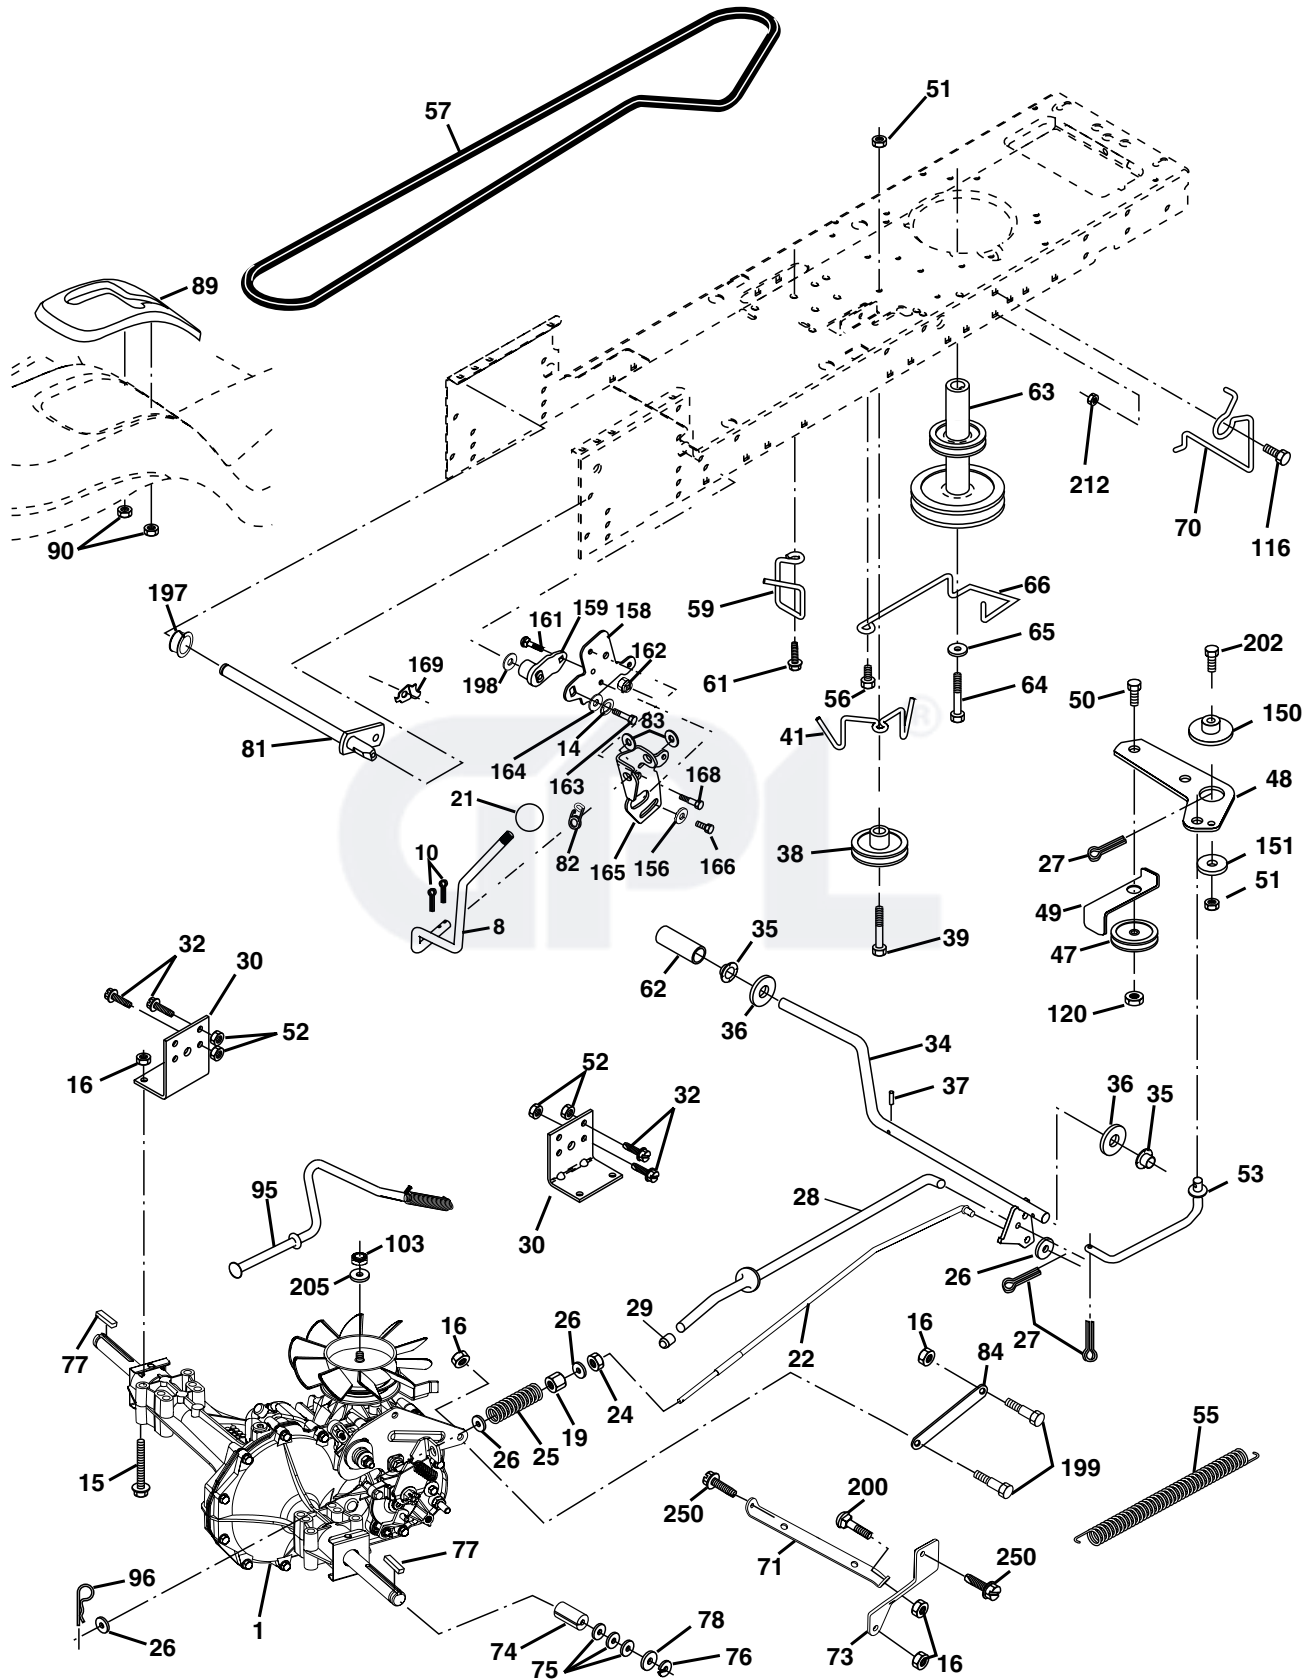

# REPAIR PARTS


**TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
DRIVE**

| KEY PART<br>NO. NO. | DESCRIPTION                                                                       | KEY PART<br>NO. NO. | DESCRIPTION                                          |
|---------------------|-----------------------------------------------------------------------------------|---------------------|------------------------------------------------------|
| 1                   | ----- Transaxle Hydro Gr 322-0510<br>(Order parts from transaxle<br>manufacturer) | 71                  | 532 16 91-83 Strap Torque Lh Hydro                   |
| 8                   | 532 16 58-66 Rod Shift Fender STLT                                                | 73                  | 532 16 91-82 Strap Torque Rh Hydro                   |
| 10                  | 876 02 04-16 Pin Cotter 1/8 x 1 CAD                                               | 74                  | 532 13 70-57 Spacer, Axle                            |
| 14                  | 810 04 04-00 Washer Lock Hvy Helical 1/4                                          | 75                  | 532 12 17-49 Washer 25/32 x 1-1/4 x 16 Gauge         |
| 15                  | 874 49 05-44 Bolt Hex Flg Hd 5/16-18 X Gr.5                                       | 76                  | 812 00 00-01 E-Ring                                  |
| 16                  | 873 80 05-00 Nut Lock Hex W/Ins. 5/16-18 Unc P                                    | 77                  | 532 12 35-83 Key, Square                             |
| 19                  | 873 80 06-00 Nut Lock Hex W/Wsh 3/8-16 Unc                                        | 78                  | 532 12 17-48 Washer 25/32 x 1-5/8 x 16 Gauge         |
| 21                  | 532 12 12-74 Knob                                                                 | 81                  | 532 16 55-96 Shaft Asm. Cross Hydro                  |
| 22                  | 532 16 94-98 Rod, Brake Hydro                                                     | 82                  | 532 16 57-11 Spring Torsion T/A                      |
| 24                  | 873 35 06-00 Nut                                                                  | 83                  | 819 17 12-16 Washer 17/32 x 3/4 x 16 Ga.             |
| 25                  | 532 10 68-88 Spring, Brake Rod                                                    | 84                  | 532 16 98-43 Link Transaxle                          |
| 26                  | 819 13 13-16 Washer                                                               | 89                  | 532 16 65-10 Console, Shift                          |
| 27                  | 876 02 04-12 Pin Cotter 1/8 x 3/4 CAD.                                            | 90                  | 532 12 43-46 Nut Self-Thd wsh-Hd 1/4 Zinc            |
| 28                  | 532 17 57-65 Rod, Parking Brake                                                   | 95                  | 532 17 02-01 Control Asm Bypass Hydro                |
| 29                  | 532 07 16-73 Cap, Parking Brake                                                   | 96                  | 532 12 47-88 Retainer Spring 1" Zinc/Cad             |
| 30                  | 532 17 49-73 Bracket, Transaxle                                                   | 103                 | 873 94 08-00 Nut Hex Jam Toplock 1/2-20 Unf          |
| 32                  | 874 76 05-12 Bolt Hex Hd 5/16-18 Unc x 3/4                                        | 116                 | 872 14 06-08 Bolt Rdhd 3/8-16 x 1                    |
| 34                  | 532 17 55-78 Shaft, Foot Pedal, Nibbed                                            | 120                 | 873 90 06-00 Nut Lock Flg 3/8-16                     |
| 35                  | 532 12 01-83 Bearing, Nylon                                                       | 150                 | 532 17 54-56 Spacer Retainer                         |
| 36                  | 819 21 16-16 Washer                                                               | 151                 | 819 13 32-10 Washer 13/32 x 2 x 10 Ga.               |
| 37                  | 532 12 49-63 Pin, Roll                                                            | 156                 | 532 16 60-02 Washer Srrtd 5/16 ID x 1.0 x .125<br>Tk |
| 38                  | 532 17 91-14 Pulley, Composite, Flat                                              | 158                 | 532 16 55-89 Bracket Shift Mount                     |
| 39                  | 874 76 06-48 Bolt Fin Hex 3/8-16 Unc x 3                                          | 159                 | 532 16 54-94 Hub Tapered Flange Shift LT             |
| 41                  | 532 17 55-56 Keeper, Belt Idler                                                   | 161                 | 872 14 04-06 Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr. 5       |
| 47                  | 532 12 77-83 Pulley, Idler, V-Groove                                              | 162                 | 873 68 04-00 Nut Crownlock 1/4-20 Unc                |
| 48                  | 532 15 44-07 Bellcrank Clutch Grnd Drv Stl                                        | 163                 | 874 78 04-16 Bolt Hex Fin 1/4-20 unc x 1 Gr. 5       |
| 49                  | 532 12 32-05 Retainer, Belt                                                       | 164                 | 819 09 10-10 Washer 5/8 x .281 x 10 Ga               |
| 50                  | 874 76 06-24 Bolt Hex 3/8-16 Unc x 1-1/2                                          | 165                 | 532 16 56-23 Bracket Pivot Lever                     |
| 51                  | 873 68 06-00 Nut Crownlock 3/8-16                                                 | 166                 | 532 16 68-80 Screw 5/16-18 x 5/8 TT Yellow           |
| 52                  | 873 68 05-00 Nut Crownlock 5/16-18                                                | 168                 | 532 16 54-92 Bolt Shoulder 5/16-18 x .561 TT         |
| 53                  | 532 10 57-10 Link, Clutch                                                         | 169                 | 532 16 55-80 Plate Fastening Cross Shf. STLT/<br>CRD |
| 55                  | 532 10 57-09 Spring, Return, Clutch                                               | 197                 | 532 16 96-13 Nyliner Snap-In 5/8" ID                 |
| 56                  | 817 06 06-20 Screw 3/8-16 x 1                                                     | 198                 | 532 16 95-93 Washer Nyl 7/8 ID x .105 HYD<br>CRD     |
| 57                  | 532 14 02-94 V-Belt, Ground Drive                                                 | 199                 | 532 16 96-12 Bolt Shoulder 5/16-18 Unc               |
| 59                  | 532 16 96-91 Keeper, Center Span                                                  | 200                 | 872 14 05-08 Bolt Rdhd Sqnk 5/16-18 Unc x 1          |
| 61                  | 817 12 06-14 Screw 3/8-16 x 3/4                                                   | 202                 | 872 11 06-14 Bolt Carr 3/8-16 x 1-3/4 Gr. 5          |
| 62                  | 532 12 48-72 Cover, Pedal                                                         | 205                 | 819 17 16-16 Washer 17/32 x 1 x 16 Ga.               |
| 63                  | <b>532 18 02-19</b> Pulley, Eng                                                   | 212                 | 532 14 52-12 Nut Hex Flange Lock                     |
| 64                  | 871 17 07-64 Bolt Hex 7/16-20 x 4 Ga. 5                                           | 250                 | 817 06 06-12 Screw 3/8-16 x .75 SNGML Tap R          |
| 65                  | 810 04 07-00 Washer                                                               |                     |                                                      |
| 66                  | 532 15 47-78 Keeper Belt Engine                                                   |                     |                                                      |
| 70                  | <b>532 18 02-18</b> Guide Belt Mower Drive RH                                     |                     |                                                      |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
STEERING ASSEMBLY

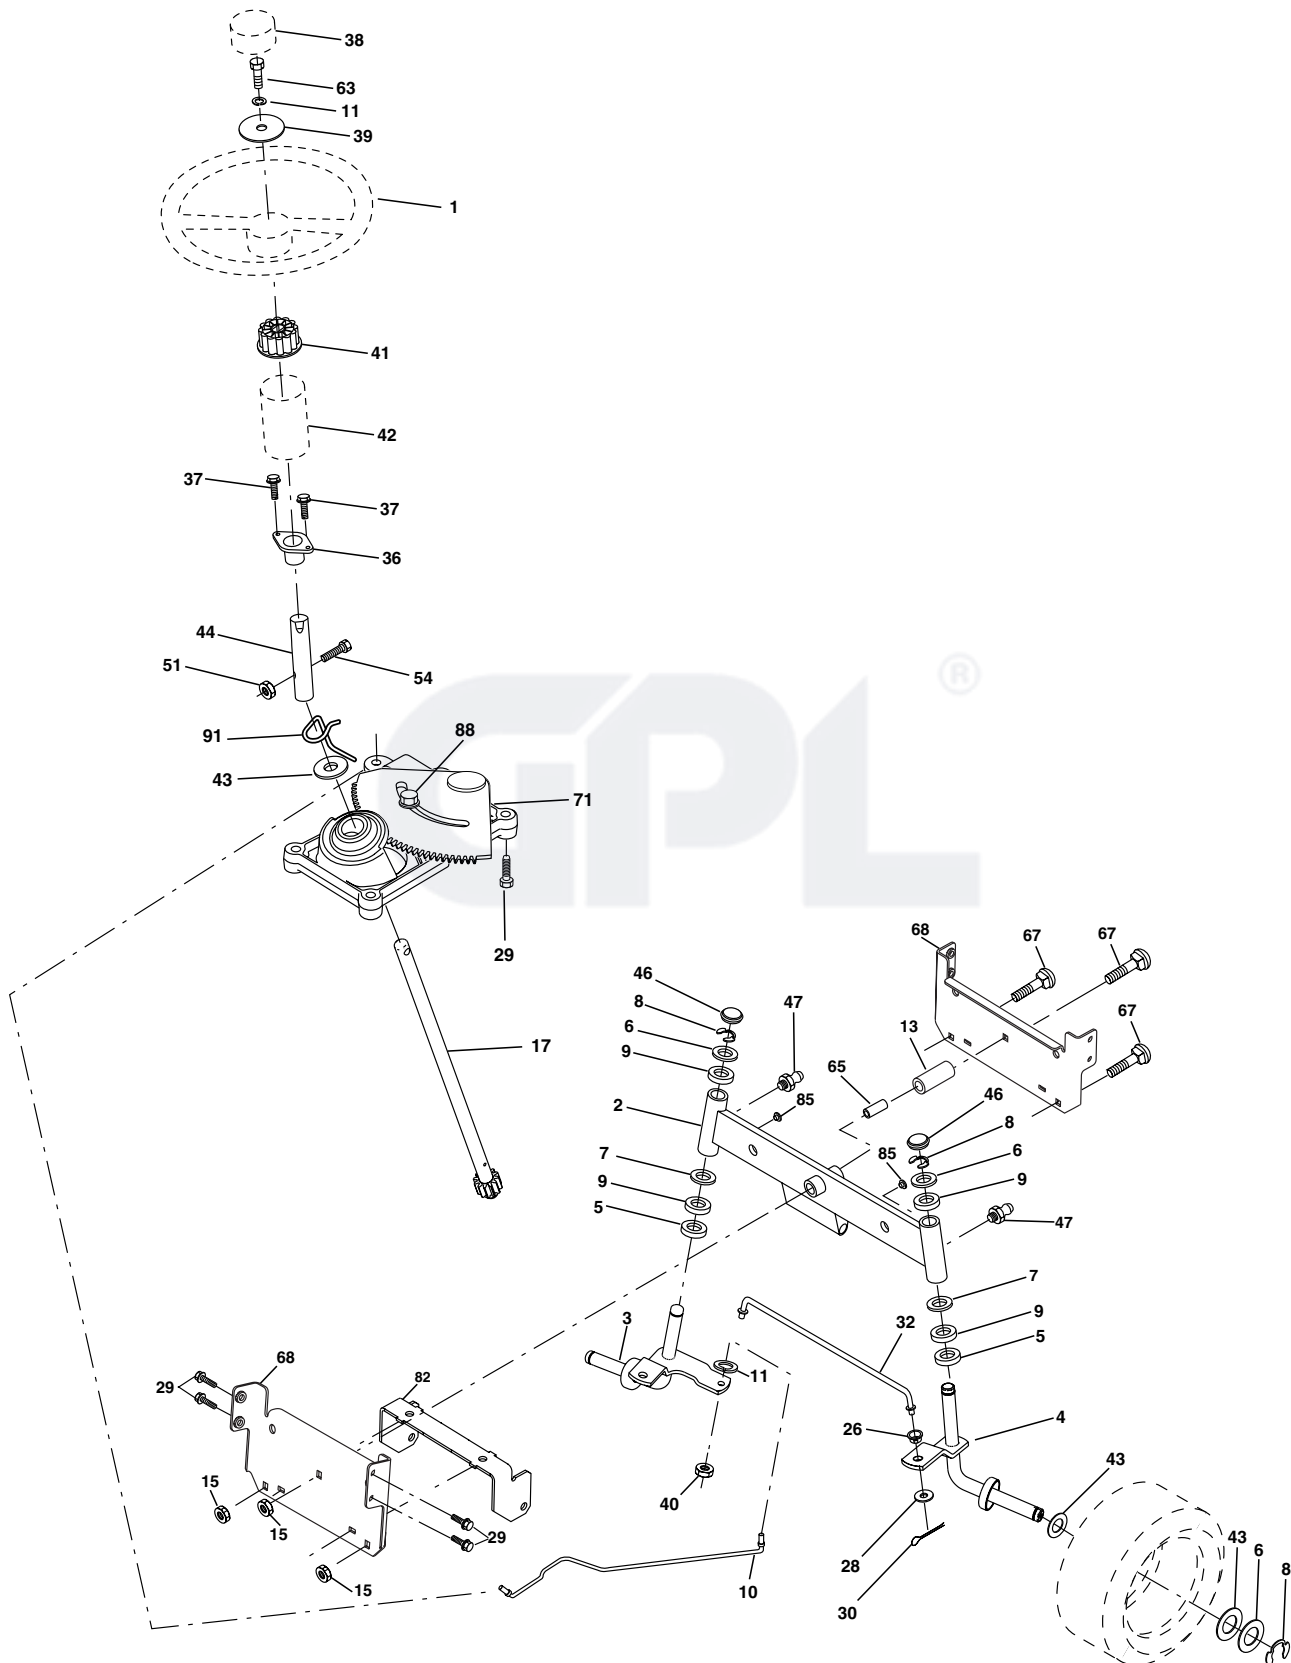

# REPAIR PARTS


## TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72 STEERING ASSEMBLY

| KEY NO. | PART NO.     | DESCRIPTION                      |
|---------|--------------|----------------------------------|
| 1       | 532 12 44-15 | Wheel Steering                   |
| 2       | 532 17 51-31 | Axle Asm                         |
| 3       | 532 16 98-40 | Spindle Asm LH                   |
| 4       | 532 16 98-39 | Spindle Asm RH                   |
| 5       | 532 12 49-31 | Bearing Race Thrust Harden       |
| 6       | 532 12 17-48 | Washer 25/32 X 1-5/8 X 16 Ga     |
| 7       | 819 27 20-16 | Washer 27/32 X 1-1/4 X 16 Ga     |
| 8       | 812 00 00-29 | Ring Klip #t5304-75              |
| 9       | 532 12 49-37 | Bearing Col Strg Blk             |
| 10      | 532 17 51-21 | Link Drag                        |
| 11      | 810 04 06-00 | Washer Lock Hvy Hlcl Spr 3/8     |
| 13      | 532 13 65-18 | Spacer Brg Axle Front            |
| 15      | 532 14 52-12 | Nut Hex Flange Lock              |
| 17      | 532 17 78-76 | Shaft Asm Strg                   |
| 26      | 532 12 68-47 | Bushing Link Drag Blk LR         |
| 28      | 819 13 14-16 | Washer 13/32 X 7/8 X 16 Ga       |
| 29      | 817 06 06-12 | Screw 3/8-16x3/4                 |
| 30      | 876 02 04-12 | Pin Cotter 1/8 X 3/4 Cad         |
| 32      | 532 13 04-65 | Rod Tie Wire Form 19 75 Mech     |
| 36      | 532 15 50-99 | Bushing Strg                     |
| 37      | 532 15 29-27 | Screw                            |
| 38      | 532 12 44-16 | Insert Cap Strg Wh               |
| 39      | 819 13 38-12 | Washer 13/32 X 2-3/8 x 12        |
| 40      | 532 12 47-01 | Lock nut                         |
| 41      | 532 10 07-11 | Adaptor Wheel Strg               |
| 42      | 532 16 96-34 | Boot Steering Shaft              |
| 43      | 532 12 17-49 | Washer 25/32 X 1-1/4 X 16 Ga     |
| 44      | 532 15 37-20 | Extension Steering Shaft LR/LT   |
| 46      | 532 12 12-32 | Cap Spindle Fr Top Blk           |
| 47      | 532 12 48-36 | Fitting Grease                   |
| 51      | 873 80 05-00 | Nut Lock Hex w/Ins 5/16-18       |
| 54      | 874 78 05-20 | Bolt Fin Hex 5/16-18 Unc x 1-1/4 |
| 63      | 874 78 06-16 | Bolt Fin Hex 3/8-16unc x 1 Gr. 5 |
| 65      | 532 16 03-67 | Spacer Brace Axle                |
| 67      | 872 14 06-18 | Bolt, Rdhd Sqnk 3/8-16 x 2-1/4   |
| 68      | 532 16 98-27 | Axle, Brace                      |
| 71      | 532 17 51-46 | Steering Asm.                    |
| 82      | 532 16 98-35 | Bracket Susp Chassis Front       |
| 85      | 532 13 38-35 | Fastener Christmas Tree          |
| 88      | 532 17 51-18 | Bolt Shoulder 7/16-20            |
| 91      | 532 17 55-53 | Clip Steering                    |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
ENGINE

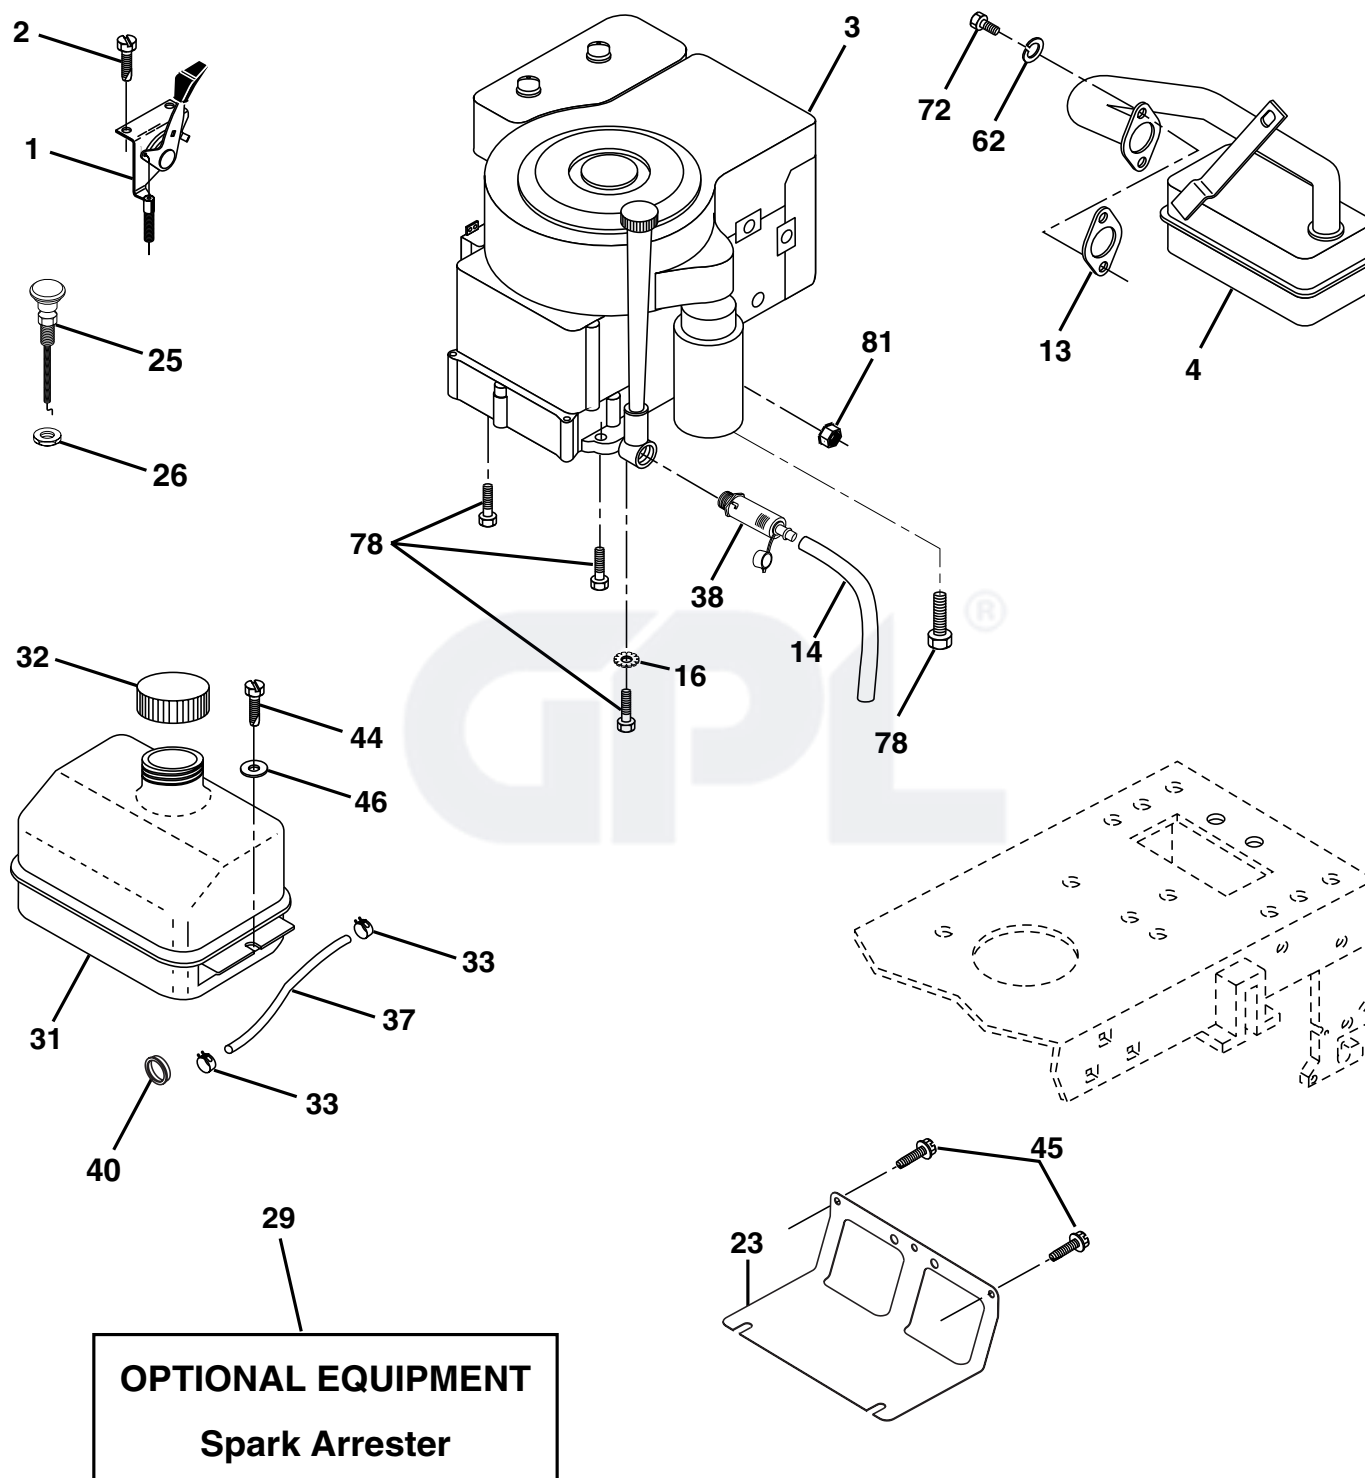

# REPAIR PARTS


TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
ENGINE

| KEY<br>NO. | PART<br>NO.         | DESCRIPTION                                                           |
|------------|---------------------|-----------------------------------------------------------------------|
| 1          | <b>532 17 05-51</b> | Control Th/ch Flag                                                    |
| 2          | 817 72 04-08        | Screw Hex Thd Cut 1/4-20 x 1/2                                        |
| 3          | -----               | Engine B&S Model No. 289707<br>(Order Parts From Engine Manufacturer) |
| 4          | 532 13 73-48        | Muffler LT B&S 12/12.5/13HP                                           |
| 13         | 532 16 52-91        | Gasket Eng 1 313 Id Tin Plated                                        |
| 14         | 532 14 84-56        | Tube Drain Oil Easy                                                   |
| 16         | 811 05 06-00        | Washer Lock Ext Tooth 3/8                                             |
| 23         | 532 16 98-37        | Shield Brn/Dbr Guard                                                  |
| 25         | <b>532 18 09-45</b> | Control Choke 1 Cyl.                                                  |
| 26         | <b>873 92 06-00</b> | Nut Keps 3/8-24 Unf                                                   |
| 29         | 532 13 71-80        | Kit Spark Arrestor (Flat Scrn)                                        |
| 31         | 532 10 92-02        | Tank Fuel Front                                                       |
| 32         | 532 14 05-27        | Cap Asm Fuel W/sym Vented                                             |
| 33         | 532 12 34-87        | Clamp Hose Black                                                      |
| 37         | 532 13 70-40        | Line Fuel 20"                                                         |
| 38         | 532 14 83-15        | Plug Drain Oil Easy                                                   |
| 40         | 532 12 40-28        | Bushing Snap Nyl Blk Fuel Line                                        |
| 44         | 817 67 04-12        | Screw Hexwsh Thdrol 1/4-20x3/4                                        |
| 45         | 817 00 06-12        | Screw Hex Wsh Thdrol 3/8-16 x 3/4                                     |
| 46         | 819 09 14-16        | Washer 9/32 X 7/8 X 16 Ga                                             |
| 62         | 810 04 05-00        | Washer Lock Hvy Hlcl Spr 5/16                                         |
| 72         | 871 07 05-12        | Screw Hexhd Cap 5/16-18 x 3/4                                         |
| 78         | 817 06 06-20        | Screw 3/8-16x1-1/4                                                    |
| 81         | 873 51 04-00        | Nut 1/4-20                                                            |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72 SEAT ASSEMBLY

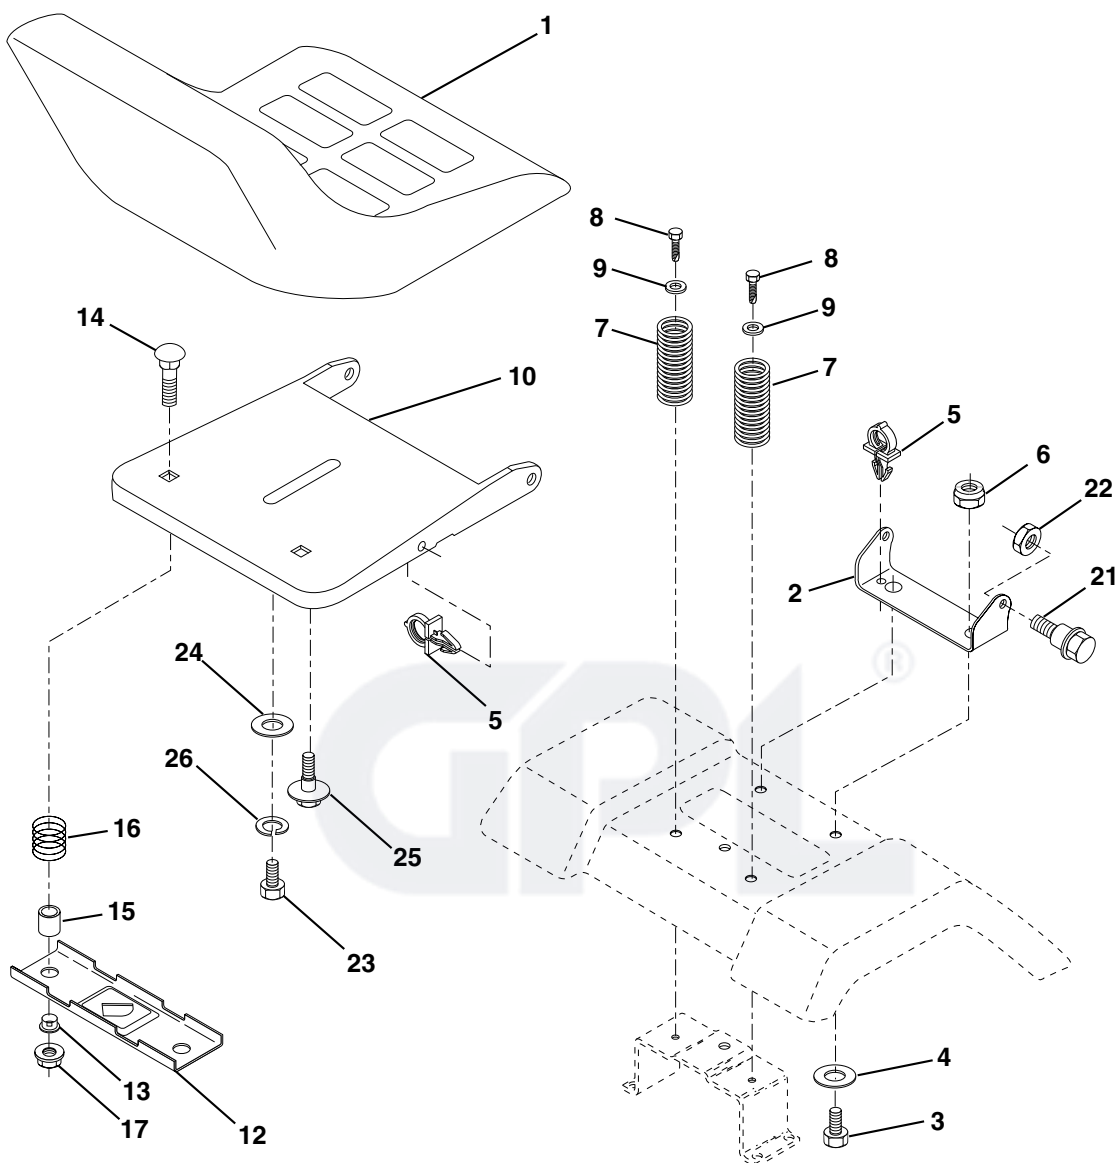


| KEY NO. | PART NO.            | DESCRIPTION                    |
|---------|---------------------|--------------------------------|
| 1       | 532 14 08-38        | Seat                           |
| 2       | 532 14 05-51        | Bracket Pivot Seat 8 720       |
| 3       | 871 11 06-16        | Bolt Fin Hex 3/8-16unc X 1     |
| 4       | 819 13 16-10        | Washer 13/32 X 1 X 10 Ga       |
| 5       | 532 14 50-06        | Clip Push-In                   |
| 6       | 873 80 06-00        | Nut Hex w/Ins. 3/8-16 Unc      |
| 7       | 532 12 41-81        | Spring Seat Cprsn 2 250 Blk Zi |
| 8       | 817 00 06-16        | Screw 3/8-16 X 1-1/2           |
| 9       | 819 13 16-14        | Washer 13/32 X 1 X 14 Ga.      |
| 10      | <b>532 18 24-93</b> | Pan Seat                       |
| 12      | 532 12 12-46        | Bracket Mounting Switch        |
| 13      | 532 12 12-48        | Bushing Snap Blk Nyl 50 Id     |

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 14      | 872 05 04-12 | Bolt Rdhd Sqnk 1/4-20x1-1/2    |
| 15      | 532 13 43-00 | Spacer Split 28x 96 Yel Zinc   |
| 16      | 532 12 12-50 | Spring Cprsn 1 27 Blk Pnt      |
| 17      | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr 5 Zinc |
| 21      | 532 17 18-52 | Bolt Shoulder 5/16-18 Unc      |
| 22      | 873 80 05-00 | Nut Hex Lock W/Ins 5/16-18     |
| 23      | 871 11 08-14 | Bolt Hex                       |
| 24      | 819 17 19-12 | Washer 17/32 X 1-3/16 X 12 Ga. |
| 25      | 532 12 70-18 | Bolt Shoulder 5/16-18 X 62     |
| 26      | 810 04 08-00 | Washer Lock Hvy HLCL SPR 1/2   |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm


# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
DECALS

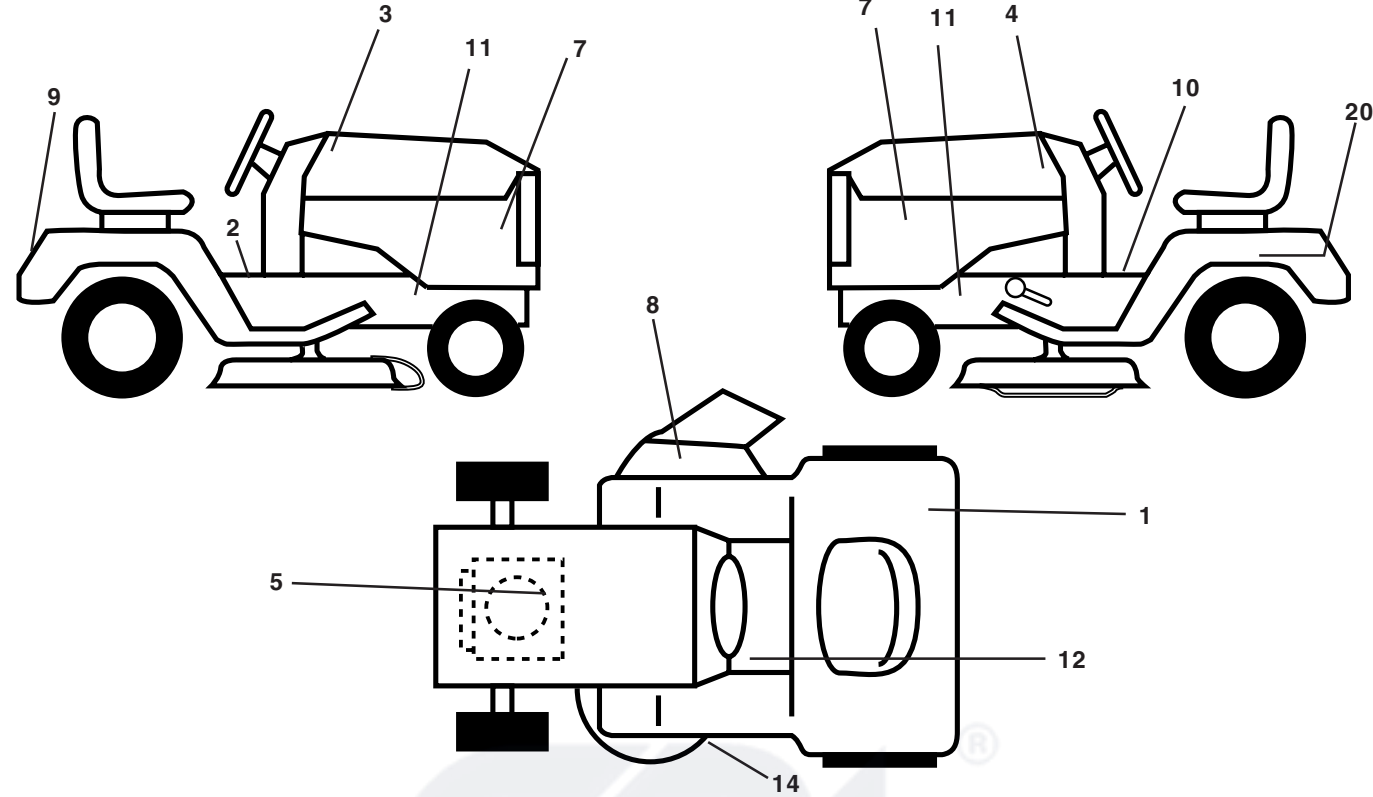

| KEY NO. | PART NO.     | DESCRIPTION                     | KEY NO. | PART NO.     | DESCRIPTION                     |
|---------|--------------|---------------------------------|---------|--------------|---------------------------------|
| 1       | 532 18 04-32 | Decal 100 DBA/CE                | 12      | 532 15 97-37 | Decal Brake/ Clutch Symbol Lt   |
| 2       | 532 14 08-37 | Decal Saddle Brake Parking      | 14      | 532 13 68-32 | Decal V-Belt Schematic          |
| 3       | 532 17 58-52 | Decal Hood RH                   | 20      | 532 14 50-05 | Decal Bat Dan/Psn               |
| 4       | 532 17 58-53 | Decal Hood LH                   | --      | 532 17 12-84 | Pad Footrest LH STLT            |
| 5       | 532 17 08-39 | Decal HP Engine                 | --      | 532 16 25-98 | Decal Drawbar                   |
| 7       | 532 15 97-13 | Decal Pnl Side                  | --      | 532 17 12-85 | Pad Footrest RH STLT            |
| 8       | 532 18 21-66 | Decal Mower Cutfinger           | --      | 532 13 83-11 | Decal Handle Lift Height Adjust |
| 9       | 532 15 06-17 | Decal Fender Husq               | --      | 532 16 92-10 | Decal By Pass                   |
| 10      | 532 14 54-98 | Decal Read Owner's Manual Syms. | --      | 532 18 20-85 | Manual Operator's (Euro.)       |
| 11      | 532 15 97-36 | Decal Chassis Hot Muffler       | --      | 532 18 20-86 | Manual Operator's (Scan.)       |

## WHEELS & TIRES

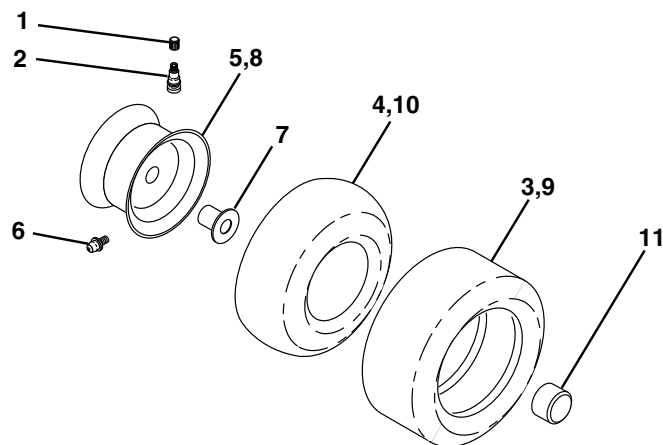


| KEY NO. | PART NO.     | DESCRIPTION                       |
|---------|--------------|-----------------------------------|
| 1       | 532 05 91-92 | Cap Valve Tire                    |
| 2       | 532 06 51-39 | Stem Valve                        |
| 3       | 532 10 62-22 | Tire F Ts 15 X 6 0 - 6 Service    |
| 4       | 532 05 99-04 | Tube Front (Service Item Only)    |
| 5       | 532 13 83-36 | Rim Asm 6"front Silver Service    |
| 6       | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7       | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8       | 532 13 83-37 | Rim Asm 8"rear Silver Service     |
| 9       | 532 12 46-35 | Tire R Ts 18x9 5-8 C Service      |
| 10      | 532 12 49-26 | Tube Rear (Service Item Only)     |
| 11      | 532 17 50-39 | Cap Axle Blk 1 50 X 1 00          |
| --      | 532 14 43-34 | Sealant, Tire ( 10 oz. Tube)      |

NOTE: All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
MOWER DECK

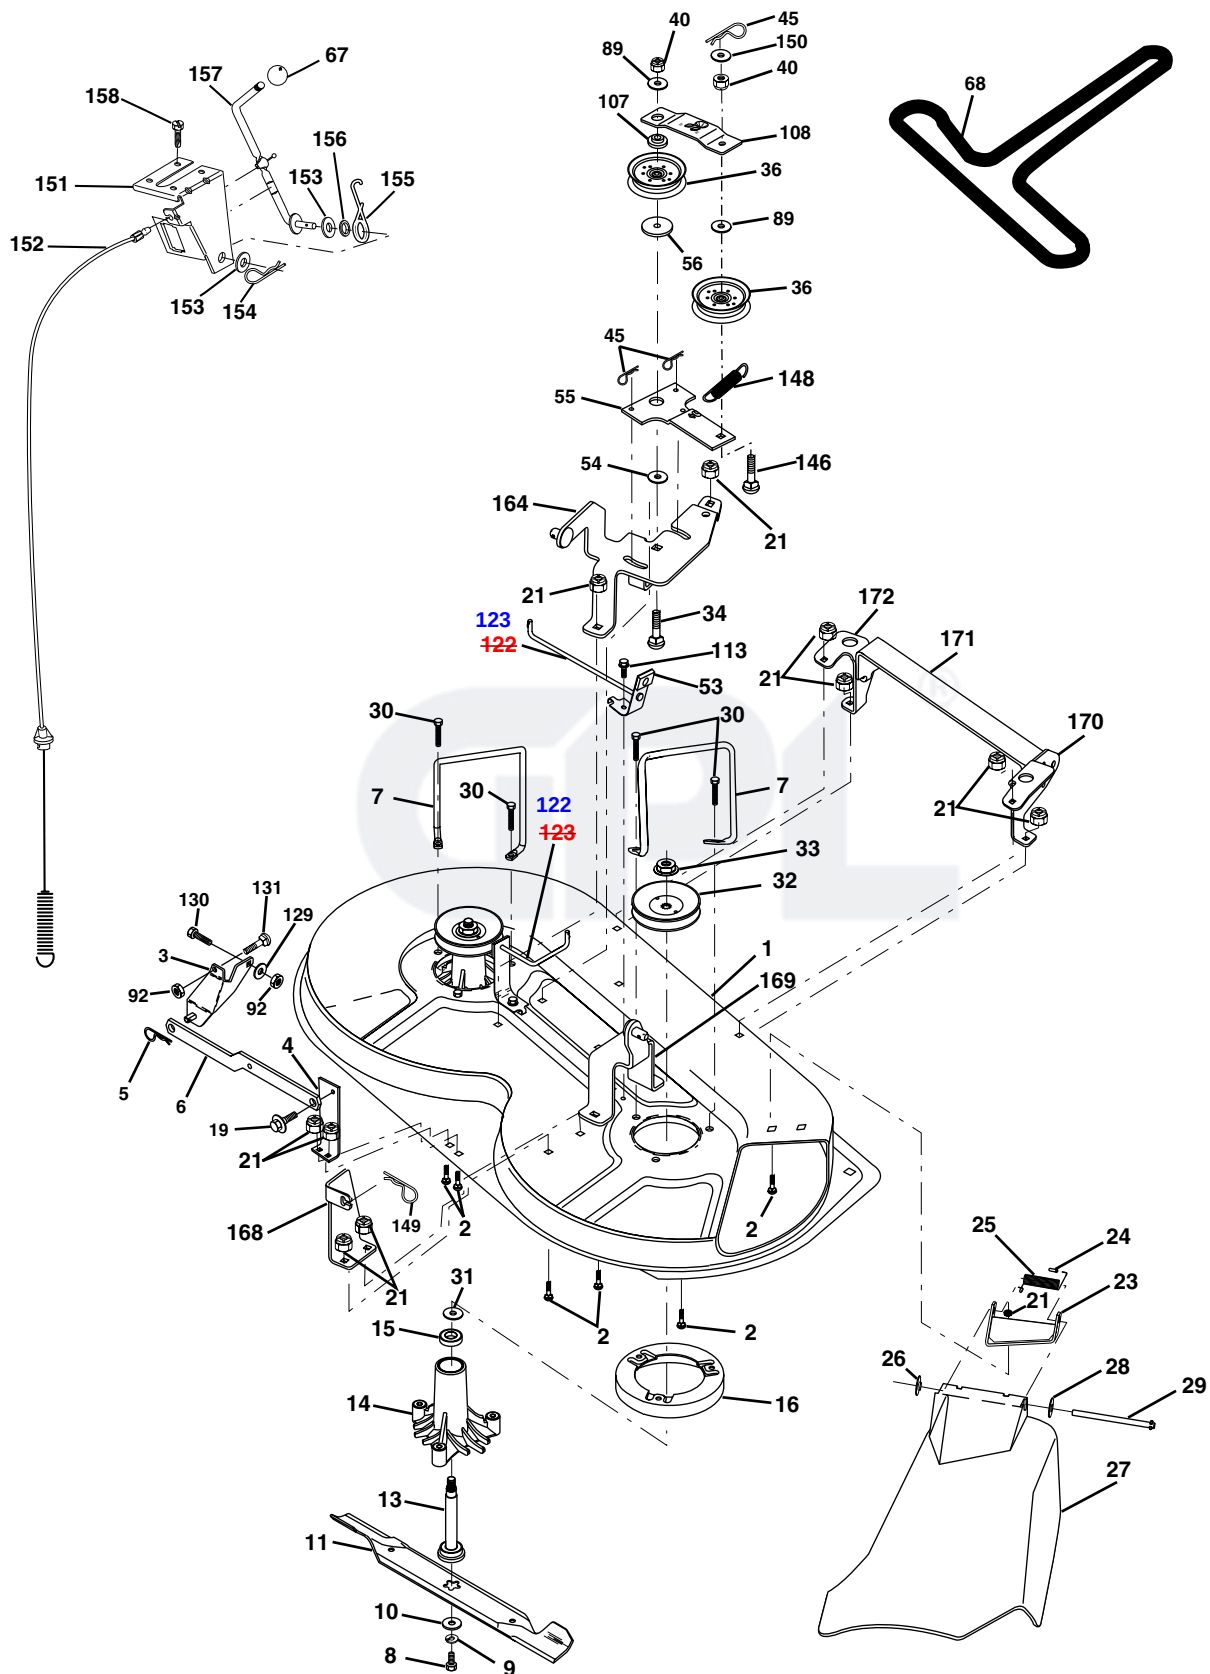

# REPAIR PARTS

**TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72**  
**MOWER DECK**


| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 1       | 532 17 45-95 | Mower Deck Assembly           |
| 2       | 872 14 05-06 | Bolt                          |
| 3       | 532 13 80-17 | Bracket Assembly, Sway Bar    |
| 4       | 532 17 56-54 | Bracket Sway Bar              |
| 5       | 532 12 46-70 | Retainer Spring               |
| 6       | 532 17 80-24 | Bar Sway Deck                 |
| 7       | 532 14 06-08 | Keeper Belt                   |
| 8       | 532 85 08-57 | Bolt, Hex 3/8-24 x 1.25 Gr. 8 |
| 9       | 810 03 06-00 | Washer, Lock Hvy Hlcl 3/8     |
| 10      | 532 14 02-96 | Washer, Hardened              |
| 11      | 532 13 84-96 | Blade, Mower                  |
| 13      | 532 13 76-45 | Shaft Assembly, Mandrel,      |
| 14      | 532 12 87-74 | Housing, Mandrel, Vented      |
| 15      | 532 11 04-85 | Bearing, Ball, Mandrel        |
| 16      | 532 17 44-93 | Stripper, Mower Deck          |
| 19      | 532 13 28-27 | Bolt, Shoulder                |
| 21      | 873 68 05-00 | Nut Crownlock 5/16-18         |
| 23      | 532 13 66-31 | Bracket, Mower Deflector      |
| 24      | 532 10 53-04 | Cap, Sleeve                   |
| 25      | 532 12 37-13 | Spring, Torsion, Deflector    |
| 26      | 532 11 04-52 | Nut, Push                     |
| 27      | 532 17 61-62 | Shield, Deflector             |
| 28      | 819 11 10-16 | Washer 11/32 x 5/8 x 16 Ga.   |
| 29      | 532 12 19-80 | Rod, Hinge                    |
| 30      | 532 17 39-84 | Screw Thdrol                  |
| 31      | 532 12 99-63 | Washer, Spacer                |
| 32      | 532 15 35-31 | Pulley, Mandrel               |
| 33      | 532 17 83-42 | Nut, Toplock, Flanged         |
| 34      | 872 11 06-14 | Bolt Rdhd 3/8-16 x 1-3/4      |
| 36      | 532 13 14-94 | Pulley, Idler, Flat           |
| 40      | 873 68 06-00 | Nut Crownlock 3/8-16          |
| 45      | 532 12 47-88 | Retainer, Spring              |
| 53      | 532 13 08-40 | Brake Assembly                |
| 54      | 532 13 39-43 | Washer, Hardened              |
| 55      | 532 13 38-40 | Idler Arm Assembly            |
| 56      | 532 16 57-23 | Spacer, Retainer              |
| 67      | 532 10 69-32 | Knob RD 3/8-16 Plstc Thd      |

| KEY NO. | PART NO.            | DESCRIPTION                                                                              |
|---------|---------------------|------------------------------------------------------------------------------------------|
| 68      | <b>532 18 02-13</b> | Belt                                                                                     |
| 89      | 819 13 16-12        | Washer 13/32 x 1 x 12 Ga                                                                 |
| 92      | 873 80 06-00        | Nut Lock Hex w/Ins 3/8-16                                                                |
| 107     | 532 13 35-02        | Spacer, Retainer                                                                         |
| 108     | 532 13 35-03        | Stiffener, Idler Arm                                                                     |
| 113     | 817 49 05-08        | Screw Thdrol 5/16-18 x 1/2                                                               |
| 122     | 532 17 45-05        | Rod, Brake, LH                                                                           |
| 123     | 532 17 45-04        | Rod, Brake, RH                                                                           |
| 129     | 819 13 13-12        | Washer 13/32 x 13/16 x 12                                                                |
| 130     | 874 78 06-16        | Bolt Fin Hex 3/8-16 x 1                                                                  |
| 131     | 872 14 06-08        | Bolt Rdhd Sqnk 3/8-16 x 1                                                                |
| 146     | 532 16 58-91        | Bolt Carriage Idler                                                                      |
| 148     | 532 16 90-22        | Spring Return Idler                                                                      |
| 149     | 532 16 58-98        | Retainer Spring Yellow Zinc                                                              |
| 150     | 819 09 12-16        | Washer 9/32 x 3/4 x 16 Ga.                                                               |
| 151     | 532 16 96-70        | Bracket Clutch                                                                           |
| 152     | 532 17 60-79        | Cable Clutch                                                                             |
| 153     | 532 16 96-74        | Washer Flat 3/8" Type B                                                                  |
| 154     | 532 16 96-75        | Spring Retainer                                                                          |
| 155     | 532 16 96-71        | Spring Retention Lever                                                                   |
| 156     | 532 16 96-72        | Spacer                                                                                   |
| 157     | 532 16 96-69        | Rod Clutch                                                                               |
| 158     | 817 72 04-08        | Screw Hex Thd Cut 1/4-20 x 1/2                                                           |
| 164     | 532 17 49-76        | Bracket Asm Idler Support                                                                |
| 168     | 532 17 23-77        | Bracket Deck Cable                                                                       |
| 169     | 532 17 49-77        | Bracket Asm Suspension                                                                   |
| 170     | 532 17 23-59        | Bracket Suspension RF                                                                    |
| 171     | 532 16 52-37        | Bracket Support Susp. Frt                                                                |
| 172     | 532 17 23-55        | Bracket Suspension LF                                                                    |
| --      | 532 13 07-94        | Mandrel Assembly (Includes Housing, Shaft and Shaft Hardware Only - Pulley Not Included) |
| --      | <b>532 18 13-76</b> | Replacement Mower, Complete                                                              |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
MOWER LIFT

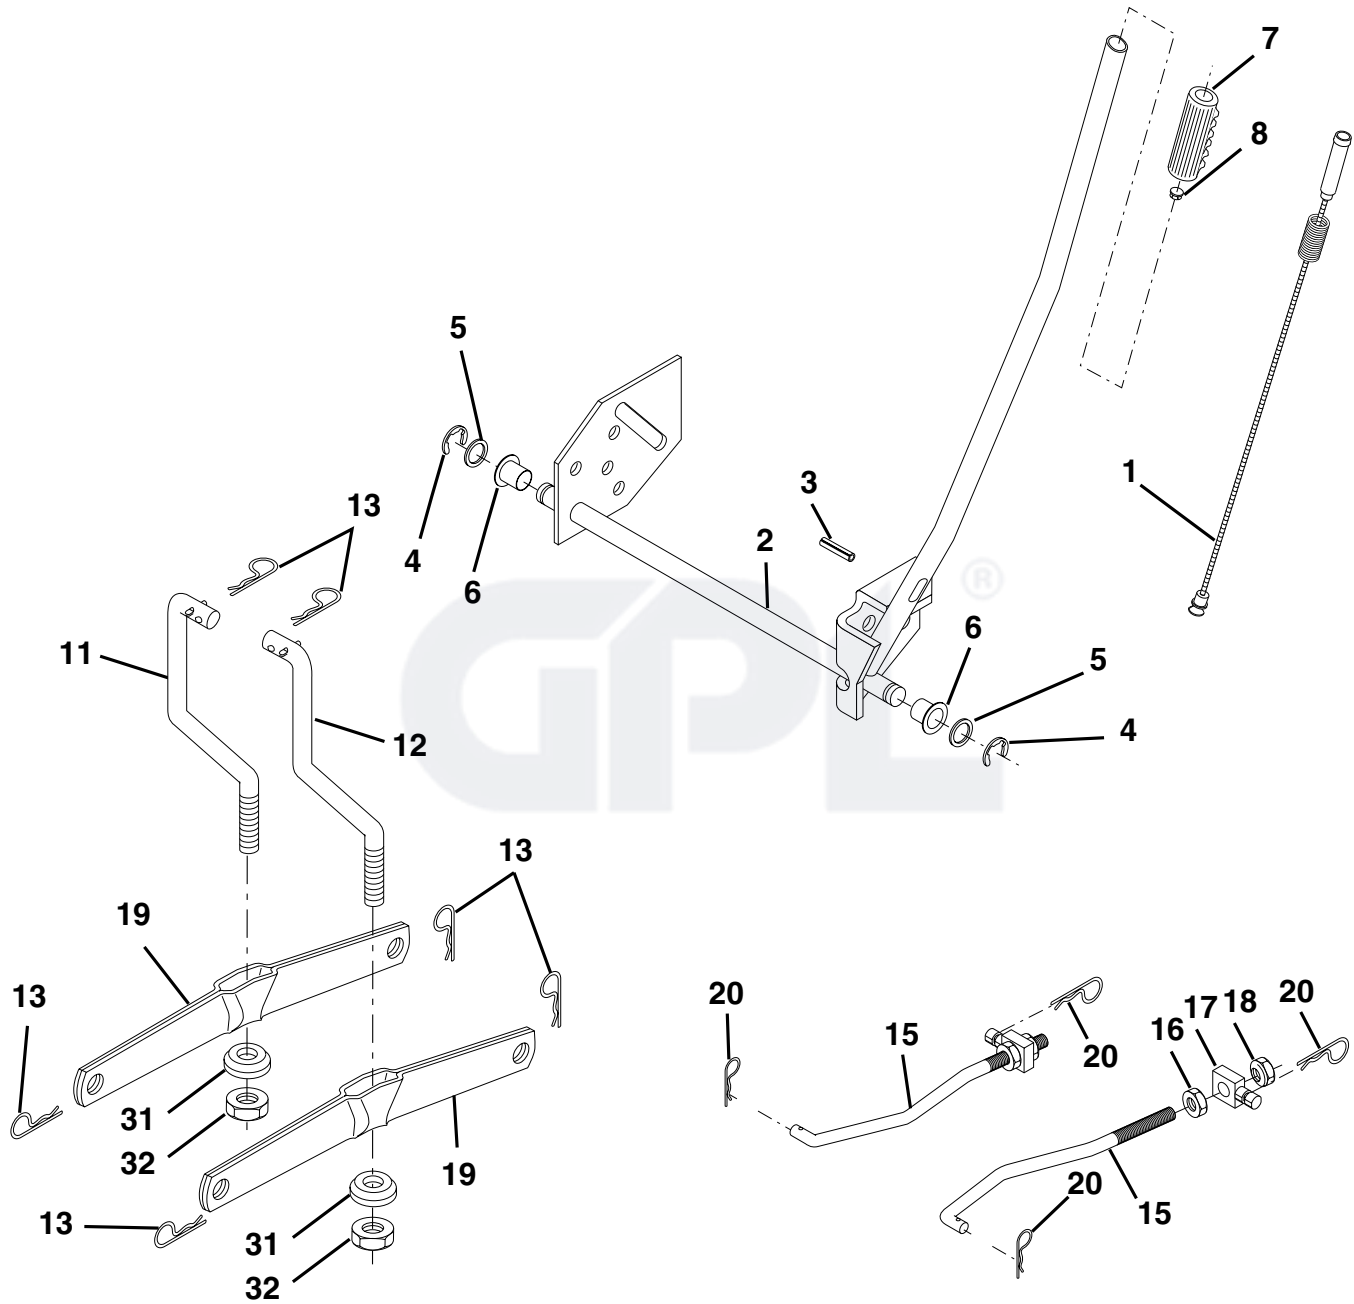



# REPAIR PARTS

TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72  
MOWER LIFT

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                     |
|------------|--------------|---------------------------------|
| 1          | 532 15 94-60 | Wire Asm Inner/Spring W/plunger |
| 2          | 532 15 94-71 | Shaft Asm Lift                  |
| 3          | 532 10 57-67 | Pin Groove                      |
| 4          | 812 00 00-02 | E Ring #5133-62                 |
| 5          | 819 21 16-21 | Washer PLTD 21/32 X 1 X 21ga    |
| 6          | 532 12 01-83 | Bearing Nylon Blk 629 Id        |
| 7          | 532 10 94-13 | Grip Handle                     |
| 8          | 532 12 45-26 | Button Plunger Black            |
| 11         | 532 13 98-65 | Link Lift LH                    |
| 12         | 532 13 98-66 | Link Lift RH                    |
| 13         | 532 12 46-70 | Retainer Spring                 |
| 15         | 532 17 32-88 | Link Front                      |
| 16         | 873 35 08-00 | Nut Jam Hex 1/2-13 Unc          |
| 17         | 532 17 56-89 | Trunnion                        |
| 18         | 873 80 08-00 | Nut Lock W/wsh 1/2-13unc        |
| 19         | 532 13 98-68 | Arm Suspension Rear             |
| 20         | 532 16 35-52 | Spring, Retainer                |
| 31         | 532 16 98-65 | Bearing Pvt. Lift               |
| 32         | 873 54 06-00 | Nut Crownlock 3/8-24            |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# TRACTOR - MODEL NO. LTH125 (HELTH125D), PRODUCT NO. 954 17 00-72 SCHEMATIC

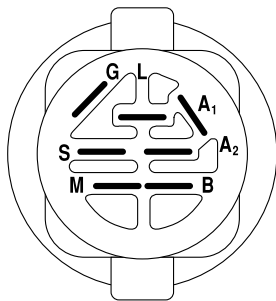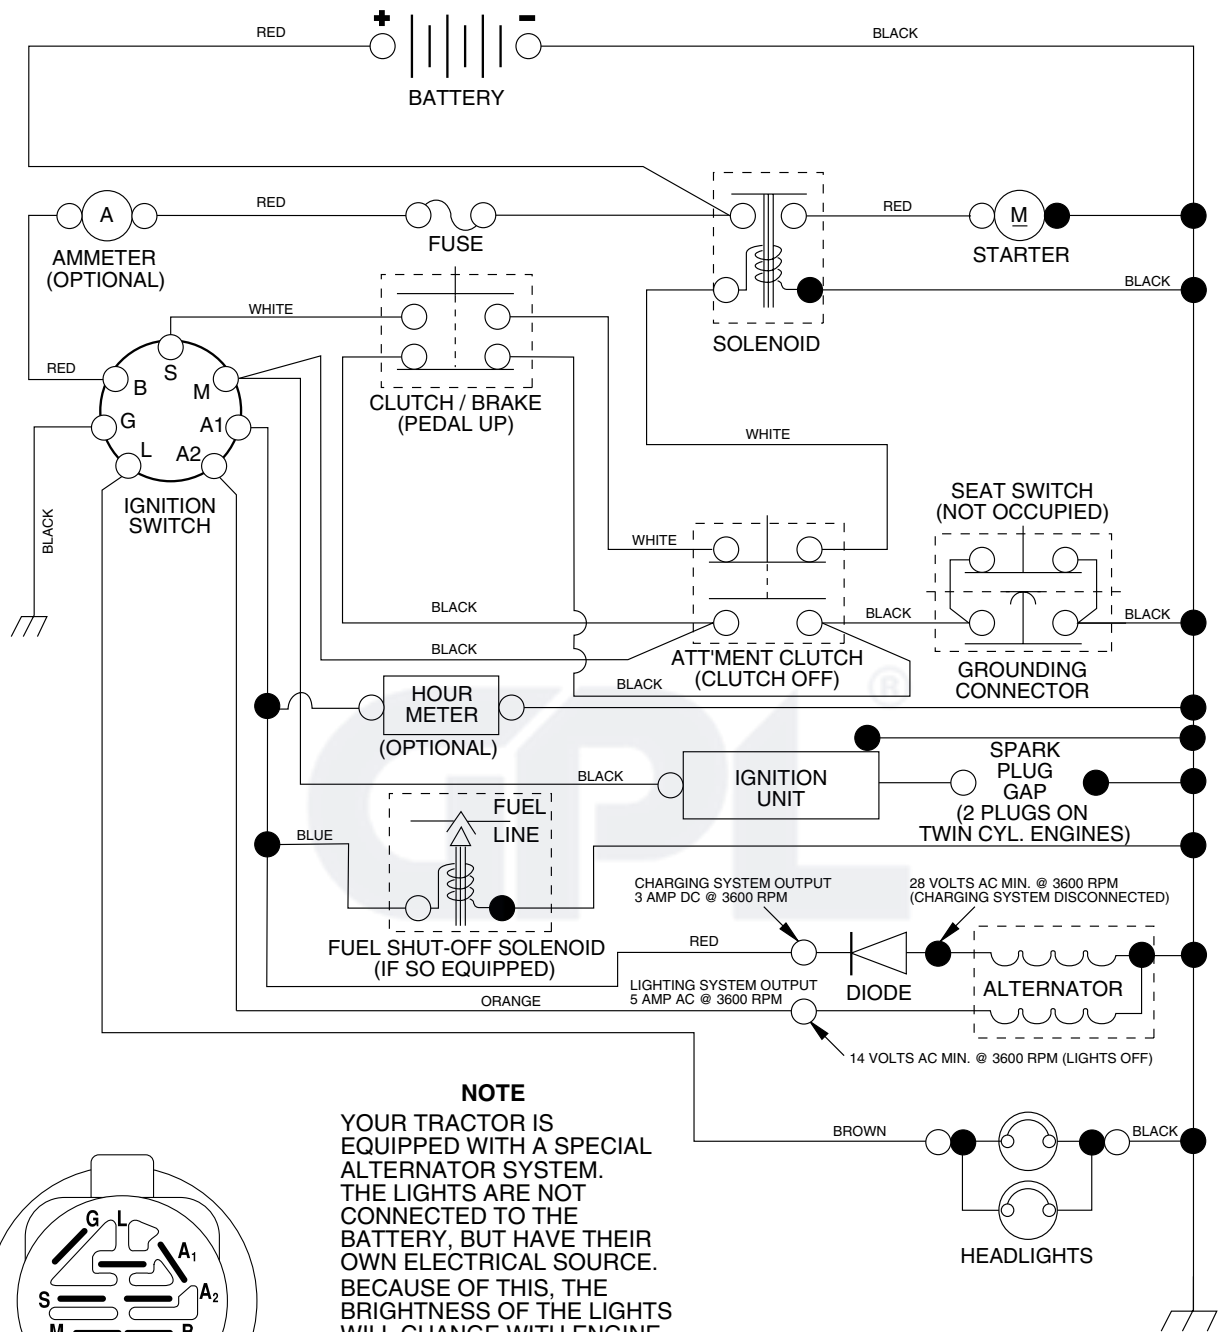

**IGNITION SWITCH**

| POSITION  | CIRCUIT    | "MAKE" |
|-----------|------------|--------|
| OFF       | M+G+A1     | NONE   |
| RUN/LIGHT | B+A1       | A2+L   |
| RUN       | B+A1       | NONE   |
| START     | B + S + A1 | NONE   |

**NOTE**  
YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

## WIRING INSULATED CLIPS

**NOTE:** IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS