

YTH16 44"

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen


Repuestos

Reservdelar

GPL®

REPAIR PARTS

16 HP 44" RINDING YARD TRACTOR - MODEL NUMBER J16H44
ELECTRICAL

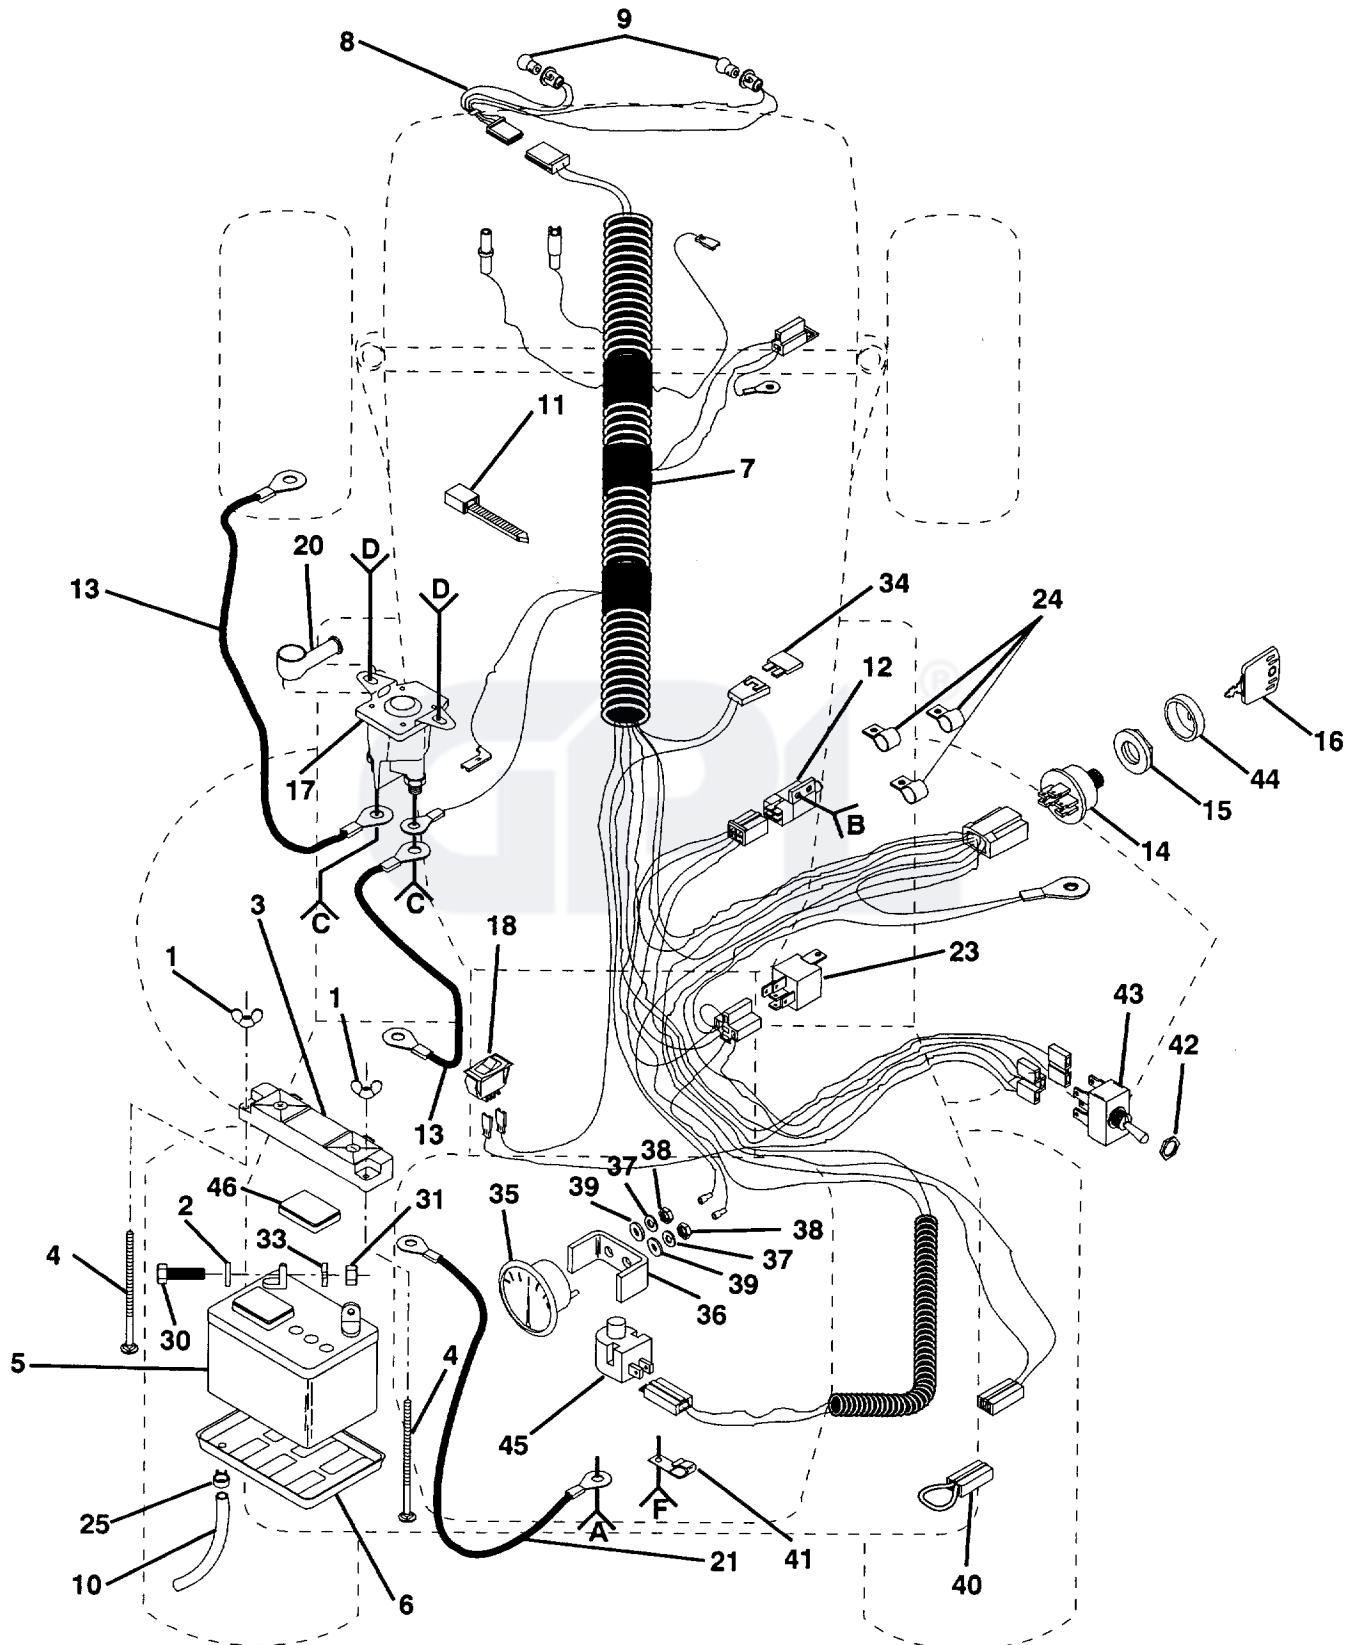


REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

ELECTRICAL


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532 12 31-98	Nut, Wing 1/4-20	29 873 51 04-00	Nut, Hex, Keps 1/4-20
2 819 09 10-16	Washer 9/32 x 5/8 x 16 Ga.	30 874 76 04-12	Bolt, Hex 1/4-20 x 3/4
3 532 10 24-76	Guard, Terminal	31 873 22 04-00	Nut, Hex 1 /4-20
4 872 24 04-60	Bolt, Battery (Bolt, Carriage 1/4-20 x 7-1/2)	32 811 05 04-00	Washer, Lock, Tooth, External 1/4
5 532 12 15-37	Battery	33 810 04 04-00	Washer, Lock 1/4
6 532 12 48-86	Tray, Battery	34 532 10 88-24	Fuse
7 532 12 56-20	Harness, ignition	35 532 12 49-00	Ammeter
8 532 12 74-41	Harness, Light Socket	36 534 12 49-01	Bracket, Ammeter
9 532 12 48-93	Bulb, Light	37 810 10 10-00	Washer, Lock #10
10 532 10 05-41	Tube, Battery Tray	38 873 91 10-00	Nut
11 532 12 47-56	Cable, Tie	39 819 07 08-18	Washer 7/32 x 1/2 x 18 Gauge
12 532 10 95-53	Switch, Interlock, Clutch	40 532 10 25-01	Loop, Wire
13 532 12 47-70	Cable, Battery	41 532 12 49-95	Clip, Insulated
14 532 10 29-72	Ignition, Switch	42 532 12 49-32	Nut, Hex
15 532 10 97-88	Nut, Ignition	43 532 12 60-16	Switch, PTO
16 532 12 21-47	KeY	44 532 10 97-87	Bezel, Ignition
17 532 10 90-81	So~enoid	45 532 12 13-05	Switch, Seat
18 532 11 07-12	Switch	46 532 12 12-64	Cap, Battery
19 873 68 04-00	Nut, Hex 1 /4-20	48 874 76 06-16	Bolt-Fin Hex 3/8-16 UNC x 1
20 532 12 47-83	Terminal Cover (For Solenoid)	49 811 05 06-00	Washer, Lock, Ext. Tooth 3/8
21 532 12 47-73	Cable, Battery (Battery to Ground)	- 532 12 15-49	Decal, Battery, Caution (Battery)
22 817 02 10-08	Screw, Hex Tap Hd #10-24 UNC x 1/2 Type T	-- 532 12 57-42	Owner's Manual (English)
23 532 10 97-48	Relay	-- 532 10 15-39	Sheet, Instruction, Tractor 15° Slope (English)
24 532 12 49-96	Clip	- 532 12 57-43	Owner's Manual (French)
25 532 10 95-96	Clamp, Hose	-- 532 10 15-72	Sheet, instruction Tractor 15° Slope (French)
26 810 09 04-00	Washer, Lock 1/4		
27 873 35 04-00	Nut, Hex, Jam 1/4-20		
28 874 78 04-08	Rr~lt 14=v 1 /d On Y 1 /O ~r::~ ii		

NOTE: All component dimensions given in U.S. inches
1 inch=25.4mm

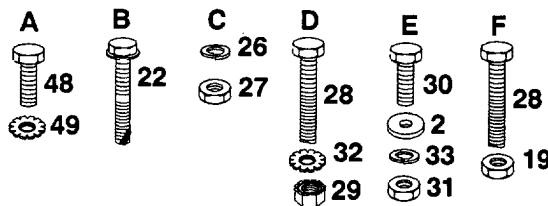

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44 CHASSIS AND ENCLOSURES

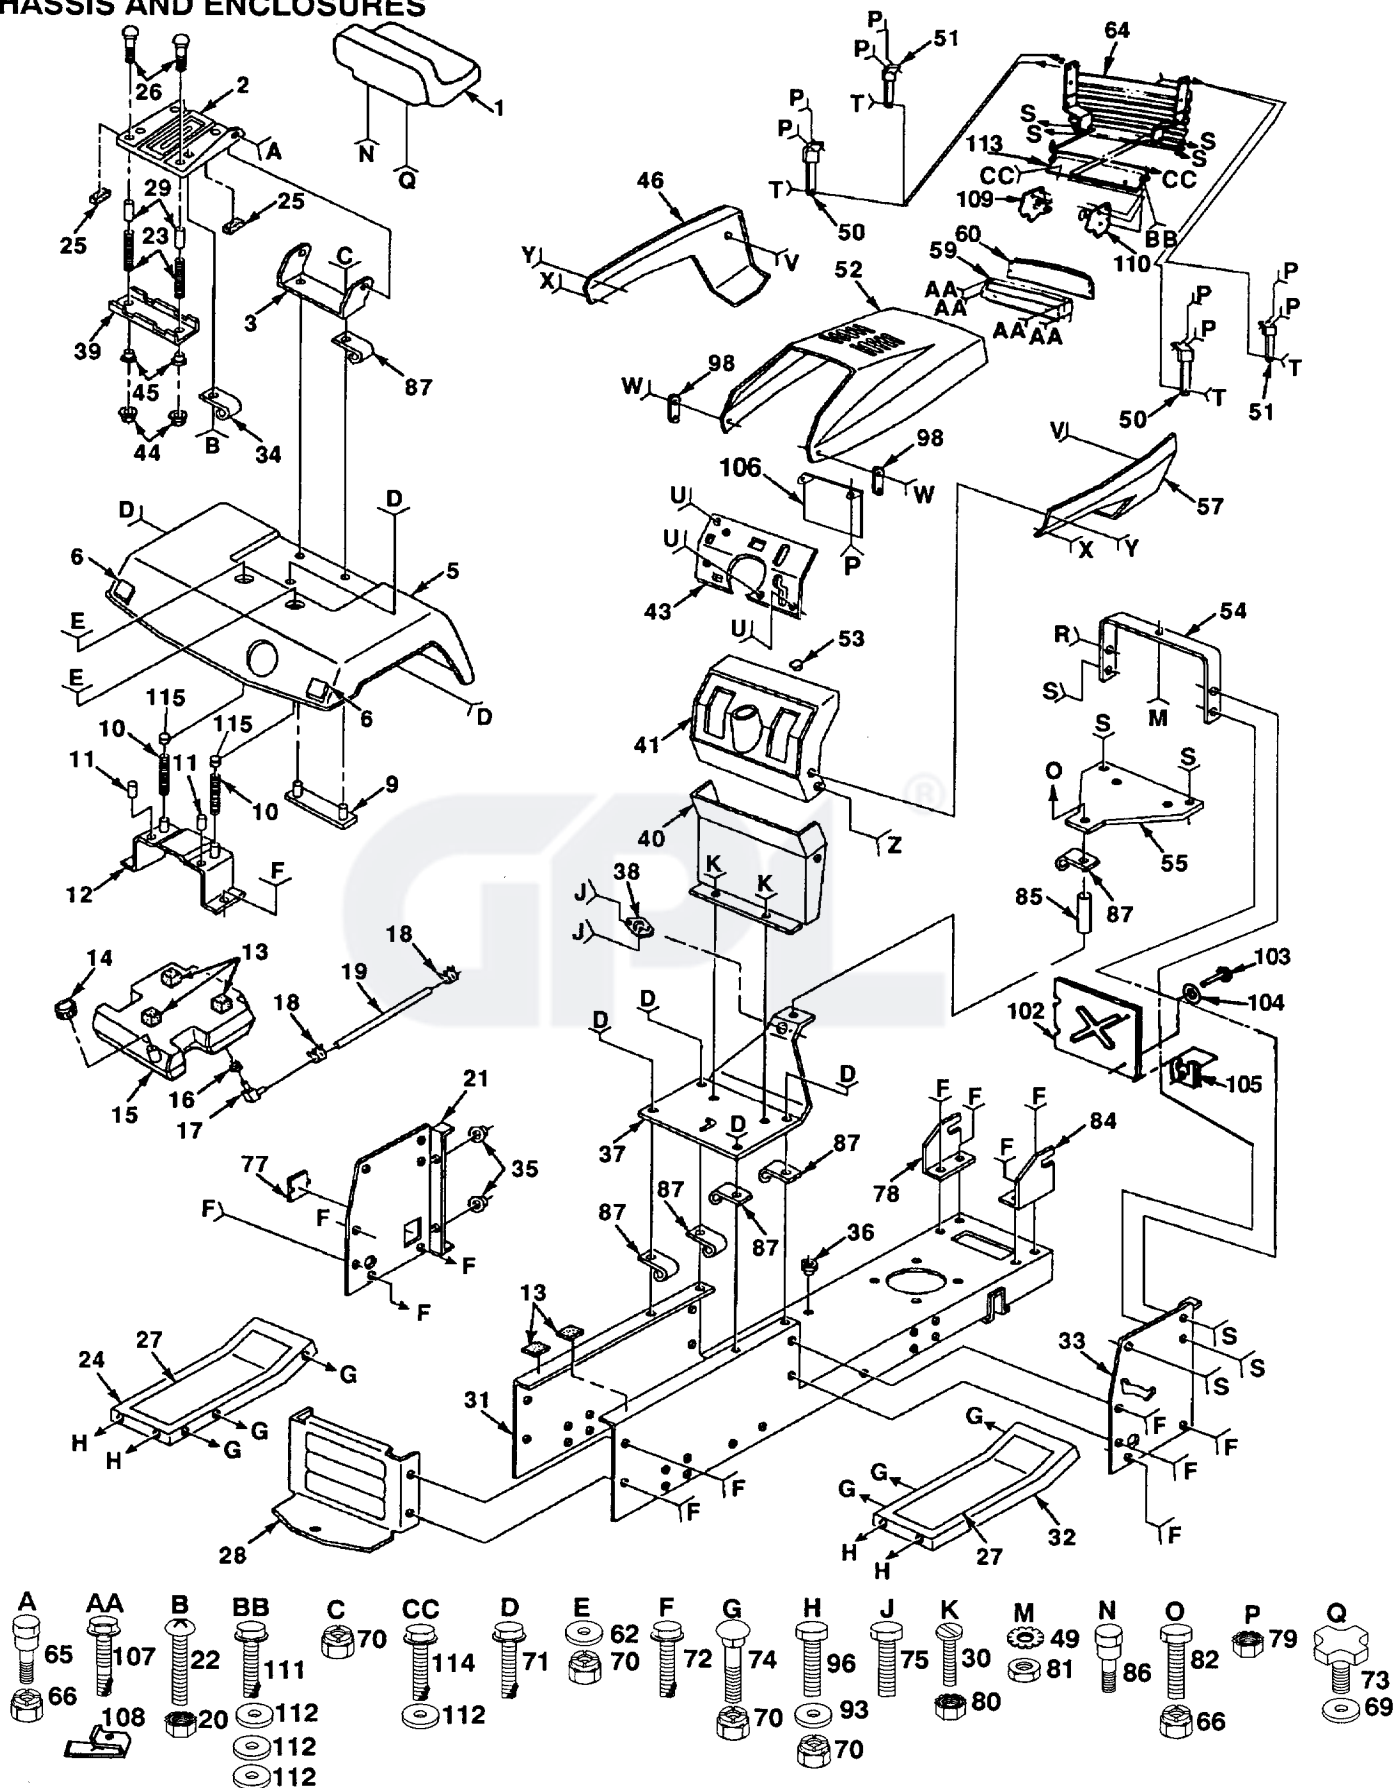

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

CHASSIS AND ENCLOSURES


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532 12 74-29	Seat	64 532 12 21-00	Grill Assy. (Incl. Key Nos. 58, 59, 60)
2 532 12 42-94	Pan, Seat	65 532 10 55-29	Bolt, Shoulder 5/16-18
3 532 12 66-56	Bracket, Pivot, Seat	66 873 68 05-00	Nut, Crownlock 5/16-18
5 532 12 49-23	Fender	67 811 05 06-00	Washer, Lock, External Tooth 3/8
6 532 10 62-02	Reflector, Taillight	68 532 00 12-60	Spacer
9 532 10 55-11	Strap, Fender	69 819 17 19-12	Washer 17/32 x 1 -3/16 x 12 Gauge
10 532 12 41-81	Spring, Compression	70 873 68 06-00	Nut, Crownlock 3/8-16
11 532 10 55-31	Nut, Push	71 817 49 06-08	Screw, Hex, Wash Thrdrl. 3/8-16 x 1/2
12 532 10 55-09	Bracket, Fender	72 817 49 06-12	Screw, Hex, Wash Thrdrl. 3/8-16 x 3/2
13 532 00 64-31	Pad, Spacer	73 532 12 00-68	Knob, Seat 1/2"
14 532 12 35-49	Cap, Fuel	74 872 14 06-06	Boit, Carriage 3/8-16 x 3/4
15 532 10 60-20	Tank, Fuel	75 817 43 10-08	Screw, Hex, Tap #10-16 x 1/2
16 532 12 49-52	Bushing	76 874 76 06-16	Bolt, Hex 3/8-16x1
17 532 12 49-51	Stem, Tank, Fuel	77 532 12 17-94	Cover, Access
18 532 12 34-87	Clamp, Hose	78 532 11 08-52	Bracket Assembly, L.H.
19 532 12 49-53	Line, Fuel	79 873 51 04-00	Nut, Hex, Keps 1/4-20 UNC
20 873 95 10-00	Nut, Keps #10	80 873 51 05-00	Nut, Hex, Keps 5/16-18 UNC
21 532 12 41-18	Panel, Dash, L.H.	81 873 22 04-00	Nut, Hex, Fin, 1/4-20 UNC
22 874 64 10-08	Screw, Pan Head #10-32	82 874 76 05-32	Bolt, Hex 5/16-18 x 2
23 532 12 37-40	Spring, Compression	83 873 51 05-00	Nut, Keps 5/16-18
24 532 12 49-44	Footrest, L.H.	84 532 11 08-53	Bracket Assembly, R.H.
25 532 12 12-51	Strip, Foam	85 532 12 12-36	Spacer
26 872 17 04-10	Bolt, Carriage 1/4-20 x 1-1/4	86 532 12 70-18	Bolt, Shoulder 5/16-18 x .62
27 532 10 82-56	Pad, Footrest	87 532 12 49-96	Clip, Insulated
28 532 12 13-06	Drawbar	88 532 12 34-81	Bolt, Shoulder 1/4-20
29 532 12 12-49	Spacer, Split	89 873 68 04-00	Nut, Crownlock 1/4-20
30 874 18 05-12	Screw, Mach. Cr. Thrd 5/16-18 x 3/4	90 874 19 10-08	Screw, Pan, Mach. #10-24 x 1/2
31 532 12 71-66	Chassis	91 810 07 10-00	Washer, Lock #10
32 532 12 49-47	Footrest, R.H.	92 819 11 11-16	Washer 11/32 x 11/16 x 16 Gauge
33 532 11 08-28	Panel, Dash, R.H.	93 819 13 13-12	Washer 13/32 x 13/16 x 12 Gauge
34 532 00 41-71	Clip, Insulated	96 874 76 06-12	Boit, Hex 3/8- 16 x 3/4
35 532 11 04-36	Grommet, Split	97 874 98 10-20	Screw, Mach. Cr. Pan #10-24 x 1-1/4
36 532 12 49-34	Grommet	98 532 10 98-08	Latch, Hood
37 532 12 47-66	Saddle	99 873 73 10-00	Nut, Keps #10-24
38 532 12 47-20	Bushing, Steering	100 532 00 72-06	Spacer, Split 10 x 3/4
39 532 12 12-46	Bracket, Switch Mount	101 819 07 08-18	Washer 7/32 x 1/2 x 18 Gauge
40 532 10 48-05	Dash Assembly, Lower	102 532 10 81-05	Shield, Heat
41 532 12 42-52	Dash	103 532 12 36-50	Stud 1/4 Turn
42 532 12 50-04	Nut, Weld	104 532 10 58-38	Retainer 114 Turn
43 532 12 47-69	Plate, Dash	105 532 10 58-39	Receptacle 1/4 Turn
44 532 12 39-76	Locknut, Hex, Large, Flange	106 532 12 30-91	Baffle, Vertical
45 532 12 12-48	Bushing, Snap	107 817 21 10-10	Screw, Hex Hd. Washer Hd. Tap. #10-16x5/8
46 532 12 49-41	Panel, Side, L.H.		"J" Fastener
49 811 05 04-00	Washer, Lock, Ext. Tooth. 1/4	108 532 10 47-55	Bracket Assembly, L.H., Pivot
50 532 10 67-84	Strap Assembly, Hinge, Rear	109 532 11 08-55	Bracket Assembly, R.H., Pivot
51 532 10 46-18	Strap Assembly, Hinge, Front	110 532 11 08-54	Screw, Hex Wash. Thr. 5/16-18 x 3/4
52 532 12 49-38	Hood	111 817 49 05-12	Washer 11/32 x 3/4 x 12
53 532 00 54-79	Plug, Button	112 819 11 12-12	Strap, Grill
54 532 11 08-29	Support, Dash	113 532 12 49-40	Screw, Hex Wash. Thrd Cut 1/4-20 UNC x 3/4
55 532 10 69-65	Plate, Support, Battery	114 817 19 04-12	Cap, Spring
56 873 49 04-00	Nut, Wing		Decal, Hood, L.H.
57 532 12 49-42	Panel, Side, R.H.	115 532 12 42-38	Decal, Hood, R.H.
59 532 12 49-39	Bezel Assembly	- 532 12 73-89	Decal, Fender (Fender, Rear)
60 532 10 63-95	Lens	- 532 12 73-91	Decal, Clutch/Brake (Dan/Nor/Fin)
61 811 03 04-00	Washer, Lock, InVExt. Tooth. 1/4	- 532 12 73-97	Decal, Belt Inst. (Under Footrest)
62 819 13 16-14	W/oh-r 1q/-20 v 1 v 1A ~-^	- 532 12 66-76	Decal, Hood, YTH16
		- 532 12 12-15	Decal, Oper/Warn Swed/Danish)
		- 532 12 59-54	Decal, Oper/Warn Norwea/Fi nnish)
		- 532 12 66-79	Decal, Certificatio ~TOD o{Fender)
		- 532 12 66-80	
		- 532 12 61-87	

NOTE: All component dimensions given in U.S.inches
1 inch = 25.4 mm

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

DRIVE

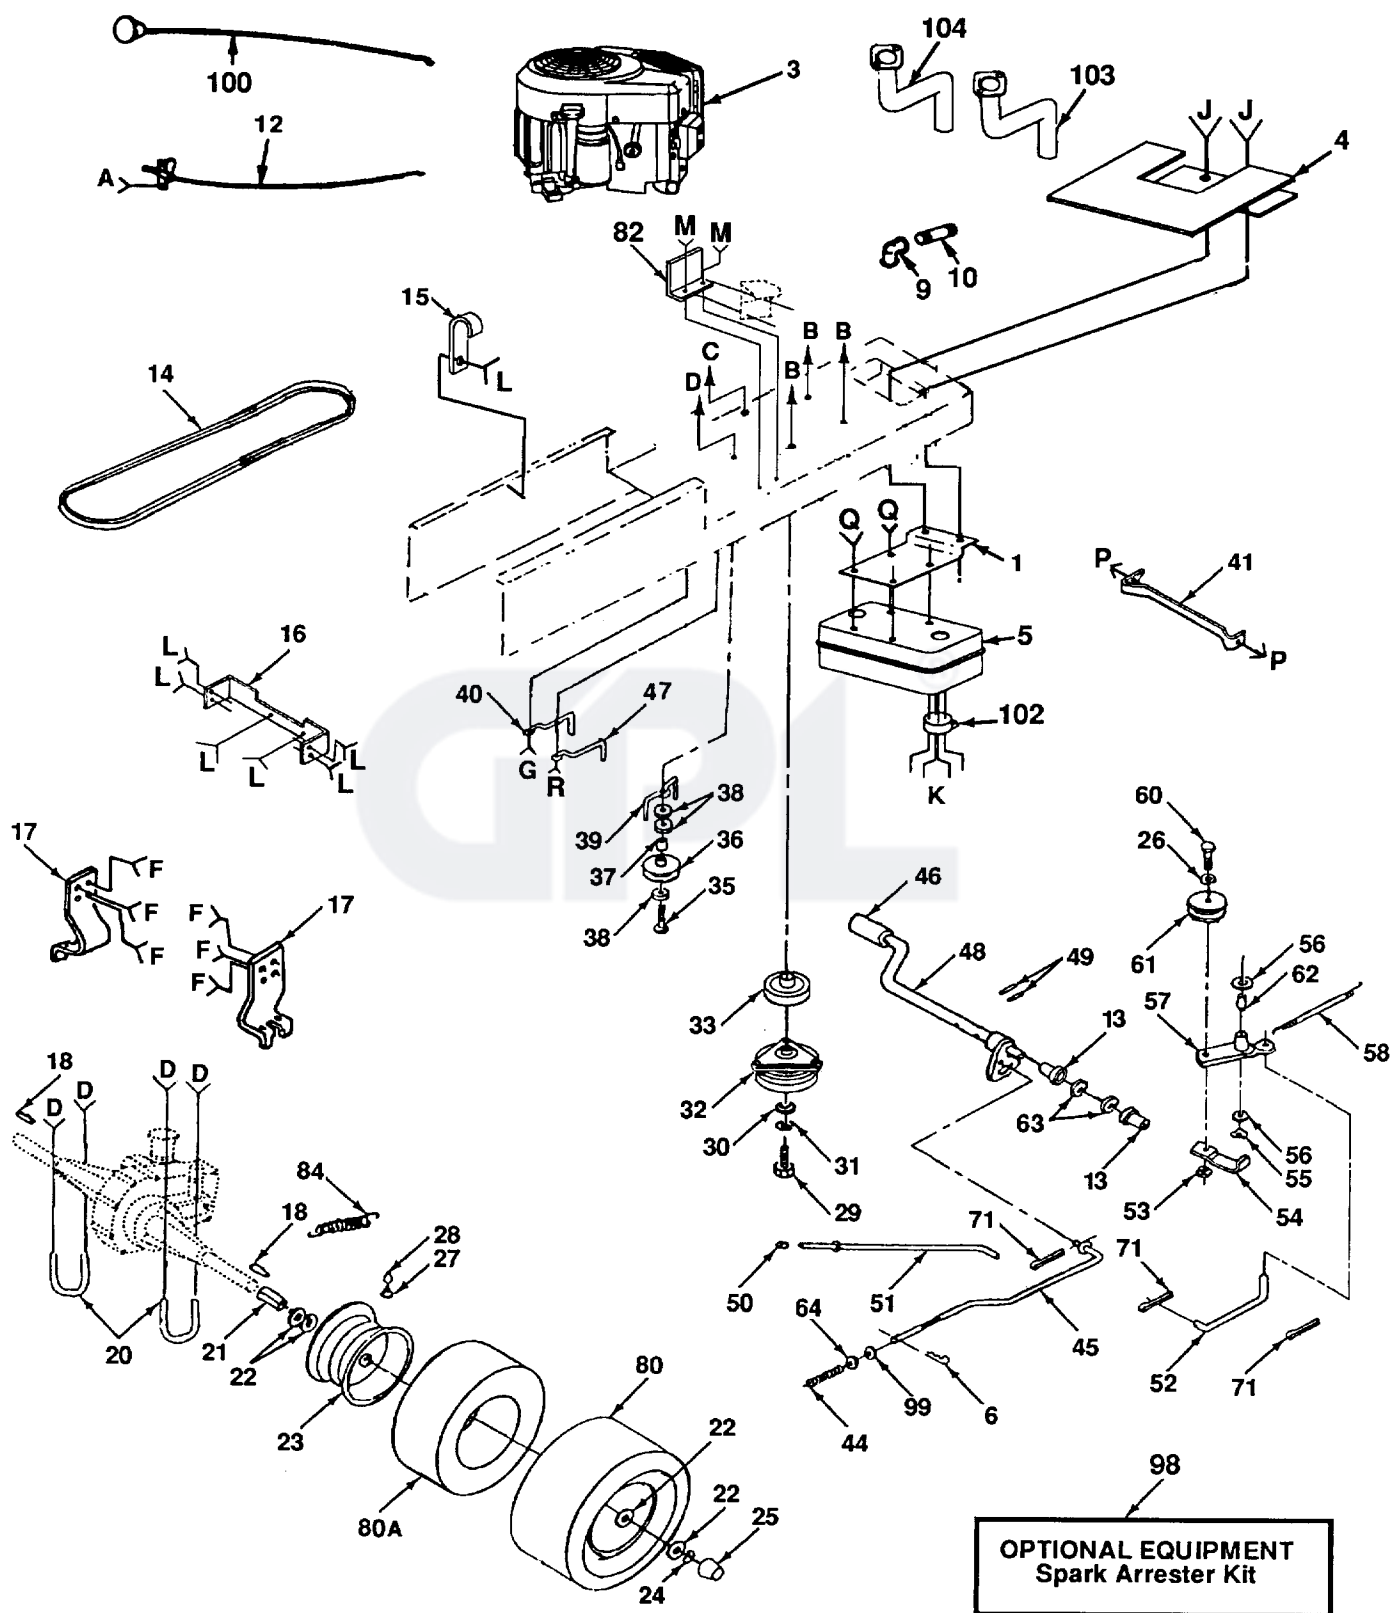


REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

DRIVE


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532 12 24-39	Bracket, Muffler, Mounting	52 532 10 57-10	Link, Clutch
3 532 12 24-36	Engine, 16 H.P. Model Number 303777, Type Number 0015-02	53 873 68 06-00	Locknut 3/8-16
4 532 12 29-81	Shield, Heat	54 532 12 32-05	Retainer, Belt
5 532 12 24-40	Muffler	55 812 00 00-39	Ring, Klip
6 532 12 47-88	Clip, Hairpin	56 532 11 08-12	Washer, Hardened
9 813 20 03-00	Coupling, Pipe, Std. 3/8-16 NPT Elbow, 90° 3/8-18 NPT	57 532 12 37-89	Arm, Assembly, Idler
10 813 28 03-36	Nipple, Pipe	58 532 10 57-09	Spring, Return, Clutch
12 532 12 30-72	Control, Throttle	60 874 76 06-24	Bolt, Hex 3/8-16 x 1 -1/2
13 532 12 01-83	Bearing, Nylon	61 532 12 37-66	Idler, V-Groove
14 532 12 34-61	V-Belt, Drive	62 532 10 57-06	Bearing
15 532 12 49-96	Clip	63 819 21 16-16	Washer 21/32 x 1 x 16 Gauge
16 532 12 11-87	Bracket, Mounting, Hydro	64 873 80 06-00	Locknut, Hex. w/Wsh Ins. 3/8-16 UNC
17 532 12 66-49	Bracket, Transaxle	65 817 72 04-10	Screw, Hex Thrd. Cut 1/4-20 x 5/8
18 532 12 35-83	Key, Square 2.5 x .1845/.1865	66 817 49 06-24	Bolt, Hex Washer Thdrol. 3/8- i6 x 1-1/2
19 873 61 06-00	Nut, Keps 3/8-24 UNF	67 811 05 06-00	Washer, Lock, External Tooth 3/8
20 532 12 11-89	U-Bolt 3/8-16 x 2-3/4	68 874 76 06-12	Bolt, Hex 3/8-16 x 3/4
21 532 12 11-99	Spacer, Split	69 874 76 06-16	Bolt, Hex 3/8-16 x 1
22 532 12 17-48	Washer 1 -1/32 x 1 -5/8 x 16 Gauge	71 876 02 04-12	Pin, Cotter 1/8 x 3/4
23 532 12 47-23	Rim, Rear	72 817 49 06-12	Screw, Hex Wsh. Thdrol. 3/8-16 x 3/4
24 812 00 00-01	E-Ring	80 532 10 62-68	Tire
25 532 10 47-57	Cap, Axle	80A 532 12 49-26	Tube
26 819 13 13-16	Washer 13/32 x 13/16 x 16 Gauge	82 532 10 82-36	Bracket, Switch
27 532 06 51-39	Stem, Valve	83 817 02 10-08	Screw, Tap Hex Hd. #10-24 x 1/2 Type T
28 532 05 91-92	Cap, Valve	84 532 11 04-22	Spring, Brake
29 874 61 07-64	Bolt, Hex 7/16-20 x 4	88 819 13 16-14	Washer 13/32 x 1 x 14 Gauge
30 532 12 61-97	Washer 1-1/2 x 15/32 x 1/4	89 872 14 05-06	Boit, Carriage 5/16-18 x 3/4
31 810 04 07-00	Washer, Lock 7/16	90 873 68 05-00	Locknut 5/16-18
32 532 10 82-18	Clutch, Electric	98 532 12 18-51	Spark Arrester Screen
33 532 10 98-41	Pulley, Engine	99 873 35 06-00	Nut, Hex, Jam 3/8 x 16 UNC
34 874 76 05-16	Bolt, Hex 5/16-18 x 1	100 532 12 29-26	Control, Choke
35 874 76 06-44	Bolt, Hex 3/8- 16 x 2-3/4	102 532 10 13-26	Deflector, Muffler
36 532 00 48-59	Idler, Flat	103 532 12 24-35	Tube, Manifold, R.H.
37 532 00 44-70	Spacer	104 532 12 24-34	Tube, Manifold, L.H.
38 819 13 13-12	Washer 13/32 x 13/16 x 12 Gauge	106 817 49 05-12	Screw, Hex Wsh. Thd. Roll. 5/16-18 x 3/4
39 532 10 90-70	Retainer, Belt	107 817 03 08-08	Screw, Hex, Spider Lock 8x1 x1/2
40 532 12 12-18	Keeper, Belt, Engine, L.H.	109 817 19 04-08	Screw, Washer Thdrl. 1/4-20 x 1/2
41 532 10 91-69	Clutch, Retainer, Assembly	-- 532 12 59-71	Decal, Air Cleaner, 16HP (Engine)
42 819 11 12-12	Washer 11/32 x 3/4 x 12 Gauge	-- 532 12 31-61	Decal, Engine Instruction (Engine)
44 532 10 68-88	Spring, Rod, Brake		
45 532 12 12-00	Rod, Brake		
46 532 12 48-72	Cover, Pedal		
47 532 10 57-30	Keeper, Belt, Engine		
48 532 12 24-24	Shaft, Foot Pedal Assembly		
49 532 00 15-72	Pin, Roll 3/16 x 1		
50 532 07 16-73	Cap, Plunger		
51 532 12 56-37	Rod, Brake, Park		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

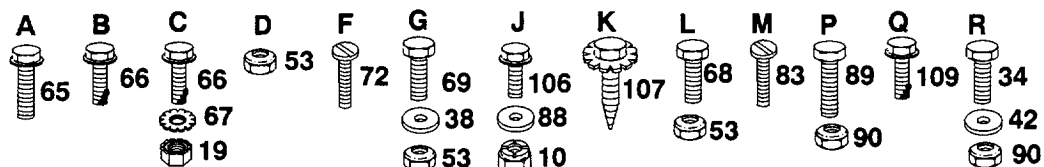

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44 STEERING AND FRONT AXLE

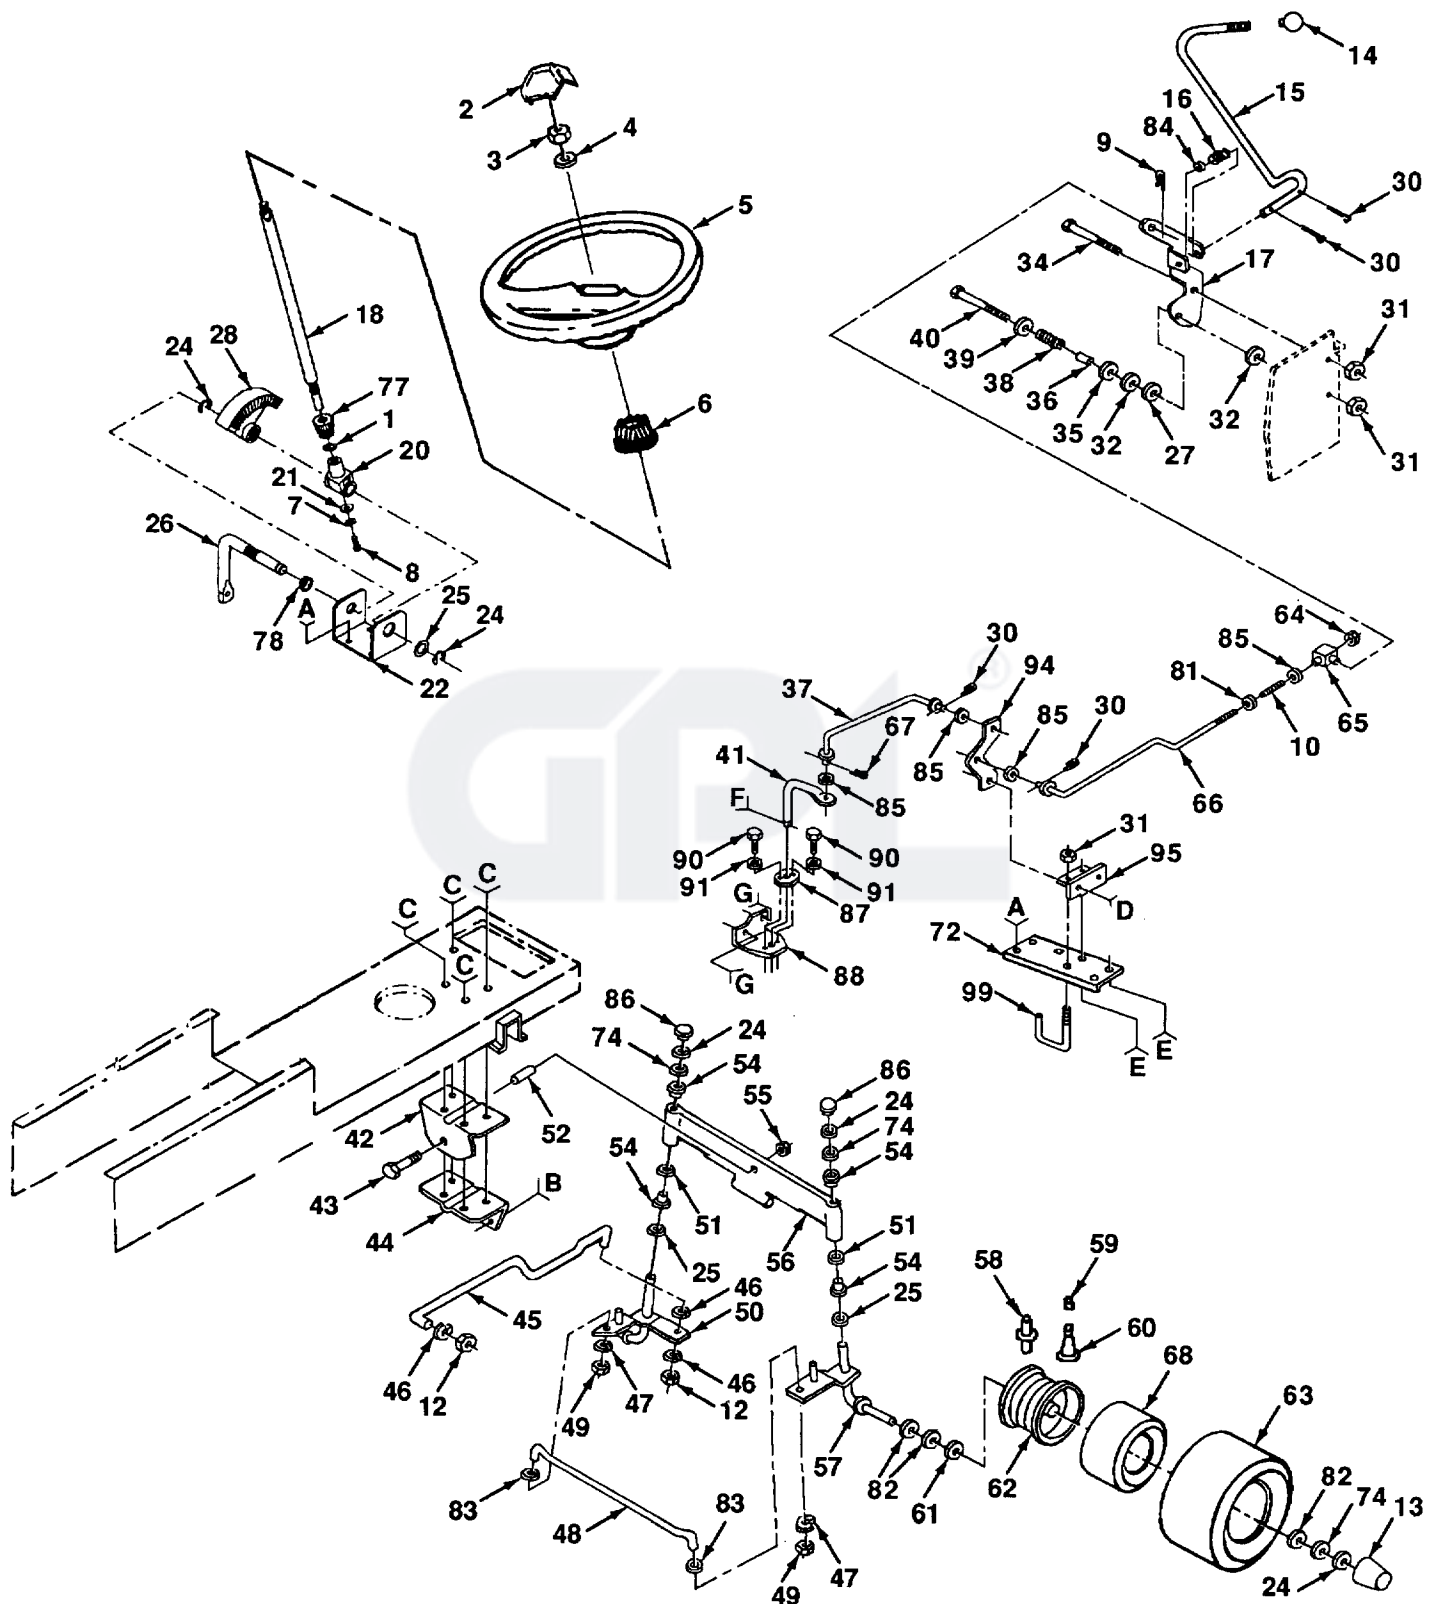


REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44 STEKRING AND FRONT AXLE


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532 05 70-79	Washer	53 532 12 28-19	Screw, Special 3/8-16 x 3/4
2 532 12 68-05	Insert, Steering Wheel	54 532 00 33-66	Bearing
3 873 94 08-00	Nut, Toplock, Jam 1/2-20	55 873 90 10-00	Locknut, Flange 5/8-11
4 532 10 07-12	Washer	56 532 10 80-75	Axle, Front
5 532 12 14-72	Wheel, Steering	57 532 10 56-54	Spindle, R.H.
6 532 10 07-11	Adapter, Steerina Wheel	58 532 00 02-78	Fitting, Grease
7 810 04 04-00	Washer, Lock 114	59 532 06 51-39	Stem, Valve
8 871 07 04-10	Screw, Hex, Socket 1 /4-20 x 5/8	60 532 05 91-92	Cap, Valve
9 532 00 49-21	Spring, Retainer	61 532 00 90-40	Bearing
10 532 10 26-70	Spring, Compression	62 532 12 48-01	Rim, Front
12 873 61 06-00	Nut, Hex, Fin 3/8-24 UNF	63 532 10 62-22	Tire, Front
13 532 10 47-57	Cap, Axle	64 873 80 06-00	Locknut, Hex w/Washer Insert 3/8-16 UNC
14 532 12 12-74	Knob, Gearshift		
15 532 11 08-45	Rod, Control	65 532 10 82-12	Trunnion
16 532 12 16-31	Spring, Torsion	66 532 12 17-50	Rod, Control, Adjustable
17 532 10 81-96	Bracket, Control Rod	67 532 12 47-88	Clip, Hairpin
18 532 12 40-43	Shaft, Steering	68 532 05 99-04	Tube
20 532 12 40-35	Support, Shaft	71 817 49 05-08	Screw, Hex, Washer, Thrdrol. 5/16-18 x 1/2
21 532 12 66-84	Washer, Shim 1/4 x 5/8 x .062		
22 532 12 40-36	Bracket, Steering	72 532 12 31-86	Bracket, Chassis, Reinforcement, Hydro
24 812 00 00-29	Ring, Kiip		
25 532 12 49-31	Bearing, Thrust	74 532 12 17-48	Washer 25/32 x 1 -5/8 x 16 Gauge
26 532 12 40-33	Shaft, Pitman	77 532 12 40-37	Gear, Pinion
27 532 10 89-72	Washer, Phenolic	78 532 10 98-16	Nyliner Snap In
28 532 12 40-34	Gear, Sector	81 819 13 12-12	Washe; 13/32 x 3/4 x 12 Gauge
30 876 02 04-12	Pin, Cotter 1/8 x 3/4	82 532 12 17-49	Washer 25/32 x 1-1/4 x 16 Gauge
31 873 68 06-00	Nut, Crownlock 3/8-16	83 819 11 12-16	Washer 11/32 x 3/4 x 16 Gauge
32 532 10 82-00	Washer, Friction	84 819 15 15-16	Washer 15/32 x 15/16 x 16 Gauge
33 817 49 06-12	Screw, Hex, Washer Thrdol. 3/8- 16 x 3/4	85 532 11 07-39	Washer, Spring
		86 532 12 12-32	Cap, Spindle
34 532 10 85-18	Bolt, Hex, Shoulder 3/8-16 x 1-3/8	87 532 12 12-17	Guide, Control
35 819 21 20-16	Washer 21/32 x 1-1/4 x 16 Gauge	88 532 12 12-16	Bracket, Control Guide
36 532 10 82-01	Spacer	89 817 49 05-12	Screw, Hex Washer Thrdrol. 5/16-18x3i4TypeTT
37 532 12 12-02	Link, Control, Pump		
38 532 10 88-44	Spring, Compression	90 817 02 10-08	Screw, Hex, Tap #10-24 UNC x 1/2
39 819 13 20-12	Washer 13/32 x 1-1/4 x 12 Gauge	91 819 07 08-16	Washer 7/32 x 1/2 x 16 Gauge
40 874 76 06-48	Bolt, Hex 3/8-16 x 3	92 874 56 10-14	Screw, Hex, Socket Head #10-24 UNC
41 532 12 12-09	Lever, Pump Control		
42 532 10 56-63	Support, Saddle, Rear	93 532 06 91-80	Locknut #10-24 UNC
43 874 76 10-60	Bolt, Hex 5/8-11 x 3-3/4	94 532 12 12-04	Bellcrank
44 532 10 56-64	Support, Saddle, Front	95 532 12 12-06	Bracket, Bellcrank Pivot
45 532 12 40-32	Link, Drag	96 532 10 05-36	Bolt, Shoulder
46 810 04 06-00	Washer, Lock 3/8	97 874 76 06-16	Bolt, Hex, Fin 3/8-16 UNC x 1
47 810 04 05-00	Washer, Lock 5/16	98 873 68 05-00	Nut, Crownlock 5/16-18
48 532 12 13-34	Rod, Tie	99 532 12 11-90	Keeper, Centerspan
49 873 81 05-00	Nut, Hex 5/16-24 UNF	-- 532 12 73-87	Decal, Steering, Wheel, Insert.
50 532 10 56-56	Spindle, L.H.		
51 819 27 20-16	Washer 27/32 x 1-1/4 x 16 Gauge		
52 532 11 04-38	Spacer, Bearing		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

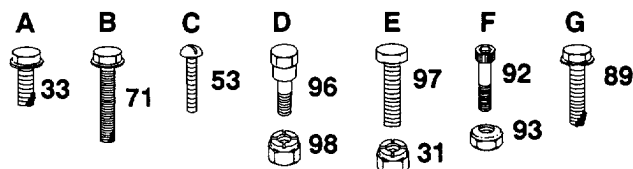

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44
LIFT ADJUSTMENT

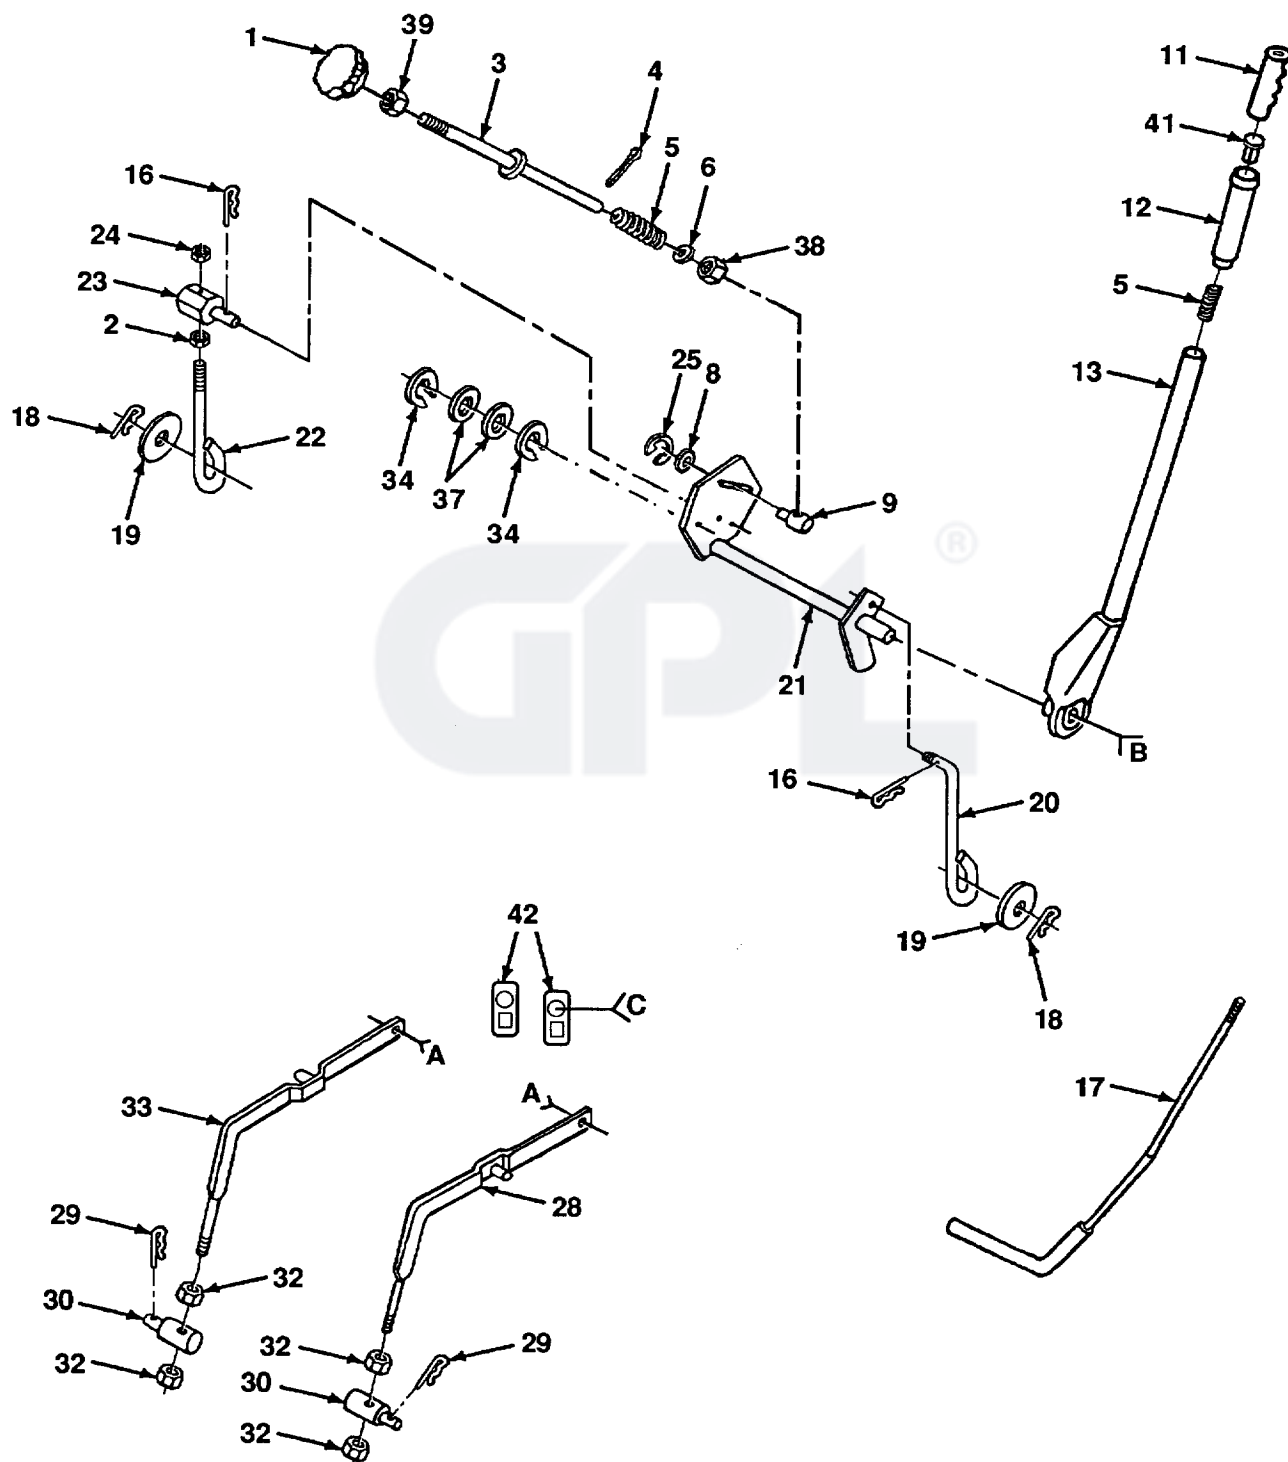


REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

LIFT ADJUSTMENT

1	532 12 18-91	Handle, Lift Adjustment	23	532 11 04-47	Trunnion, Lift
2	873 36 07-00	Nut, Hex 3/8-16	24	873 71 07-00	Locknut 7/16-14
3	532 11 07-29	Rod, Adjust, Lift	25	812 00 00-37	Ring, Klip
4	876 02 03-08	Pin, Cotter 3/32 x 1/2	28	532 12 15-98	Arm, Suspension, R.H.
5	532 12 48-74	Spring	29	532 00 91-35	Retainer, Spring
6	819 13 10-16	Washer 13/32 x 5/8 x 16 Gauge	30	532 10 63-08	Trunnion, Lift, Lower
8	819 15 12-16	Washer 15/32 x 3/4 x 16 Gauge	32	873 22 08-00	Nut, Hex, Fin 1/2-13
9	532 11 08-10	Trunnion, Depth Stop	33	532 12 15-99	Arm, Suspension, L.H.
10	532 10 58-48	Bolt, Shoulder 3/8-16	34	812 00 00-22	E-Ring
11	532 10 94-13	Grip, Handle	37	819 29 20-16	Washer 29/32 x 1 -1/4 x 16 Gauge
12	532 12 23-64	Plunger, Lever, Lift	38	532 11 08-07	Nut, Special
13	532 12 10-02	Lever, Lift	39	873 35 06-00	Nut, Hex, Jam 3/8-16 UNC
14	532 11 07-39	Spring, Washer	40	874 78 06-24	Bolt, Hex 3/8-16 x 1 -1/2
15	873 98 06-00	Nut, Centerlock, Flange 3/8-16	41	532 12 45-26	gutton, Plunger
16	532 12 46-70	Retainer, Spring	42	532 12 12-52	Upstop, Mower
17	532 12 10-06	Rod, Lever	43	872 14 06-08	Bolt, Carriage 3/8-16 UNC x 1
18	532 00 49-21	Retainer, Spring	44	873 68 06-00	Nut, Crownlock 3/8-16UNC
19	819 17 15-16	Washer 17/32 x 15/16 x 16 Gauge			
20	532 11 00-29	Link, Lift			
21	532 12 10-00	Shaft, Lift, Assembly			
22	532 11 04-48	Link, Lift, Adjust			


NOTE: All component dimensions given in U.S. inches
1 inch=25.4mm

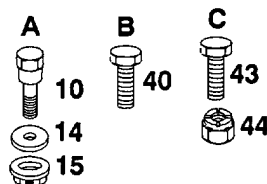

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

MOWER

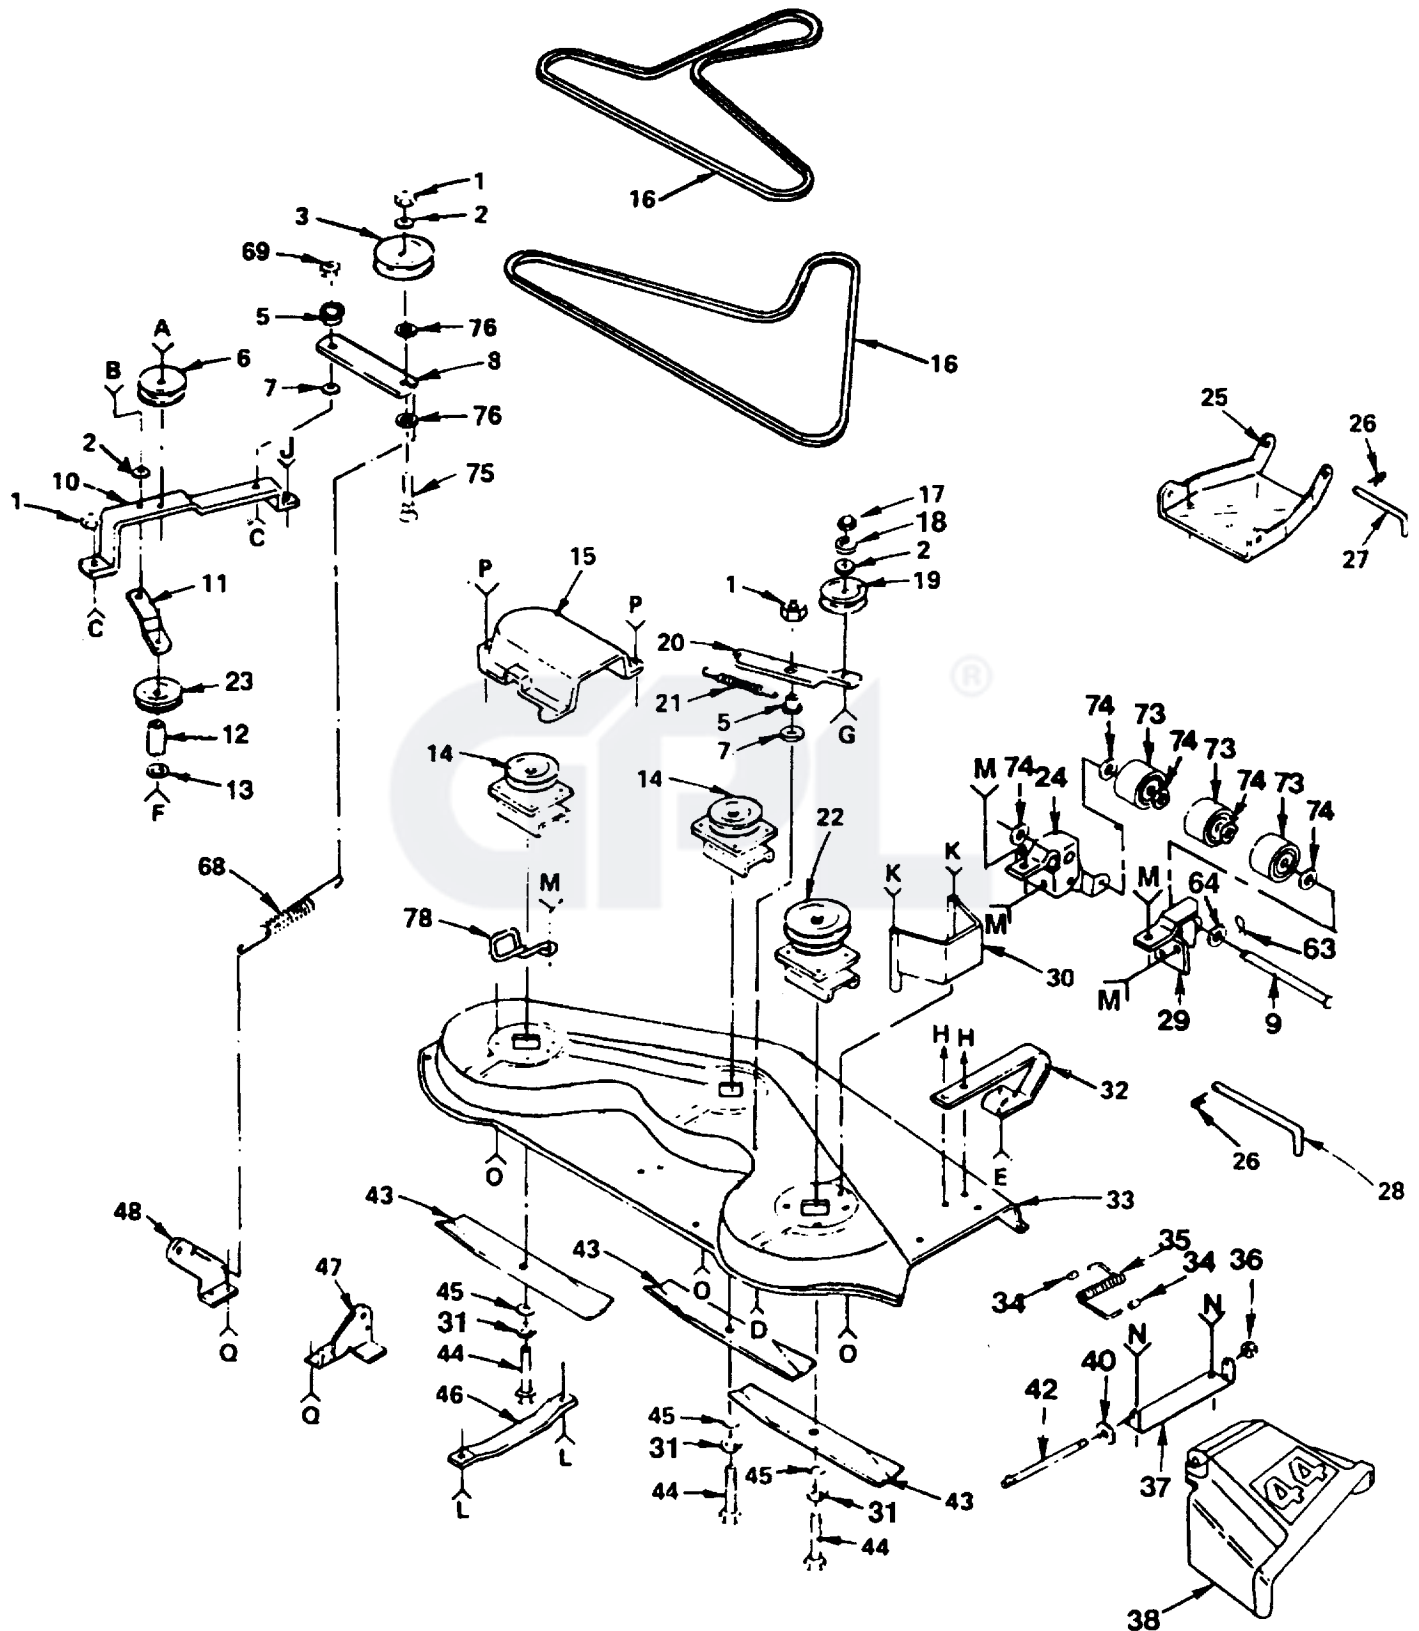


REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44

MOWER

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 873 68 06-00	Locknut 3/8-16	55 872 14 05-06	Bolt, Carriage 5/16-18 x 3/4
2 819 13 16-14	Washer 13/32 x 1 x 14 Gauge	56 819 11 11-16	Washer 11/32 x 11/16 x 16 Gauge
3 532 12 13-16	Pulley, Idler	57 873 68 05-00	Locknut 5/16- 18
5 532 10 69-02	Spacer	58 874 76 06-48	Bolt, Hex 3/8-16 x 3
6 532 12 48-58	Pulley, Idler	59 874 11 06-32	Screw, Flat Head 3/8-16 x 2
7 532 10 65-13	Washer, Wear	61 819 11 12-16	Washer 11/32 x 3/4 x 16 Gauge
8 532 12 14-25	Arm, Idler	62 874 76 05-80	Bolt, Hex 5/16-18 x 5
9 532 10 97-76	Pin, Pivot	63 876 02 04-12	Pin, Cotter 1/8 x 3/4
10 532 10 65-23	Bar, Support, Idler	64 819 15 16-16	Washer 15/32 x 1 x 16 Gauge
11 532 10 65-22	Brace, Idler, Deck	65 872 14 05-06	Bolt, Carriage 5/16-18x518 UNCx3/4
12 532 12 12-36	Spacer	66 817 49 06-12	Screw, Hex Washer Thread Rolling 3/8-16 x 3/4
13 819 13 13-16	Washer 13/32 x 13/16 x 16 Gauge	67 872 14 06-06	Bolt, Carriage 3/8-16 x 3/4
14 532 12 16-58	Mandrel, Secondary	68 532 10 27-27	Spring, Extension
15 532 10 62-14	Guard V-Belt	69 873 93 06-00	Nut, Centerlock 3/8-16
16 532 10 60-85	Nut, Hex 3/8-16	70 872 11 05-06	Bolt, Carriage 5/16-18 x 3/4
17 873 22 06-00	Washer, Lock 3/8	72 532 12 49-49	Locknut 5/16- 18
18 810 04 06-00	Idler, Flat	73 532 10 97-29	Roller, Nose
19 532 10 29-32	Arm, Idler, Deck	74 819 15 16-10	Washer 15/32 x 1 x 10 Gauge
20 532 10 65-26	Spring, Extension	75 872 14 06-20	Bolt, Carriage 3/8-16 x 2-1/2
21 532 12 48-85	Mandrel, Primary	76 819 13 12-10	Washer 13/32 x 3/4 x 10 Gauge
22 532 12 17-05	Pulley, Idler	77 874 76 06-16	Bolt, Hex, Fin 3/8-16 x 1
23 532 10 24-03	Bracket, Lift, L.H.	78 532 12 13-52	Keeper, Mandrel, L.H.
24 532 10 95-99	Link, Parallel	79 872 11 05-05	Bolt, Carriage 5/16-18 x 5/8
25 532 10 56-62	Retainer, Spring Pin, Front	-- 532 12 66-44	Mower, Deck, Complete
26 532 00 49-21	Hinge Pin, Rear Hinge	-- 532 10 85-92	Decal, Belt Instruction
27 532 10 57-44	Bracket, Lift, R.H. Guard,	-- 532 12 61-91	Decal, Warning (Bloody Finger) (Swed/Dan/Nor/Fi n)
28 532 10 98-35	Belt, R.H. Washer, Lock 3/8	-- 532 12 61-92	Decal~ Warning (Bloody Finger) (Fr/ Ger/Dutch)
29 532 10 96-00	Unplated Runner, R.H.	-- 532 12 63-45	Decal, Warning (Bloody Finger) (Span/Italian)
30 532 10 81-19	Housina, Mower	-- 532 12 61-95	Decal, Rotating Blades (Swed/Dan/ Nor/Fin)
31 810 03 06-00	Cap, Sleeve	-- 532 12 61-96	Decal, iRotating Blades (Eng/Ger/ Fr/Dutch)
32 532 12 49-50	Spr ing	-- 532 12 63-46	Decal, Rotating Blades (Spanish/ Italian)
33 532 12 14-23	Nut, Push	-- 532 12 61-93	Decal, Deflector Shield (Sw/Dan/ Fin/Nor)
34 532 10 53-04	Bracket, Deflector Guard,	-- 532 12 63-47	Decal, Deflector Shield (Eng/ German/Dutch/Fr)
35 532 10 67-34	Discharge Washer 13/32 x 7/8 x 10 Gauge	-- 532 10 51-85	Decal, Deflector Shield (Italian/ Spanish)
36 532 11 04-52	Washer 11/32 x 5/8 x 16 Gauge	-- 532 12 13-49	Decal, Instruction, Caution
37 532 10 97-43	Rod, Hinge		
38 532 10 97-85	Blade, Mower, Low Lift		
39 819 13 14-10	Bolt, Hex 3/8-24 x 1-1/2 Grade 5		
40 819 11 10-16	Washer 13/32 x 1 -1/4 x 12 Gauge		
42 532 10 67-35	Runner, L.H.		
43 532 12 22-65	Bracket, Suspension, Rear, R.H.		
44 874 61 06-24	Bracket, Suspension, Rear, L.H.		
45 819 13 20-12	Bolt, Carriage 3/8-16 x 1 -3/4		
46 532 12 50-74	Bolt, Carriage 3/8-16 x 1		
47 532 12 38-07	Bolt, Carriage 3/8-16 x 1 -1/2		
48 532 12 38-08	Bolt, Hex 3/8-16 x 1 -1/4		
51 872 14 06-14			
52 872 14 06-08			
53 872 14 06-12			
54 874 76 06-20			


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

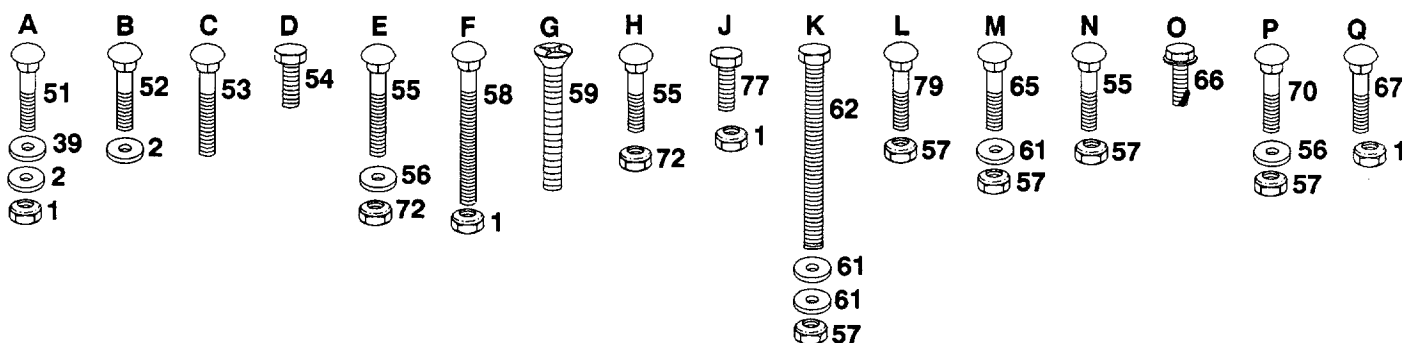

REPAIR PARTS

16 HP 44"RIDING YARD TRACTOR - MODEL NUMBER J16H44

TRANSAXLE AND PUMP ASSEMBLY

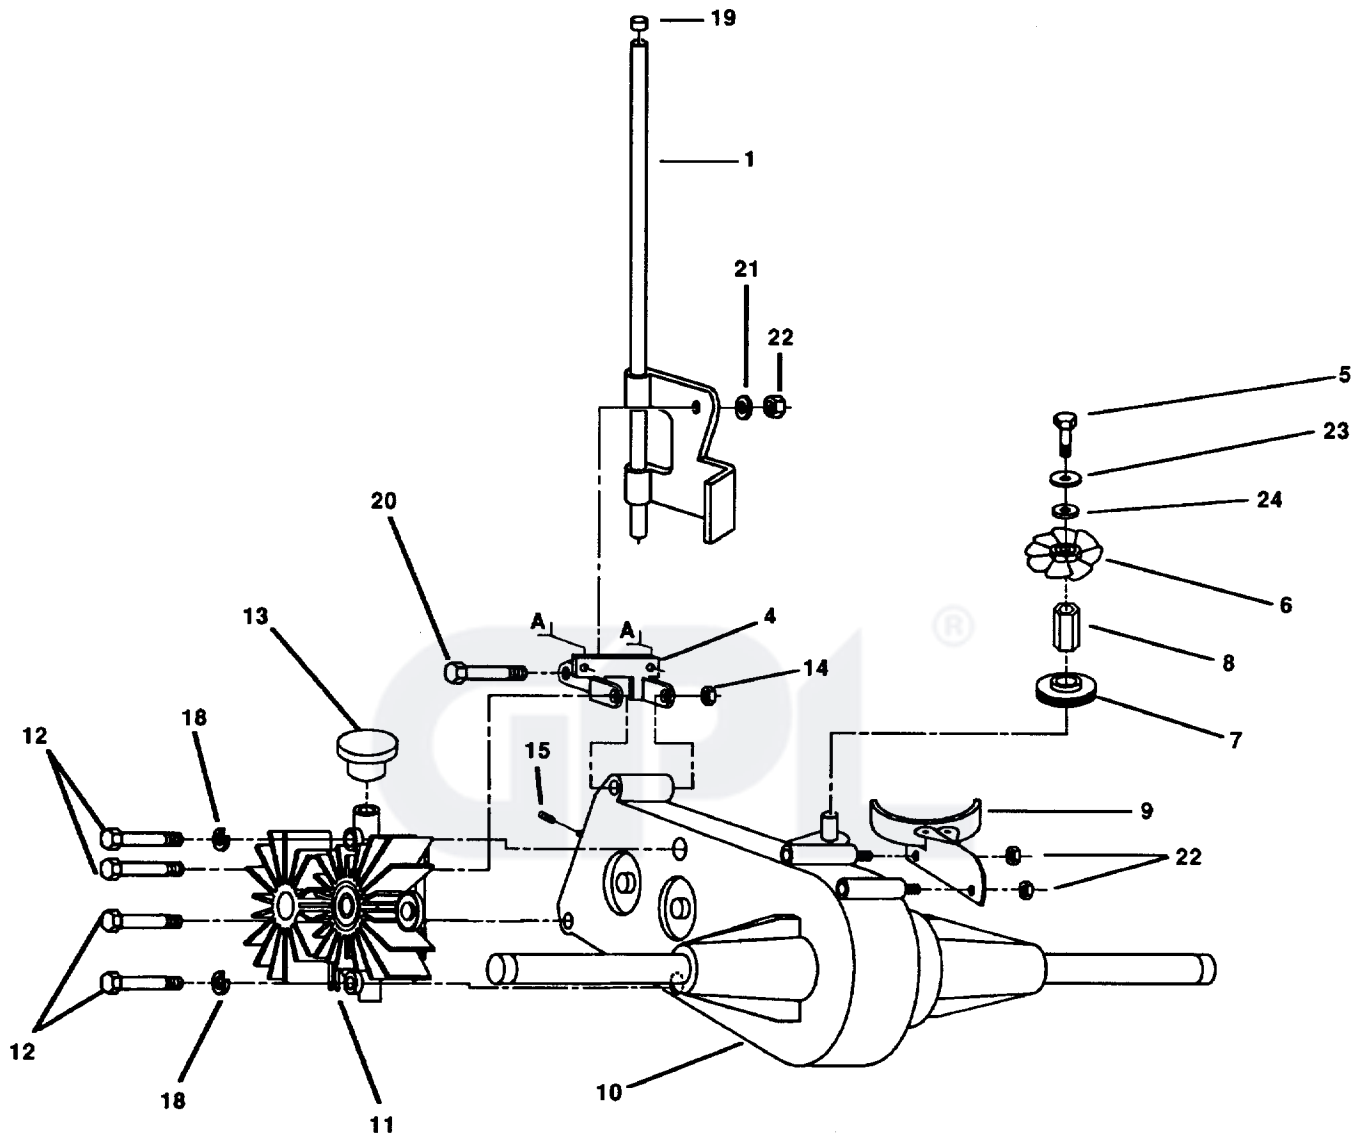

KEY PART NO. NO.

DESCRIPTION

1	532 12 36-34	Control, Asm., Free Wheel
4	532 12 11-88	Bracket, Mounting Differential
5	874 78 04-12	Bolt, Hex 1/4-20 UNC x 3/4
6	532 12 11-86	Fan, Hydro 8"
7	532 12 11-80	Pulley, Transaxle
8	532 12 12-11	Standoff, Fan, Hydro
9	532 12 11-82	Guard Assembly, Belt
10	532 12 14-31	Differential Assembly
11	532 12 14-30	Pump Assembly
12	874 76 05-72	Bolt, Hex, Fin 5/16-18 UNC x 4.5
13	532 12 13-23	Reservoir, Pump
14	873 68 05-00	Nut, Crownlock 5/16-18
15	532 12 12-50	Spring, Compression
16	874 76 06-12	Bolt 3/8-16 x 3/4
17	873 68 06-00	Nut, Crownlock 3/8-16 UNC

KEY PART NO. NO.

DESCRIPTION

18	810 04 05-00	Washer, Lock
19	532 07 16-73	Cap, Plunger
20	532 12 48-15	Bolt, Shoulder 1/4-20 UNC
21	532 12 05-29	Washer, Nylon
22	873 68 04-00	Nut, Crownlock 1/4-20 UNC
23	819 09 20-16	Washer 9/32 x 1-1/4 x 16 Gauge
24	810 04 04-00	Washer, Lock

NOTE: All component dimensions
given in U.S. inches.
1 = 25.4 mm

A



16




17

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - MODEL NUMBER J16H44 SUNDSTRAND PUMP ASSEMBLY - MODEL NUMBER BDU-10S

PUMP ASSEMBLY

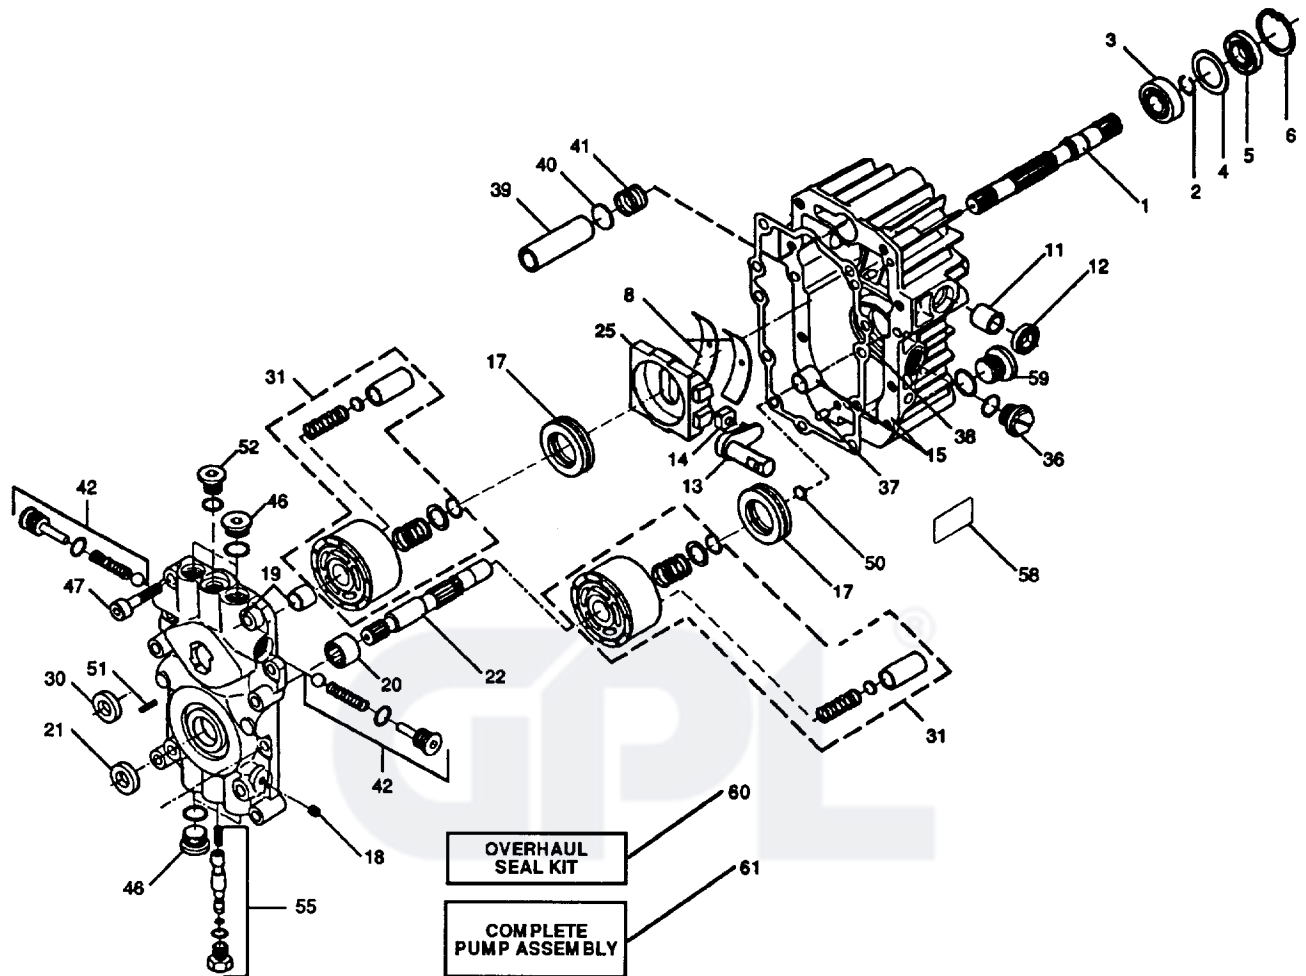


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	532 12 27-56 Shaft, Pump	37	532 12 27-86 Pin, St. Hdis.
2	532 12 27-16 Ring, Retaining	38	532 12 27-18 Gasket, Center Section
3	532 12 27-45 Bearing, Ball	39	532 12 27-31 Filter
4	532 12 27-15 Spacer	40	532 12 27-30 Washer, Thrust
5	532 12 27-00 Seal, Lip	41	532 12 27-28 Spring, Helical Compression
6	532 12 26-99 Ring, Retaining	42	532 12 71-52 Check Valve Kit
8	532 12 27-67 Bearing, Cradle	46	532 12 27-87 Plug, St. Thd.
11	532 12 27-47 Bearing, Journal	47	532 12 27-52 Screw Socket Head Cap
12	532 12 27-17 Seal, Lip	50	532 12 27-88 Washer, Thrust
13	532 12 27-48 Arm, Trunnion	51	532 12 27-89 Pin, Spiral
14	532 12 27-49 Guide, Slot	52	532 12 27-54 Plug, St. Thd.
15	532 12 71-46 Housing Kit, Transmissior	55	532 12 71-53 Bypass Valve Kit
17	532 12 27-70 Bearing, Thrust Ball	58	532 12 27-27 Adhesive Label, Bar Coded
18	532 12 27-71 Plug, Pipe	59	532 12 27-90 Plug, St. Thd.
19	532 12 71-47 Center Section Kit	60	532 12 71-54 Overhaul Seal Kit, BDU-10
20	532 12 27-73 Bearing, Needle		Includes: items marked with * and O-Rings for Check Valves and Bypass Valve
21	532 12 27-22 Seal, Lip	61	532 12 14-30 Complete Pump Assembly
22	532 12 27-50 Shaft, Motor		
25	532 12 71-48 Swashplate, Variable		
30	532 12 27-23 Seal, Lip		
31	532 12 71-49 Block K't, Cylinder		
36	532 12 71-51 Plug, Plastic		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - - MODEL NUMBER J16H44

AGRI-FAB TRANSAXLE - - MODEL NUMBER 486.121431X

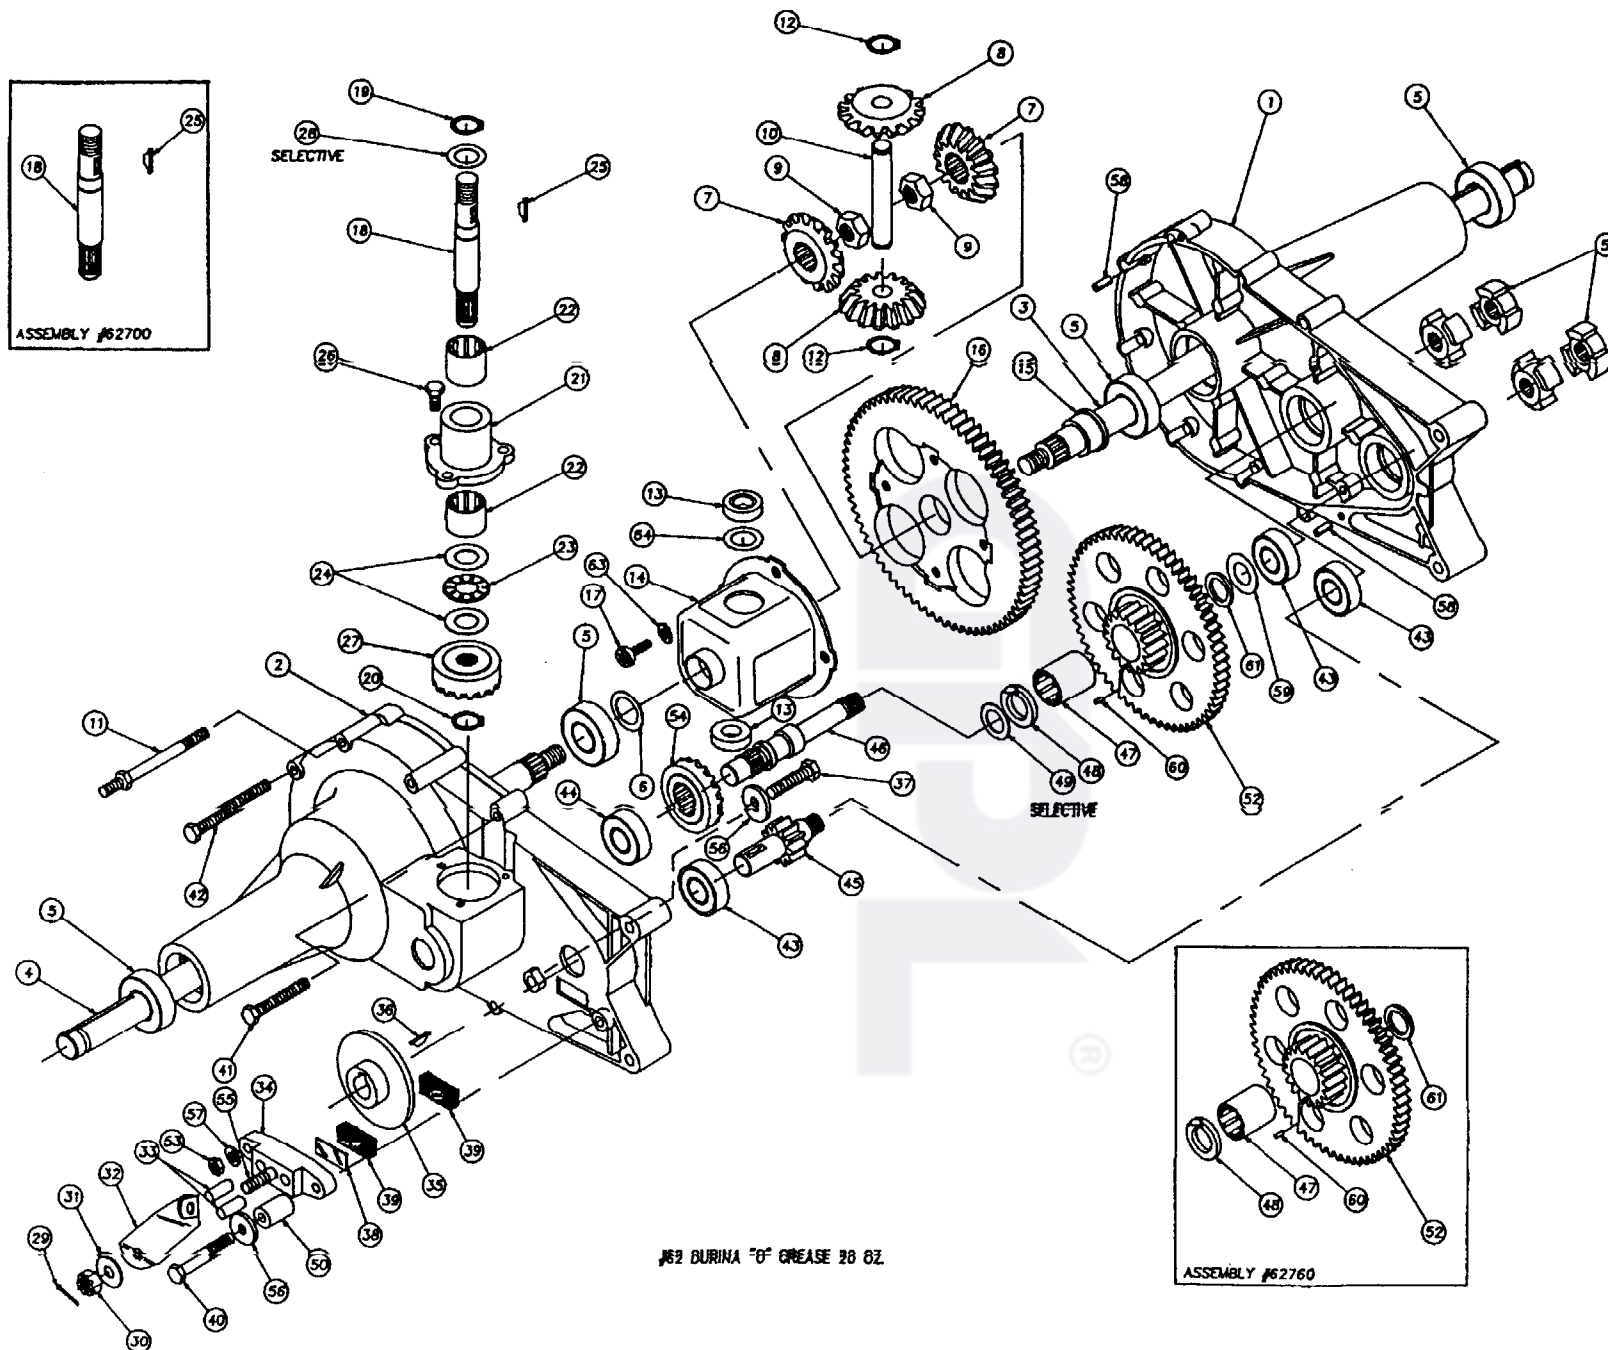

REPAIR PARTS

16 HP 44" RIDING YARD TRACTOR - - MODEL NUMBER J16H44

AGRI-FAB TRANSAXLE - - MODEL NUMBER 486.121431X

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 122 614X	Housing, Half L.H.	36 123065X	Key, Hi-Pro 3/16 x 5/8"
2 122615X	Housing, Half R.H.	37 122666X	Screw, Hex 1/4-20 x 1.50
3 122616X	Axle L.H.	38 122667X	Plate, Puck
4 122620X	Axle R.H.	39 122668X	Puck, Brake
5 122621 X	Bearing, Ball	40 123066X	Screw, Hex w/Patch 1/4-20 x 2.00
6 122622X	Washer, Flat 3/4 x 1-1/8 x .030	41 122670X	Screw, Hex Self-Tap 1/4-20 x 2.00
7 122623X	Gear, Miter	42 122671X	Screw, Hex Self-Tap 1/4-20 x 3.00
8 122624X	Gear, Miter	43 126982X	Bearing, Ball
9 122625X	Nut, Hex Jam w/Patch 1/2-20	44 122673X	Bearing, Ball
10 122626X	Shaft, Cross	45 122674X	Shaft, Pinion W/11 Tooth Gear
11 122688X	Screw, Stud	46 122675X	Shaft, Drive
12 122629X	Snap, Rina	47 123059X	Bearing, Needle
13 122631X	Bearing, Thrust	48 123060X	Bronze Thrust Brg. 5/8 x 1-1/4 x 7/64
14 122633X	Housing Assembly, Differential	49 122654X	Washer, Flat .62 x 1.0 x .040
15 122634X	Bearing, Flange	--- 123061X	Washer, Flat .62 x 1.0 x .050
16 122640X	Gear, Differential 72 Tooth	50 122689X	Spacer
17 122641X	Bolt, Torx Head 1/4-28 x 5/8"	51 121839X	Coupling
18 122642X	Shaft, Input	52 126975X	Gear, 60 and 17 Tooth
19 122643X	Snap, Ring	53 122682X	Nut, Hex 1/4-20
20 122644X	Retaining Ring 7/16"	54 122683X	Gear, Drive Pinion 17 Tooth
21 122645X	Housing, Input Bearing	55 122684X	Bolt, Square Head
22 122646X	Bearing, Needle	56 122685X	Washer 15/16 x .265 x .125
23 122647X	Bearing, Thrust	57 122686X	Washer, Spring Lock 1/4"
24 122648X	Washer, Flat 5/8 x 1-1/8 x .030	58 122687X	Pin, Roll 3/16' x 1/2"
25 122649X	Key, Hi-Pro 3/32 x 5/8	59 122652X	Washer, Flat .62 x 1.0 x .030
26 122650X	Screw, Hex W/Patch 1/4-20 x 3/4	60 123062X	Pin, Dowel 3/32 x 1/4
27 122651X	Gear, Input Pinion 17 Tooth	61 123063X	Seal, Grease
28 123061X	Washer, Flat .62 x 1 x .05	62 126976X	Shell, Durina-O Grease (200Z.)
--- 122678X	Washer, Flat .62 x 1.125 x .060	63 126977X	Washer, Head Spring Lock 1/4"
--- 122654X	Washer, Flat .62 x 1 x .040	64 126978X	Washer, Fiat .50 x 1.0 x .020
29 122656X	Pin, Cotter	--- 126979X	Washer, Flat .50 x 1.0 x .030
30 122653X	Nut, Castle 5/16-24	65 126980X	Assembly, Gear, Reduction
31 122659X	Washer, Flat .343 x .88 x .062	66 126981X	Assembly, Shaft, Input
32 122660X	Arm, Brake Actuator	--- 121431X	Transaxle Assemb;v ComDlete
33 122662X	Pin, Brake Actuating		
34 122663X	Brake, Yoke		
35 122664X	Disc, Brake		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm