

YTH220 TWIN

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar


GPL®

ILLUSTRATED PARTS LIST

MODEL NO. 96041002801


CUSTOMER CATALOG NO. YTH220 TWIN

PRODUCT NO. 960 41 00-28

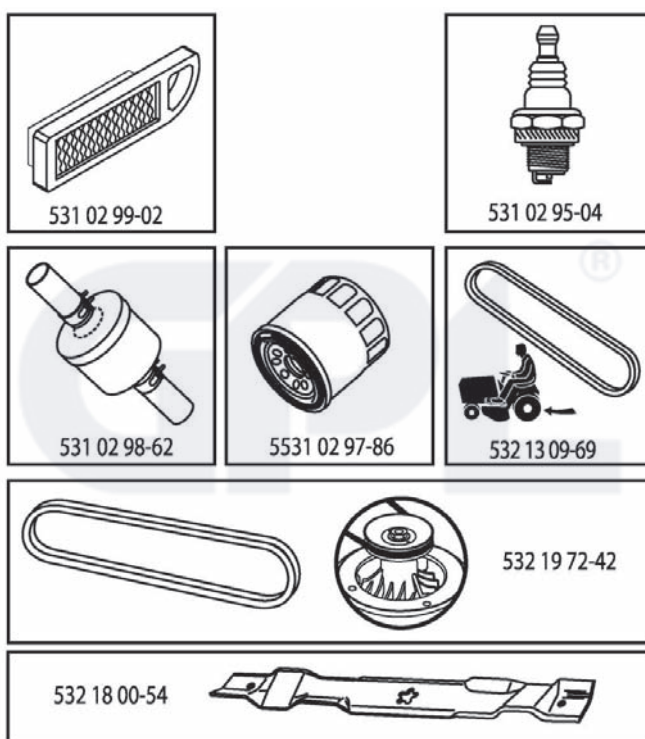

408775


TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28 DECALS

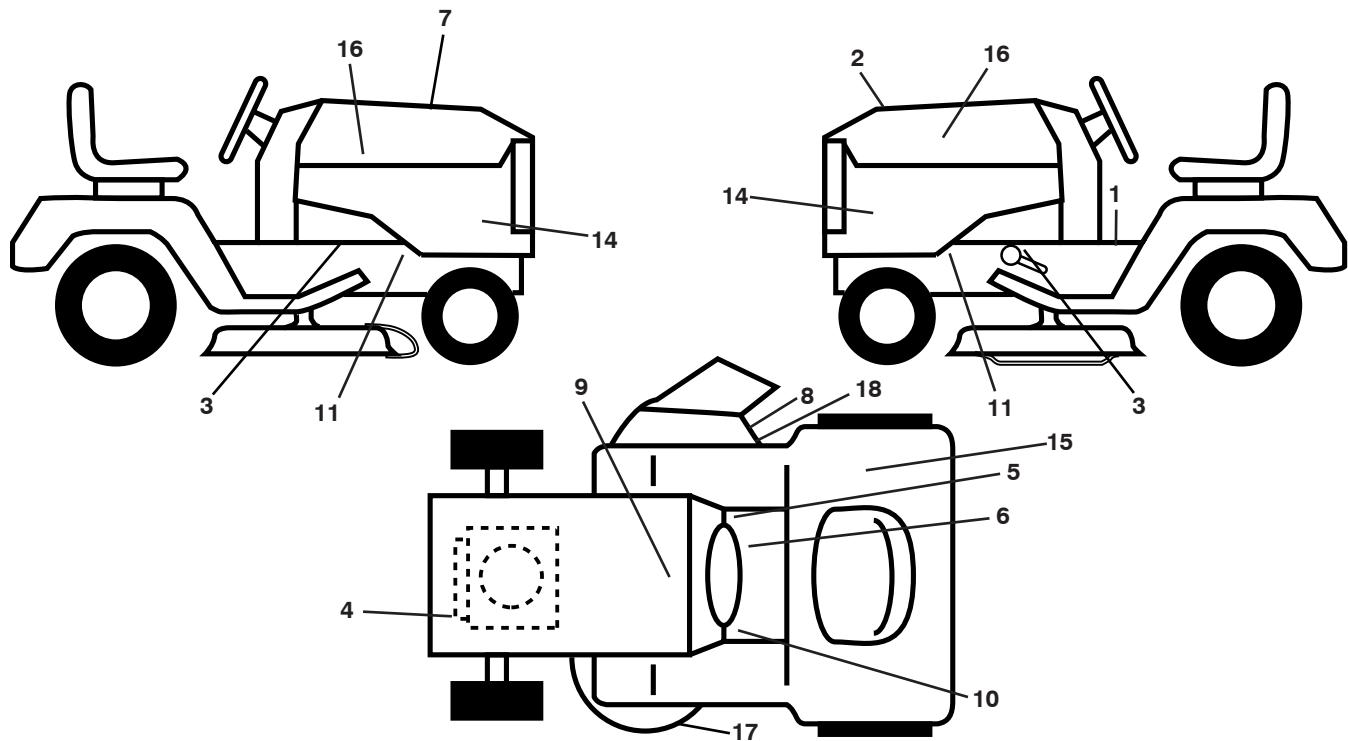

KEY NO.	PART NO.	DESCRIPTION
1	532 40 03-89	Decal, Warning Syms. CE
2	532 40 21-28	Decal, Hood Insert
3	532 19 68-42	Decal, Warning Deflect Cutfinger
4	532 19 68-41	Decal, Warning Eng. Syms.
5	532 14 08-37	Decal, Saddle Brake Parking
6	532 17 83-02	Decal, Oper Cruise Sym.
7	532 40 87-75	Decal, Replacement
8	532 18 21-66	Decal, Cutfinger CE
9	532 14 50-05	Decal, Battery Dnge/Poison
10	532 15 97-37	Decal, Brake/Clutch Sym
11	532 15 97-36	Decal, Chassis Hot Muffler

KEY NO.	PART NO.	DESCRIPTION
14	532 40 88-46	Decal, Panel Side
15	532 18 04-33	Decal, Fender
16	532 40 28-32	Decal, Hood Logo
17	532 19 87-85	Decal, Mower Sch.
18	532 19 63-57	Decal, Warning Cutfinger
--	532 19 87-85	Decal, Mower Schema
--	532 16 25-98	Decal, Drawbar Load Limit
--	532 16 69-60	Decal, Bypass
--	532 40 17-71	Pad, Footrest, LH
--	532 40 37-73	Pad, Footrest, RH
--	532 41 63-06	Manual, Operator's Euro

WHEELS AND TIRES

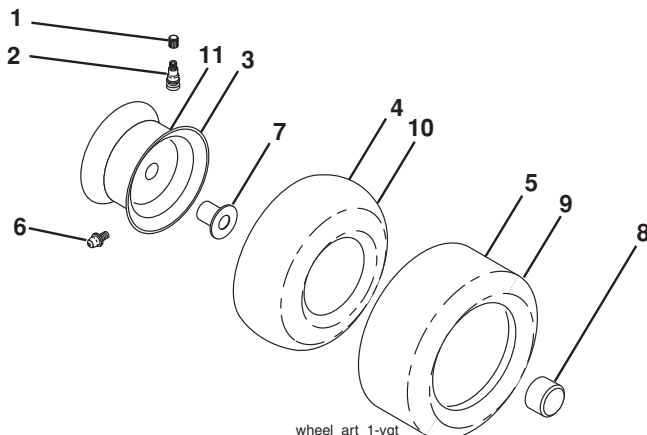


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap, Valve, Tire
2	532 06 51-39	Stem, Valve
3	532 14 45-09	Rim Assembly, Front
4	532 00 81-34	Tube, Front (Service Item Only)
5	532 10 62-30	Tire, Front
6	532 12 49-57	Fitting, Grease (Front Wheel Only)
7	532 12 49-59	Bearing, Flange (Front Wheel Only)
8	532 17 50-39	Cap, Axle (Front Wheel Only)
9	532 18 47-08	Tire, Rear
10	532 00 71-54	Tube, Rear (Service Item Only)
11	532 40 17-82	Rim Assembly, Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
SCHEMATIC

SCH12

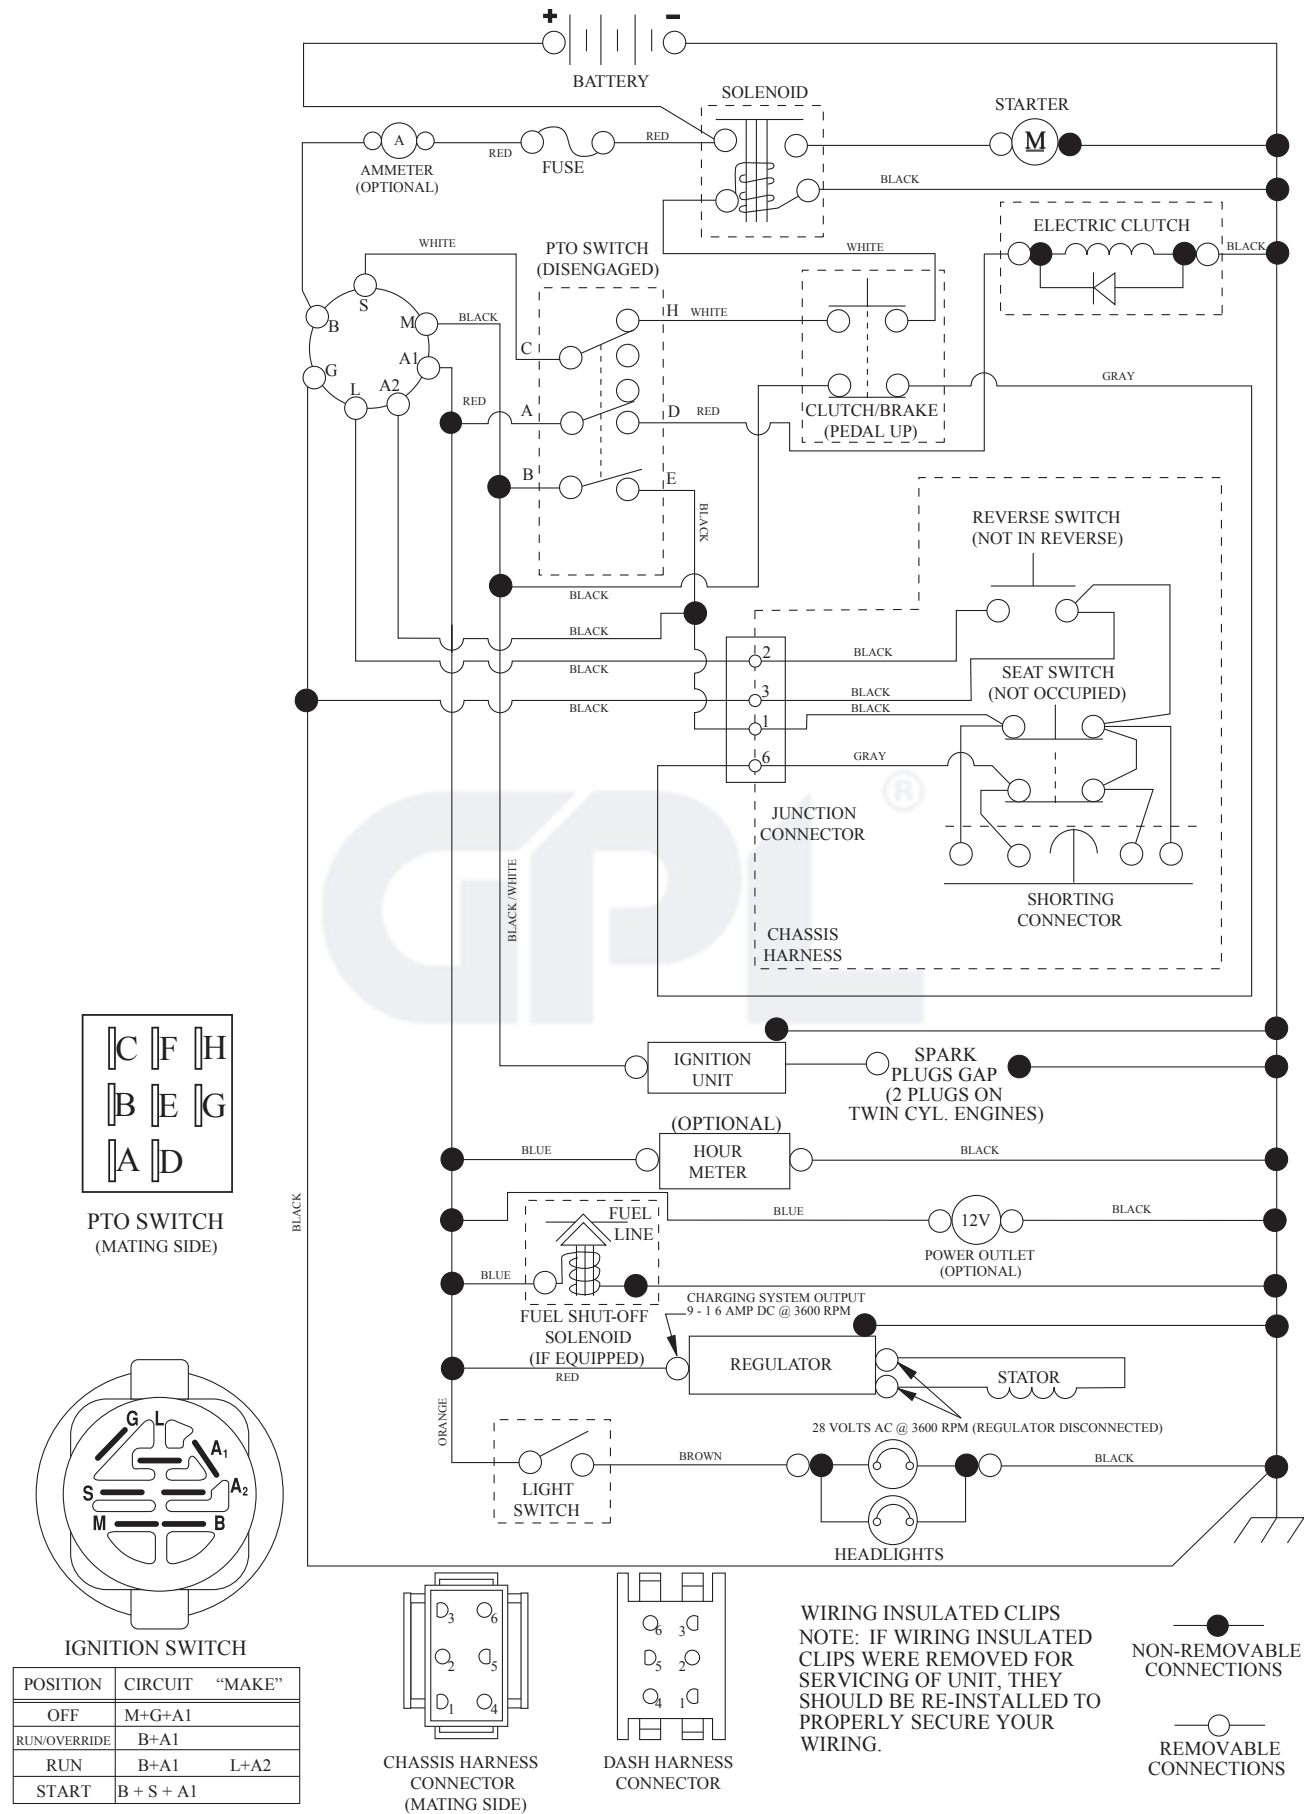

T11S_r1

The diagram illustrates the electrical system for a vehicle, showing the battery (1), alternator (2), and various components connected by wires. The system is divided into several sections by dashed lines, indicating different functional areas. Key components and their connections are as follows:

- Battery (1):** Connected to the alternator (2) and the main power distribution block (8).
- Alternator (2):** Connected to the battery (1) and the main power distribution block (8).
- Main Power Distribution Block (8):** The central hub for the electrical system, connected to various components including the alternator (2), battery (1), and various relays and switches.
- Relays and Switches:** Various components like relays (e.g., 34, 50, 101) and switches (e.g., 46) are connected to the main power distribution block (8) and other components.
- Wiring Harnesses:** The diagram shows multiple wiring harnesses (e.g., 40, 71) that connect different parts of the system.
- Options:** Two specific options are highlighted in boxes:
 - With 12V Outlet Option:** Shows a 12V outlet (59) connected to a specific wiring harness (103).
 - With Service Minder Option:** Shows a service minder component (46) connected to the system.


The diagram uses various symbols and callouts to identify components and their connections. Dashed lines are used to group related components and show the flow of power through the system.

**TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
ELECTRICAL**

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Hd 1/4-20 unc x 3/4
8	532 18 64-91	Battery Box
16	532 17 61-38	Switch Interlock
21	532 18 37-59	Harness Socket Light
22	532 00 41-52	Bulb, Light #1156
24	532 40 02-53	Cable Battery
25	532 41 28-95	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 14 54-91	Cable Ground 21" Blk 6 Ga.
29	532 40 15-45	Switch Seat
30	532 19 33-50	Switch Ignition
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 40 11-04	Harness Ignition Dash
41	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 19 25-07	Solenoid
46	532 41 39-31	Gauge Hourmeter
50	532 17 46-51	Switch PTO
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4
71	532 19 42-76	Harness Ignition
79	532 17 52-42	Socket Asm. Bulb Twistlock
90	532 40 07-24	Cover Terminal Battery
91	532 19 02-70	Strap Battery
99	817 67 04-12	Screw Hexwsh Thdrol 1/4-20 x 3/4
100	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
101	532 19 83-17	Pigtail
102	532 40 44-54	Harness Pigtail
105	532 40 75-68	Switch Reverse

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28 CHASSIS

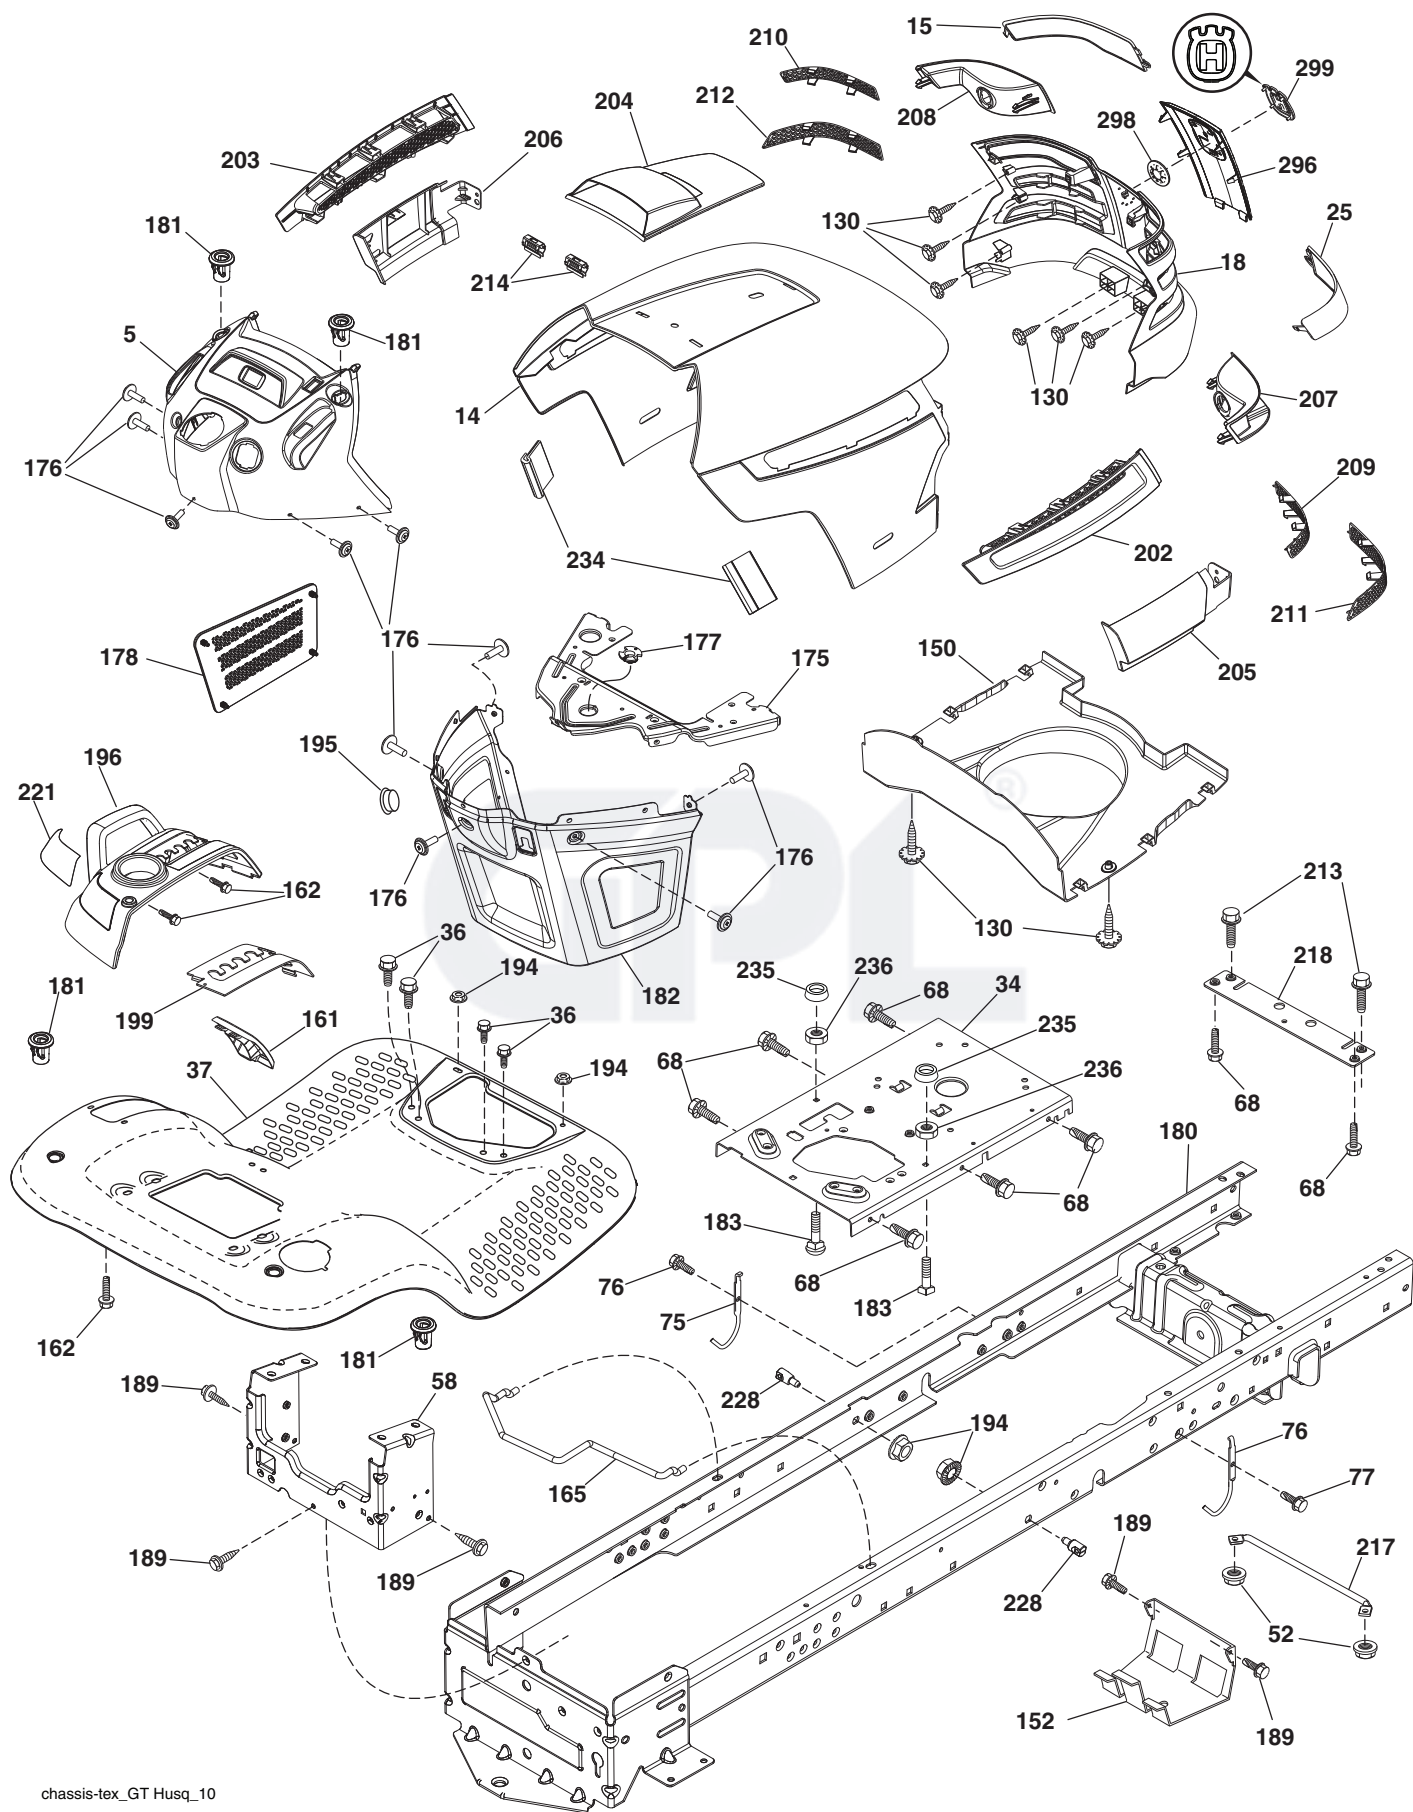

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28 CHASSIS

KEY PART			KEY PART		
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
3	532 40 50-12	Logo	189	817 00 05-12	Screw 5/16-18 x 3/4
5	532 40 87-01	Dash	194	873 90 05-00	Nut Lock Hex Flange 5/16-18
14	532 41 10-46	Hood	195	532 40 51-37	Plug Hole Dash
15	532 19 89-07	Lens LH	196	532 40 02-99	Console Asm. Deck Lift
18	532 40 86-07	Grille Asm.	199	532 19 82-59	Plate Deck Lift
25	532 19 89-06	Lens RH	202	532 40 30-48	Vent Side Hood RH
34	532 19 61-25	Plate Engine	203	532 40 30-76	Vent Side Hood LH
36	817 06 05-12	Screw 5/16-18 x 3/4	204	532 41 66-13	Vent Top Hood
37	532 40 18-25	Fender	205	532 40 17-09	Skirt Hood Side RH
58	532 41 22-81	Drawbar Upper 2pc	206	532 40 17-11	Skirt Hood Side LH
68	817 49 05-08	Screw 5/16-18 x 1/2	207	532 19 71-98	Bezel RH
75	532 40 26-80	Rod Upstop LH	208	532 19 71-99	Bezel LH
76	532 40 26-81	Rod Upstop RH	209	532 19 91-30	Insert Hex Top RH
77	817 00 06-16	Svrew 3/8-16 x 1	210	532 19 91-31	Insert Hex Top LH
99	532 40 59-03	Rod Asm Bypass	211	532 19 91-32	Insert Hex Bottom RH
130	532 19 16-11	Screw 10 x 3/4 Single Lead-Hex	212	532 19 91-33	Insert Hex Bottom LH
137	532 40 75-90	Bumper Dash	213	874 76 05-12	Bolt 5/16-18 unc x 3/4
150	532 19 85-12	Air Duct	214	532 19 91-45	Clip Retainer Tinner
152	532 19 95-35	Shield Browning	217	532 40 91-67	Rod Pivot
161	532 40 18-26	Window Fuel	218	532 19 63-95	X-Piece Hood Stop
162	532 14 24-32	Screw	221	532 19 89-09	Reflector LH
165	532 19 68-26	Support Tank Rear	228	532 19 51-61	Stud Fastner
175	532 19 63-04	Crossmember	234	532 40 47-42	Bumper Hood
176	532 40 07-76	Screw 10-24 x 5/8	235	532 40 61-29	Spacer Fender
177	532 19 52-27	Bushing Steering	236	873 93 05-00	Nut Lock 5/16-18 unc
178	532 19 97-82	Cargo Net Asm.	238	532 40 86-06	Trim
180	532 41 50-63	Chassis	239	532 11 04-52	Nut Push
181	532 40 30-25	Bushing Mtg. Fender Crgo			
182	532 40 68-59	Dash Lower			
183	874 78 05-20	Bolt Fin Hex 5/16-18 unc x 1-1/4			

NOTE: All component dimensions given in U.S. inches

1 inch = 25.4 mm

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

This technical diagram illustrates the exploded view of a drive-tex_K46_pedal_3 assembly. The central component is the main pedal housing (1), which is shown with various mounting brackets and fasteners. Key sub-assemblies include the pedal arm (56) and the pedal plate (196). The diagram also shows the pedal's internal mechanism, including the pedal shaft (230) and the pedal arm (56). The assembly is shown in a disassembled state, with parts numbered for identification. The parts list includes:


- 1: Main pedal housing
- 2: Pedal shaft
- 7: Pedal arm
- 9: Pedal plate
- 15: Pedal arm
- 16: Pedal plate
- 17: Pedal arm
- 18: Pedal plate
- 19: Pedal arm
- 20: Pedal plate
- 21: Pedal arm
- 22: Pedal plate
- 23: Pedal arm
- 24: Pedal plate
- 25: Pedal arm
- 26: Pedal plate
- 27: Pedal arm
- 28: Pedal plate
- 29: Pedal arm
- 30: Pedal plate
- 31: Pedal arm
- 32: Pedal plate
- 33: Pedal arm
- 34: Pedal plate
- 35: Pedal arm
- 36: Pedal plate
- 37: Pedal arm
- 38: Pedal plate
- 39: Pedal arm
- 40: Pedal plate
- 41: Pedal arm
- 42: Pedal plate
- 43: Pedal arm
- 44: Pedal plate
- 45: Pedal arm
- 46: Pedal plate
- 47: Pedal arm
- 48: Pedal plate
- 49: Pedal arm
- 50: Pedal plate
- 51: Pedal arm
- 52: Pedal plate
- 53: Pedal arm
- 54: Pedal plate
- 55: Pedal arm
- 56: Pedal plate
- 57: Pedal arm
- 58: Pedal plate
- 59: Pedal arm
- 60: Pedal plate
- 61: Pedal arm
- 62: Pedal plate
- 63: Pedal arm
- 64: Pedal plate
- 65: Pedal arm
- 66: Pedal plate
- 67: Pedal arm
- 68: Pedal plate
- 69: Pedal arm
- 70: Pedal plate
- 71: Pedal arm
- 72: Pedal plate
- 73: Pedal arm
- 74: Pedal plate
- 75: Pedal arm
- 76: Pedal plate
- 77: Pedal arm
- 78: Pedal plate
- 79: Pedal arm
- 80: Pedal plate
- 81: Pedal arm
- 82: Pedal plate
- 83: Pedal arm
- 84: Pedal plate
- 85: Pedal arm
- 86: Pedal plate
- 87: Pedal arm
- 88: Pedal plate
- 89: Pedal arm
- 90: Pedal plate
- 91: Pedal arm
- 92: Pedal plate
- 93: Pedal arm
- 94: Pedal plate
- 95: Pedal arm
- 96: Pedal plate
- 97: Pedal arm
- 98: Pedal plate
- 99: Pedal arm
- 100: Pedal plate
- 101: Pedal arm
- 102: Pedal plate
- 103: Pedal arm
- 104: Pedal plate
- 105: Pedal arm
- 106: Pedal plate
- 107: Pedal arm
- 108: Pedal plate
- 109: Pedal arm
- 110: Pedal plate
- 111: Pedal arm
- 112: Pedal plate
- 113: Pedal arm
- 114: Pedal plate
- 115: Pedal arm
- 116: Pedal plate
- 117: Pedal arm
- 118: Pedal plate
- 119: Pedal arm
- 120: Pedal plate
- 121: Pedal arm
- 122: Pedal plate
- 123: Pedal arm
- 124: Pedal plate
- 125: Pedal arm
- 126: Pedal plate
- 127: Pedal arm
- 128: Pedal plate
- 129: Pedal arm
- 130: Pedal plate
- 131: Pedal arm
- 132: Pedal plate
- 133: Pedal arm
- 134: Pedal plate
- 135: Pedal arm
- 136: Pedal plate
- 137: Pedal arm
- 138: Pedal plate
- 139: Pedal arm
- 140: Pedal plate
- 141: Pedal arm
- 142: Pedal plate
- 143: Pedal arm
- 144: Pedal plate
- 145: Pedal arm
- 146: Pedal plate
- 147: Pedal arm
- 148: Pedal plate
- 149: Pedal arm
- 150: Pedal plate
- 151: Pedal arm
- 152: Pedal plate
- 153: Pedal arm
- 154: Pedal plate
- 155: Pedal arm
- 156: Pedal plate
- 157: Pedal arm
- 158: Pedal plate
- 159: Pedal arm
- 160: Pedal plate
- 161: Pedal arm
- 162: Pedal plate
- 163: Pedal arm
- 164: Pedal plate
- 165: Pedal arm
- 166: Pedal plate
- 167: Pedal arm
- 168: Pedal plate
- 169: Pedal arm
- 170: Pedal plate
- 171: Pedal arm
- 172: Pedal plate
- 173: Pedal arm
- 174: Pedal plate
- 175: Pedal arm
- 176: Pedal plate
- 177: Pedal arm
- 178: Pedal plate
- 179: Pedal arm
- 180: Pedal plate
- 181: Pedal arm
- 182: Pedal plate
- 183: Pedal arm
- 184: Pedal plate
- 185: Pedal arm
- 186: Pedal plate
- 187: Pedal arm
- 188: Pedal plate
- 189: Pedal arm
- 190: Pedal plate
- 191: Pedal arm
- 192: Pedal plate
- 193: Pedal arm
- 194: Pedal plate
- 195: Pedal arm
- 196: Pedal plate
- 197: Pedal arm
- 198: Pedal plate
- 199: Pedal arm
- 200: Pedal plate
- 201: Pedal arm
- 202: Pedal plate
- 203: Pedal arm
- 204: Pedal plate
- 205: Pedal arm
- 206: Pedal plate
- 207: Pedal arm
- 208: Pedal plate
- 209: Pedal arm
- 210: Pedal plate
- 211: Pedal arm
- 212: Pedal plate
- 213: Pedal arm
- 214: Pedal plate
- 215: Pedal arm
- 216: Pedal plate
- 217: Pedal arm
- 218: Pedal plate
- 219: Pedal arm
- 220: Pedal plate
- 221: Pedal arm
- 222: Pedal plate
- 223: Pedal arm
- 224: Pedal plate
- 225: Pedal arm
- 226: Pedal plate
- 227: Pedal arm
- 228: Pedal plate
- 229: Pedal arm
- 230: Pedal plate
- 231: Pedal arm
- 232: Pedal plate
- 233: Pedal arm
- 234: Pedal plate
- 235: Pedal arm
- 236: Pedal plate
- 237: Pedal arm
- 238: Pedal plate
- 239: Pedal arm
- 240: Pedal plate
- 241: Pedal arm
- 242: Pedal plate
- 243: Pedal arm
- 244: Pedal plate
- 245: Pedal arm
- 246: Pedal plate
- 247: Pedal arm
- 248: Pedal plate
- 249: Pedal arm
- 250: Pedal plate
- 251: Pedal arm
- 252: Pedal plate
- 253: Pedal arm
- 254: Pedal plate
- 255: Pedal arm
- 256: Pedal plate
- 257: Pedal arm
- 258: Pedal plate
- 259: Pedal arm
- 260: Pedal plate
- 261: Pedal arm
- 262: Pedal plate
- 263: Pedal arm
- 264: Pedal plate
- 265: Pedal arm
- 266: Pedal plate
- 267: Pedal arm
- 268: Pedal plate
- 269: Pedal arm
- 270: Pedal plate
- 271: Pedal arm
- 272: Pedal plate
- 273: Pedal arm
- 274: Pedal plate
- 275: Pedal arm
- 276: Pedal plate
- 277: Pedal arm
- 278: Pedal plate
- 279: Pedal arm
- 280: Pedal plate
- 281: Pedal arm
- 282: Pedal plate
- 283: Pedal arm
- 284: Pedal plate
- 285: Pedal arm
- 286: Pedal plate
- 287: Pedal arm
- 288: Pedal plate
- 289: Pedal arm
- 290: Pedal plate
- 291: Pedal arm
- 292: Pedal plate
- 293: Pedal arm
- 294: Pedal plate
- 295: Pedal arm
- 296: Pedal plate
- 297: Pedal arm
- 298: Pedal plate
- 299: Pedal arm
- 300: Pedal plate

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28 DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	---	Transaxle, TUFFTORQ K46 BN (Internal parts not available)	167	532 40 52-57	Latch Brake Parking
2	532 18 62-11	Key .187 x 2.50	170	532 19 43-22	Keeper Belt Centerspan
7	532 19 98-44	Hub Asm. Wheel Rear	183	532 40 04-24	Spacer Split
9	532 14 00-80	Bolt Hub Wheel Rear	184	532 40 31-18	Handle Parking Brake
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	185	872 11 06-20	Bolt Rdhd Sqnk 3/8-16 x 2-1/2
17	532 41 36-78	Spring, Brake	186	532 19 43-21	Spacer Retainer
26	532 19 96-79	Spring Return Cruise	187	819 13 32-10	Washer
29	532 40 38-06	Rod, Brake	188	532 19 43-23	Link Clutch Ground Drive
33	812 00 00-01	Ring E	189	532 19 43-17	Bellcrank Ground Drive
35	532 19 95-91	Rod, Brake, Park	190	532 19 43-18	Keeper Bellcrank Ground Drive
42	532 12 48-72	Cover, Foot Pedal	196	817 00 06-16	Screw 3/8-16 x 1
49	872 11 06-14	Bolt	197	532 19 58-04	Link Clutch Anti-Rotation
50	532 19 43-27	Pulley Idler Flat	205	532 12 17-48	Washer
51	873 90 06-00	Lock Nut 3/8-16	206	532 19 78-67	Bracket Mount Latch Cruise
52	532 19 43-26	Idler V-Groove 910" Offset	207	532 19 78-68	Latch Control Cruise
56	532 13 09-69	V-Belt, Drive	208	532 19 78-69	Gear Sector Control Cruise
64	532 19 78-65	Shaft Asm. Pedal Brake Control	209	532 19 95-92	Rod Control Cruise
70	532 40 05-30	Console Asm.	210	532 19 78-60	Rocker Asm. Pedal Control
73	874 49 05-44	Bolt Hex Flgld 5/16-18 Gr. 5	211	532 12 01-83	Bearing Nylon
74	532 14 24-32	Screw 1/4 x 1/2	213	532 40 31-19	Knob Control Cruise
80	532 41 00-24	Bracket Strap Torque	214	532 40 17-22	Pedal Forward
92	874 76 05-20	Bolt Fin Hex 5/16-18 unc x 1.25	215	532 40 17-23	Pedal Reverse
99	532 41 57-42	Rod Bypass	216	532 19 61-31	Bracket Pulley Idler
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	220	532 19 89-08	Reflector RH
125	817 00 05-12	Screw 5/16-18 x 3/4	221	532 40 31-87	Retainer Spring Clip Handle
143	817 49 05-08	Screw 5/16-18 x 1/2	222	879 21 20-10	Washer 21/32 x 1-1/4 x 10 Ga.
153	532 12 47-88	Retainer Spring	225	532 40 33-19	Keeper Belt Trans.
159	876 02 04-12	Pin Cotter 1/8 x 3/4	226	532 40 15-64	Bracket Mount Torque
160	532 16 94-84	Retainer Clip	230	532 18 89-67	Washer Hardened
161	532 10 57-09	Spring, Return, Clutch			
163	532 40 10-34	Rod Pedal Control			
166	532 19 72-90	Nut Push .625			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
ENGINE**

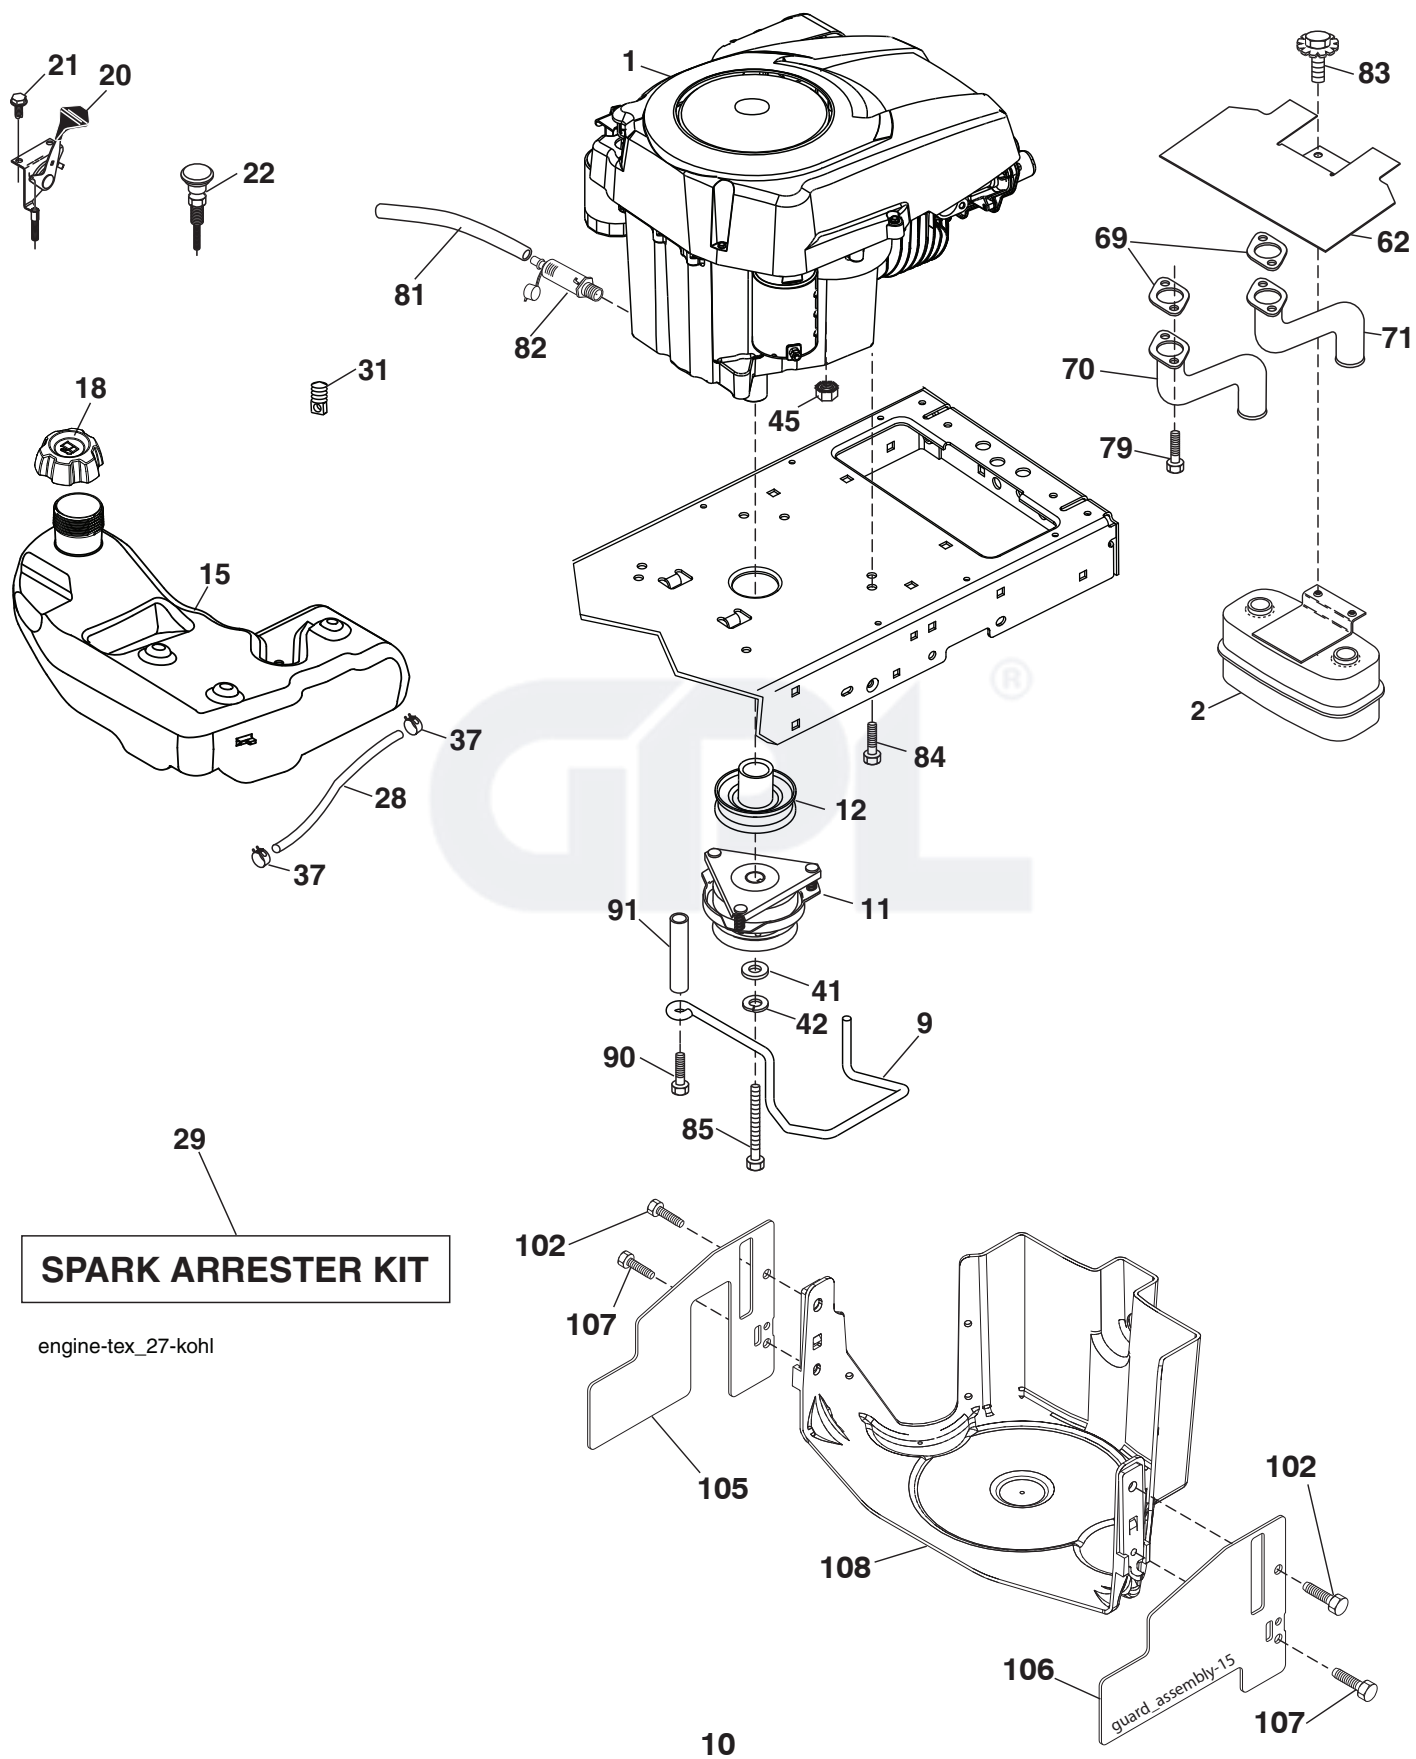


**TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
ENGINE**

KEY NO.	PART NO.	DESCRIPTION
1	-----	Engine Kohl Model No. SV715
2	532 14 97-23	Muffler
9	532 19 43-19	Keeper Belt Engine
11	532 17 93-35	Clutch Electric
12	532 19 43-43	Pulley Engine
15	532 19 34-99	Tank Fuel 4.0
18	532 19 42-67	Cap Asm
20	532 18 29-37	Control Throttle
21	532 19 16-11	Screw 10 x 3/4 Single Lead Hex
22	532 19 15-96	Control Choke
28	532 14 21-58	Fuel Line
29	532 13 71-80	Spark Arrester Kit
31	532 14 50-06	Clip Push-In
37	532 12 34-87	Clamp Hose
41	532 12 61-97	Washer 1-1/2 OD x 15/32 ID x .250
42	810 04 07-00	Washer Lock 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
62	532 14 66-29	Shield Heat Muffler
69	-----	Gasket (Order part from Eng. Mfg.)
70	532 14 66-99	Tube Exhaust LH
71	532 14 67-00	Tube Exhaust RH
79	532 19 23-34	Screw Socket Head 5/16-18 x .75
81	532 14 84-56	Tube Drain Oil Easy
82	532 18 16-54	Plug Drain Oil Easy
83	532 17 18-77	Bolt 5/16-18 unc x 3/4
84	817 12 06-16	Screw 3/8-16 x 1
85	532 17 99-53	Bolt Hex 7/16-20 x 3.75 Gr. 5
90	817 00 06-16	Screw 3/8-16 x 1
91	532 18 74-95	Bushing
102	817 00 05-12	Screw 5/16-18 x 3/4
105	532 41 06-16	Shield Side LH
106	532 41 06-17	Shield Side RH
107	532 13 77-29	Screw 1/4-20 x 5/8
108	532 41 05-32	Cover Asm Engine

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
STEERING ASSEMBLY

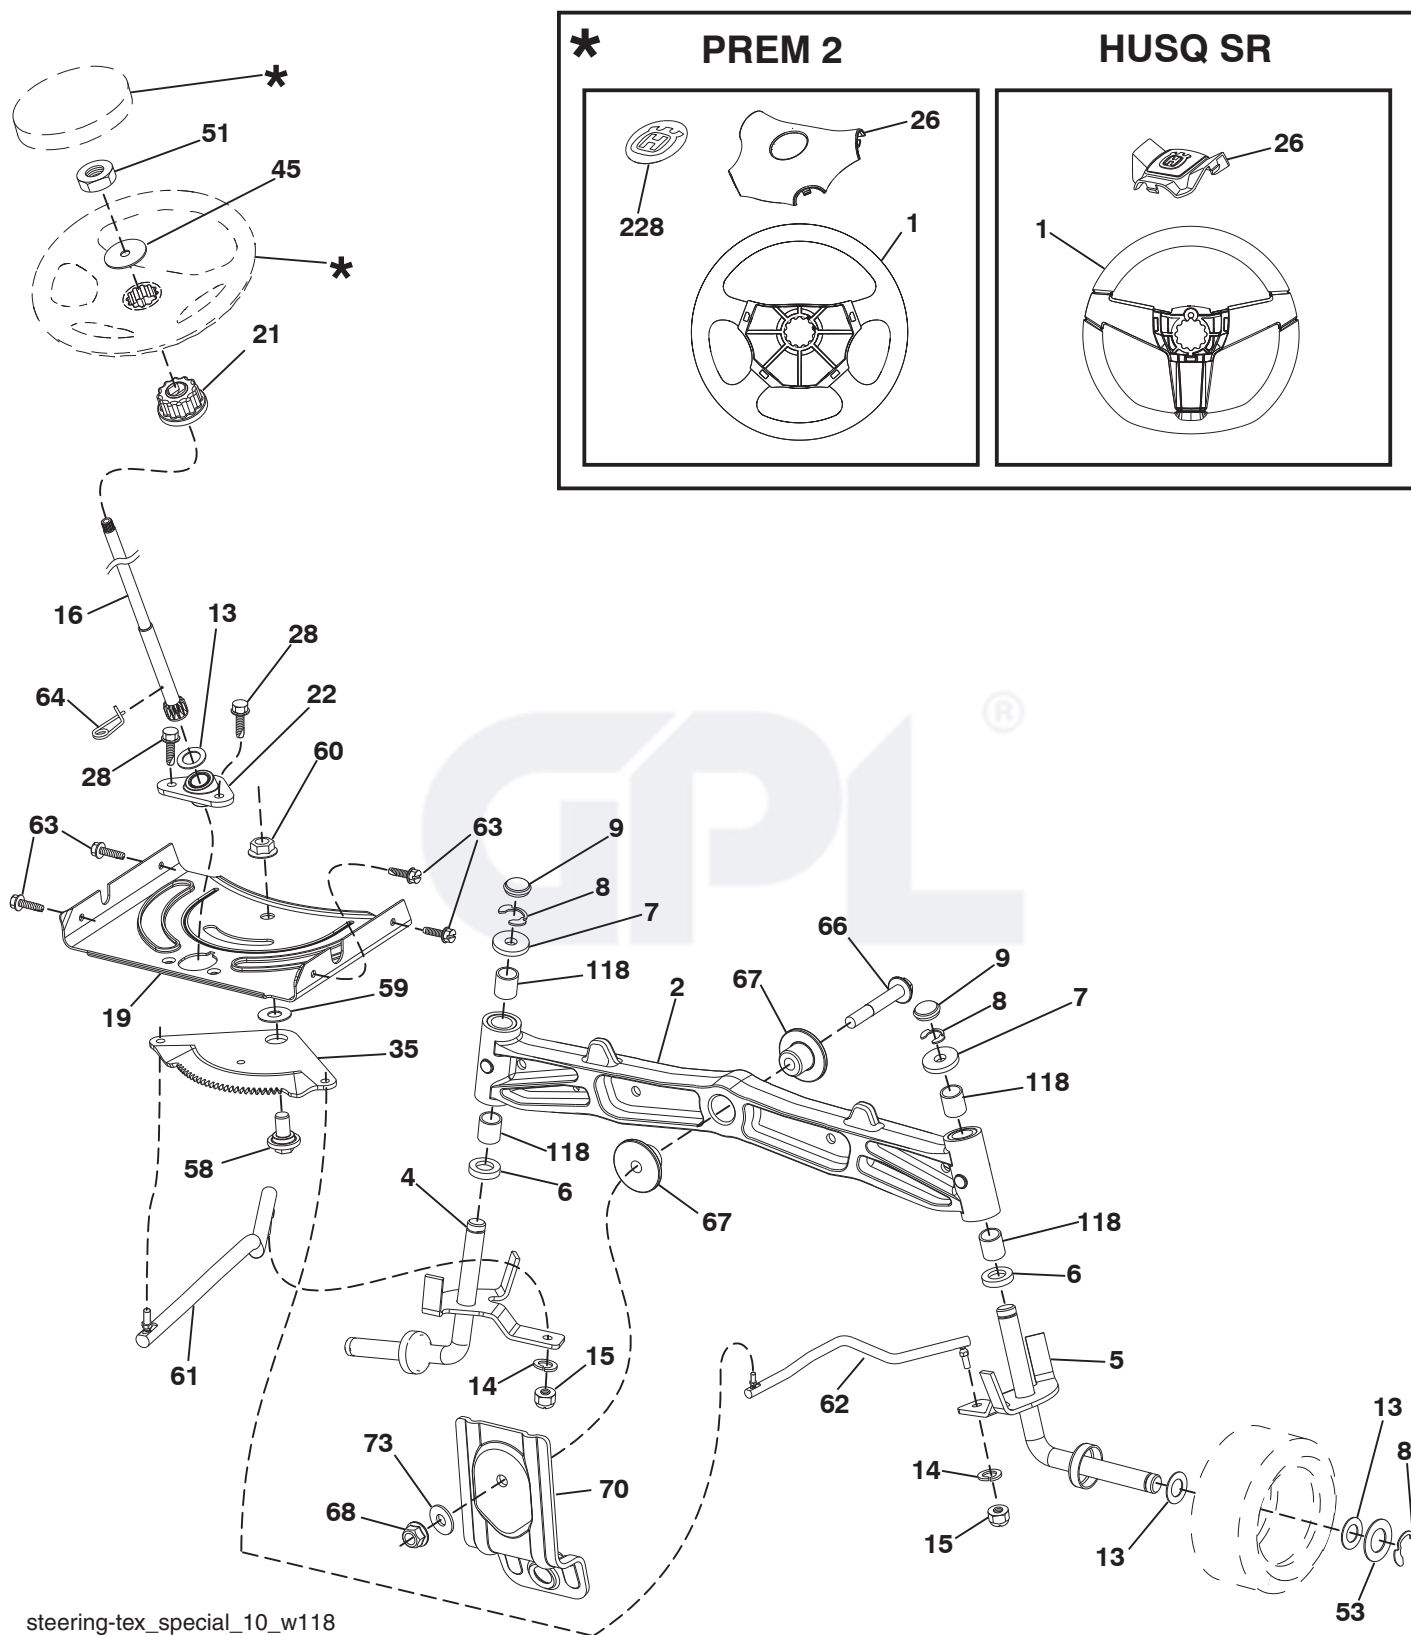


steering-tex_special_10_w118

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532 41 64-80	Wheel, Steering Husq SR
--	532 19 36-51	Wheel, Steering Prem 2
2	532 19 59-68	Axle Asm., Front
4	532 40 31-72	Spindle Asm., LH
5	532 40 31-73	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Harden
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy Hlcl Spr 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 19 47-46	Shaft Steering
19	532 19 47-29	Plate Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 19 48-45	Bushing, Strg. Blk
26	532 41 59-87	Insert, Wheel Steering Husq SR
--	532 19 36-52	Insert, Wheel Steering Prem 2
28	817 00 06-12	Screw 3/8-16 x 3/4
35	532 19 47-32	Gear, Sector Plate
45	819 18 38-12	Washer 9/16 x 2-3/8 x 12 Ga.
51	873 94 08-00	Nut Hex Jam Toplock 1/2-20 unf
53	532 18 89-67	Wshr Hardened .793 x 1.637 x .060
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd 7/16-14 x 3 Serr
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front
118	532 40 60-13	Bushing Metal, Axle, Cast
228	532 40 44-84	Decal, Wheel, Steering

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
MOWER DECK

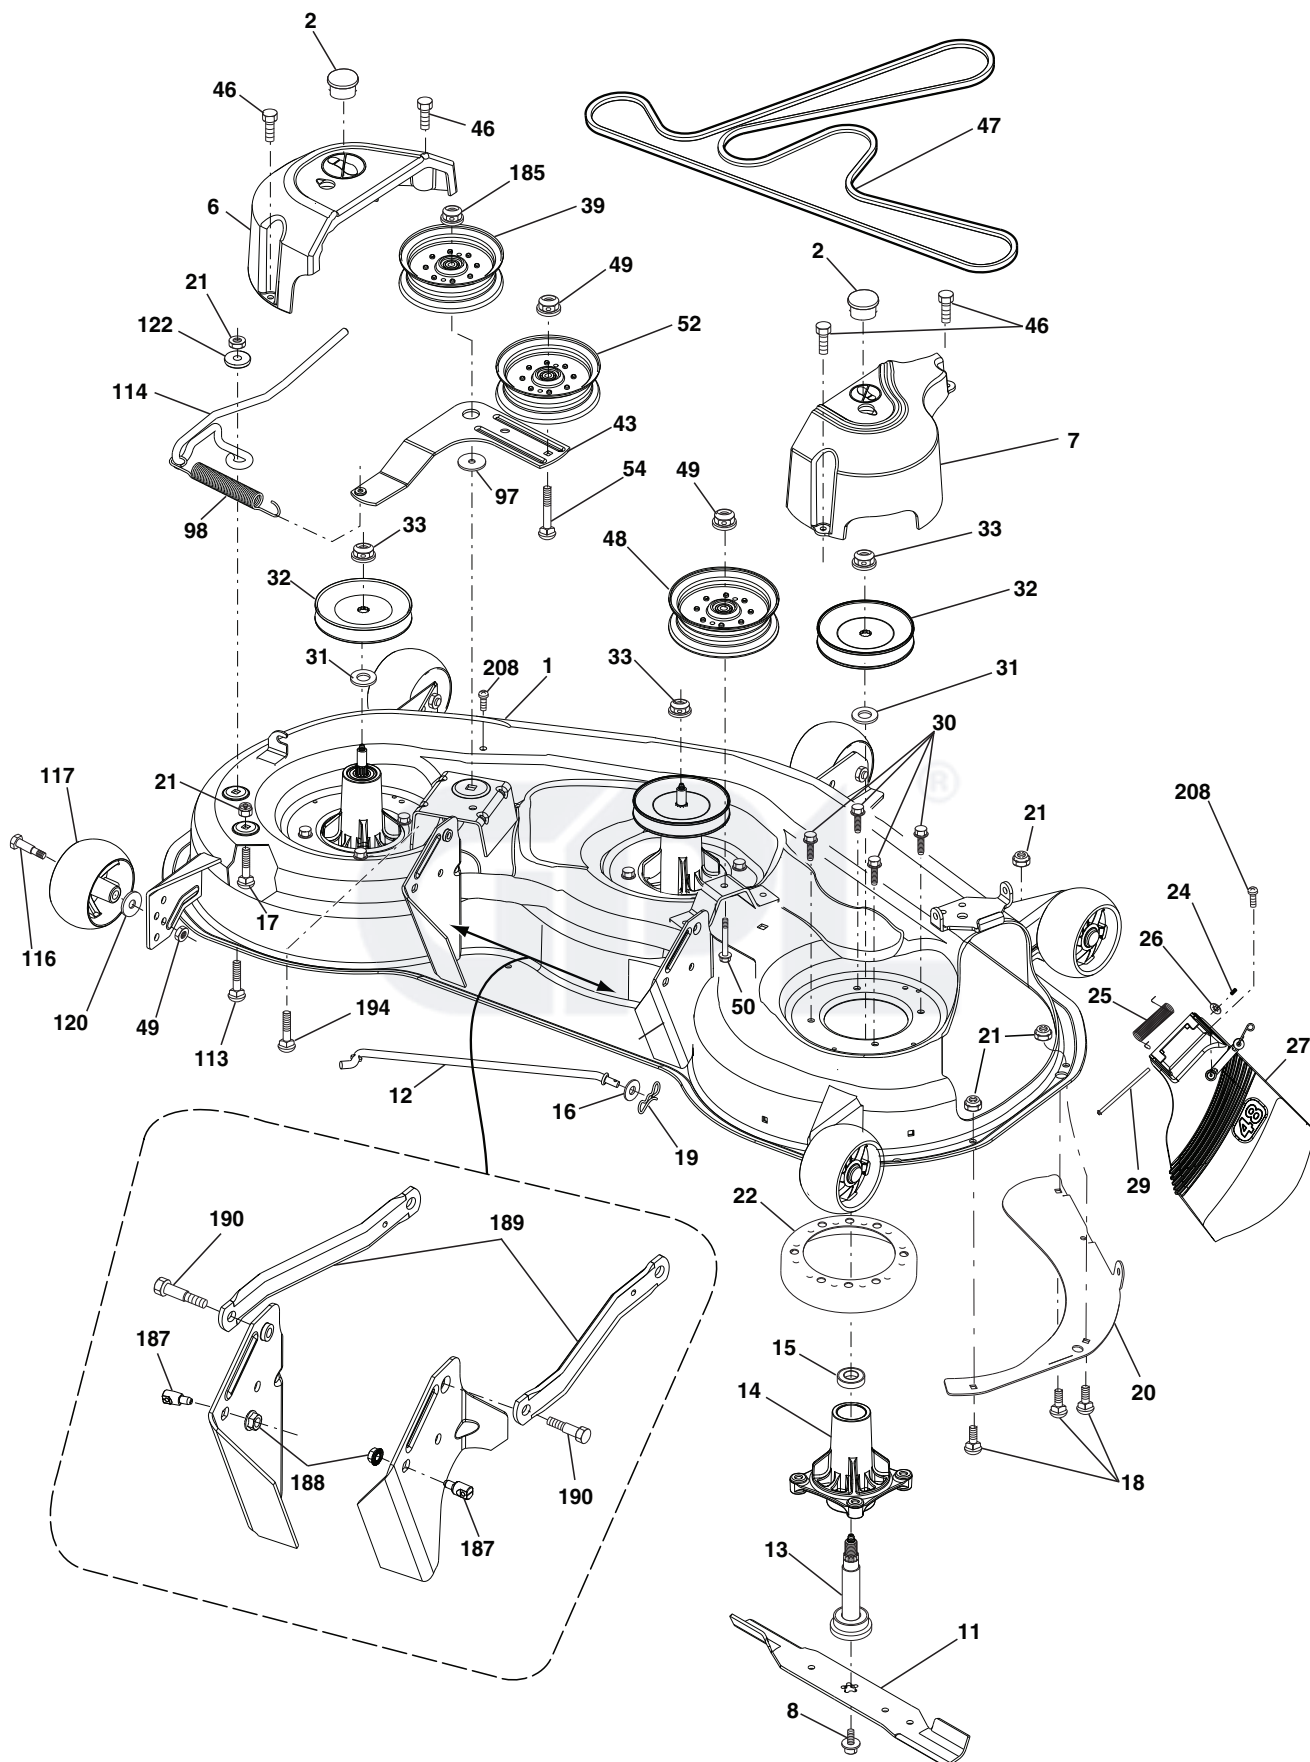


TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28 MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 40 42-65	Deck Weldment Mower	48	532 19 31-97	Pulley Idler
2	532 17 83-45	Plug Hole Mandrel	49	873 90 06-00	Nut, Lock Flg. 3/8-16 unc
6	532 19 94-05	Cover Mandrel LH	50	817 49 06-36	Screw TT 3/8-16 x 2-1/4
7	532 19 94-06	Cover Mandrel RH	52	532 19 73-79	Pulley Idler Clutching
8	532 17 43-65	Bolt 7/16 Asm. Blade	54	872 11 06-12	Bolt Carr. Sh 3/8-16 x 1-1/2 Gr. 5
11	532 18 00-54	Blade High Lift	97	532 17 85-15	Washer Hardened
12	532 40 48-51	Rod Anti-Sway	98	532 19 61-05	Spring Drive
13	532 18 72-91	Shaft Asm. w/Lower Bearing	113	872 11 05-08	Bolt Rdhd Sqnk 5/16-18 x 3/4
14	532 18 72-81	Housing, Mandrel	114	532 19 74-51	Rod Tension Relief
15	532 11 04-85	Bearing, Ball, Mandrel	116	532 19 34-06	Bolt, Shoulder
16	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.	117	532 17 48-73	Gauge Wheel
17	872 11 05-05	Bolt 5/16-18 x 5/8	120	819 13 20-12	Washer 13/32 x 1-1/4 x 12 Ga.
18	872 14 05-05	Bolt RdHd 5/16-18 unc x 5/8	122	532 18 75-57	Bushing Tension Relief
19	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock	185	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
20	532 17 43-78	Baffle Vortex	187	532 19 51-61	Stud Fastener w/"D" Anti-Rotation
21	873 68 05-00	Nut, Crownlock 5/16-18 unc	188	873 90 05-00	Nut Lock Hex Flange
22	532 17 44-93	Stripper Mandrel	189	532 19 51-85	Arm Susp. Mower Rear
24	532 10 53-04	Cap Sleeve	190	532 19 65-39	Bolt Shoulder
25	532 17 81-02	Spring, Torsion	194	872 14 07-16	Bolt Carr Sqnk 7/16-24 x 2
26	532 11 04-52	Nut, Push	208	817 67 06-08	Screw, THDROL 3/8-16 x 1/2
27	532 41 18-61	Deflector Shield	- -	532 18 72-92	Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included)
29	532 13 14-91	Rod, Hinge	- -	532 19 98-60	Replacement Mower, Complete
30	532 17 39-84	Screw, Thdroll Washer Head			
31	532 18 76-90	Washer, Spacer Mower Vented			
32	532 15 35-32	Pulley, Mandrel			
33	532 40 02-34	Nut, Flg. Top Lock			
39	532 19 73-80	Pulley, Idler			
43	532 19 60-65	Arm, Idler			
46	532 13 77-29	Screw, Thdroll. 1/4-20 x 5/8			
47	532 19 72-42	Belt Deck Drive			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
MOWER LIFT

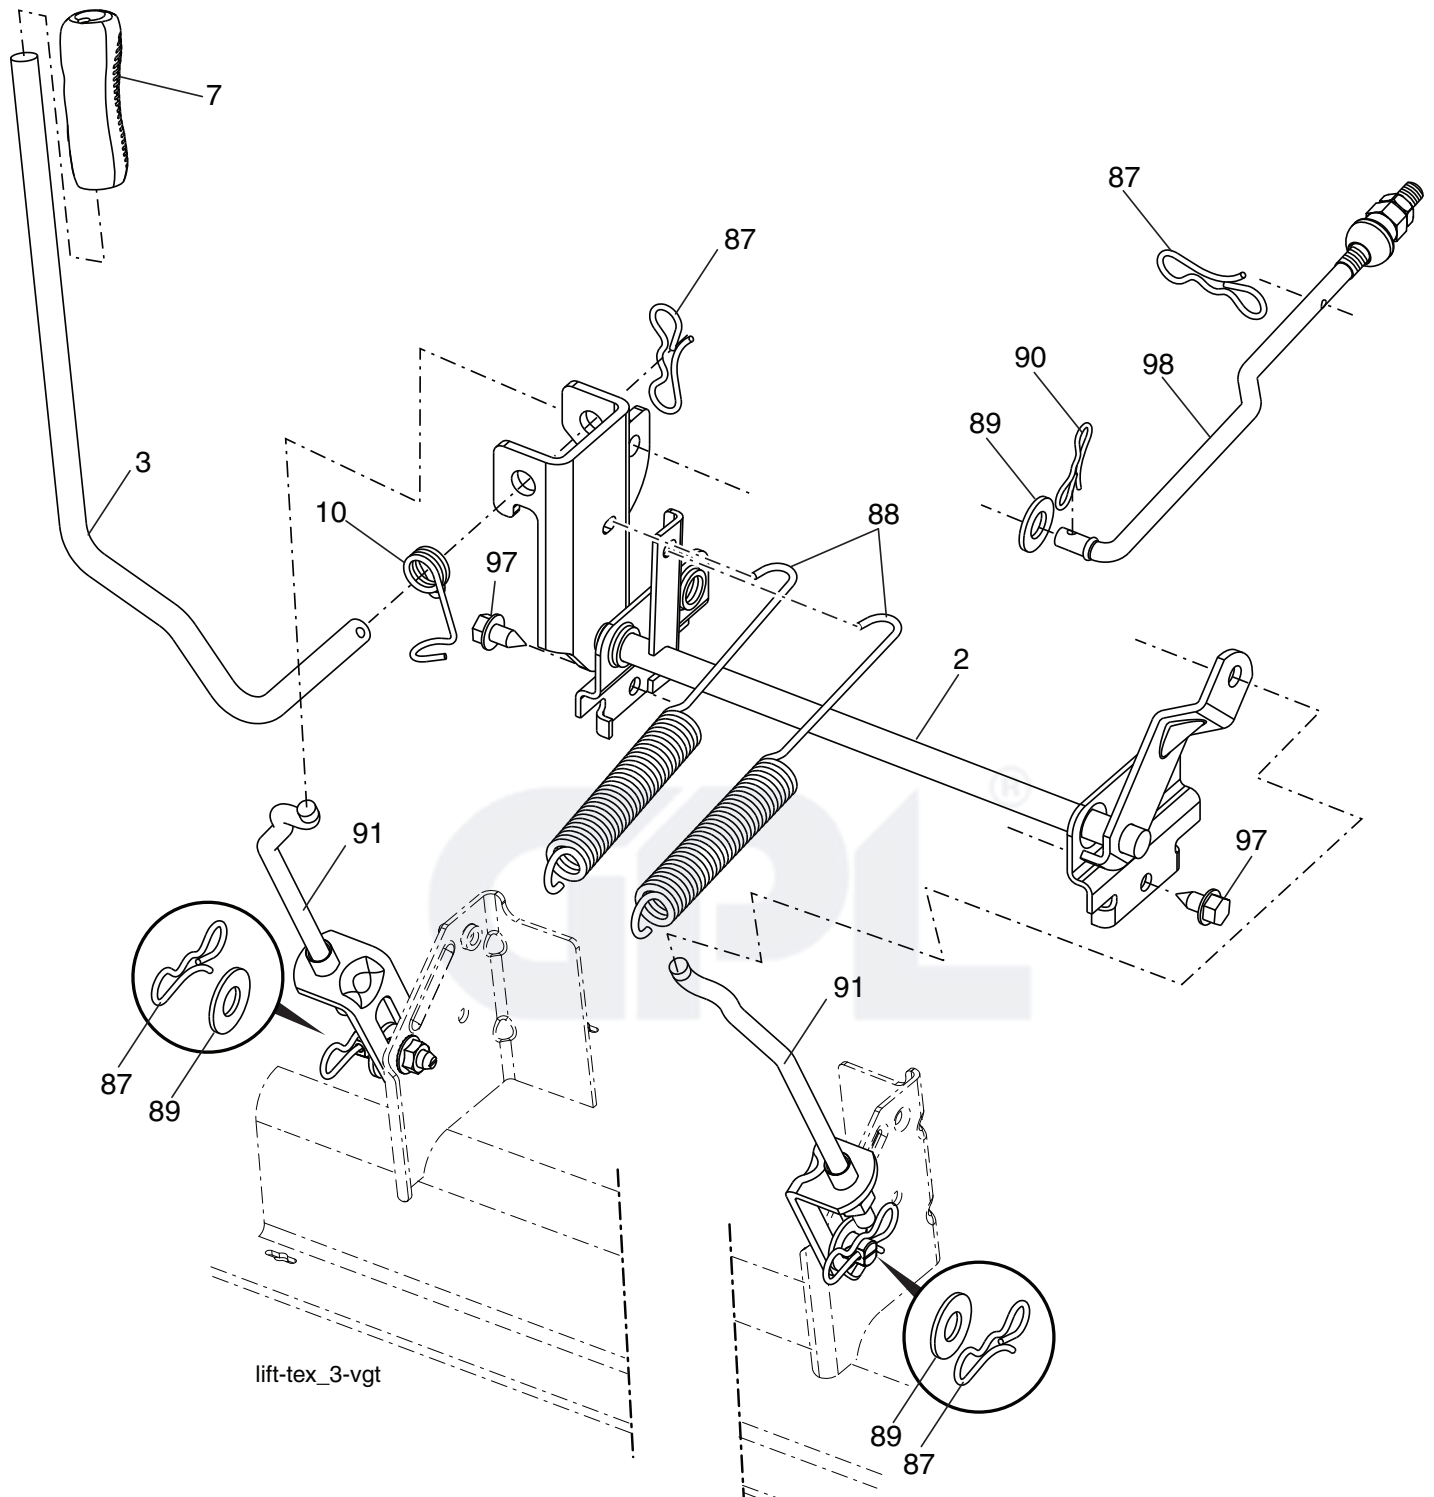


KEY NO.	PART NO.	DESCRIPTION
2	532 19 52-23	Shaft Asm., Lift
3	532 19 52-30	Lever Asm., Lift RH
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 41 07-10	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc

KEY NO.	PART NO.	DESCRIPTION
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	532 40 34-07	Link Lift Susp Mower Rear
97	817 00 06-12	Screw 3/8-16 x .75 Smgml Tap/R.Z
98	532 19 52-64	Link Lift Susp. Front Mower

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - MODEL NO. YTH220 TWIN (96041002801), PRODUCT NO. 960 41 00-28
SEAT ASSEMBLY**

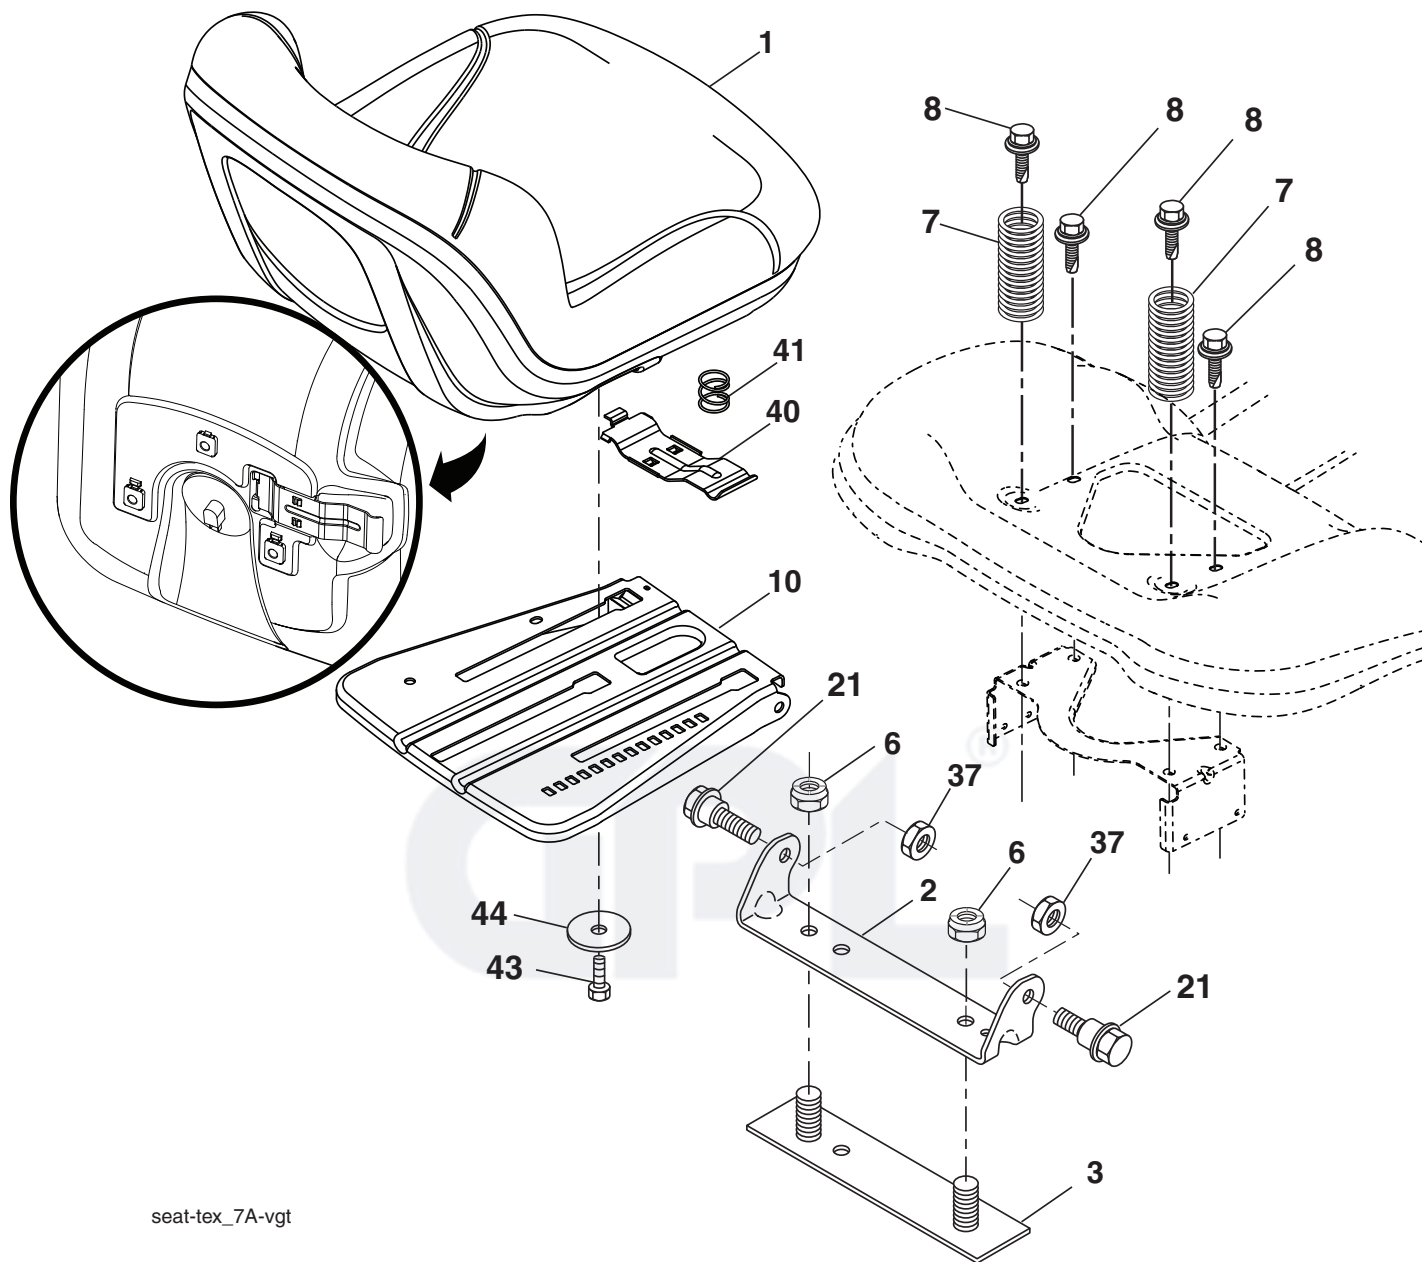

seat-tex_7A-vgt

KEY NO.	PART NO.	DESCRIPTION
1	532 40 66-21	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt, Shoulder 5/16-18
37	873 80 05-00	Nut, Lock 5/16-18 unc

KEY NO.	PART NO.	DESCRIPTION
40	532 19 76-61	Handle Slide Seat
41	532 19 82-00	Spring Latch Seat
43	874 76 06-12	Bolt 3/8-16 x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm