

600 S

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen


Repuestos

Reservdelar

Product No: 954 05 66-21

GPL®

REPAIR PARTS, 1

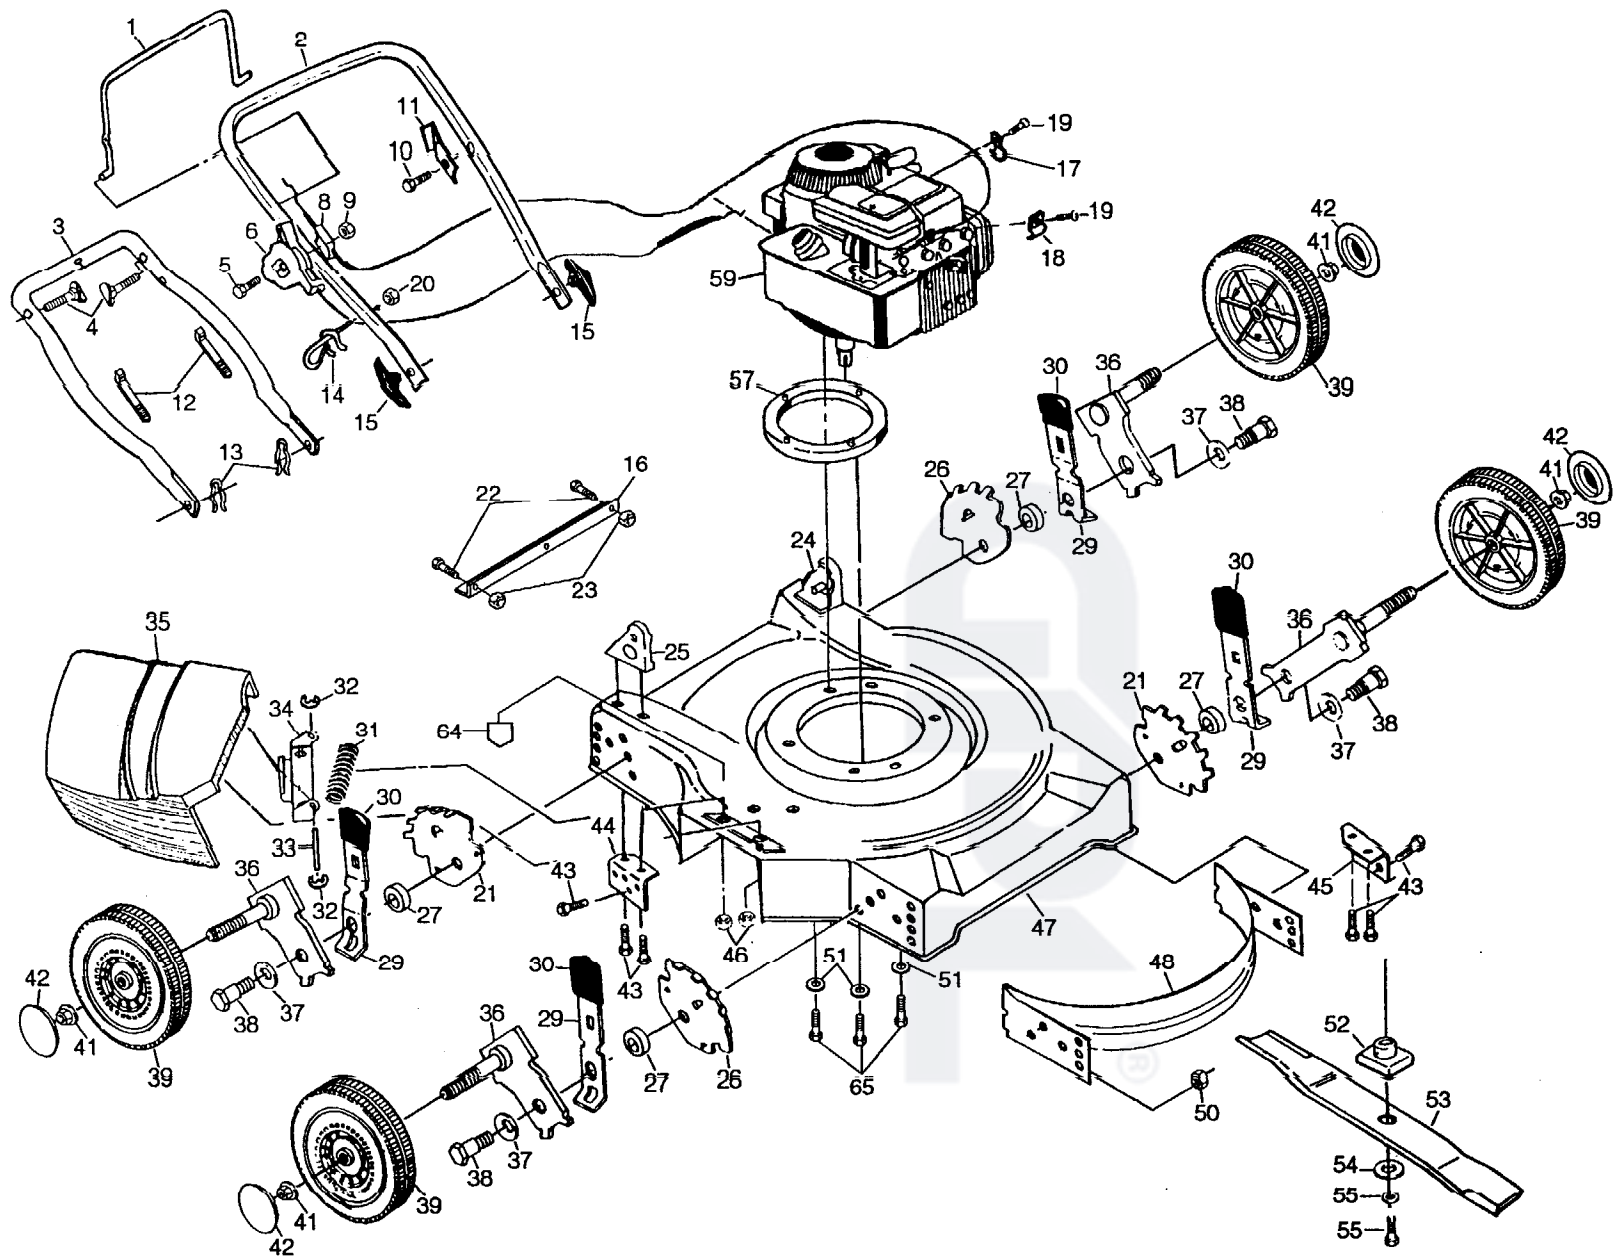

REPAIR PARTS, 1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 85 07-35	Control Bar	35	532 75 01-49	Discharge Guard Assembly
2	532 15 00-41	Upper Handle	36	532 14 98-57	Axle Arm Assembly
3	532 15 30-28	Lower Handle	37	532 06 23-35	Belleville Washer 1/2
4	532 13 19-59	Handle Bolt 5/16-18 x 3/4	38	532 14 27-48	Shoulder Bolt 3/8-16
5	532 14 49-29	Hex Washer Head Screw 1/4-20 x 2.12	39	532 14 84-34	Wheel & Tire Assembly
6	532 85 14-63	Throttle Control	41	532 08 39-23	Nut
8	532 13 08-61	Engine Zone Control Cable	42	532 07 74-00	Hubcap
9	873 68 04-00	Locknut 1/4-20	43	874 78 05-12	Screw 5/16-18 x 3/4
10	817 02 10-08	Hex Washer Head Screw #10-24 x 1/2	44	532 12 52-05	Handle Support Bracket (Right)
11	532 12 51-62	Up-StopBracket	45	532 12 54-23	Handle Support Bracket(Left)
12	532 15 15-17	Cable Clip	46	873 68 04-00	Locknut 1/4-20
13	532 05 17-93	Hairpin Cotter	47	532 15 24-55	Lawn Mower Housing
14	532 13 20-01	Rope Guide	48	532 14 60-26	Front Baffle
15	532 13 63-76	Handle Knob	- -	532 12 50-46	Rear Baffle (Not Shown)
16	532 80 15-42	Rear Foot Guard	50	873 68 06-00	Locknut 3/8-16
17	532 08 79-30	Cable Clip	51	532 05 39-98	Washer
18	532 21 31-46	*Cable Clamp (Engine)	52	532 85 09-77	Blade Adapter
19	532 08 38-16	Thread Rolling Screw #10-32 x 5/8	53	532 14 51-06	20a Blade
20	873 68 04-00	Keps Locknut 1/4-20	54	532 85 10-74	Hardened Washer
21	532 14 08-36	Wheel Adjuster Bracket (LF/RR)	55	532 85 02-63	Helical Lockwasher 3/8
22	817 02 10-08	Screw	56	532 85 10-84	HexHeadScrew3/8-24x1 Grade8
23	532 06 91-80	Hex Locknut #10-24	57	532 70 13-13	Engine Spacer
24	532 15 30-27	Handle Bracket Assembly (Left)	59	-----	* Engine - Briggs 8 Stratton Model No. 95902
25	532 15 30-26	Handle Bracket Assembly (Right)	64	532 14 54-94	Warning Decal
26	532 14 09-96	Wheel Adjuster Bracket (RF/LR)	65	532 85 09-99	Hex Head Thread Rolling Screw 3/8-16 x 1
27	532 14 66-30	Spacer			
29	532 14 17-30	Selector Spring			
30	532 08 78-77	SelectorKnob			
31	532 08 75-89	Torsion Spring			
33	532 14 72-86	Hinge Rod			
34	532 08 75-93	Housinn Bracket			