

600 S

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

GPL®

This exploded view diagram illustrates the assembly of a motorized vehicle chassis. The central component is the main frame (47), which houses the engine (59) and the main drive shaft (50). The engine is connected to a gear system (21, 26, 27, 30, 31, 33, 34, 36, 37, 38, 39, 42) that drives the rear wheels. The front of the chassis features a steering mechanism (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15) and a front wheel (39). The chassis is equipped with a fuel tank (35) and a battery (60). Various other components, including a seat (65), a handlebar (61), and a rear fender (62), are shown in their relative positions for assembly. The diagram uses a consistent numbering system to identify each part, facilitating the assembly process.

A

KEY NO.	PART NO.	PART NAME
---------	----------	-----------

1	532850735	Control Bar
2	532164289	Upper Handle
3	532159354	Lower Handle
4	532131959	Handle Bolt 5/16-18 x 3/4
5	532158755	Pan Head Machine Screw 1/4-20 x 2.12
6	532851462	Throttle Control
8	532130861	Engine Zone Control Cable
9	532063601	Locknut 1/4-20
10	532750097	Hex Washer Head Screw #10-24 x 1/2
11	532125162	Up-Stop Bracket
12	53266426	Wire Tie
13	532051793	Hairpin Cotter
14	532132001	Rope Guide
15	532136376	Handle Knob
17	532111190	Cable Clamp
18	532087930	Cable Clip
19	532083816	Thread Rolling Screw #10-32 x 5/8
21	532140836	Wheel Adjuster Bracket (LF/RR)
24	532153027	Handle Bracket Assembly (Left)
25	532153026	Handle Bracket Assembly (Right)
26	532140996	Wheel Adjuster Bracket (RF/LR)
27	532146630	Spacer
29	532141730	Selector Spring
30	532087877	Selector Knob
31	532087589	Torsion Spring
33	532147286	Hinge Rod
34	532087593	Housing Bracket
35	532750149	Discharge Guard Assembly
36	532149857	Axle Arm Assembly
37	532062335	Belleville Washer 1/2
38	532142748	Shoulder Bolt 3/8-16

KEY NO.	PART NO.	PART NAME
---------	----------	-----------

39	532750001	Wheel & Tire Assembly
42	532077400	Hubcap
43	532150078	Screw 5/16-18 x 3/4
44	532125424	Handle Support Bracket (Right)
45	532125423	Handle Support Bracket (Left)
47	532152455	Lawn Mower Housing
48	532146026	Front Baffle
--	532125046	Rear Baffle (Not Shown)
50	532751592	Locknut 3/8-16
51	532850999	Hex Head Tread Rolling Screw 3/8-16 x 1
52	532850977	Blade Adapter
53	532145106	20" Blade
54	532851074	Hardened Washer
55	532850263	Helical Lockwasher 3/8
56	532851084	Hex Head Screw 3/8-24 x 1 Grade 8
57	532701313	Spacer
59	-----	* Engine - Briggs & Stratton Model No. 9D902
60	532085825	Hex Washer Head Screw 10-24 x 1
61	532069180	Nut Hex Lk. Washer #10-24
62	532154147	Footguard
63	532053998	Washer
64	532083923	Nut
65	5320164265	Handle Grip
64	532145494	Warning Decal
--	532157759	Operators Manual (Scand)
--	532157758	Operators Manual (Euro)

*These Parts must be purchased through an authorized Briggs and Stratton Dealer.