

J50

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

GPL®

This exploded view diagram illustrates the assembly of a snowblower. The central component is the main housing (1), which features a large circular opening for the auger. The auger assembly (2) is shown at the top, consisting of the auger itself (2) and its drive shaft (3). The auger is driven by a belt system (4) that connects to a pulley (5) on the auger shaft and another pulley (6) on the engine shaft. The engine (7) is a two-stroke unit with a carburetor (8) and a spark plug (9). The engine is mounted on a base plate (10) and secured with bolts (11). The main housing is supported by a frame (12) and a base plate (13). The base plate is secured with bolts (14) and a nut (15). The main housing is also secured with bolts (16) and a nut (17). The main housing is shown in an exploded view, indicating its position relative to the other components. The diagram includes numerous other parts, such as the auger tip (18), auger tip holder (19), auger tip holder pin (20), auger tip holder nut (21), auger tip holder bolt (22), auger tip holder washer (23), auger tip holder spacer (24), auger tip holder pin (25), auger tip holder nut (26), auger tip holder bolt (27), auger tip holder washer (28), auger tip holder spacer (29), auger tip holder pin (30), auger tip holder nut (31), auger tip holder bolt (32), auger tip holder washer (33), auger tip holder spacer (34), auger tip holder pin (35), auger tip holder nut (36), auger tip holder bolt (37), auger tip holder washer (38), auger tip holder spacer (39), auger tip holder pin (40), auger tip holder nut (41), auger tip holder bolt (42), auger tip holder washer (43), auger tip holder spacer (44), auger tip holder pin (45), auger tip holder nut (46), auger tip holder bolt (47), auger tip holder washer (48), auger tip holder spacer (49), auger tip holder pin (50), auger tip holder nut (51), auger tip holder bolt (52), auger tip holder washer (53), auger tip holder spacer (54), auger tip holder pin (55), auger tip holder nut (56), auger tip holder bolt (57), auger tip holder washer (58), auger tip holder spacer (59), auger tip holder pin (60), auger tip holder nut (61), auger tip holder bolt (62), auger tip holder washer (63), auger tip holder spacer (64), auger tip holder pin (65), auger tip holder nut (66), auger tip holder bolt (67), auger tip holder washer (68), auger tip holder spacer (69), auger tip holder pin (70), auger tip holder nut (71), auger tip holder bolt (72), auger tip holder washer (73), auger tip holder spacer (74), auger tip holder pin (75), auger tip holder nut (76), auger tip holder bolt (77), auger tip holder washer (78), auger tip holder spacer (79), auger tip holder pin (80), auger tip holder nut (81), auger tip holder bolt (82), auger tip holder washer (83), auger tip holder spacer (84), auger tip holder pin (85), auger tip holder nut (86), auger tip holder bolt (87), auger tip holder washer (88), auger tip holder spacer (89), auger tip holder pin (90), auger tip holder nut (91), auger tip holder bolt (92), auger tip holder washer (93), auger tip holder spacer (94), auger tip holder pin (95), auger tip holder nut (96), auger tip holder bolt (97), auger tip holder washer (98), auger tip holder spacer (99), auger tip holder pin (100).

ROTARY LAWN MOWER - - MODEL NUMBER J50 (96111001304) PRODUCT NUMBER 961 11 00-13

**KEY PART
NO. NO. DESCRIPTION**

1	532 19 60-25	Control Bar
2	532 19 47-88	Rope Guide
3	532 12 50-78	Engine Washer
4	532 19 60-24	Upper Handle
5	532 15 34-06	Lower Handle
6	532 13 20-04	Nut, Hex
7	532 19 15-74	Handle Bolt 5/16-18 x 1-3/4
8	532 12 51-62	Up-Stop Bracket
9	532 08 58-25	Screw
10	532 70 08-92	Engine Zone Control Cable
11	532 75 06-34	Nut, Hex
12	532 06 64-26	Wire Tie
13	532 05 17-93	Hairpin Cotter
14	532 19 19-38	Wing Nut, Steel
15	532 41 35-68	Discharge Guard
16	532 85 02-63	Helical Lockwasher 3/8
17	532 06 91-80	Nut, Hex
18	532 85 10-74	Hardened Washer
19	532 41 18-32	Torsion Spring
20	532 14 51-06	Blade, 20"
21	532 08 86-02	Bracket, Mounting
22	532 15 02-15	Hinge Rod
23	532 15 41-47	Footguard
24	532 41 08-07	Wheel Adjusting Bracket
25	532 85 09-77	Blade Adapter
26	532 17 09-75	Handle Bracket Assembly, RH
27	532 17 09-77	Handle Bracket Assembly, LH
28	532 06 15-37	Washer

**KEY PART
NO. NO. DESCRIPTION**

29	532 40 16-29	Spacer
30	- - -	Engine, Briggs & Stratton, Model Number 9T502 (order parts from engine manufacturer)
31	532 40 64-28	Selector Spring
32	532 08 78-77	Selector Knob
33	532 40 78-71	Axle Arm Assembly
34	532 40 16-30	Washer, Curved, Cylindrical
35	532 40 16-38	Shoulder Bolt
36	532 40 52-68	Wheel & Tire Assembly
37	532 40 91-48	Nut, Hex
38	532 15 04-06	Hex Head Thread Rolling Screw 3/8-16 x 1-1/8
39	532 41 66-95	Kit, Lawn Mower Housing
40	532 85 10-84	Hex Head Screw 3/8-24 x 1-3/8 Grade 8
41	532 14 97-41	Thread Cutting Screw 5/16-18 x 3/4
42	532 18 21-66	Danger Decal
43	873 93 05-00	Locknut, Hex 5/16-18
44	532 19 79-91	Clip, Cable
45	532 08 38-16	Screw #10
46	532 11 11-90	Clamp, Cable
47	532 70 04-17	Control Throttle
48	532 18 33-65	Screw 1/4-20 x 2.12
55	532 14 15-19	Front Baffle
56	873 80 04-00	Nut, Hex
57	532 41 24-00	Mulcher Plug
- -	532 14 15-20	Rear Baffle (not shown)
- -	532 40 00-56	Operator's Manual, European
- -	532 40 00-55	Operator's Manual, Scandinavian
- -	532 40 00-57	Operator's Manual, East Bloc
- -	532 40 00-58	Operator's Manual, Baltic

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.