

LB48

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar


GPL®

A LB48 Deck

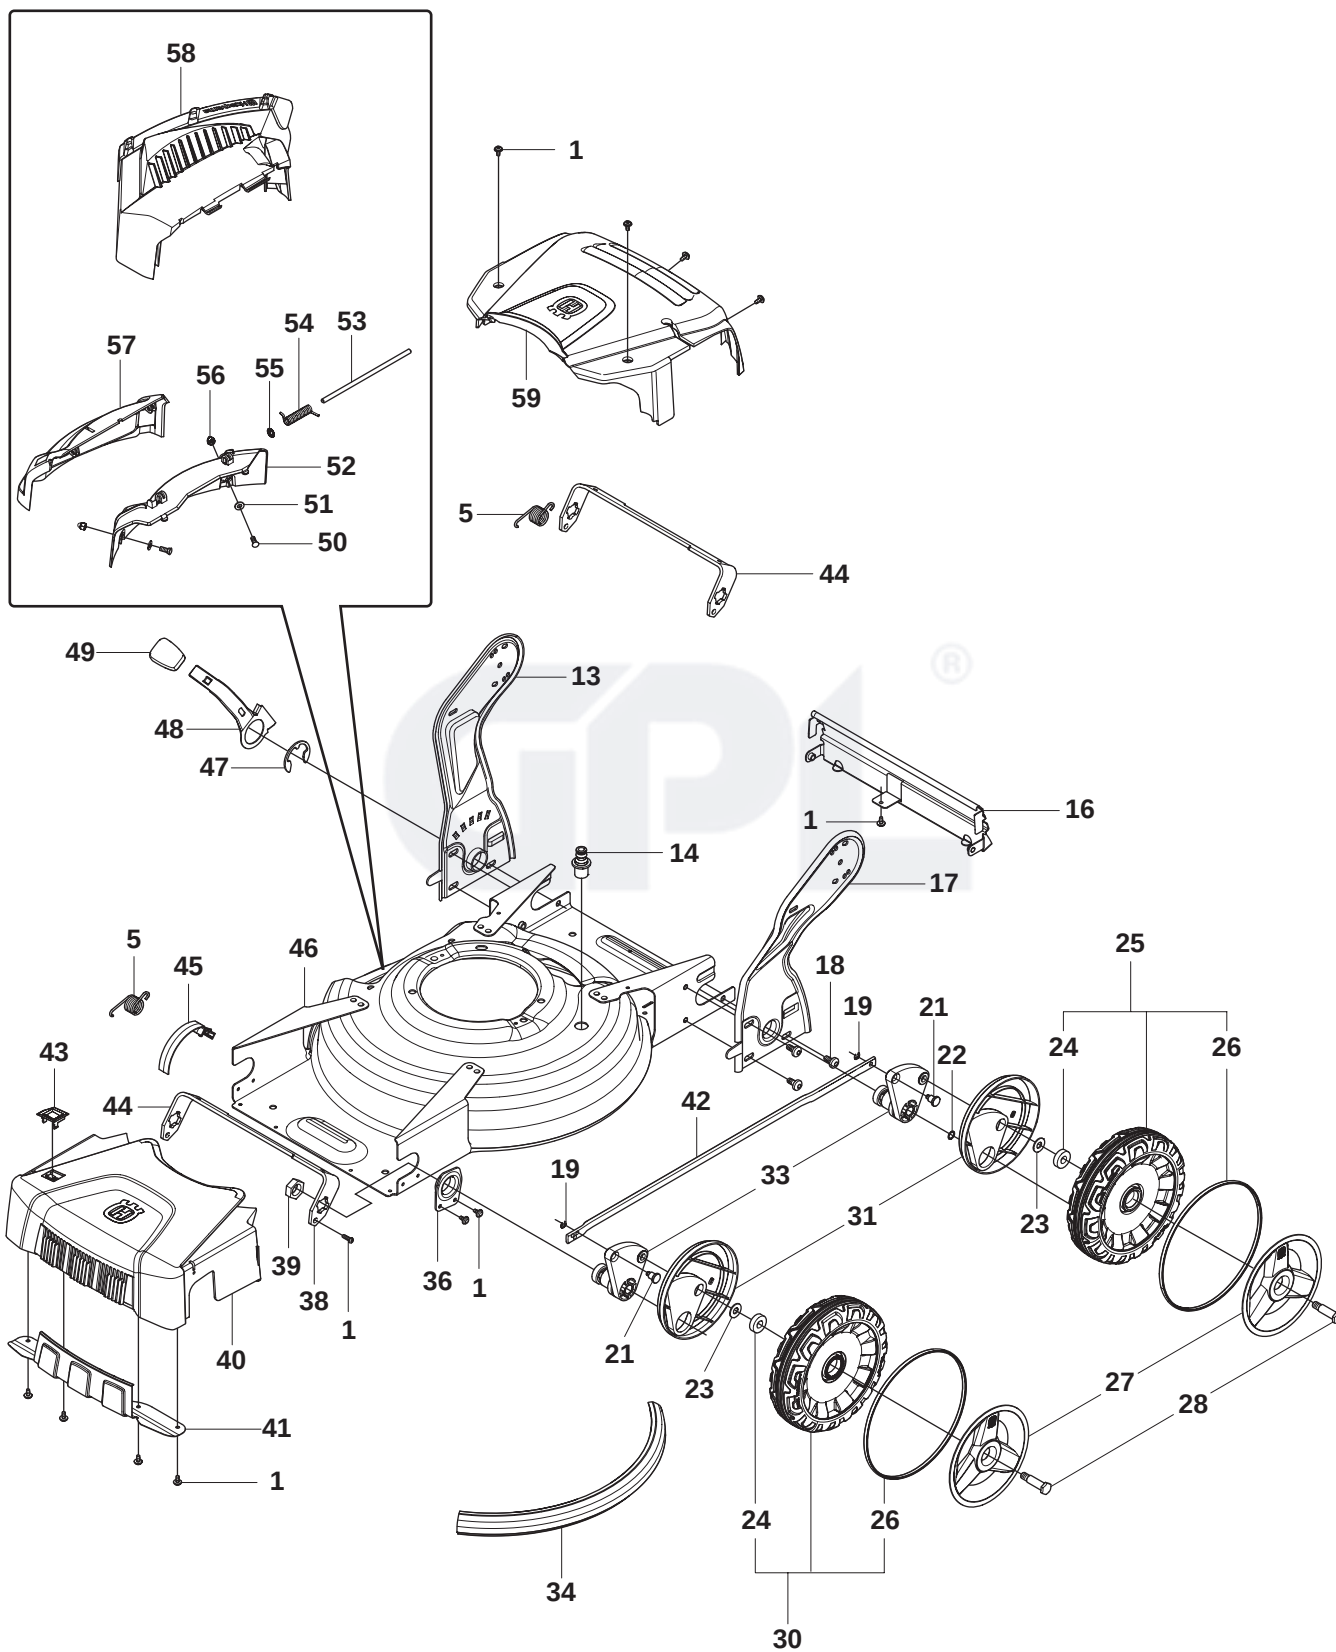


Page A LB48 DECK				
Position	Article	Quantity	Notes	Kit
1	502 43 52-01	15		
2	522 47 04-01	1		
5	522 02 46-01	2		
13	504 00 00-01	1		
14	531 20 58-48	1		
16	504 64 15-01	1		
17	504 00 32-01	1		
18	504 64 16-02	6		
19	735 31 09-21	2		
21	504 62 50-01	2		
22	504 70 28-01	2		
23	505 22 14-01	4		
24	738 21 01-04	8		
25	544 91 69-02	2		
26	544 43 28-01	4		
27	544 44 39-01	4		
28	544 45 34-01	4		
30	502 49 68-01	2		
31	504 62 41-01	4		
32	544 34 23-01	2		
33	504 70 98-02	4		
34	504 69 50-01	1		
36	504 62 49-01	2		
39	505 52 10-01	4		
40	502 62 44-01	1		
41	502 62 54-01	1		
42	504 61 55-01	1		
43	504 62 75-01	1		
44	504 61 46-01	2		
45	504 62 76-01	1		
46	501 37 55-01	1		
47	735 31 36-21	1		
48	504 83 82-01	1		
49	504 83 83-01	1		
50	505 15 61-01	2		
51	505 19 84-01	2		
52	504 58 46-01	1		
53	504 58 50-01	1		
54	504 58 53-01	1		
55	735 58 41-01	1		
56	502 30 50-01	2		
57	504 58 45-01	1		
58	510 04 76-01	1		
59	501 35 50-01	1		

B LB48
Handle

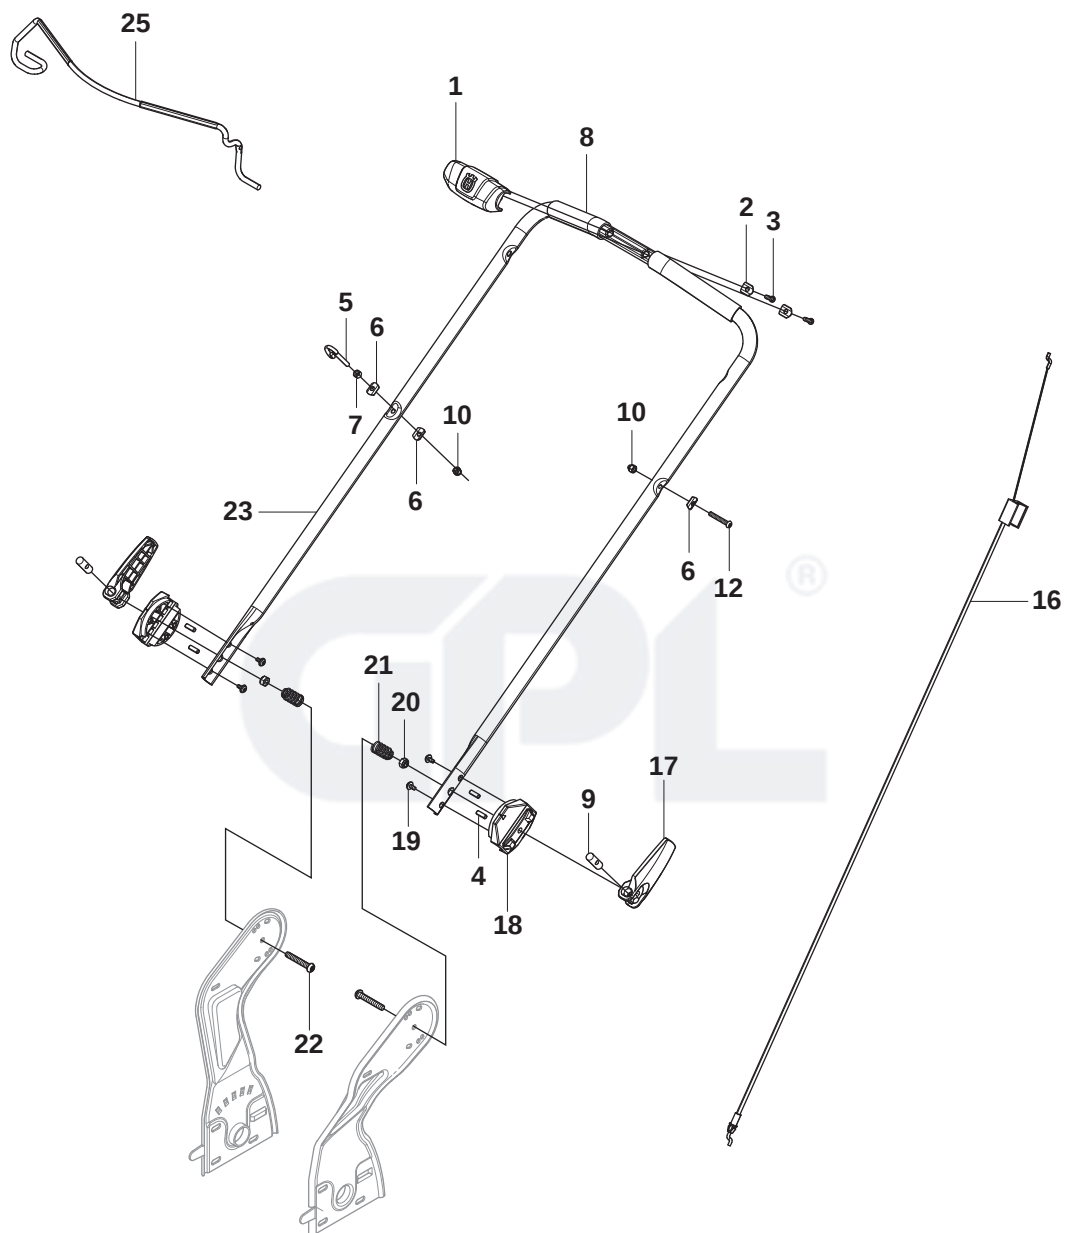

Page B LB48 HANDLE				
Position	Article	Quantity	Notes	Kit
1	510 04 73-01	1		
3	502 43 53-01	2		
4	505 50 81-01	4		
5	531 20 51-69	1		
6	531 20 49-61	3		
7	531 20 71-65	1		
8	544 91 34-01	2		
9	505 50 81-01	2		
10	502 30 50-01	2		
11	505 53 11-01	2		
12	505 55 77-01	2		
13	532 18 82-79	1		
14	532 18 70-97	1		
15	502 43 53-01	5		
16	522 93 74-01	1		
17	504 13 83-01	1		
18	504 13 89-01	2		
19	502 43 52-01	4		
20	732 25 18-71	2		
21	504 63 81-01	2		
22	505 52 46-01	2		
23	504 07 08-01	1		
25	502 28 93-01	1		

GPL®

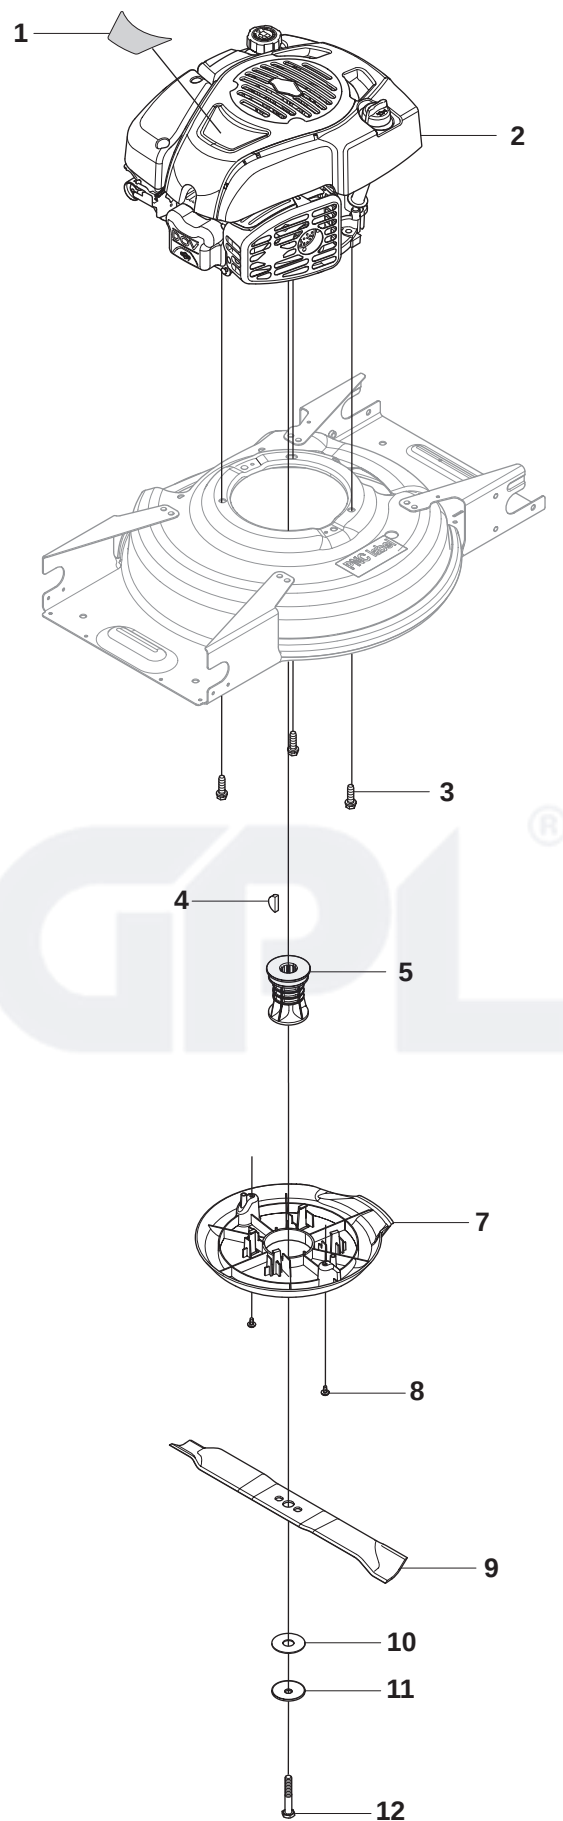

Page C LB48 ENGINE				
Position	Article	Quantity	Notes	Kit
1	521 88 88-04	1		
2	124T02-0204-B1	1	Briggs & Stratton	
3	531 21 28-51	3		
4	531 20 49-07	1		
5	531 20 78-48	1		
7	501 96 81-01	1		
8	505 52 46-01	2		
9	502 88 13-02	1		
10	531 20 72-43	1		
11	531 20 72-37	1		
12	531 20 66-49	1		
13	510 43 66-01	1		

