

LC48 Be

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar


GPL®

A LC48Be Deck

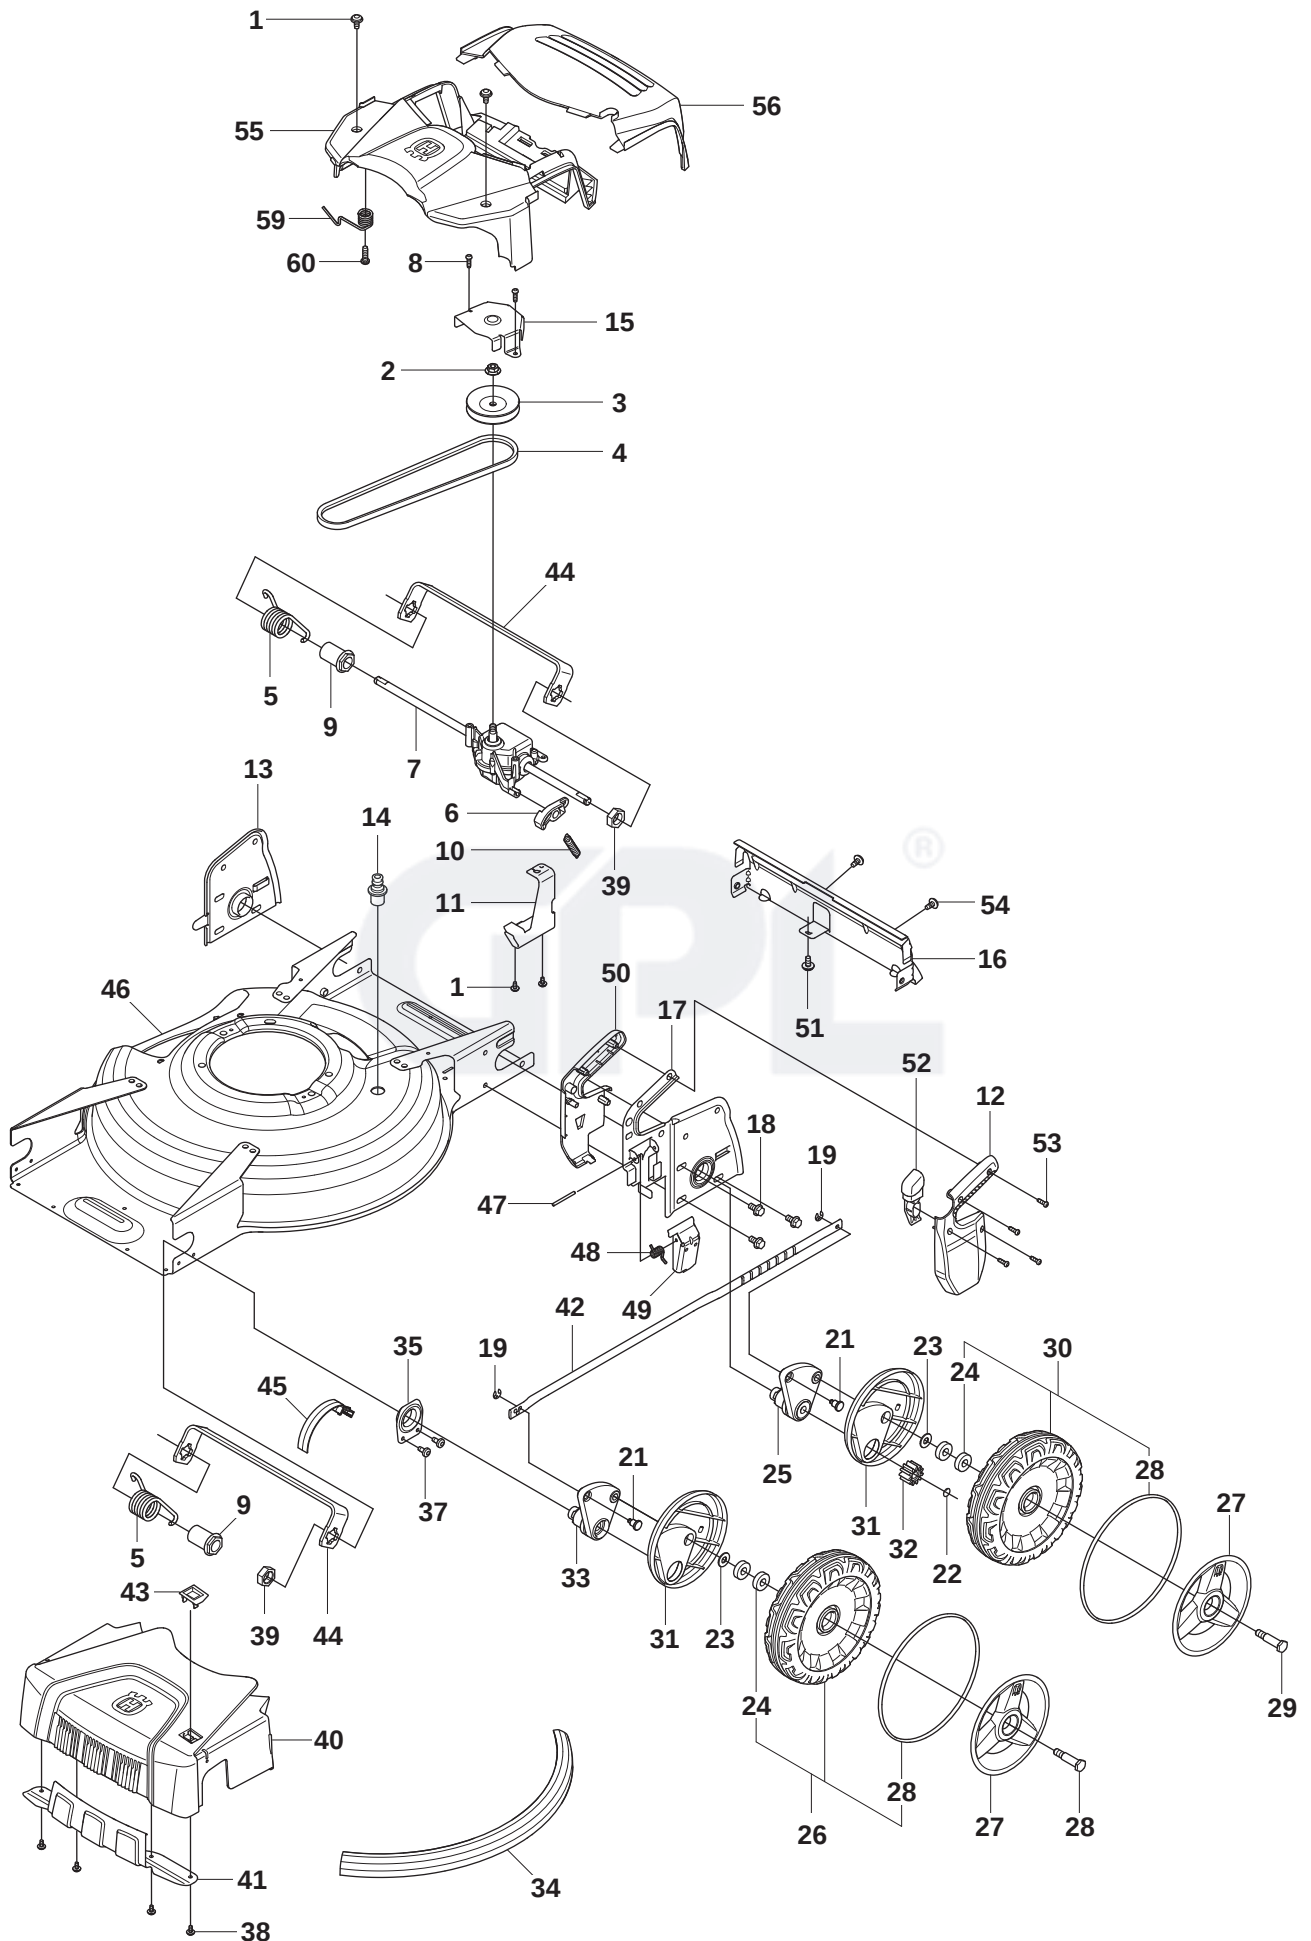


Page A LC48Be DECK				
Position	Article	Quantity	Notes	Kit
1	502 43 52-01	2		
2	504 05 56-01	1		
3	504 05 33-01	1		
4	501 98 66-01	1		
5	522 02 46-01	1		
6	504 04 83-01	1		
7	504 04 80-01	1		
8	502 43 53-01	2		
9	522 02 40-01	1		
10	504 04 87-01	1		
11	504 04 86-01	1		
12	505 14 40-01	1		
13	505 89 59-01	1		
14	531 20 58-48	1		
15	522 61 23-01	1		
16	504 64 15-01	1		
17	505 13 04-01	1		
18	506 55 83-02	6		
19	735 31 09-21	2		
21	504 62 50-01	2		
22	504 70 28-01	2		
23	505 22 14-01	4		
24	738 21 01-04	8		
25	504 70 98-01	2		
26	502 49 68-01	2		
27	544 44 39-01	4		
28	544 43 31-01	4		
29	574 25 94-01	4		
30	544 91 69-02	2		
31	504 62 41-01	4		
32	544 34 23-01	2		
33	504 70 98-02	2		
34	506 60 63-01	1		
35	504 62 49-01	2		
37	502 43 52-01	4		
38	502 43 52-01	4		
39	505 52 10-01	1		
40	505 03 19-01	1		
41	502 62 54-01	1		
42	510 02 95-01	1		
43	505 10 93-01	1		
44	574 40 60-01	2		
45	504 62 76-02	1		
46	501 37 55-01	1		
47	505 13 05-01	1		
48	505 13 09-01	1		
49	505 12 43-01	1		
50	505 14 40-01	1		
51	502 43 52-01	1		
52	505 14 05-01	1		
53	502 43 53-01	4		
54	502 43 52-01	2		
55	505 10 94-01	1		
56	505 20 21-01	1		
57	502 43 52-01	2		
59	574 36 05-01	1		
60	502 43 53-01	1		

B LC48Be
Handle BBC

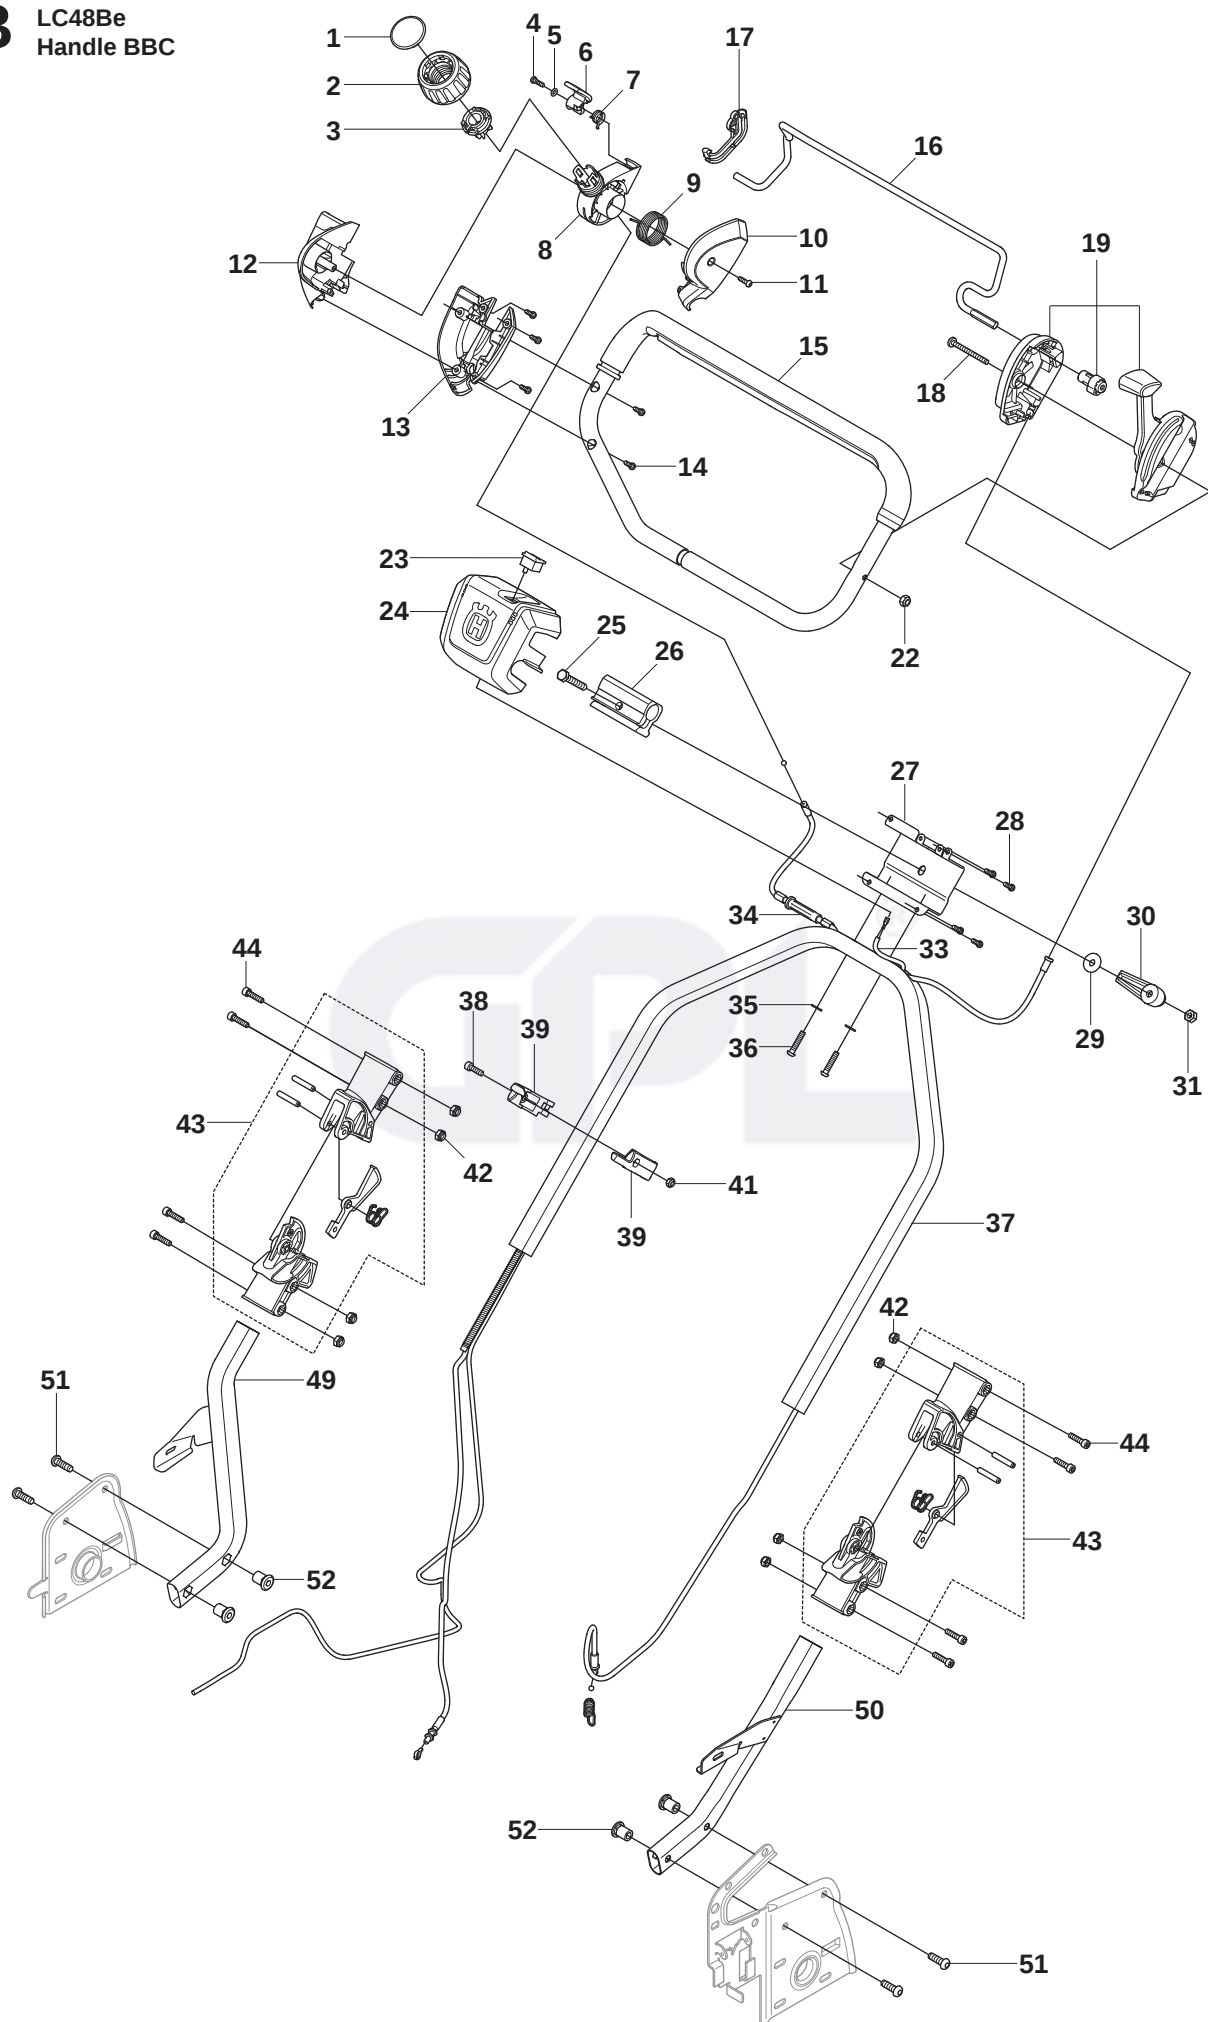

Page B LC48Be HANDLE				
Position	Article	Quantity	Notes	Kit
1	505 27 60-01	1		
2	505 27 58-01	1		
3	505 27 61-01	1		
4	574 39 14-01	1		
5	734 11 46-01	1		
6	522 98 54-01	1		
7	523 04 52-01	1		
8	505 27 62-01	1		
9	574 25 83-01	1		
10	505 27 52-01	1		
11	574 39 14-01	1		
12	505 27 53-01	1		
13	505 27 55-01	1		
14	574 39 14-01	5		
15	506 60 64-02	1		
16	510 23 75-01	1		
17	522 98 53-01	1		
18	502 43 51-01	1		
19	521 89 28-01	1		
22	522 66 93-02	1		
23	522 71 00-01	1		
24	505 06 80-02	1		
25	574 88 64-01	1		
26	574 56 67-01	1		
27	505 07 06-01	1		
28	574 39 14-01	4		
29	734 11 65-41	1		
30	574 85 27-01	1		
31	503 22 10-11	1		
33	523 93 24-01	1		
34	521 89 33-01	1		
35	505 19 84-01	2		
36	525 44 88-01	2		
37	505 89 60-01	1		
38	725 53 70-01	1		
39	510 28 23-01	2		
41	522 66 93-02	1		
42	522 66 93-02	8		
43	574 23 07-01	2		
44	725 53 72-01	8		
49	510 40 88-02	1		
50	510 40 89-01	1		
51	505 52 46-03	4		
52	525 51 48-01	4		


C LC48Be
Engine

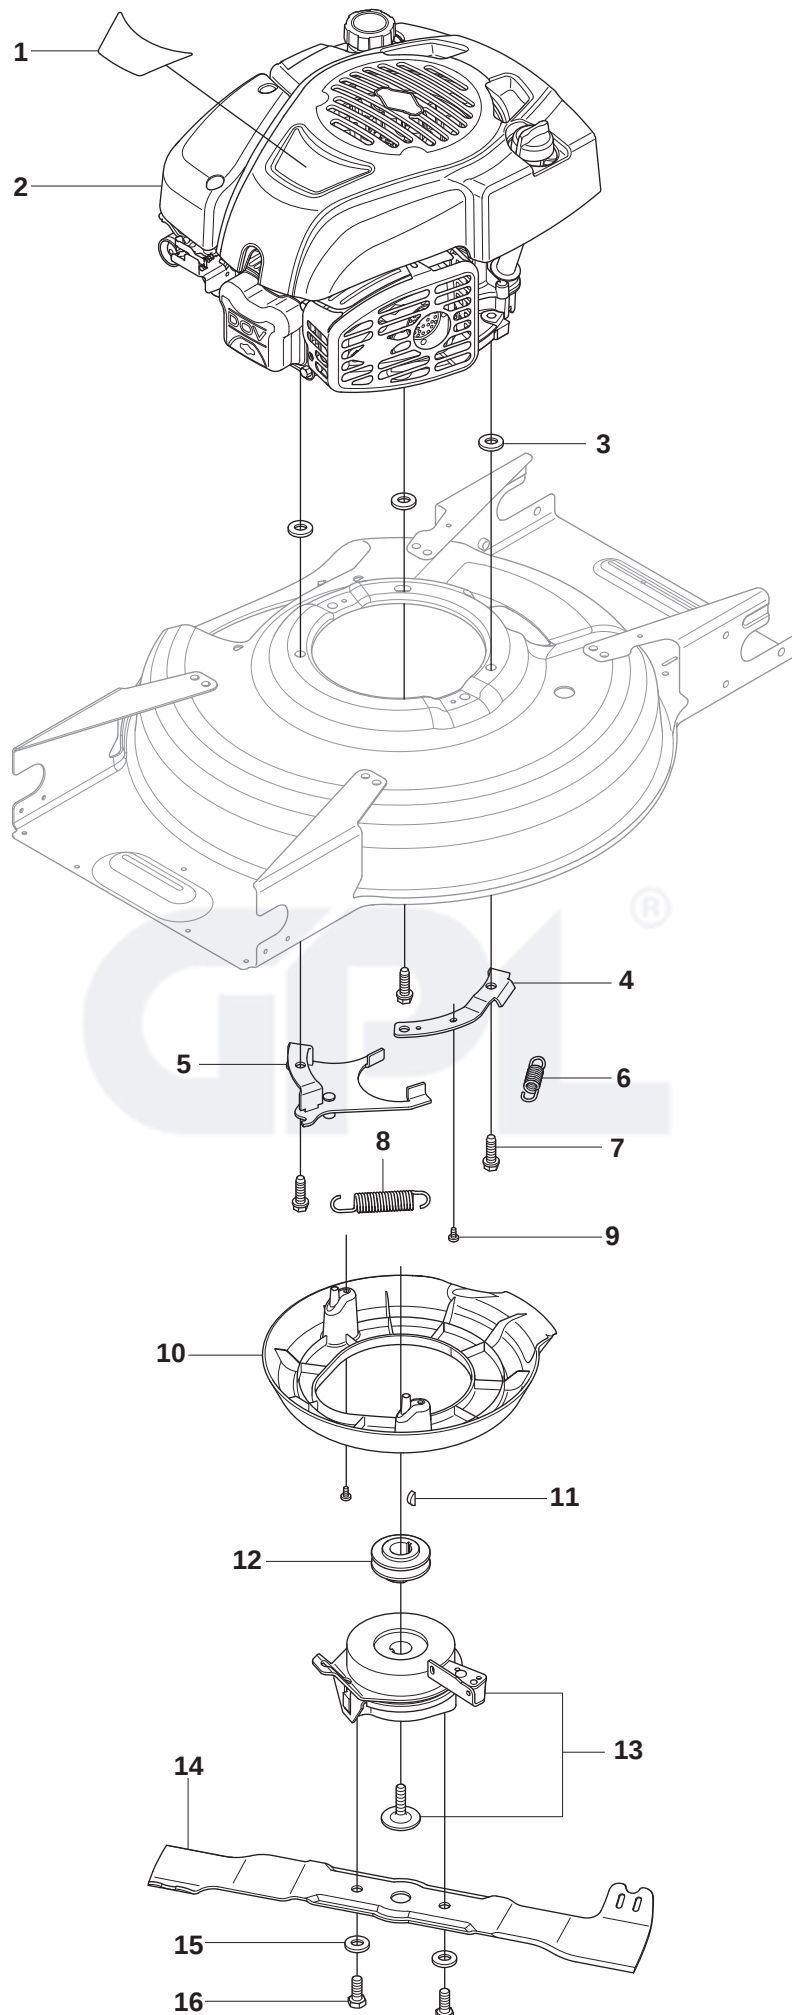

Page C LC48Be ENGINE				
Position	Article	Quantity	Notes	Kit
1	516 04 36-05	1		
2	510 43 59-01	1		
3	575 86 63-01	3		
4	505 12 64-01	1		
5	522 77 49-01	1		
6	521 89 29-01	1		
7	531 21 28-51	3		
8	505 12 67-01	1		
9	502 43 52-01	1		
10	505 31 62-01	1		
11	531 20 49-07	1		
12	525 46 43-01	1		
13	521 89 31-01	1		
14	505 52 41-02	1		
15	575 74 65-01	2		
16	725 24 93-71	2		



D LC48Be
Collect parts

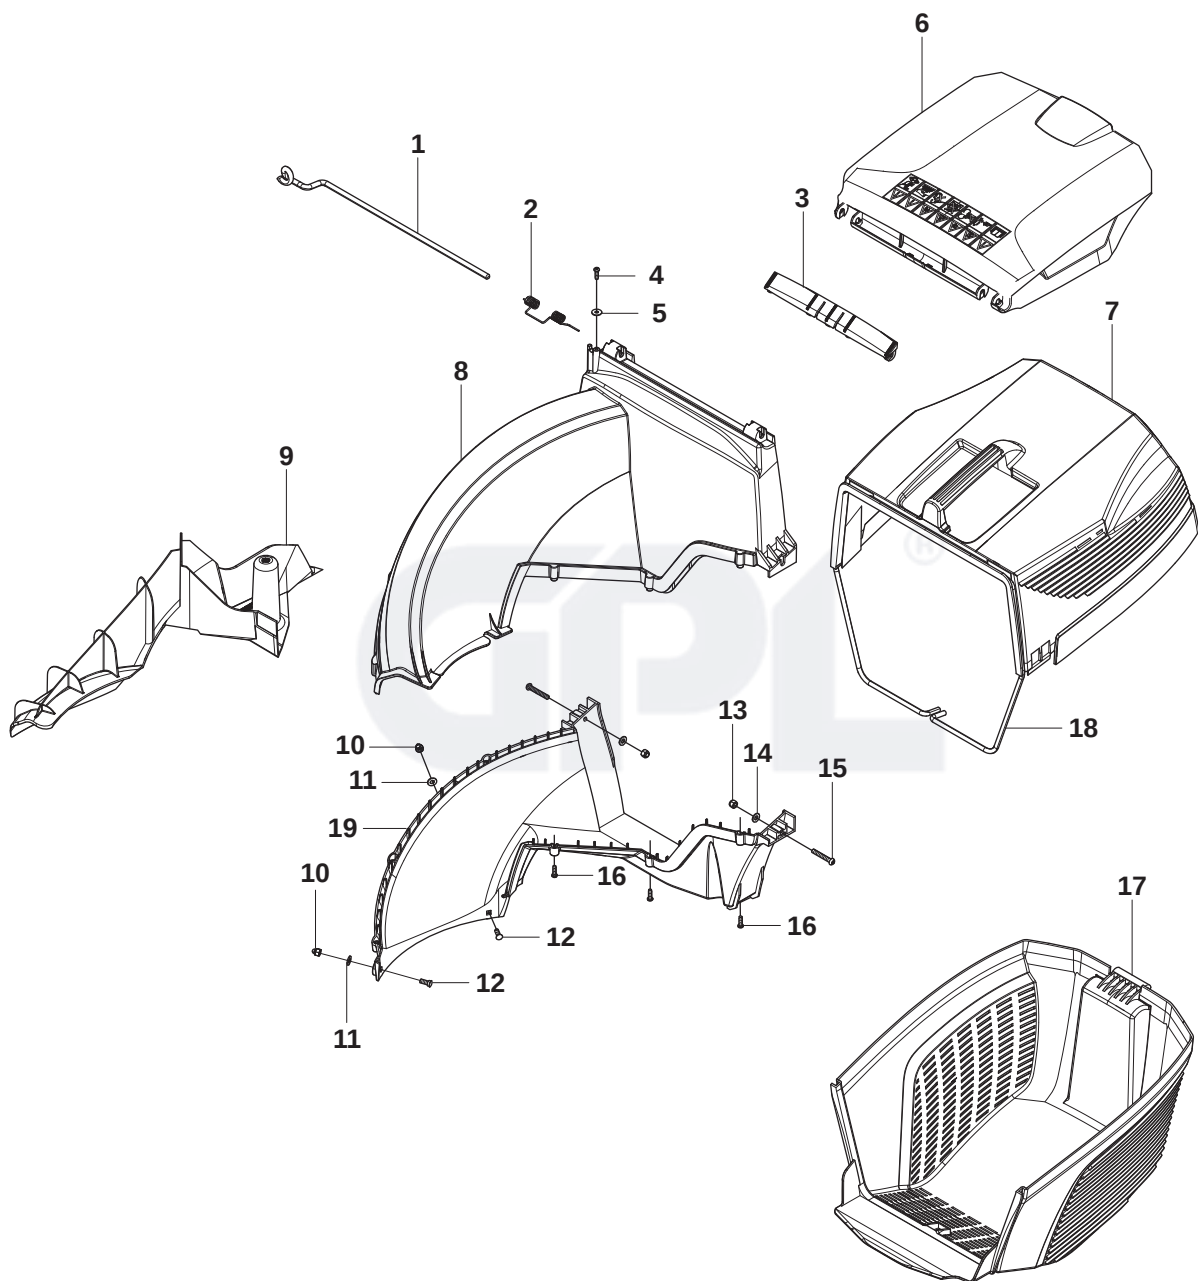

Page D LC48Be COLLECT PARTS				
Position	Article	Quantity	Notes	Kit
1	502 24 59-01	1		
2	502 24 47-01	1		
3	504 59 81-01	1		
4	502 43 53-01	1		
5	575 88 55-01	1		
6	501 96 77-01	1		
7	501 98 77-01	1		
8	501 96 75-01	1		
9	504 13 71-01	1		
10	502 30 50-01	2		
11	505 19 84-01	2		
12	505 15 61-01	2		
13	522 66 93-02	2		
14	505 19 84-01	2		
15	505 55 77-01	2		
16	502 43 53-01	6		
17	501 98 76-01	1		
18	502 44 71-01	1		
19	501 96 73-01	1		

