



LM2150 SM

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

GPL®

This exploded view diagram illustrates the components of a trimmer head assembly. The central element is the trimmer head housing (39), which features a central opening for the cutting line. Surrounding this central part are various components, each labeled with a number from 1 to 61. The diagram shows the following parts:

- Engine and Drive Components:** The engine (30) is at the top, connected to the drive shaft (27) and the drive gear (28). The drive gear (28) meshes with the trimmer head gear (24).
- Trimming Line Components:** The trimmer head housing (39) is connected to the trimmer head bracket (42) and the trimmer head cover (43). The trimmer head cover (43) is secured with screws (41) and washers (40).
- Wheels and Axles:** The assembly includes two wheels (36) mounted on axles (35). The axles are connected to the trimmer head housing (39) via the axle bracket (31) and the axle nut (34).
- Frame and Control Components:** The main frame (1) is shown with various mounting points (8, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 25, 26, 29, 32, 33, 38, 55, 58, 59, 60, 61) and control components (2, 3, 4, 5, 6, 7, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 25, 26, 29, 32, 33, 38, 55, 58, 59, 60, 61).

The diagram uses dashed lines to indicate the assembly path and the relative positions of the components. The numbers 1 through 61 correspond to the parts list provided in the accompanying text.

ROTARY LAWN MOWER - - MODEL NUMBER LM 2150SM (96111002402) PRODUCT NUMBER 961 11 00-24

KEY NO.	PART NO.	DESCRIPTION
1	532 41 86-10	Control Bar
2	532 19 47-88	Rope Guide
3	532 12 50-78	Engine Washer
4	532 19 60-26	Upper Handle
5	532 15 50-44	Lower Handle
6	532 13 20-04	Nut, Hex
7	532 19 15-74	Handle Bolt 5/16-18 x 1-3/4
8	532 12 52-03	Up-Stop Bracket
9	532 08 58-25	Screw
10	532 85 18-09	Engine Zone Control Cable
11	532 75 06-34	Nut, Hex
12	532 06 64-26	Wire Tie
13	532 05 17-93	Hairpin Cotter
14	532 19 19-38	Wing Nut, Steel
15	532 41 35-68	Discharge Guard
16	532 85 02-63	Helical Lockwasher 3/8
17	532 06 91-80	Nut, Hex
18	532 85 10-74	Hardened Washer
19	873 80 04-00	Nut, Hex
20	532 14 51-06	Blade, 20"
21	532 16 22-34	Bracket, Hold-Down
22	874 76 04-12	Screw
23	532 15 41-47	Footguard
24	532 41 05-94	Wheel Adjusting Bracket
25	532 85 09-77	Blade Adapter
26	532 17 09-75	Handle Bracket Assembly, RH
27	532 17 09-77	Handle Bracket Assembly, LH
28	532 06 15-37	Washer
29	532 40 16-29	Spacer

KEY NO.	PART NO.	DESCRIPTION
30	- - -	Engine, Briggs & Stratton, Model Number 9T502-1322-B1 (order parts from engine manufacturer)
31	532 40 64-28	Selector Spring
32	532 08 78-77	Selector Knob
33	532 40 78-71	Axle Arm Assembly
34	532 40 16-30	Washer, Curved, Cylindrical
35	532 40 16-38	Shoulder Bolt
36	532 19 70-25	Wheel & Tire Assembly
37	532 40 91-48	Nut, Hex
38	532 15 04-06	Hex Head Thread Rolling Screw 3/8-16 x 1-1/8
39	532 42 82-24	Kit, Lawn Mower Housing
40	532 85 10-84	Hex Head Screw 3/8-24 x 1-3/8 Grade 8
41	532 14 97-41	Thread Cutting Screw 5/16-18 x 3/4
42	532 18 21-66	Danger Decal
43	873 93 05-00	Locknut, Hex 5/16-18
45	532 08 38-16	Screw
46	532 11 11-90	Clamp, Cable
47	532 42 25-73	Control Throttle
48	532 18 33-65	Screw 1/4-20 x 2.12
55	532 14 15-19	Front Baffle
58	532 05 38-47	Nut, Hex
59	532 42 82-30	Plate, Closeout
60	532 06 91-80	Nut, Hex, with Lockwasher Insert
61	874 96 10-08	Screw, Machine #10-24 x 1/2
- -	532 14 15-20	Rear Baffle (not shown)
- -	532 41 77-92	Operator's Manual, European
- -	532 41 77-91	Operator's Manual, Scandinavian
- -	532 41 77-94	Operator's Manual, East Bloc
- -	532 41 77-93	Operator's Manual, Baltic

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.