

R53SVW

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

GPL®


This exploded view diagram illustrates the assembly of a Honda generator. The central component is the generator housing (44), which features a circular opening for the engine. The engine (24) is shown at the top, connected to the housing via a vertical shaft. The housing is secured with various bolts (13, 14, 33, 38) and washers (10, 11, 12). The housing also includes a handle (43) and a foot (47). The handle is attached to the housing with a bracket (46) and a bolt (41). The foot is attached to the housing with a bracket (40) and a bolt (48). The housing is also equipped with a fuel tank (64) and a fuel line (61). The fuel tank is secured with a cap (59) and a bolt (62). The fuel line is connected to the tank with a hose (63) and a clamp (60). The housing is also equipped with a control panel (17) and a control switch (16). The control panel is secured with a bracket (15) and a bolt (13). The control switch is connected to the panel with a switch (14) and a bolt (13). The housing is also equipped with a wheel (27) and a tire (26). The wheel is attached to the housing with a bracket (28) and a bolt (25). The tire is secured with a cap (35) and a bolt (26). The housing is also equipped with a handle (43) and a foot (47). The handle is attached to the housing with a bracket (46) and a bolt (41). The foot is attached to the housing with a bracket (40) and a bolt (48). The housing is also equipped with a fuel tank (64) and a fuel line (61). The fuel tank is secured with a cap (59) and a bolt (62). The fuel line is connected to the tank with a hose (63) and a clamp (60). The housing is also equipped with a control panel (17) and a control switch (16). The control panel is secured with a bracket (15) and a bolt (13). The control switch is connected to the panel with a switch (14) and a bolt (13). The housing is also equipped with a wheel (27) and a tire (26). The wheel is attached to the housing with a bracket (28) and a bolt (25). The tire is secured with a cap (35) and a bolt (26).

ROTARY LAWN MOWER - - CUSTOMER MODEL NUMBER **R53SVW** (95417024302) PRODUCT NO. 954 17 02-43

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 19 58-70	Upper Handle (Includes Foam Grip)	34	532 18 25-42	Axle Arm Assembly, LH
2	532 15 36-05	Lower Handle	35	532 19 18-53	Hubcap
3	532 19 06-20	Control Bar	36	532 18 41-93	Bolt
4	532 18 35-67	Engine Zone Control Cable	37	532 15 00-78	Thread Cutting Screw w/Sems 5/16-18 x 3/4
5	532 19 15-74	Handle Bolt	38	819 11 22-06	Washer
6	532 19 18-56	Handle Knob	40	532 19 09-39	Mounting Bracket, Debris Shield
7	532 05 17-93	Hairpin Cotter	41	532 19 23-25	Screw
8	532 06 64-26	Wire Tie	43	532 19 36-68	Debris Shield
9	532 18 04-79	Kit, Rear Door (Includes Key #16 and 17)	44	532 19 55-45	Kit, Lawn Mower Housing (Includes Key Numbers 10, 11, 12 and 45)
10	532 12 84-15	Pop Rivet	45	532 18 21-66	Danger Decal
11	532 18 25-38	Support Bracket, LH	46	532 19 40-37	Blade Adapter / Pulley
12	532 18 25-39	Support Bracket, RH	47	532 16 58-33	Blade, 21"
13	817 06 04-10	Screw 1/4-20 x 5/8	48	532 85 10-74	Hardened Washer
14	532 19 60-36	Handle Bracket Assembly, LH	49	532 85 02-63	Helical Washer 3/8-24 x 1-3/8 Grade 8
15	532 19 60-37	Handle Bracket Assembly, RH	50	532 85 10-84	Hex Head Machine Screw 3/8-24 x 1-3/8 Grade 8
16	532 18 00-71	Spring, LH	57	532 12 51-62	Upstop Bracket
17	532 18 00-72	Spring, RH	58	532 75 06-34	Screw
18	532 13 20-04	Keps Locknut 1/4-20	59	532 18 55-82	Discharge Deflector
19	532 17 95-85	Rope Guide	60	532 17 57-35	Hinge Bracket
20	532 17 92-05	Foot Guard, C.E.	61	532 17 52-85	Spring
21	532 05 45-83	Screw, Tapping 1/4-20 x 1/2	62	532 17 56-50	Hinge Rod
24	- - -	Engine, Honda, Model Number GCV160 (order parts from engine manufacturer)	63	873 80 04-00	Nut, Hex
25	532 15 04-06	Hex Head Thread Rolling Screw 3/8-16 x 1-1/8	64	532 18 55-76	Mulcher Door
26	532 08 39-23	Hex Flange Nut	65	532 18 81-52	O-Ring
27	532 18 55-72	Wheel & Tire Assembly, Rear, 14"	66	532 08 83-48	Washer, Flat 1/2
28	532 16 08-28	Shoulder Bolt 5/16-18 x .33	67	532 19 34-98	Kit, Bushing
29	532 12 50-78	Washer, Engine, Zinc-Plated	68	532 19 36-96	Bushing, Nylon, Black
30	532 18 25-41	Axle Arm Assembly, RH	69	532 18 27-48	Grip, Foam
31	532 19 19-38	Selector Knob	96	532 19 27-70	Clip, Cable
32	532 18 25-37	Selector Spring	--	532 19 78-11	Operator's Manual, European
33	873 80 05-00	Nut, Hex 5/16-18	--	532 19 78-12	Operator's Manual, Scandinavian

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.

ROTARY LAWN MOWER - - CUSTOMER MODEL NUMBER **R53SVW** (95417024302) PRODUCT NO. 954 17 02-43

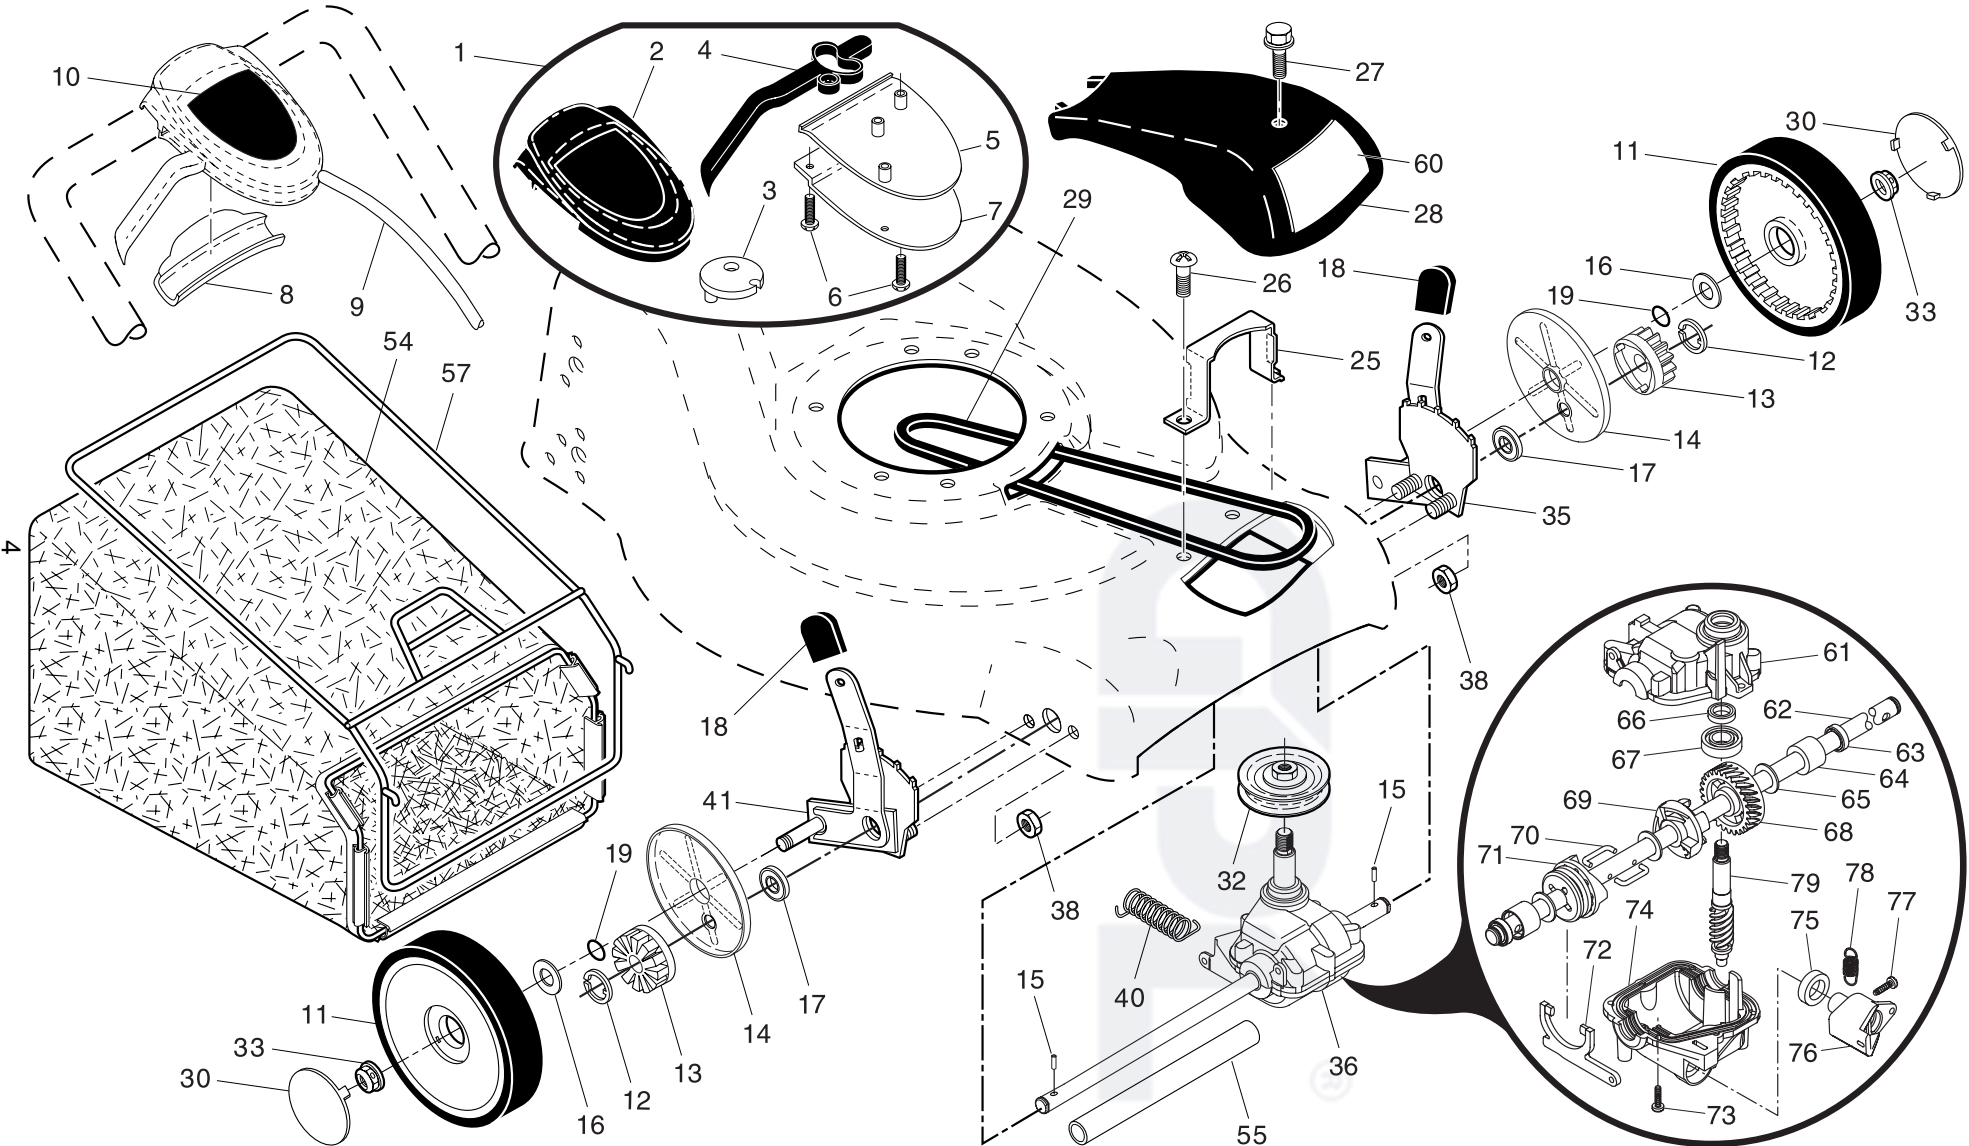

ROTARY LAWN MOWER - - CUSTOMER MODEL NUMBER R53SVW (95417024302) PRODUCT NO. 954 17 02-43

KEY NO.	PART NO.	DESCRIPTION
1	532 19 62-70	Drive Control Assembly (Includes Cable)
2	532 19 57-61	Cover, Drive Control, Upper
3	532 18 73-53	Pulley
4	532 19 00-39	Lever, Drive Control
5	532 19 57-62	Cover, Drive Control, Lower
6	532 18 16-98	Screw
7	532 18 70-97	Bracket, Drive
8	532 18 62-97	Cap, Drive
9	532 19 61-80	Cable Assembly, Drive
10	532 18 93-78	Decal, Drive
11	532 18 07-56	Wheel & Tire Assembly
12	812 00 00-58	E-Ring
13	532 75 00-03	Pinion
14	532 18 94-03	Dust Cover
15	532 19 10-17	Pawl, Drive
16	532 06 77-25	Washer 1/2 x 1-1/2 x .134
17	532 19 10-39	Bearing, Wheel Adjuster
18	532 70 10-37	Selector Knob
19	532 18 81-52	O-Ring
25	532 19 66-89	Belt Keeper
26	532 15 00-78	Screw
27	532 17 52-62	Pan Head Tapping Screw #10-24 x 2-3/4
28	532 18 55-79	Drive Cover
29	532 19 68-53	V-Belt
30	532 18 06-26	Hubcap
32	532 19 40-18	Drive Pulley
33	532 08 39-23	Locknut, Hex
35	532 19 51-10	Kit, Wheel Adjuster, LH (Includes Knob and Bearing)

KEY NO.	PART NO.	DESCRIPTION
36	532 18 82-96	Gearcase Assembly, Complete
38	873 80 04-00	Locknut, Hex 1/4-20
40	532 19 28-49	Spring
41	532 19 51-07	Kit, Wheel Adjuster, RH (Includes Knob and Bearing)
54	532 19 50-50	Grassbag Assembly
55	532 17 57-39	Driveshaft Cover
57	532 18 88-15	Frame, Grassbag
60	532 19 35-57	Decal, Drive Cover
61	532 19 68-86	Case, Upper
62	532 19 68-85	Shaft, Output
63	532 18 35-08	Seal, Output Shaft
64	532 18 35-11	Bushing
65	532 18 35-09	Washer
66	532 18 35-14	Seal, Worm Shaft
67	532 18 35-06	Bearing, Ball
68	532 18 34-99	Gear, 27 Teeth
69	532 19 68-84	Fixed Dog Clutch
70	532 18 35-05	Wireform
71	532 19 68-83	Movable Dog Clutch
72	532 19 68-82	Fork
73	532 18 35-13	Screw, Case
74	532 19 68-81	Case, Lower
75	532 19 68-80	Seal, Lever
76	532 19 68-79	Lever
77	532 19 68-78	Screw, Lever
78	532 19 68-77	Spring
79	532 18 35-02	Shaft, Worm

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.