

LT130

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos


Reservdelar

GPL®

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31

SCHEMATIC

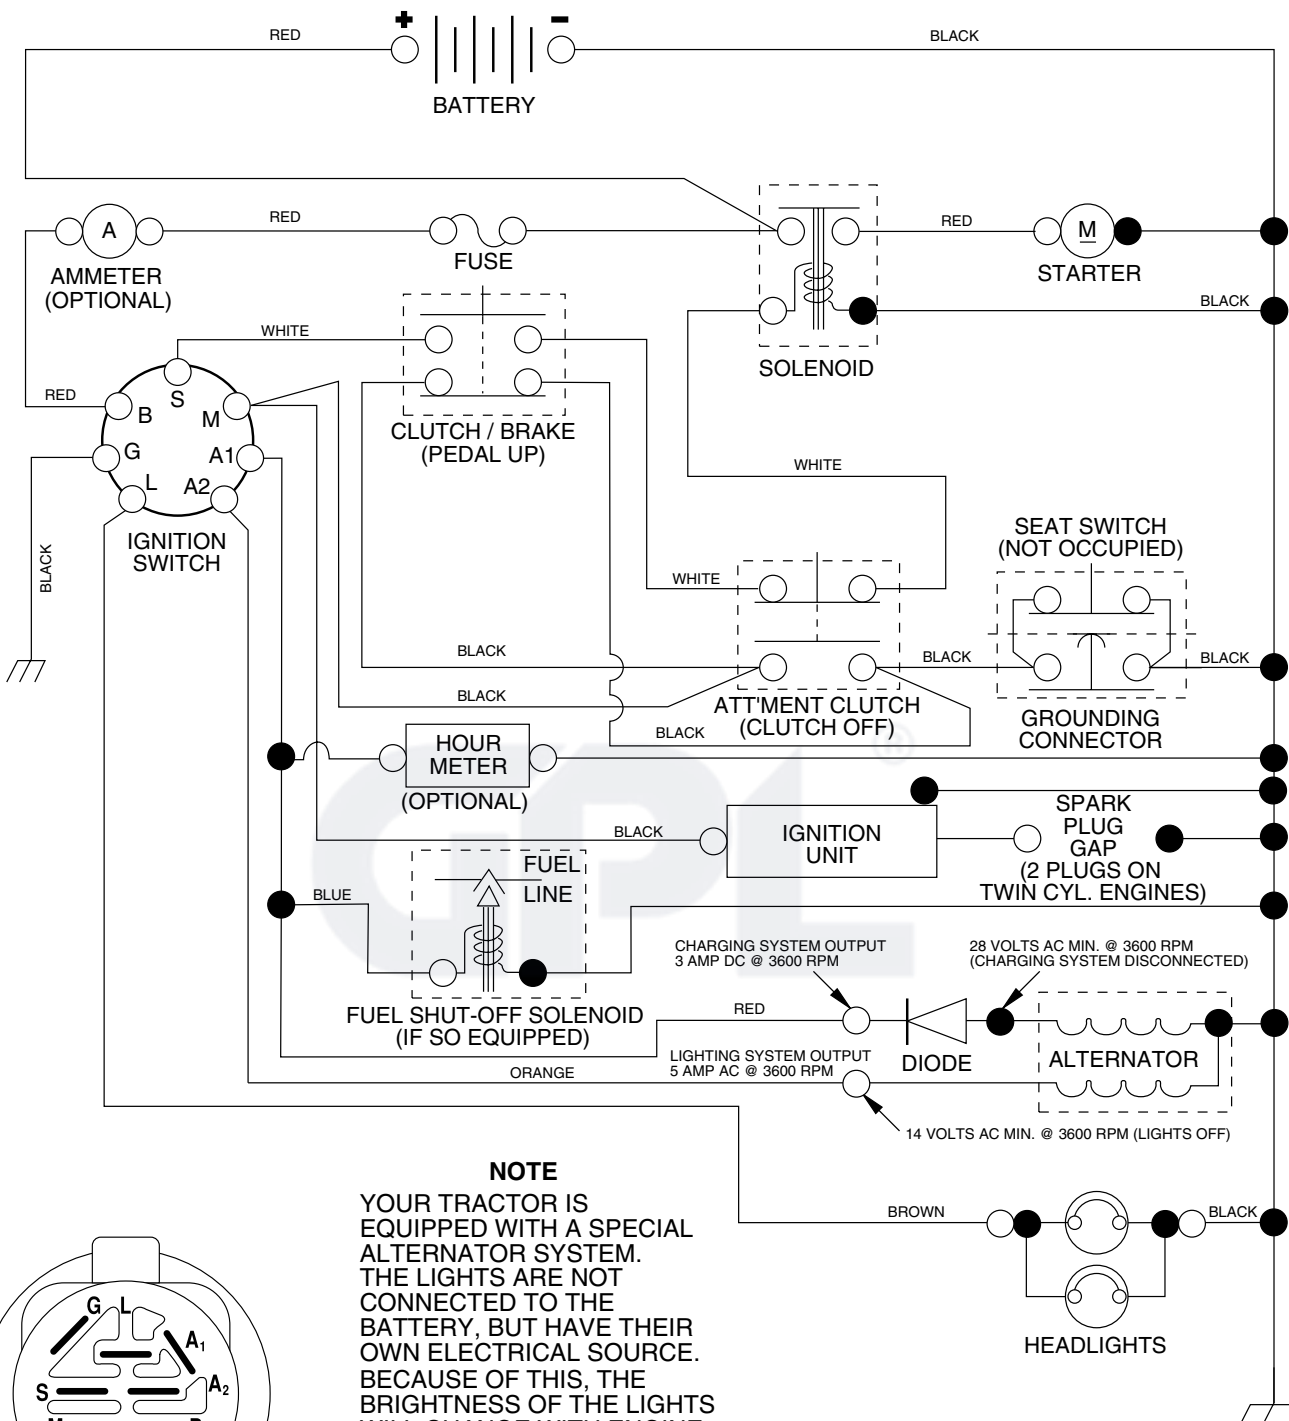

NOTE

YOUR TRACTOR IS
EQUIPPED WITH A SPECIAL
ALTERNATOR SYSTEM.
THE LIGHTS ARE NOT
CONNECTED TO THE
BATTERY, BUT HAVE THEIR
OWN ELECTRICAL SOURCE.
BECAUSE OF THIS, THE
BRIGHTNESS OF THE LIGHTS
WILL CHANGE WITH ENGINE
SPEED. AT IDLE THE LIGHTS
WILL DIM. AS THE ENGINE IS
SPEEDED UP, THE LIGHTS
WILL BECOME THEIR BRIGHTEST.

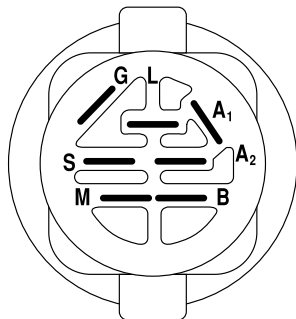

IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	NONE
RUN/LIGHT	B+A1	A2+L
RUN	B+A1	NONE
START	B + S + A1	NONE

WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31

ELECTRICAL

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31

ELECTRICAL

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31

ELECTRICAL

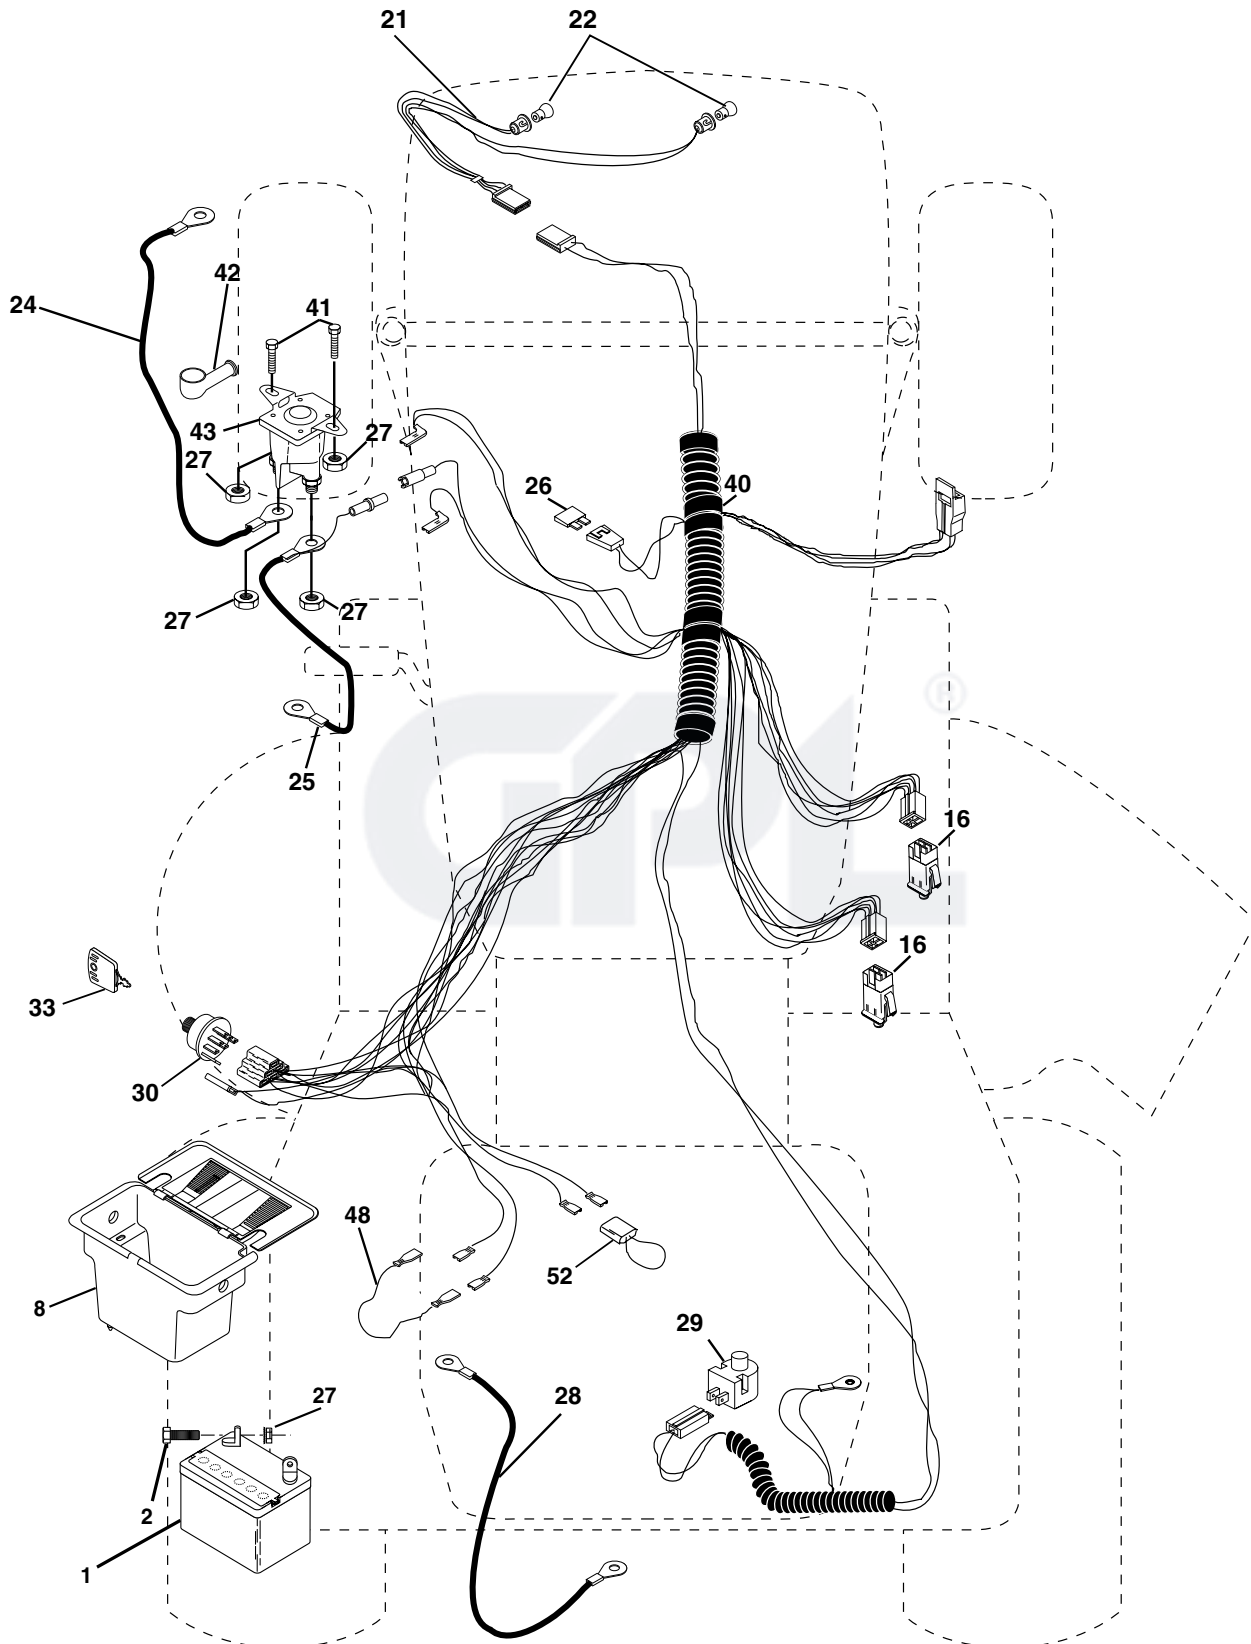

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532144925	Battery 12 Volt 25 AMP
2	874760412	Bolt Hex Hd 1/4-20unc X 3/4
8	532156417	Case Battery Mech Hinge
16	532153664	Switch Interlock Push-In
21	532166181	Harness Asm Light W/4152j
22	532004152	Bulb Light #1156
24	532124780	Cable Battery 6 Ga 11" red
25	532146147	Cable Battery 6 Ga 44" red w/16 wire
26	532166180	Fuse 30 AMP Auto Green
27	873510400	Nut Keps Hex 1/4-20 Unc
28	532124773	Cable Ground 6 Ga 12" black
29	532121305	Switch Plunger Nc Gray
30	532163968	Switch Ign
33	532140401	Key Ign Molded Generic
40	532170217	Harness Ign.
41	871110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532131563	Cover Terminal Red
43	532145673	Solenoid
48	532140844	Adapter Ammeter Rectangular
52	532141940	Protection Wire Loop

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
CHASSIS AND ENCLOSURES

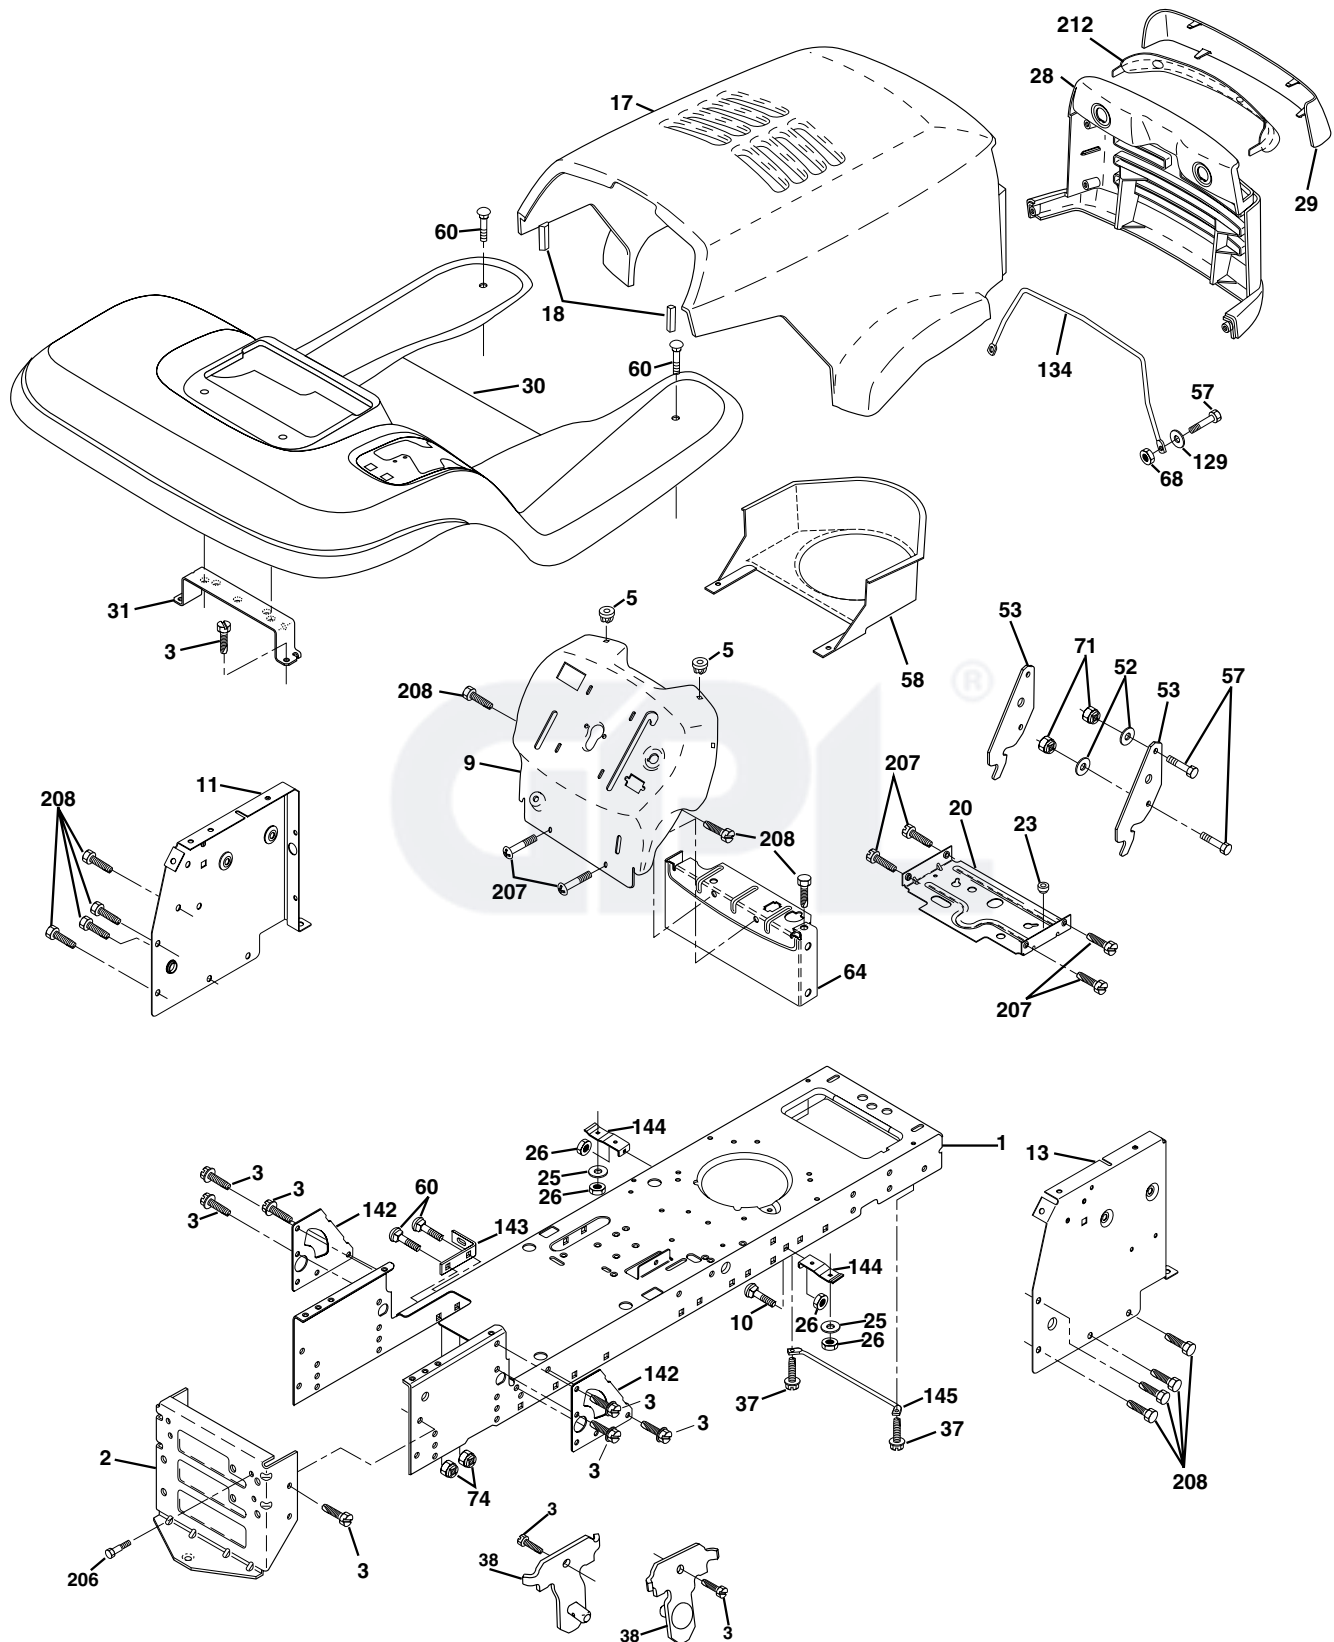

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31 CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1	532169830	Chassis Stamping
2	532169061	Drawbar
3	817060612	Screw 3/8-16x3/4
5	532155272	Bumper Hood/Dash
9	532171853	Dash P/L
10	872140608	Bolt Carriage 3/8-16 x 1
11	532155927	Panel Dash Lh
13	532173025	Panel Dash Rh
17	532165378	Hood LT/PL Husqvarna
18	532126938	Bumper Hood
20	532156437	Plate Mtg Battery Fuel Tank Fr
23	532124028	Bushing
25	819131312	Washer 13/32 X 13/16 X 12 Ga
26	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
28	532165379	Grille LT/PL Husqvarna
29	532165380	Lens LT/PL Husqvarna
30	532171854	Fender Footrest STLT Pnt
31	532139976	Bracket Support Fender
37	817490508	Screw Thdrol 6/16-18 x 1/2 TYT
38	532169834	Bracket, Asm. Pivot, Mower Rear
52	819091416	Washer 9/32 x 7/8 x 16 Ga.
53	532150067	Bracket Pnt. Pick off LT/PL Husqvarna
57	874780412	Bolt Hex 1/4-20 x 3/4
58	532150127	Air Duct Engine P/L
60	872140606	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532154798	Dash Lower STLT
68	873510400	Nut keps Hex 1/4-20 unc
71	873680400	Nut Crownlock 1/4-20unc
74	873680600	Nut Crownlock 3/8-16 UNC
129	819091016	Washer 9/32 x 5/8 x 16 Ga.
134	532160219	Rod Support Hood LT/PL Husq.
142	532165867	Plate Reinforcement STLT
143	532154966	Bracket Swaybar Chassis
144	532154207	Bracket Pnt Footrest STLT
145	532156524	Rod Pivot Chassis/Hood
206	532170165	Bolt Shoulder 5/16-18 TT
207	817670508	Screw Thdrol 5/16-18 x 1/2
208	817670608	Screw Thdrol 3/8-16 x 1/2
212	532156195	Insert Lens Reflective
--	532005479	Plug Button

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

**TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
DRIVE**

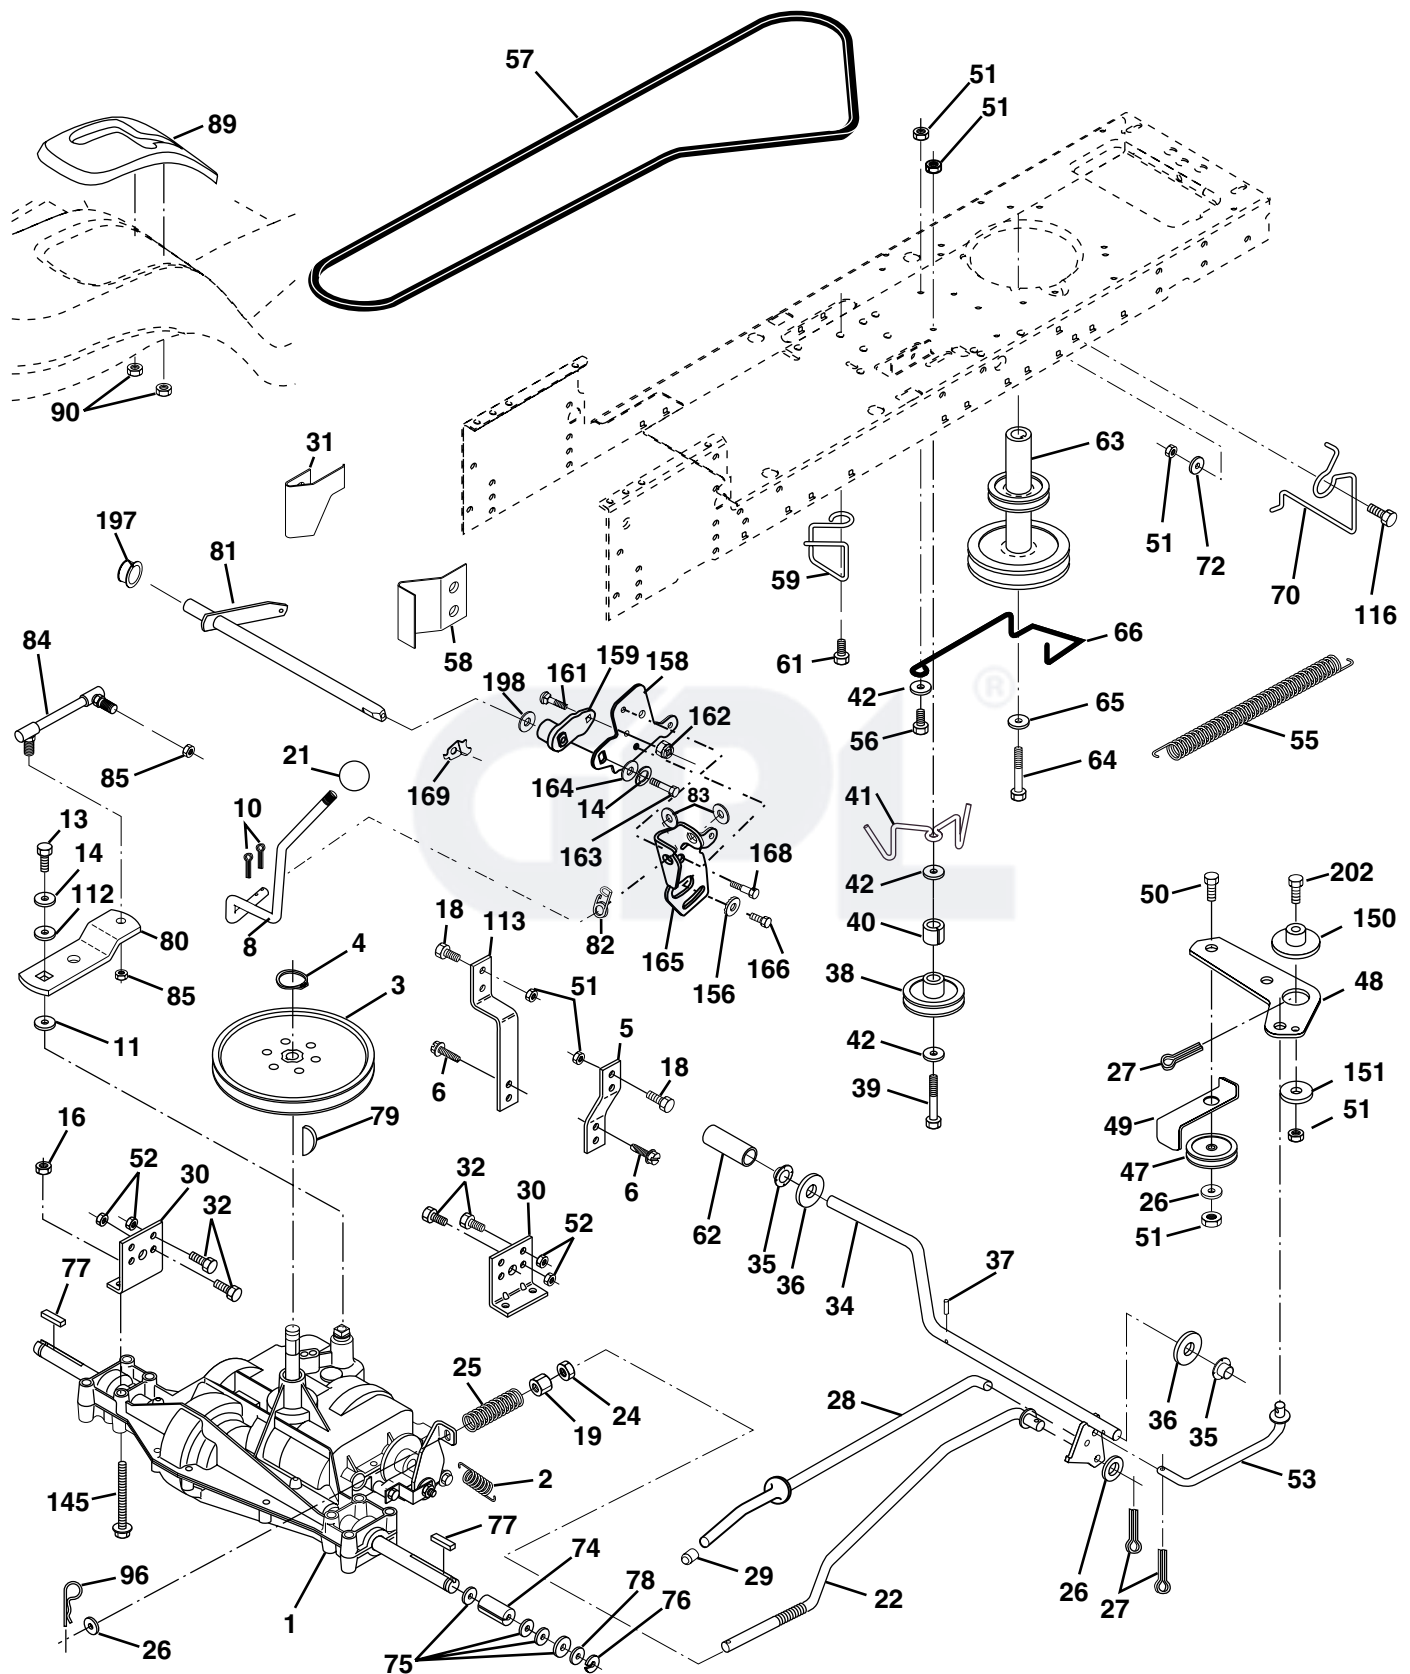

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
DRIVE

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 - - - - -	Transaxle (Order Parts From Engine Manufacturer) Peerless 206-545C	59 532169691	Keeper Belt Span Ctr
2 532146682	Spring Return Brake T/a Zinc	61 817060612	Screw 3/8-16x3/4
3 532123666	Pulley Transaxle 18" tires	62 532124872	Cover Pedal
4 812000028	Ring Retainer # 5100-62	63 532140186	Engine Pulley LT/YT
5 532121520	Strap Torque 30 Degrees	64 871170764	Bolt Hex
6 817060512	Screw 5/16-18 x 3/4	65 810040700	Washer Lock Hvy Hlcl Spr 7/16
8 532165866	Rod Shift Fender Adjust STLT	66 532154778	Keeper Belt Engine Foolproof
10 876020416	Pin Cotter 1/8 X 1 Cad	70 532134683	Guide Belt Mower Drive RH
11 532105701	Washer Plate Shf 388 Sq Hole	72 819132012	Washer 13/32 X 1-1/4 X 12 Ga
13 874550412	Bolt 1/4-28 Unf Gr 8 W/Patch	74 532137057	Spacer Axle
14 810040400	Washer Lock Hvy Helical 1/4	75 532121749	Washer 25/32 X 1 1/4 X 16 Ga
16 873800500	Nut Lock Hx W/Ins 5/16-18 Unc Pl	76 812000001	E-ring #5133-75
18 874780616	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5	77 532123583	Key Square 2 0 X 1845/ 1865
19 873800600	Nut Lock 3/8-16 Unc	78 532121748	Washer 25/32 X 1-5/8 X 16 Ga
21 532121274	Knob	79 532125096	Key Woodruff #9 3/16 x 3/4
22 532130804	Rod Brake Blk Zinc 26 840	80 532131486	Arm Shift
24 873350600	Nut Hex Jam 3/8-16 Unc	81 532165594	Shaft Asm Cross Tapered
25 532106888	Spring Rod Brake 2 00 Zinc	82 532165711	Spring Torsion T/a
26 819131316	Washer 13/32 X 13/16 X 16 Ga	83 819171216	Washer 17/32 X 3/4 X 16 Ga
27 876020412	Pin Cotter 1/8 X 3/4 Cad	84 532166228	Transaxle Link
28 532145204	Rod Brake Parking LT/YT	85 532150360	Nut Lock Center 1/4 - 28 FNTHD
29 532071673	Cap Brake Parking Black	89 532166561	Console Shift STLT
30 532130807	Bracket Mtg Transaxle	90 532124346	Nut Self-thd Wsh-hd 1/4 Zinc
31 532127275	Keeper Belt Lh	96 532124788	Retainer Spring 1"
32 874760512	Bolt Hex Hd 5/16-18unc X 3/4	112 819091210	Washer 9/32 x 3/4 x 10 Ga.
34 532155071	Shaft Asm Pedal Foot	113 532127285	Strap Torque LT
35 532120183	Bearing Nylon Blk 629 Id	116 872110610	Bolt Rdhd Sq Neck 3/8-16 x 1.25
36 819211616	Washer 21/32 X 1 X 16 Ga	145 874490540	Bolt Hex Flg Hd 5/16-18 Gr 5
37 532124963	Pin Roll 3/16 X 1"	150 532165850	Bushing Bellcrank
38 532131494	Pulley Idler Flat	151 819133210	Washer 13/32 x 2 x 10 Ga.
39 874760644	Bolt Fin Hex 3/8-16unc X 2-3/4	156 532166002	Washer Srrtd 5/16ID x 1.125
40 532124965	Spacer Split 395 X 59 Bzp	158 532165589	Bracket Shift Mount
41 532165838	Keeper Belt Idler Flat	159 532165494	Hub Tapered Flange Shift Lt
42 819131312	Washer 13/32 X 13/16 X 12 Ga	161 872140406	Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5
47 532127783	Pulley Idler V Groove Plastic	162 873680400	Nut Crownlock 1/4-20 Unc
48 532154407	Bellcrank Clutch Grnd Drv Stl	163 874780416	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
49 532123205	Retainer Belt Style Spring	164 819091010	Washer 5/8 x .281 x 10 Ga
50 874760624	Bolt Hex Hd 3/8-16unc X 1-1/2	165 532165623	Bracket Pivot Lever
51 873680600	Nut Crownlock 3/8-16 Unc	166 532166880	Screw 5/16-18 x 5/8
52 873680500	Nut Crownlock 5/16-18 Unc	168 532165492	Bolt Shoulder 5/16-18 x .561
53 532105710	Link Clutch	169 532165580	Plate Fastening STLT/CRD
55 532105709	Spring Return Clutch 6 75	197 532169613	Nyliner Snap-In 5/8" ID
56 874760620	Bolt Fin Hx 3/8-16 X 1/4	198 532169593	Washer Nyl 7/8 Id x .105" Hyd
57 532130801	V-Belt Ground Drive 95 25	202 872110612	Bolt Carr Sh 3/8-16 x 1-1/2 Gr 5
58 532127274	Keeper Belt Rh		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
STEERING ASSEMBLY

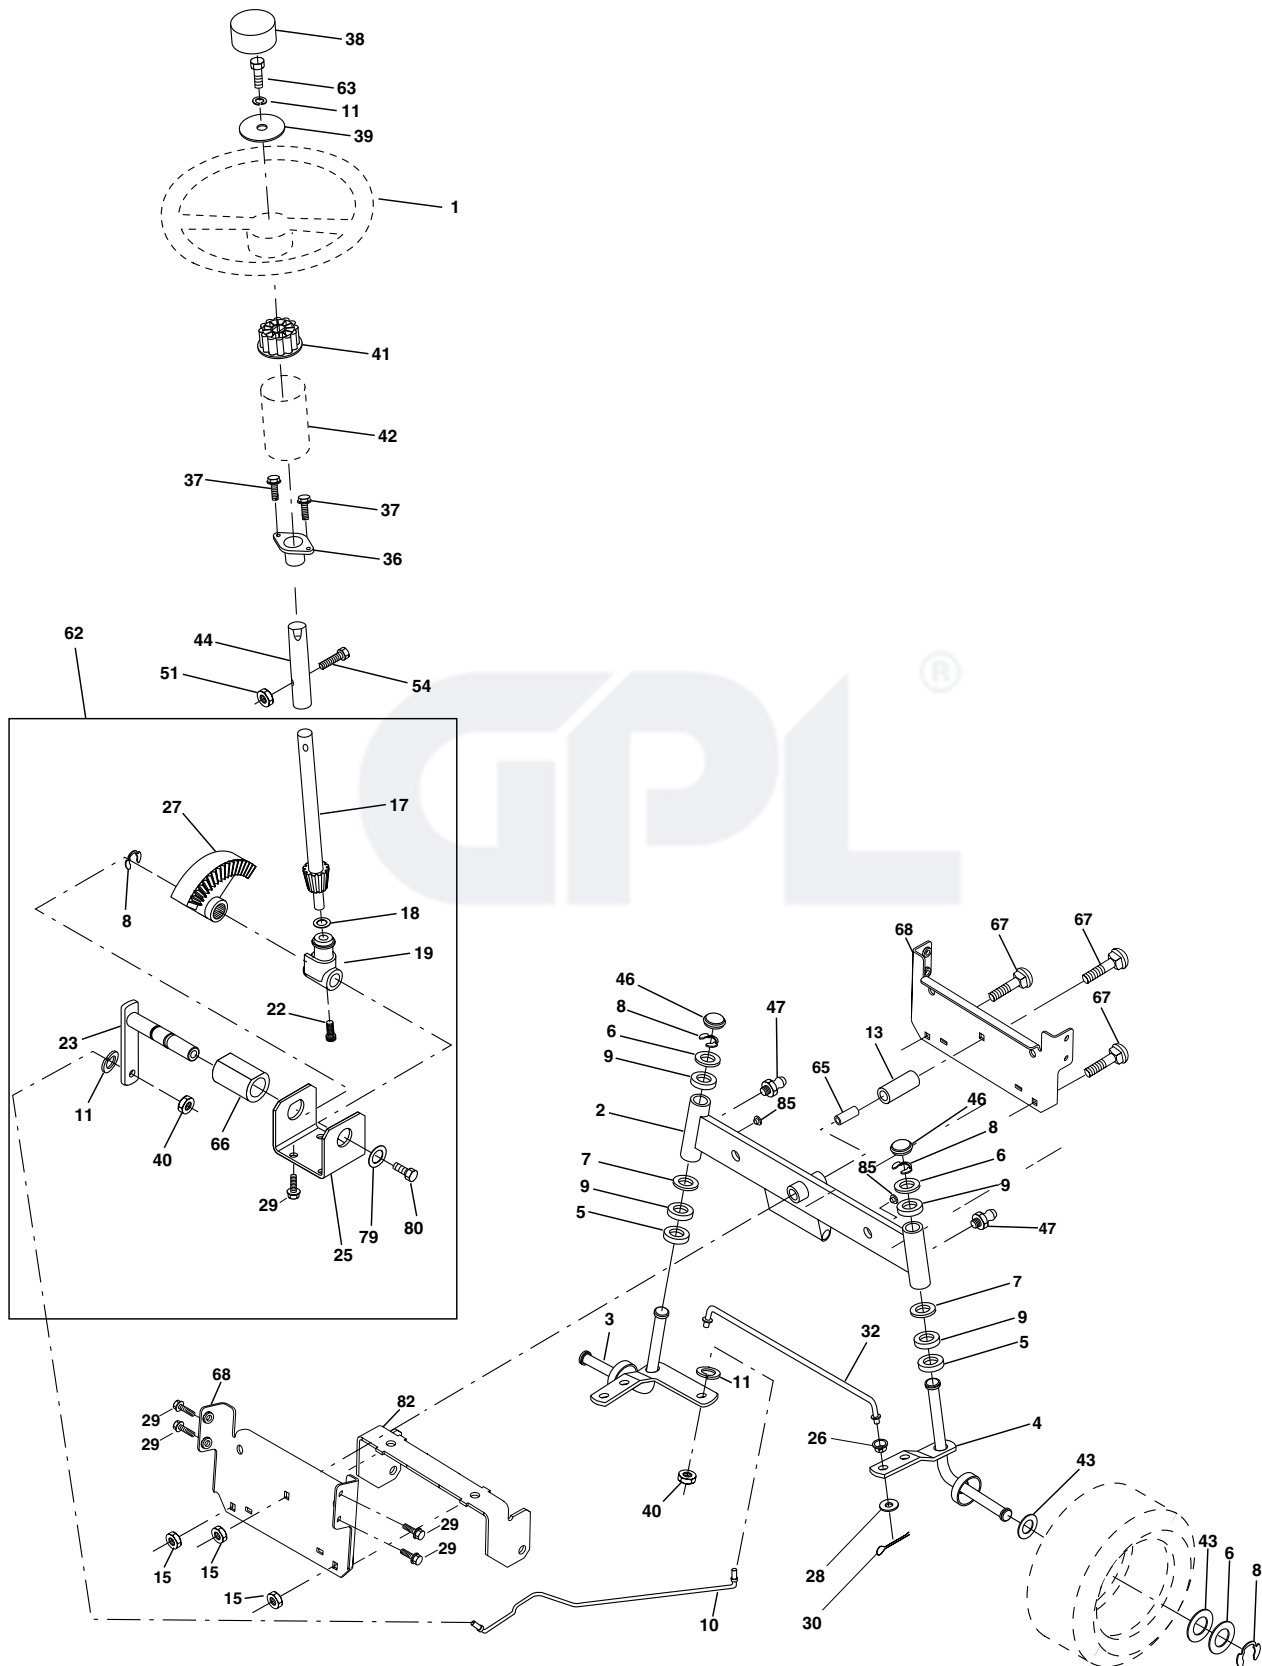

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31 STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532124415	Wheel Steering
2	532154427	Axle Asm
3	532169840	Spindle Asm LH
4	532169839	Spindle Asm RH
5	532124931	Bearing Race Thrust Harden
6	532121748	Washer 25/32 X 1-5/8 X 16 Ga
7	819272016	Washer 27/32 x 1-1/4 x 16 Ga
8	812000029	Ring Klip #t5304-75
9	532124937	Bearing Col Strg Blk
10	532169832	Link Drag
11	810040600	Washer Lock Hvy Hlcl Spr 3/8
13	532136518	Spacer Brg Axle Front
15	532145212	Nut Hex Flange Lock
17	532156546	Shaft Asm Strg
18	532057079	Washer Thrust 515x 750x 033
19	532160395	Support Shaft
22	532165857	Screw Hex
23	532165851	Shaft Asm Pittman
25	532154406	Bracket Steering
26	532126847	Bushing Link Drag
27	532136874	Gear Sector
28	819131416	Washer 13/32 x 7/8 x 16 Ga
29	817060612	Screw 3/8-16x3/4
30	876020412	Pin Cotter 1/8 x 3/4
32	532130465	Rod Tie
36	532155099	Bushing Strg
37	532152927	Screw
38	532124416	Insert Cap Strg Wh
39	819133812	Washer 13/32 X 2-3/8 x 12 Ga
40	532124701	Lock nut
41	532100711	Adaptor Wheel Strg
42	532169634	Boot Steering Shaft
43	532121749	Washer 25/32 X 1 1/4 X 16 Ga
44	532153720	Extension Steering Shaft LR/LT
46	532121232	Cap Spindle Fr Top Blk
47	532124836	Fitting Grease
51	873800500	Nut Lock Hex w/Ins 5/16-18
54	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532167902	Kit, Steering Assembly Svc
63	874780616	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532160367	Spacer Brace Axle
66	532154404	Bearing Arm Pittman
67	872140618	Bolt, Rdhd Sq 3/8-16 x 2-1/4
68	532169827	Axle, Brace
79	819132012	Washer 13/32 x 1-1/4 x 12 Ga
80	874950612	Bolt Hex Nylon 3/8-16 x 3/4
82	532169635	Bracket Susp Chassis Front
85	532133835	Fastener Christmas Tree

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
ENGINE

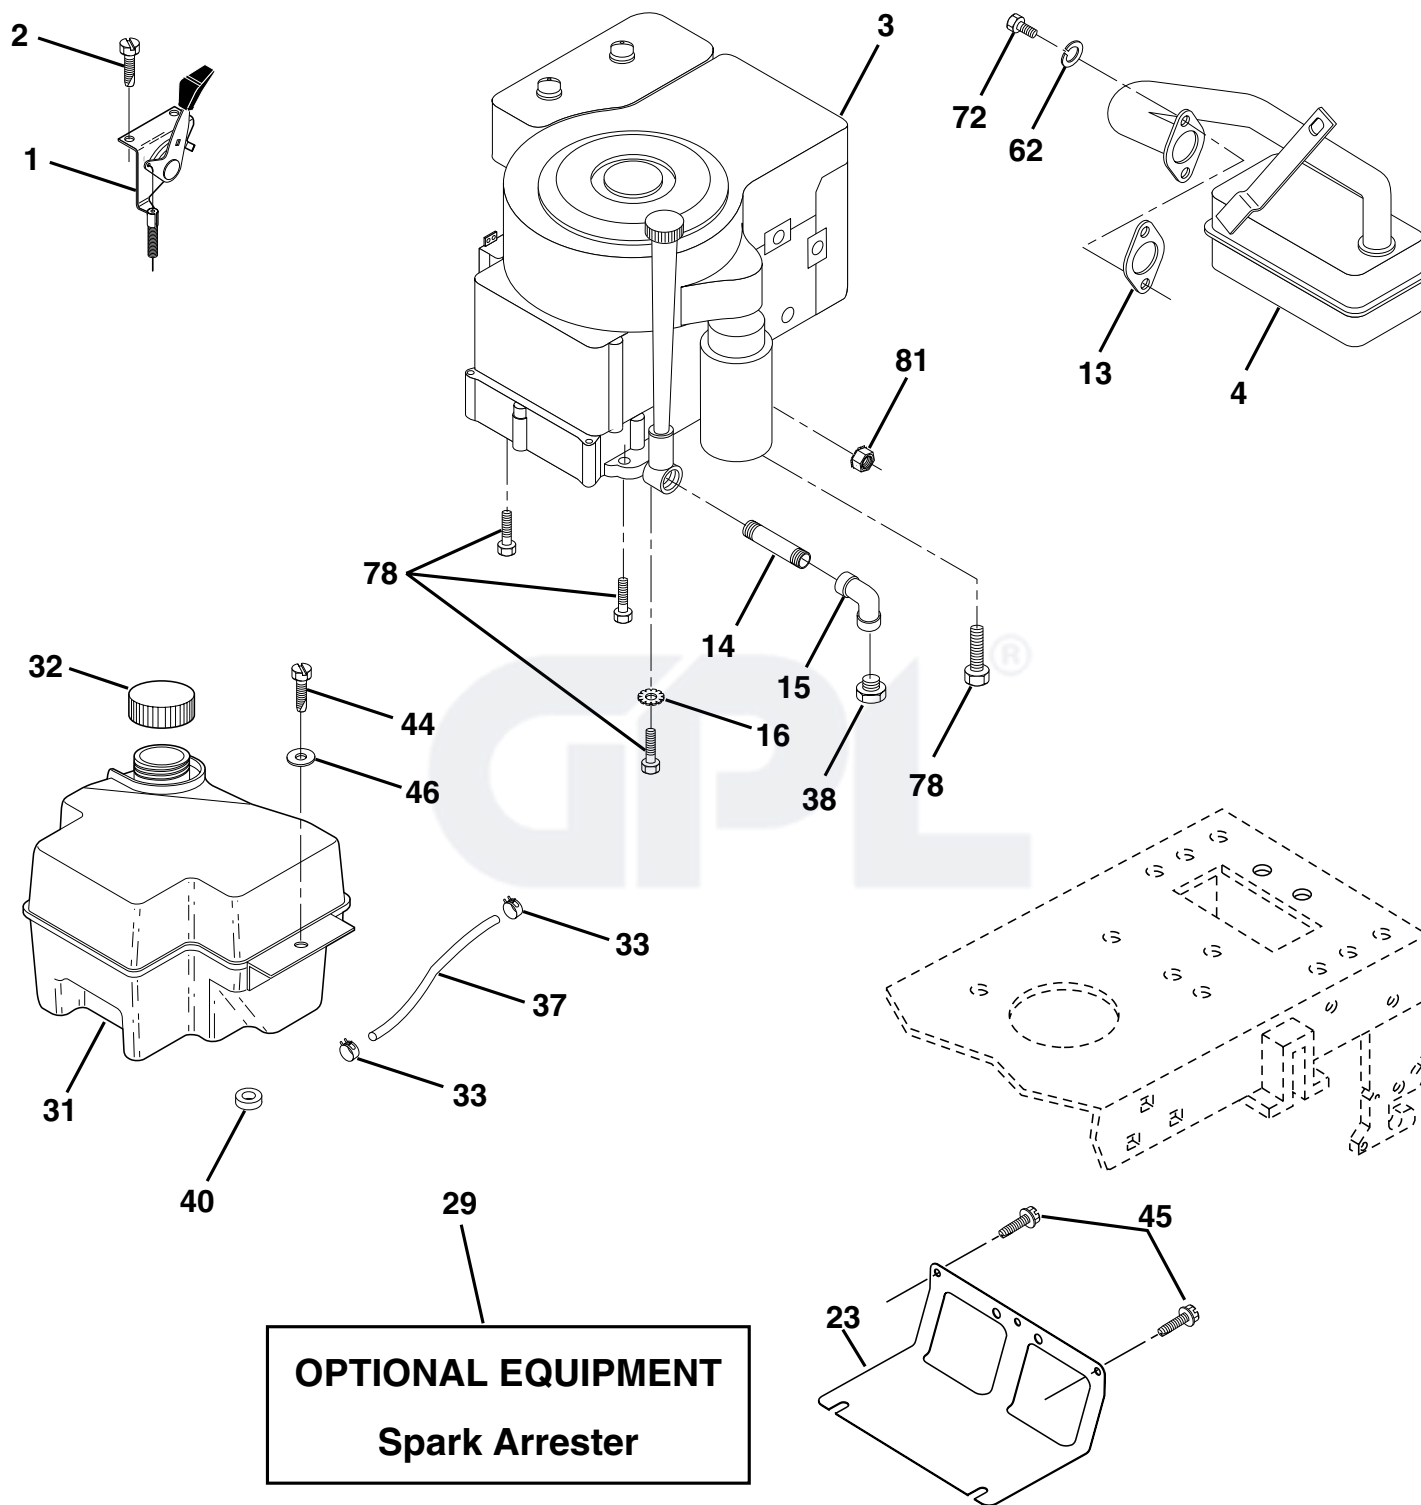

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	532140310	Control Th/ch 23.5 LH Flag
2	817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine B&S Model No. 28R707 (Order Parts From Engine Manufacturer)
4	532137348	Muffler LT B&S
13	532165291	Gasket Eng 1 313 Id Tin Plated
14	813280324	Nipple Pipe 3/8 Npt X 3"
15	813200300	Elbow Std 90 Degree 3/8-18 Npt
16	811050600	Washer Lock Ext Tooth 3/8
23	532169837	Shield Brn/Dbr Guard
29	532137180	Kit Spark Arrestor (Flat Scrn)
31	532161911	Tank Fuel Front 2 00
32	532140527	Cap Asm Fuel W/sym Vented
33	532123487	Clamp Hose Black
37	532137040	Line Fuel 20"
38	-----	Plug Oil Drain (Order From Engine Manufacturer)
40	532124028	Bushing Snap Nyl Blk Fuel Line
44	817670412	Screw Hexwsh Thdrol 1/4-20x3/4
45	817000612	Screw Hexwsh Thdrol 3/8-16 x 3/4
46	819091416	Washer 9/32 X 7/8 X 16 Ga
62	810040500	Washer Lock Hvy Hlcl Spr 5/16
72	871070512	Screw Hexhd Cap 5/16-18 x 3/4
78	817060620	Screw 3/8-16x1-1/4
81	873510400	Nut Keps Hex 1/4-20 unc

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31 SEAT ASSEMBLY

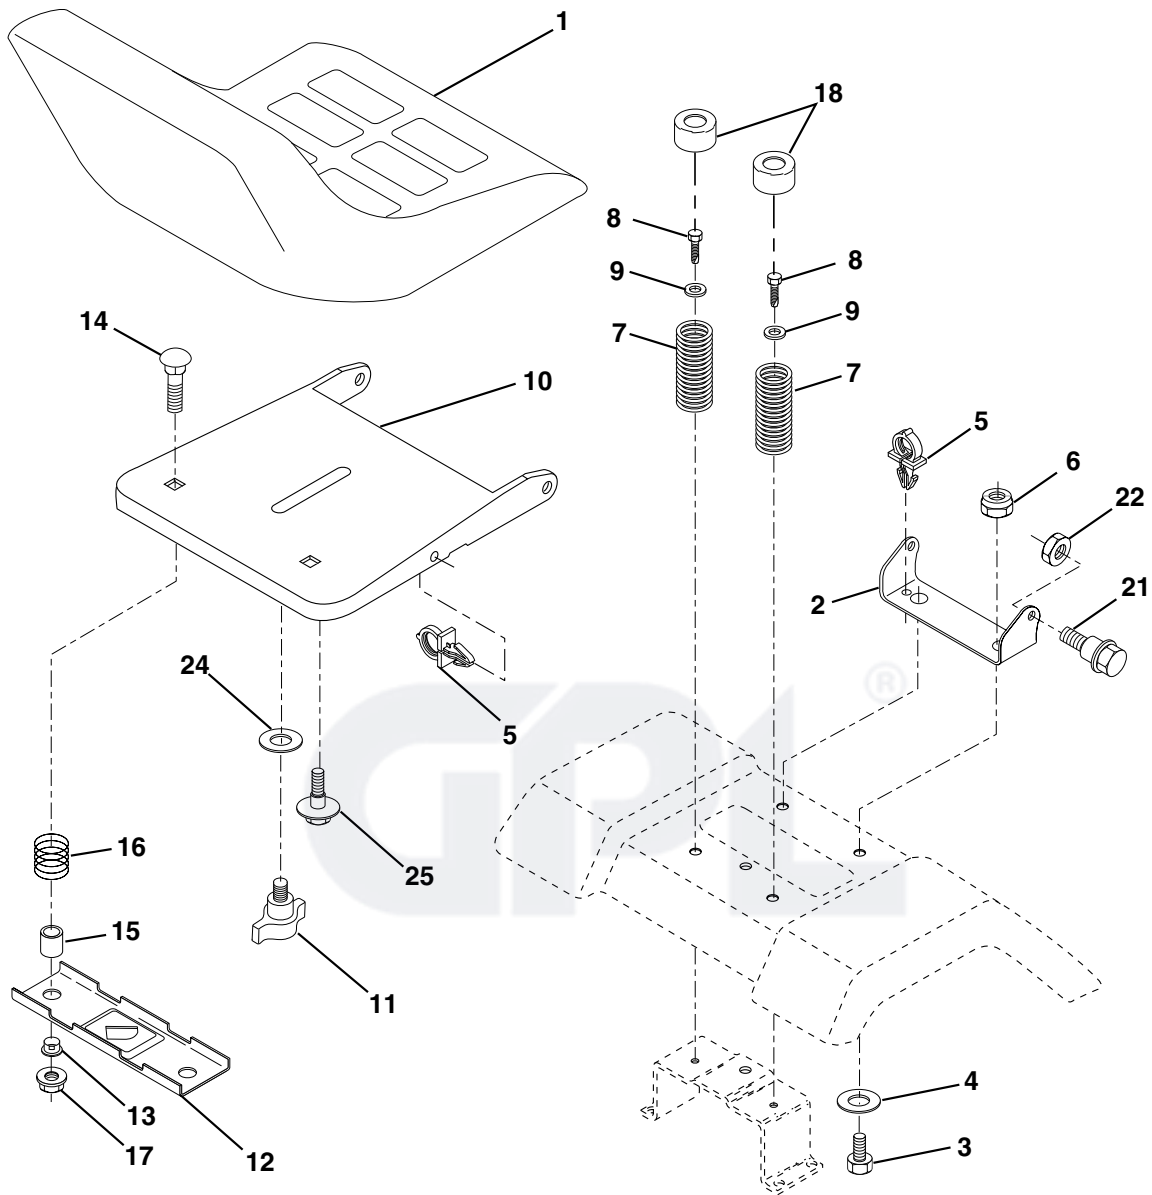


KEY NO.	PART NO.	DESCRIPTION
1	532140838	Seat
2	532140551	Bracket Pivot Seat 8 720
3	871110616	Bolt Fin Hex 3/8-16unc X 1
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532145006	Clip Push-In
6	873800600	Nut Hex w/Ins. 3/8-16 Unc
7	532124181	Spring Seat Cprsn 2 250 Blk Zi
8	817000616	Screw 3/8-16 X 1-1/2
9	819131614	Washer 13/32 X 1 X 14 Ga.
10	532155925	Pan Seat
11	532166369	Knob Seat
12	532121246	Bracket Mounting Switch

KEY NO.	PART NO.	DESCRIPTION
13	532121248	Bushing Snap Blk Nyl 50 Id
14	872050412	Bolt Rdhd Sqnk 1/4-20x1-1/2
15	532134300	Spacer Split 28x 96 Yel Zinc
16	532121250	Spring Cprsn 1 27 Blk Pnt
17	532123976	Nut Lock 1/4 Lge Flg Gr 5 Zinc
18	532124238	Cap Spring Seat
21	532171852	Bolt Shoulder 5/16-18 Unc
22	873800500	Nut Hex Lock W/Ins 5/16-18
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga.
25	532127018	Bolt Shoulder 5/16-18 X 62

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
DECALS

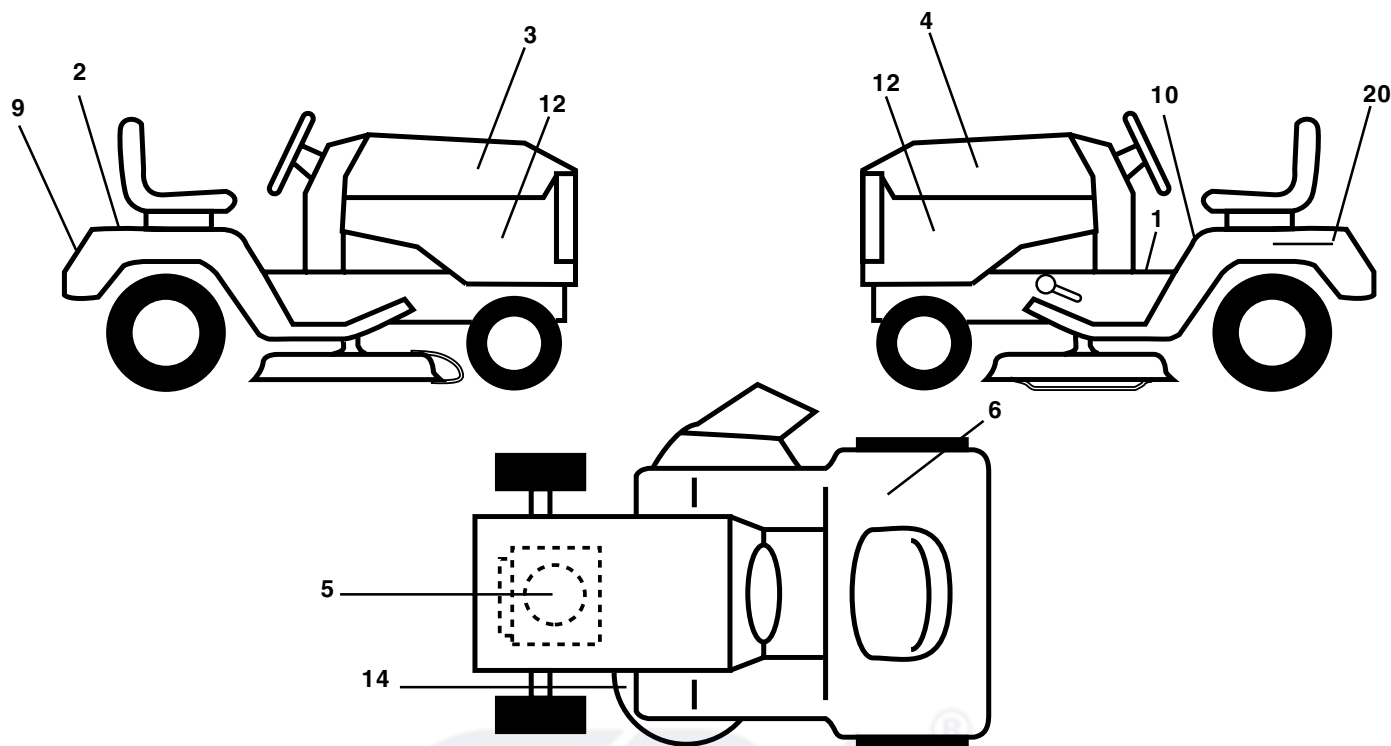

KEY NO.	PART NO.	DESCRIPTION
1	532156368	Decal Fender Stlt Oper Inst
2	532168869	Decal Tick Mark
3	532150723	Decal Hood RH
4	532150724	Decal Hood LH
5	532170848	Decal HP Engine
6	532124433	Decal 80 DBA
9	532150617	Decal Fender Logo
10	532157002	Decal Fender Danger

KEY NO.	PART NO.	DESCRIPTION
12	532159713	Decal PNL Side
14	532160396	Decal V-Belt Schematic
20	532145005	Decal Bat Dan/Psn
--	532171284	Pad Footrest LH STLT
--	532171285	Pad Footrest RH STLT
--	532138311	Decal Handle Lft Height Adjust
--	532174889	Manual Owner's

WHEELS & TIRES

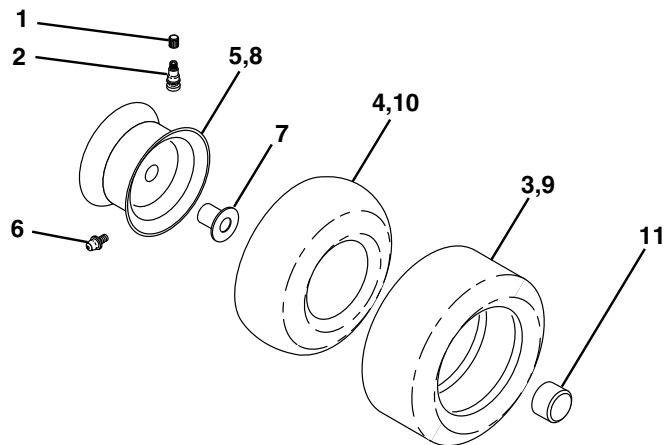


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532106222	Tire F Ts 15 X 60 - 6 Service
4	532059904	Tube Front (Service Item Only)
5	532138336	Rim Asm 6"front
6	532124957	Fitting Grease (Front Wheel Only)
7	532124959	Bearing Flange (Front Wheel Only)
8	532138337	Rim Asm 8"rear
9	532124635	Tire R Ts 18 x 8.5-8 C Service
10	532124926	Tube Rear (Service Item Only)
11	532104757	Cap Axle Blk 1 50 X 1 00
--	532144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
MOWER DECK

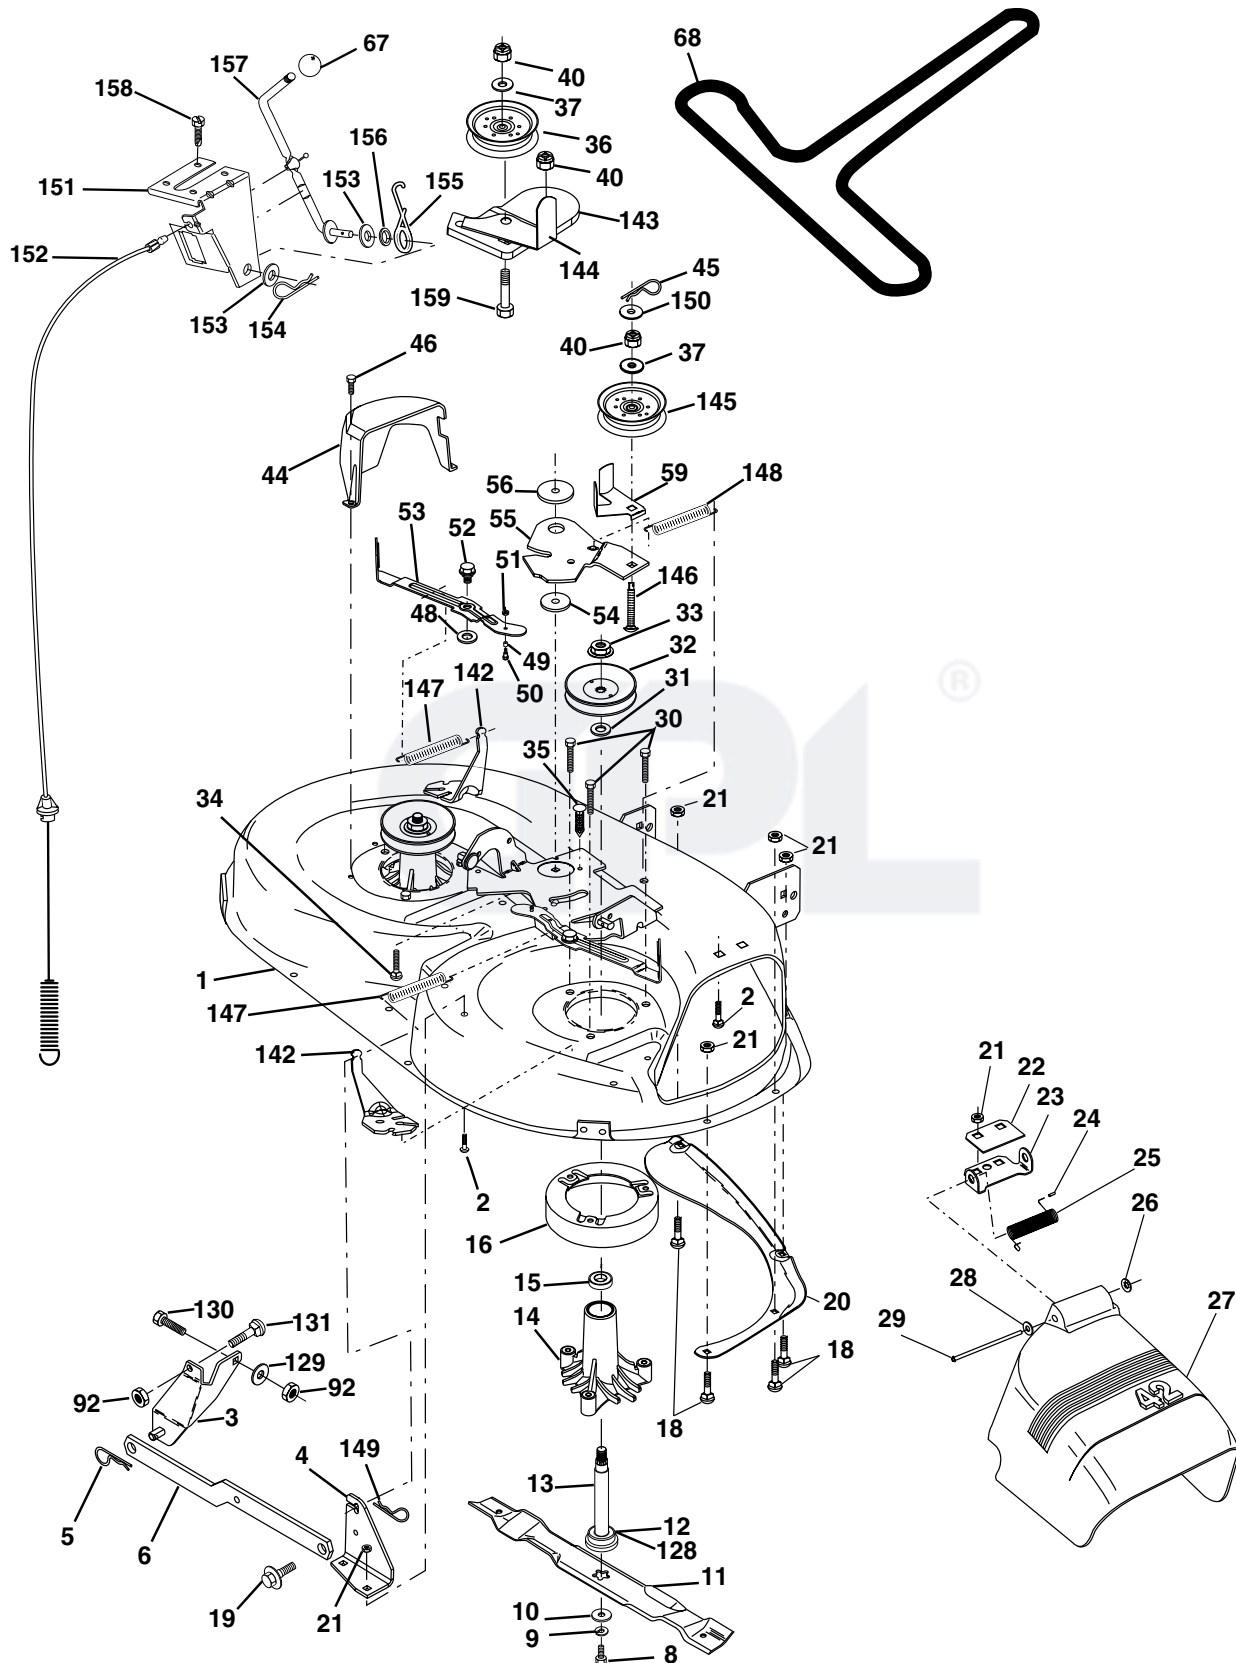

REPAIR PARTS


TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532165892	Deck Asm MWR 42"weldment	50	532131340	Bolt Shldr 10-24 Zinc Gr 5 42"
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4	51	532069180	Nut Lock #10-24 Unc
3	532138017	Bracket Asm Fr Sway Bar 38/42	52	532139888	Bolt Shoulder 5/16-18 Unc Blkz
4	532165460	Bracket Asm Deck 42"sway Bar	53	532131845	Arm Asm Pad Brake
5	532124670	Retainer Spring	54	532133943	Washer Hardened
6	532130832	Arm Suspension Rear	55	532155046	Arm Idler 42"mower LT/YT
8	532850857	Bolt 3/8 - 24 X 1.25 Gr 8	56	532165723	Spacer Retainer Mower
9	810030600	Washer Lock Hvy 3/8	59	532141043	Guard TUV Idler
10	532140296	Washer Hard Blade Mower Vented	67	532106932	Knob Rd 3/8-16 Plstc Thds Blk
11	532134149	Blade 42", Mulching	68	532144959	V-Belt Mower 42"
12	532129895	Bearing Ball #6024 (Mandrel)	92	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
13	532137645	Shaft Asm W/lower Bearing	128	532153390	Washer Felt
14	532128774	Housing Mandrel Vented	129	819131312	Washer 13/32 x 13/16 x 12 Ga.
15	532110485	Bearing Ball Mandrel	130	874780616	Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5
16	532140329	Stripper Mower Vented	131	872140608	Bolt Rdhd Sqnk 3/8-16 x 1
18	872140505	Bolt Rdhd Sqnk 5/16-18 X 5/8	142	532165890	Arm Spring Brake Mower
19	532132827	Bolt Shoulder	143	532157109	Bracket Arm Idler 42"
20	532159770	Baffle Vortex 42	144	532158634	Keeper Belt 42" Clutch Cable
21	873680500	Nut Crownlock 5/16-18 UNC	145	532165888	Pulley Idler Flat
22	532134753	Stiffener Bracket 42"deck	146	532165891	Bolt Carriage Idler
23	532131267	Bracket Deflector Mower 42"	147	532131335	Spring Extension
24	532105304	Cap Sleeve 80x 112 Blk Mower	148	532169022	Spring Return Idler
25	532123713	Spring Torsion Deflector 2 52	149	532165898	Retainer Spring Yellow
26	532110452	Nut Push Phos & Oil	150	819091216	Washer 9/32 x 3/4 x 16 Ga.
27	532171859	Shield Deflector Mower 42" Blk	151	532169670	Bracket Clutch Cable
28	819111016	Washer 11/32 X 5/8 X 16 Ga	152	532169676	Clutch Cable 42"
29	532131491	Rod Hinge 42"6 75 Wlg	153	532169674	Washer Flat 3/8" Type B
30	532157722	Screw Thd Rolling Washer Head	154	532169675	Spring Retainer
31	532129963	Washer Spacer Mower Vented	155	532169671	Spring Retention Lvr Cltch Cab
32	532153535	Pulley Mandrel 42"	156	532169672	Spacer Clutch Cable
33	532137266	Nut 9/16 Toplock Flng Oil Dip	157	532169669	Rod Clutch Cable 3/8"
34	872110614	Bolt Rdhd 3/8-16uncx1-3/4 Gr5	158	817720410	Screw Hex Thd Cut 1/4-20 x 5/8
35	532133835	Fastner Christmas Tree	159	872140614	Bolt Rdhd Sqn 3/8-16 Unc x 1-3/4
36	532131494	Pulley Idler Flat 3 060	--	532130794	Mandrel Asm Service (Includes Key
37	819131316	Washer 13/32 X 13/16 X 16			Nos. 8-10, 12-15, 31 and 33)
40	873680600	Nut Crownlock 3/8-16 UNC	--	532169583	Deck Serv 42" (Standard Deck -
44	532140088	Guard Mandrel LH Black			Order noseroller, and gauge wheel
45	532124788	Spring Retainer 1" Zinc/cad			components separately Key Nos.
46	532137729	Screw Hex Thd Cut 1/4-20x5/8 T			90-95, and 111-120)
48	532133944	Washer Hardened Smaller			
49	532155066	Roller Asm Cam Follower 42"dec			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
MOWER LIFT

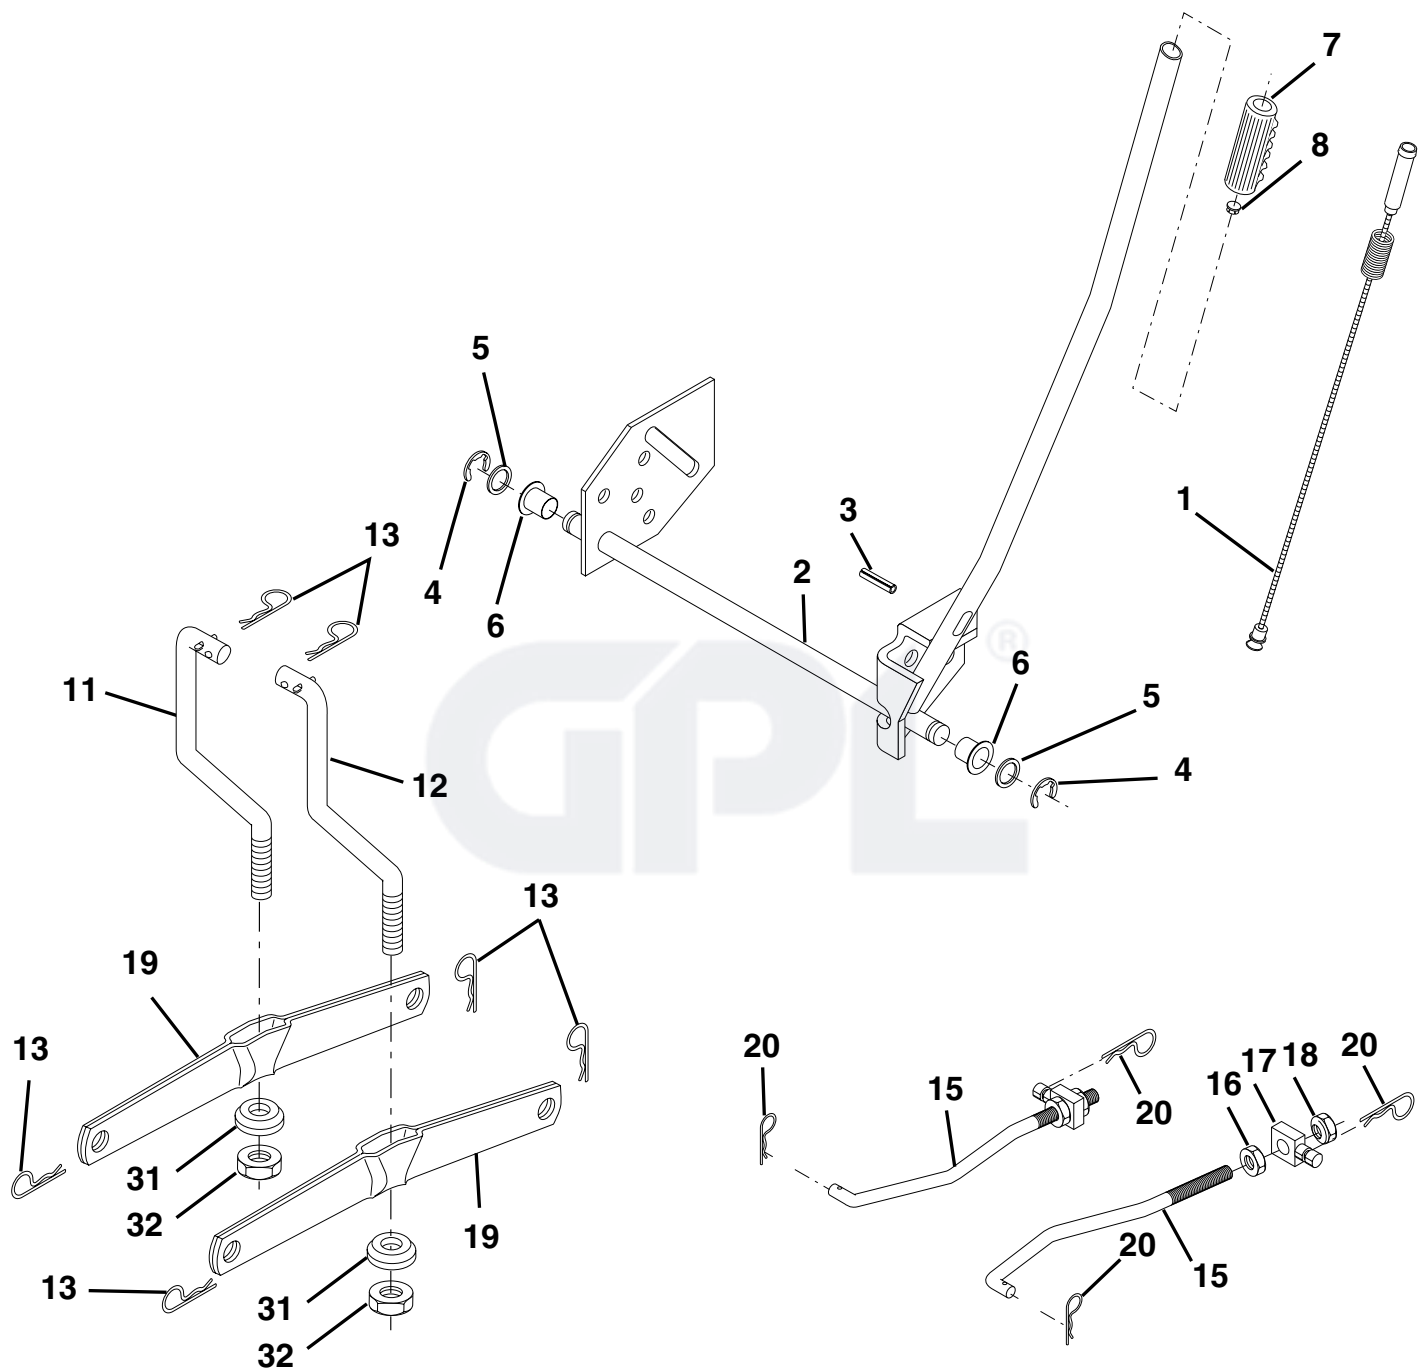

REPAIR PARTS

TRACTOR - MODEL NO. LT130 (HALT130J), PRODUCT NO. 954 11 00-31
MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	532159460	Wire Asm Inner W/plunger 17 32
2	532159471	Shaft Asm Lift LH Inf Hgt P/L
3	532105767	Pin Groove 1 500 Zinc
4	812000002	E Ring #5133-62
5	819211621	Washer 21/32 X 1 X 21 Ga
6	532120183	Bearing Nylon Blk 629 Id
7	532109413	Grip Handle
8	532124526	Button Plunger Black
11	532139865	Link Lift LH
12	532139866	Link Lift RH
13	532124670	Retainer Spring
15	532173288	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873800800	Nut Lock w/wsh 1/2-13 unc
19	532139868	Arm Suspension Rear
20	532163552	Retainer Spring
31	532169865	Bearing pvt. Lift
32	873540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm