


# ILLUSTRATED PARTS LIST

**MFG. ID NO. 96041010505**


**CUSTOMER CATALOG NO. LT2218A**

**PRODUCT NO. 960 41 01-05**

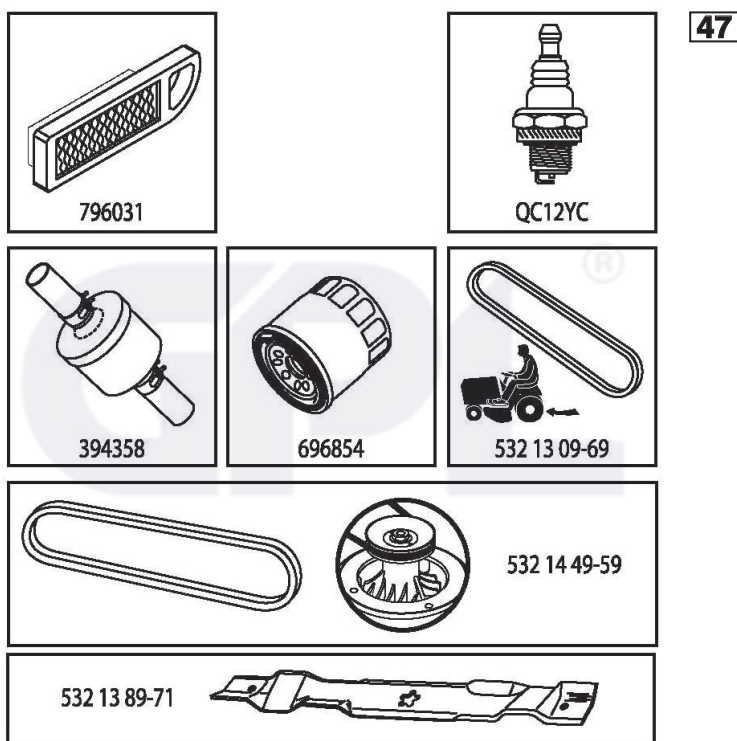

443242


**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**DECALS 27**

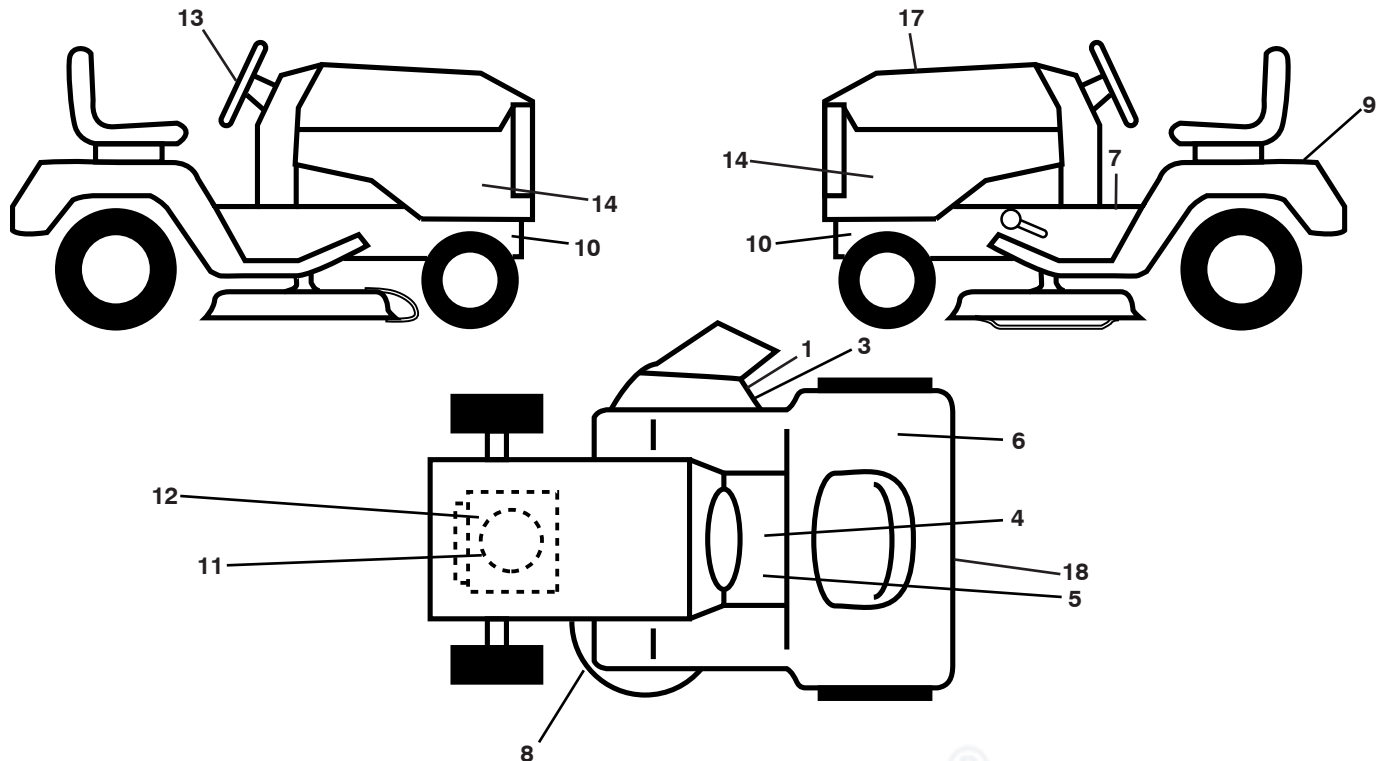

| KEY NO. | PART NO.     | DESCRIPTION                |
|---------|--------------|----------------------------|
| 1       | 532 18 21-66 | Decal, Cutfinger Warning   |
| 3       | 532 19 63-57 | Decal, Warning Symbol      |
| 4       | 532 14 08-37 | Decal, Brake Parking       |
| 5       | 532 40 03-89 | Decal, Warning Symbol CE   |
| 6       | 532 18 04-32 | Decal, Fender DB/CE        |
| 7       | 532 15 97-37 | Decal, Brake/Clutch Symbol |
| 8       | 532 16 03-96 | Decal, Mower Sch.          |
| 9       | 532 14 50-05 | Decal, Battery Dnge/Poi    |
| 10      | 532 15 97-36 | Decal, Hot Muffler         |
| 11      | 532 19 68-41 | Decal, Engine Warning      |
| 12      | 532 43 75-01 | Decal, Engine HP           |
| 13      | 532 43 74-45 | Decal, Steering Wheel      |

| KEY NO. | PART NO.     | DESCRIPTION         |
|---------|--------------|---------------------|
| 14      | 532 43 75-39 | Decal, Panel Side   |
| 17      | 532 44 32-42 | Decal, Replacement  |
| 18      | 532 43 74-43 | Decal, Fender       |
| --      | 532 16 69-60 | Decal, Bypass       |
| --      | 532 16 25-98 | Decal, Load Limit   |
| --      | 532 40 95-05 | Pad, Footrest, LH   |
| --      | 532 41 12-73 | Pad, Footrest, RH   |
| --      | 532 43 42-11 | Manual Oper. Euro   |
| --      | 532 43 42-12 | Manual Oper. Scand  |
| --      | 532 43 42 13 | Manual Oper. E-Bloc |
| --      | 532 43 42-14 | Manual Oper. Baltic |

**WHEELS AND TIRES**

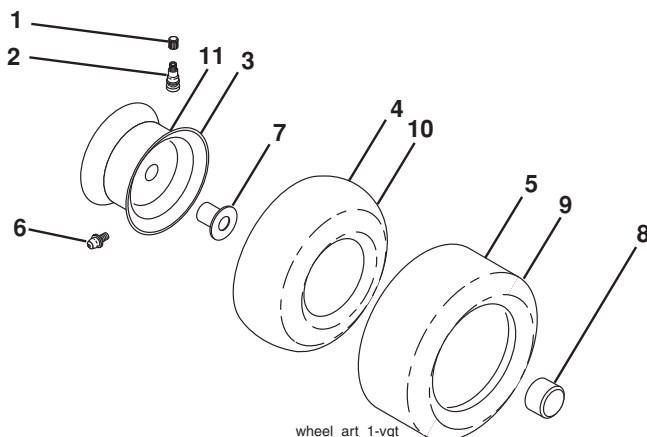


| KEY NO. | PART NO.     | DESCRIPTION                        |
|---------|--------------|------------------------------------|
| 1       | 532 05 91-92 | Cap, Valve, Tire                   |
| 2       | 532 06 51-39 | Stem, Valve                        |
| 3       | 532 13 83-36 | Rim Assembly, Front                |
| 4       | 532 05 99-04 | Tube, Front (Service Item Only)    |
| 5       | 532 10 62-22 | Tire, Front                        |
| 6       | 532 12 49-57 | Fitting, Grease (Front Wheel Only) |
| 7       | 532 12 49-59 | Bearing, Flange (Front Wheel Only) |
| 8       | 532 17 50-39 | Cap, Axle                          |
| 9       | 532 12 20-82 | Tire, Rear                         |
| 10      | 532 12 49-26 | Tube, Rear (Service Item Only)     |
| 11      | 532 13 83-37 | Rim Assembly, Rear                 |
| --      | 532 14 43-34 | Sealant, Tire (10 oz. Tube)        |


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05  
SCHEMATIC 38

SCH12

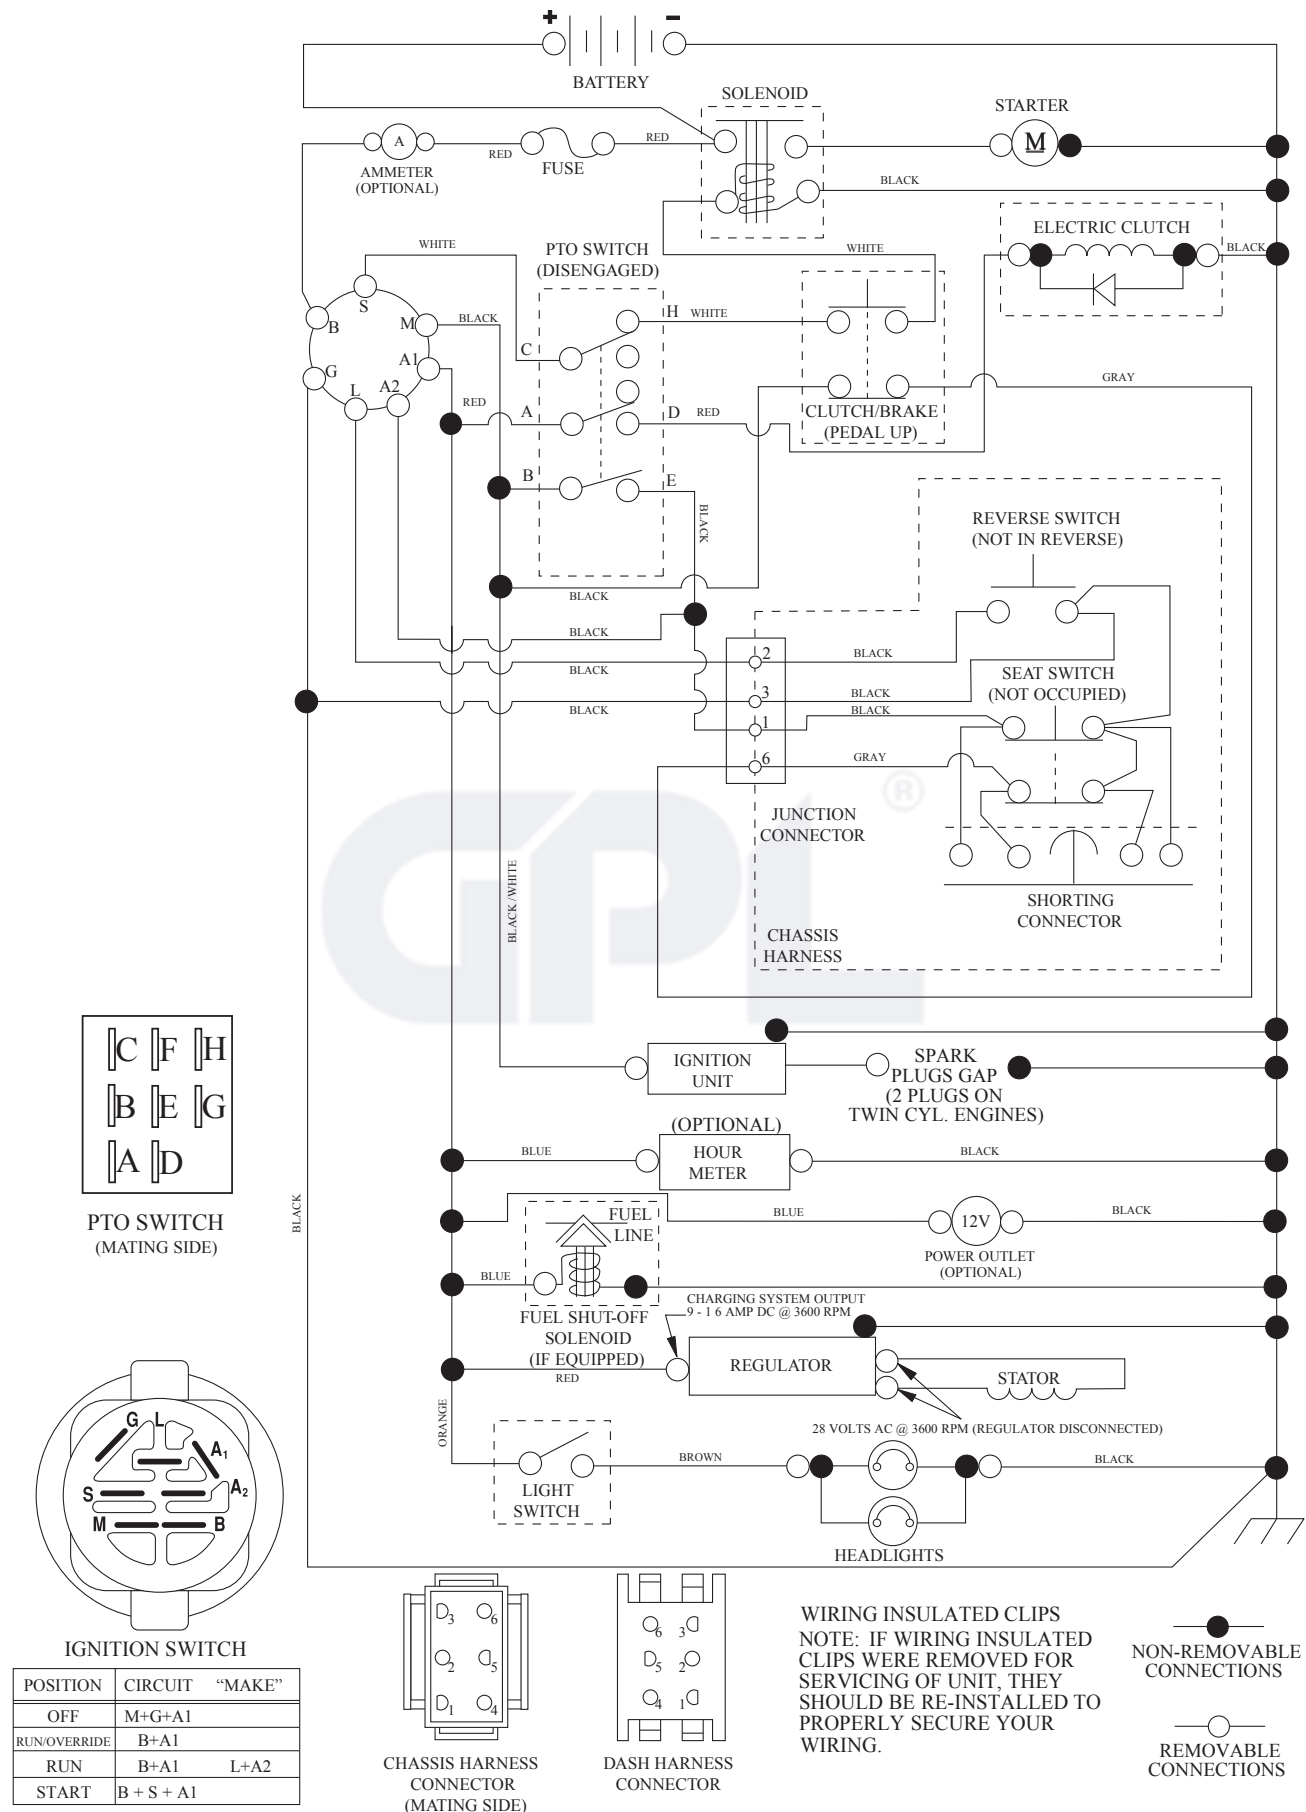

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**ELECTRICAL 32**

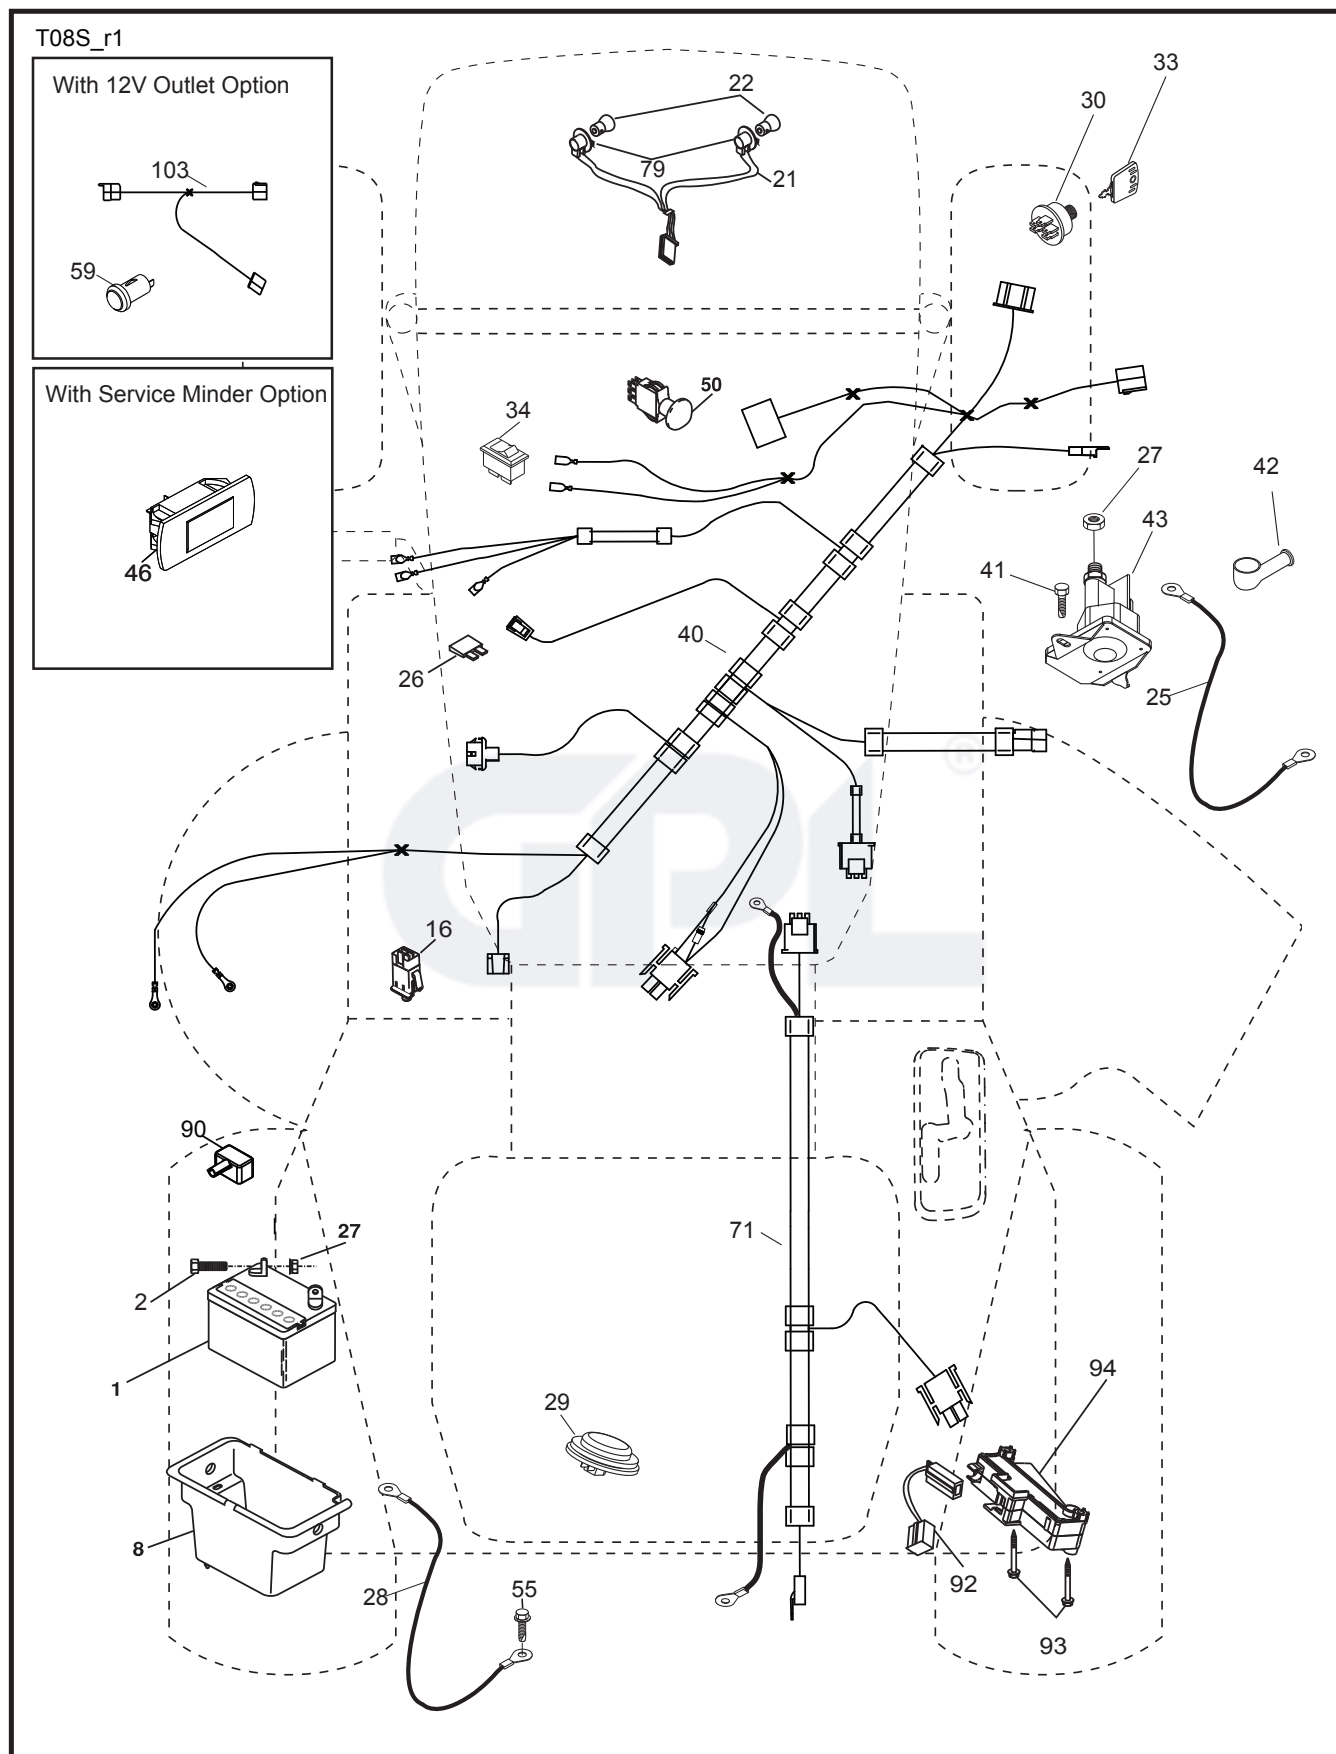


**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**ELECTRICAL 32**

| KEY NO. | PART NO.     | DESCRIPTION                                                                                            |
|---------|--------------|--------------------------------------------------------------------------------------------------------|
| 1       | 532 16 34-65 | Battery                                                                                                |
| 2       | 874 76 04-12 | Bolt Hex Hd 1/4-20 unc x 3/4                                                                           |
| 8       | 532 19 32-28 | Battery Box                                                                                            |
| 16      | 532 17 61-38 | Switch Interlock                                                                                       |
| 21      | 532 40 02-52 | Harness Socket Light                                                                                   |
| 22      | 532 00 41-52 | Bulb, Light # 1156                                                                                     |
| 25      | 532 41 28-95 | Cable Starter                                                                                          |
| 26      | 532 17 51-58 | Fuse                                                                                                   |
| 27      | 873 51 04-00 | Nut Keps Hex 1/4-20 unc                                                                                |
| 28      | 532 19 88-85 | Cable Ground                                                                                           |
| 29      | 532 40 15-45 | Switch Seat                                                                                            |
| 30      | 532 19 33-50 | Switch Ign                                                                                             |
| 33      | 532 41 19-35 | Key/Chain                                                                                              |
| 34      | 532 11 07-12 | Switch Light/Reset                                                                                     |
| 40      | 532 40 11-04 | Harness Ign. Dash                                                                                      |
| 41      | 817 72 04-08 | Screw Thd Cut 1/4-20 x 1/2                                                                             |
| 42      | 532 13 15-63 | Cover Terminal Red  |
| 43      | 532 19 25-07 | Solenoid                                                                                               |
| 46      | 532 40 17-63 | Gauge Hourmeter                                                                                        |
| 50      | 532 17 46-51 | Switch PTO                                                                                             |
| 55      | 817 06 05-12 | Screw Thdrol 5/16-18 x 3/4                                                                             |
| 71      | 532 44 15-44 | Harness Chassis                                                                                        |
| 79      | 532 17 52-42 | Socket Asm. Bulb Twistlock                                                                             |
| 90      | 532 43 53-95 | Cover Terminal Battery                                                                                 |
| 92      | 532 19 66-15 | Harness Pigtail Console                                                                                |
| 93      | 532 19 25-40 | Screw Plastic 10-14 x 2.0                                                                              |
| 94      | 532 19 18-34 | Module Reverse                                                                                         |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**CHASSIS AND ENCLOSURES 39**

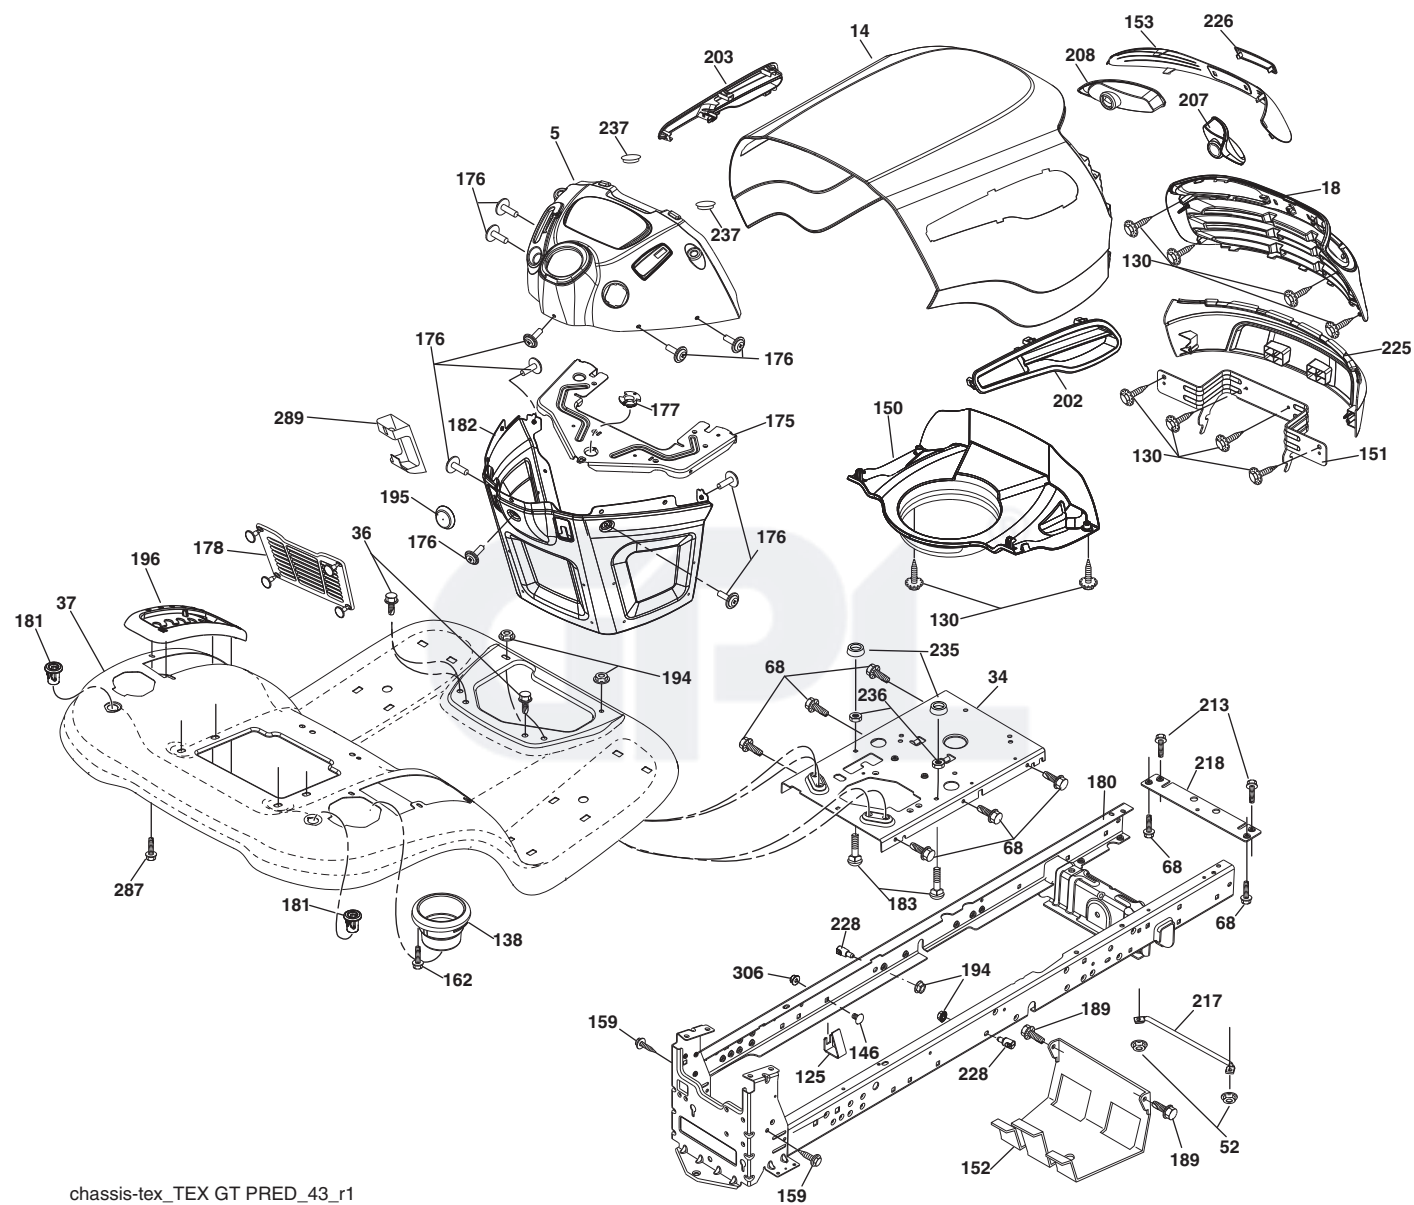

chassis-tex\_TEX GT PRED\_43\_r1


**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**CHASSIS AND ENCLOSURES 39**

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 5       | 532 42 47-38 | Dash                           |
| 14      | 532 44 38-24 | Hood                           |
| 18      | 532 42 73-33 | Grille                         |
| 34      | 532 19 61-25 | Plate Engine                   |
| 36      | 817 06 05-12 | Screw 5/16-18 x 3/4            |
| 37      | 532 44 18-74 | Fender                         |
| 52      | 873 68 05-00 | Nut Crown Lock 5/16-18         |
| 68      | 817 49 05-08 | Screw 5/16-18 x 1/2            |
| 125     | 581 68 48-01 | Clip Fuel Line                 |
| 130     | 532 41 63-58 | Screw #10 x 0.750 BOS Thread   |
| 138     | 532 40 97-30 | Cupholder                      |
| 146     | 581 85 79-01 | Bolt                           |
| 150     | 532 19 94-13 | Duct Air                       |
| 151     | 532 19 63-32 | Bracket Pivot                  |
| 152     | 532 19 95-35 | Shield Browning/Debris         |
| 153     | 532 42 47-17 | Lens Bar                       |
| 159     | 817 00 06-12 | Screw Hexwsh THDR 3/8-16 x 3/4 |
| 162     | 532 14 24-32 | Screw 1/4 x 1/2                |
| 175     | 532 19 63-04 | Crossmember                    |
| 176     | 532 40 07-76 | Screw 10-24 x 5/8 Rnd Qdrx     |
| 177     | 532 19 52-27 | Bushing Steering               |
| 178     | 532 19 97-82 | Cargo Asm. Net                 |
| 180     | 532 19 54-57 | Chassis                        |
| 181     | 532 40 47-96 | Bushing Mtg. Fender Crgo.      |
| 182     | 532 40 68-59 | Dash Lower                     |
| 183     | 874 52 05-20 | Bolt Hex 5/16-18 x 1-1/4       |
| 189     | 817 00 05-12 | Screw 5/16-18 x 3/4            |
| 194     | 873 90 05-00 | Nut Lock Hex Flange 5/16-18    |
| 195     | 532 40 41-37 | Plug                           |
| 196     | 532 41 45-79 | Console Asm. Deck Lift         |
| 202     | 532 44 54-26 | Vent Side Hood RH              |
| 203     | 532 44 55-83 | Vent Side Hood LH              |
| 207     | 532 19 89-63 | Bezel RH                       |
| 208     | 532 19 89-64 | Bezel LH                       |
| 213     | 874 76 05-12 | Bolt Hex HD 5/16-18 unc x 3/4  |
| 217     | 532 40 91-67 | Rod Pivot                      |
| 218     | 532 19 63-95 | X-Piece Hood Stop              |
| 225     | 532 44 38-25 | Bumper Grille                  |
| 226     | 532 42 47-16 | Logo                           |
| 228     | 532 19 51-61 | Stud Fastner                   |
| 235     | 532 40 61-29 | Spacer Fender                  |
| 236     | 873 93 05-00 | Nut Center Lock 5/16-18 unc    |
| 237     | 532 40 37-04 | Plug Mount Cargo               |
| 287     | 817 60 04-06 | Screw Hex Washead 1/4-20 x 3/8 |
| 289     | 532 40 35-71 | Plug Cruise/ Phone             |
| 306     | 873 90 06-00 | Nut Lock                       |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm



**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**DRIVE 40**

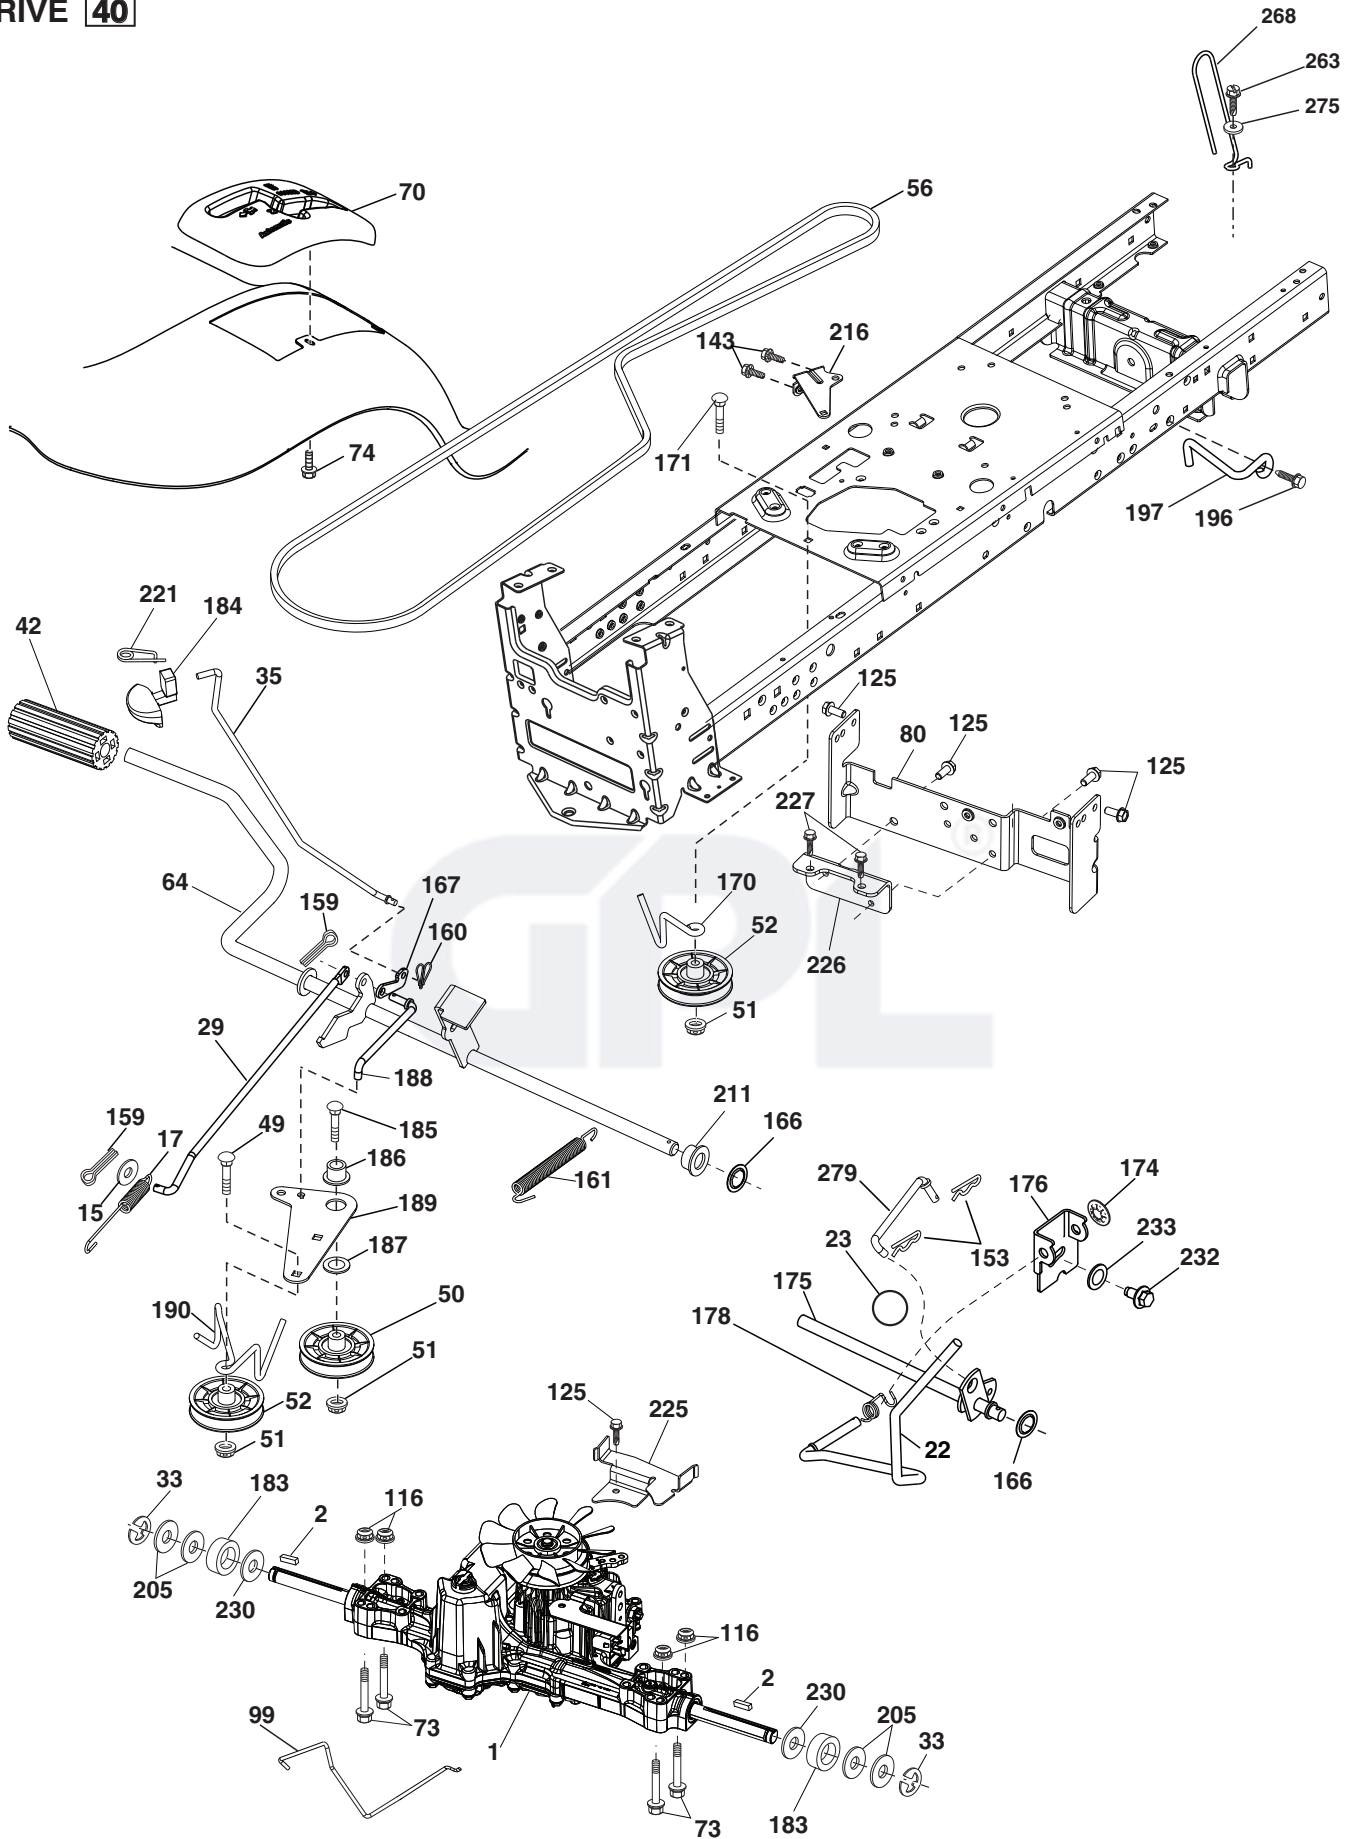

drive-tex\_K46\_fender\_21\_r1




**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**DRIVE 40**

| KEY NO. | PART NO.     | DESCRIPTION                                                                    | KEY NO. | PART NO.     | DESCRIPTION                         |
|---------|--------------|--------------------------------------------------------------------------------|---------|--------------|-------------------------------------|
| 1       | — — — — —    | Transaxle, TUFFTORQ K46 BA (408214) (Order parts from trans-axle manufacturer) | 171     | 872 11 06-16 | Bolt RDHD SQNK 3/8-16 unc x 2       |
| 2       | 532 12 35-83 | Key                                                                            | 174     | 532 19 72-89 | Nut Push                            |
| 15      | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga.                                                  | 175     | 532 40 62-08 | Shaft Asm Shift                     |
| 17      | 532 41 36-78 | Spring Brake                                                                   | 176     | 532 19 62-14 | Arm Clevis Rod Shift                |
| 22      | 532 19 76-60 | Rod Shift                                                                      | 178     | 532 19 74-56 | Spring Shift                        |
| 23      | 532 13 05-64 | Knob                                                                           | 183     | 532 13 70-57 | Spacer Split                        |
| 29      | 532 40 38-06 | Rod, Brake                                                                     | 184     | 532 44 14-55 | Handle Parking Brake                |
| 33      | 812 00 00-01 | Ring E                                                                         | 185     | 872 11 06-22 | Bolt Rdhd Sqnk 3/8-16 x 2-3/4 Gr. 5 |
| 35      | 583 86 45-01 | Rod Brake Park                                                                 | 186     | 532 19 43-21 | Spacer Retainer                     |
| 42      | 532 12 48-72 | Cover Foot Pedal                                                               | 187     | 819 13 32-10 | Washer                              |
| 49      | 872 11 06-14 | Bolt                                                                           | 188     | 532 19 43-23 | Link Clutch Ground Drive            |
| 50      | 532 19 43-27 | Pulley Idler Flat                                                              | 189     | 532 19 43-17 | Bellcrank Ground Drive              |
| 51      | 873 90 06-00 | Lock Nut 3/8-16                                                                | 190     | 532 19 43-18 | Keeper Bellcrank Ground Drive       |
| 52      | 532 19 43-26 | Idler V-Groove 910" Offset                                                     | 196     | 817 00 06-16 | Screw 3/8-16 x 1                    |
| 56      | 532 13 09-69 | V-Belt Drive                                                                   | 197     | 532 19 58-04 | Link Clutch Anti-Rotation           |
| 64      | 532 19 62-00 | Shaft Asm. Pedal Brake Control                                                 | 205     | 532 12 17-48 | Washer                              |
| 70      | 532 41 13-29 | Console                                                                        | 211     | 532 19 62-12 | Bushing Brake Shaft                 |
| 73      | 874 49 05-40 | Bolt Hex Flghd 5/16-18 x 2-1/2 Gr. 5                                           | 216     | 532 19 61-31 | Bracket Pulley Idler                |
| 74      | 532 14 24-32 | Screw 1/4 x 1/2                                                                | 221     | 532 40 31-87 | Retainer Spring Clip Handle         |
| 80      | 532 44 06-19 | Strap Torque                                                                   | 225     | 532 40 33-19 | Keeper Belt Trans.                  |
| 99      | 532 41 57-42 | Rod Bypass                                                                     | 226     | 532 40 15-64 | Bracket Mount Touque                |
| 116     | 873 90 05-00 | Nut Lock Hex Flange 5/16-18                                                    | 227     | 817 49 05-12 | Screw Thdrol 5/16-18 x 3/4          |
| 125     | 817 00 05-12 | Screw 5/16-18 x 3/4                                                            | 230     | 532 18 89-67 | Washer Hardened                     |
| 143     | 817 49 05-08 | Screw 5/16-18 x 1/2                                                            | 232     | 874 78 07-16 | Bolt 7/16-14 x 1 Gr. 5              |
| 153     | 532 12 47-88 | Retainer Spring                                                                | 233     | 532 40 52-96 | Washer Serrated                     |
| 159     | 876 02 04-12 | Pin Cotter 1/8 x 3/4                                                           | 263     | 817 00 06-12 | Screw Hexwsh Thd 3/8-16 x 3/4       |
| 160     | 532 16 94-84 | Retainer Clip                                                                  | 268     | 532 18 24-02 | Guard Muffler                       |
| 161     | 532 10 57-09 | Spring Return Clutch                                                           | 275     | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga.           |
| 166     | 532 42 91-64 | Nut Push                                                                       | 279     | 532 40 62-07 | Link Shift                          |
| 167     | 532 40 52-57 | Latch Brake Parking                                                            |         |              |                                     |
| 170     | 532 19 43-22 | Keeper Belt Centerspan                                                         |         |              |                                     |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**ENGINE 24**

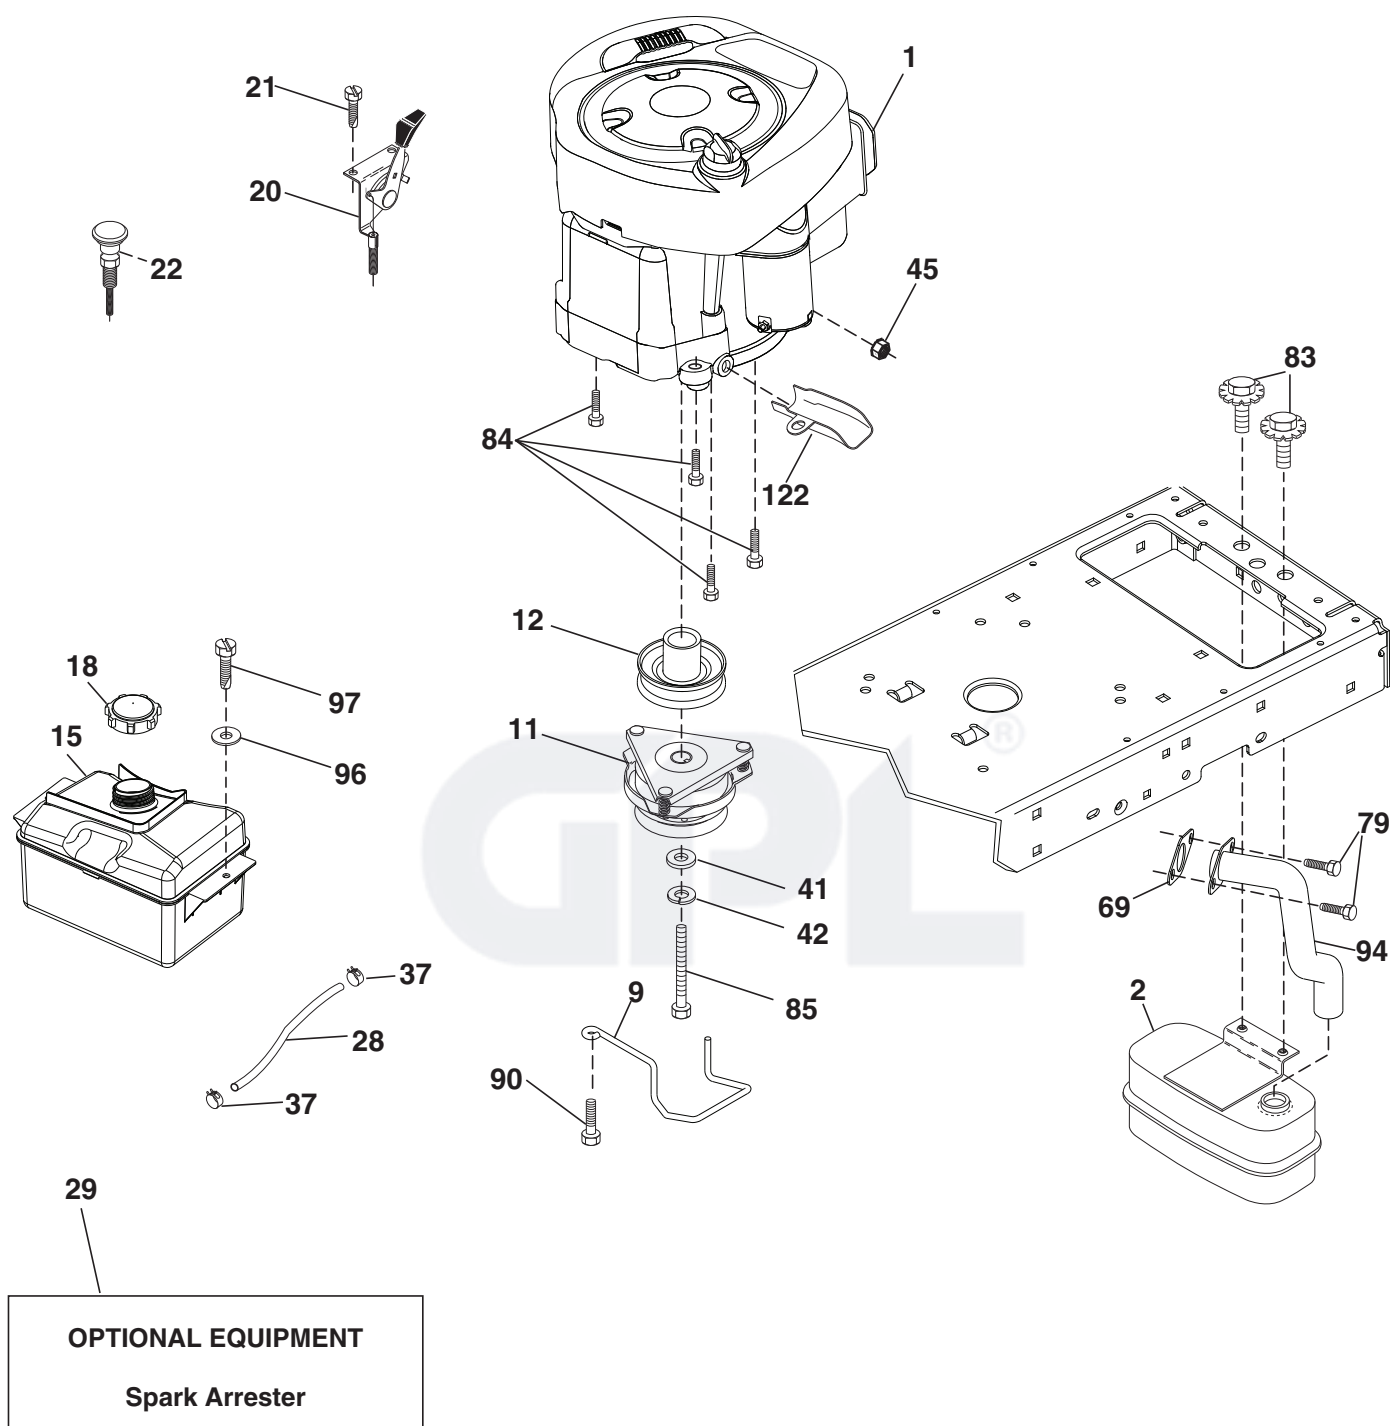

engine-tex\_BS\_40

# TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05 ENGINE **24**


| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                                                                                  |
|------------|--------------|----------------------------------------------------------------------------------------------|
| 1          | — — — — —    | Engine Briggs Model No. 31G777-2440-B1<br>(438587) (Order parts from engine<br>manufacturer) |
| 2          | 532 18 86-55 | Muffler                                                                                      |
| 9          | 532 19 43-20 | Keeper Belt Engine                                                                           |
| 11         | 532 18 05-05 | Clutch Electric                                                                              |
| 12         | 532 40 50-97 | Pulley Engine                                                                                |
| 15         | 532 40 75-51 | Tank Fuel                                                                                    |
| 18         | 532 43 02-20 | Cap Asm                                                                                      |
| 20         | 532 40 15-08 | Control Throttle                                                                             |
| 21         | 532 41 63-58 | Screw #10 x 0.750 BOS Thread                                                                 |
| 22         | 532 19 49-81 | Control Choke                                                                                |
| 28         | 532 13 70-40 | Fuel Line                                                                                    |
| 29         | 532 13 71-80 | Spark Arrester Kit                                                                           |
| 37         | 532 12 34-87 | Clamp Hose                                                                                   |
| 41         | 532 12 61-97 | Washer 1-1/2 OD x 15/32 ID x .250                                                            |
| 42         | 810 04 07-00 | Washer Lock 7/16                                                                             |
| 45         | 873 51 04-00 | Nut Keps Hex 1/4-20 unc                                                                      |
| 69         | 532 16 52-91 | Gasket                                                                                       |
| 79         | 532 19 23-34 | Screw 5/16-18 x .75                                                                          |
| 83         | 532 17 18-77 | Bolt 5/16-18 UNC x 3/4                                                                       |
| 84         | 817 06 06-20 | Screw 3/8-16 x 1-1/4                                                                         |
| 85         | 532 17 39-37 | Bolt Hex 7/16-20 x 4 x Gr. 5-1.5                                                             |
| 90         | 817 00 06-16 | Screw 3/8-16 x 1                                                                             |
| 94         | 581 88 09-01 | Exhaust Tube                                                                                 |
| 96         | 819 09 14-16 | Washer 9/32 x 7/8 x 16 GA                                                                    |
| 97         | 817 67 04-12 | Screw 1/4 - 20 x 3/4                                                                         |
| 122        | 532 42 19-22 | Extension Drain Oil                                                                          |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

## Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**STEERING ASSEMBLY 41**

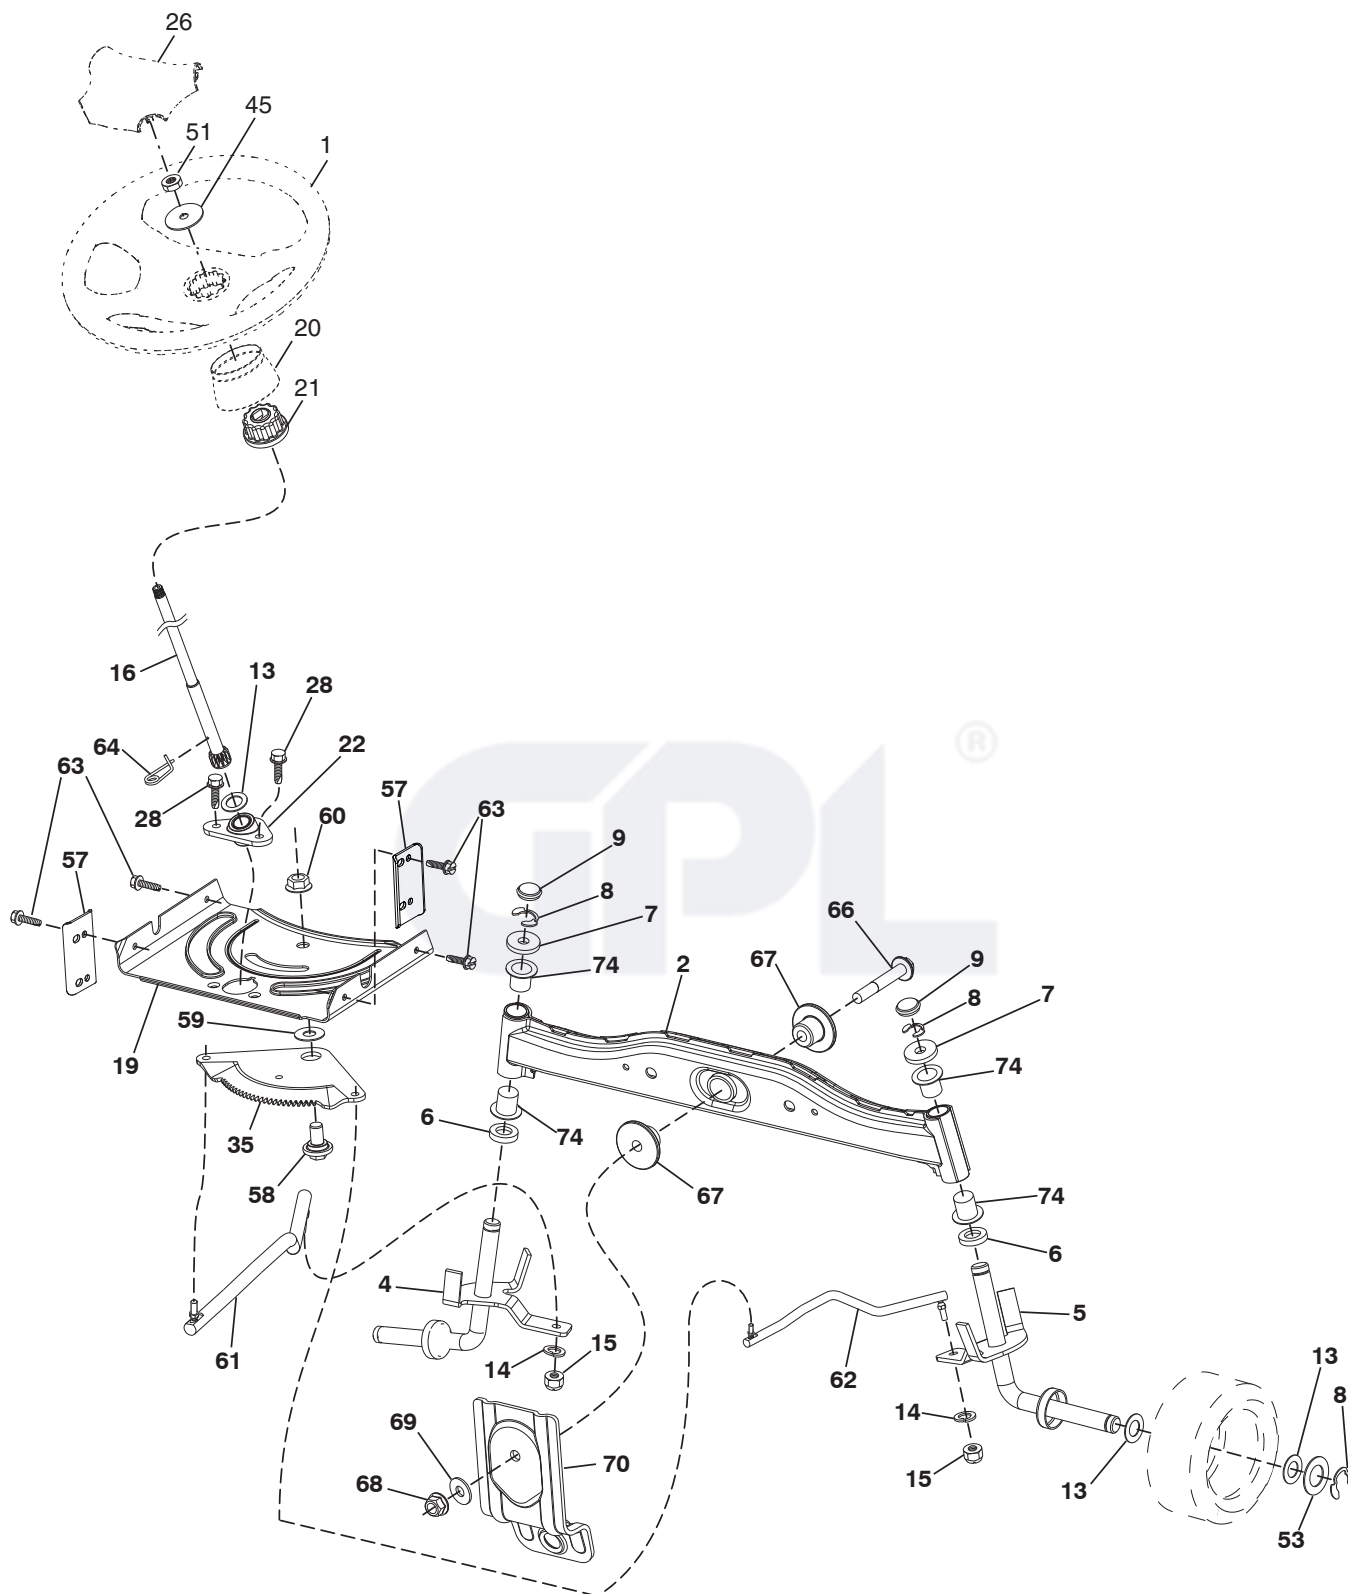


steering-tex\_STDSRR\_17

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**STEERING ASSEMBLY [41]**

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 1       | 532 42 41-46 | Wheel, Steering                |
| 2       | 532 41 81-68 | Axle Asm., Front               |
| 4       | 532 40 30-87 | Spindle Asm., LH               |
| 5       | 532 40 30-88 | Spindle Asm., RH               |
| 6       | 532 12 49-31 | Bearing, Race Thrust Harden    |
| 7       | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga.  |
| 8       | 812 00 00-29 | Ring, Klip #T5304-75           |
| 9       | 532 12 12-32 | Cap, Spindle                   |
| 13      | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga.  |
| 14      | 810 04 06-00 | Washer, Lock Hvy Hlcl Spr 3/8  |
| 15      | 873 54 06-00 | Nut, Crown Lock 3/8-24 unf     |
| 16      | 532 19 47-46 | Shaft Steering                 |
| 19      | 532 19 47-29 | Plate Steering                 |
| 20      | 532 42 47-40 | Boot                           |
| 21      | 532 18 67-37 | Adapter, Wheel Steering        |
| 22      | 532 42 05-37 | Steering Supt. Lower           |
| 26      | 532 42 41-47 | Insert, Wheel Steering         |
| 28      | 817 00 06-12 | Screw 3/8-16 x 3/4             |
| 35      | 532 19 47-32 | Gear, Sector Plate             |
| 45      | 819 18 38-12 | Washer 9/16 x 2-3/8 x 12 Ga.   |
| 51      | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf |
| 53      | 532 18 89-67 | WasherHardened.793x1.637x.060  |
| 57      | 532 40 74-65 | Bracket Upstop                 |
| 58      | 532 19 47-47 | Bolt Shoulder Sector Pivot CFM |
| 59      | 532 19 47-48 | Washer Thrust Sector Steering  |
| 60      | 873 97 10-00 | Nut Flange Lock 5/8-11         |
| 61      | 532 19 47-40 | Draglink LH                    |
| 62      | 532 19 47-41 | Draglink, RH                   |
| 63      | 817 00 05-12 | Screw 5/16-18 x 3/4            |
| 64      | 532 19 98-49 | Retainer Clip Spring Steering  |
| 66      | 871 02 07-48 | Bolt Hex Fghd 7/16-14 x 3 Serr |
| 67      | 532 19 47-37 | Bushing PM Front Axle          |
| 68      | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5  |
| 69      | 532 19 91-62 | Washer 1.5 x .505 x .118       |
| 70      | 532 19 61-97 | Bracket Deck Susp. Front       |
| 74      | 532 12 49-37 | Bushing                        |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**MOWER DECK 44**

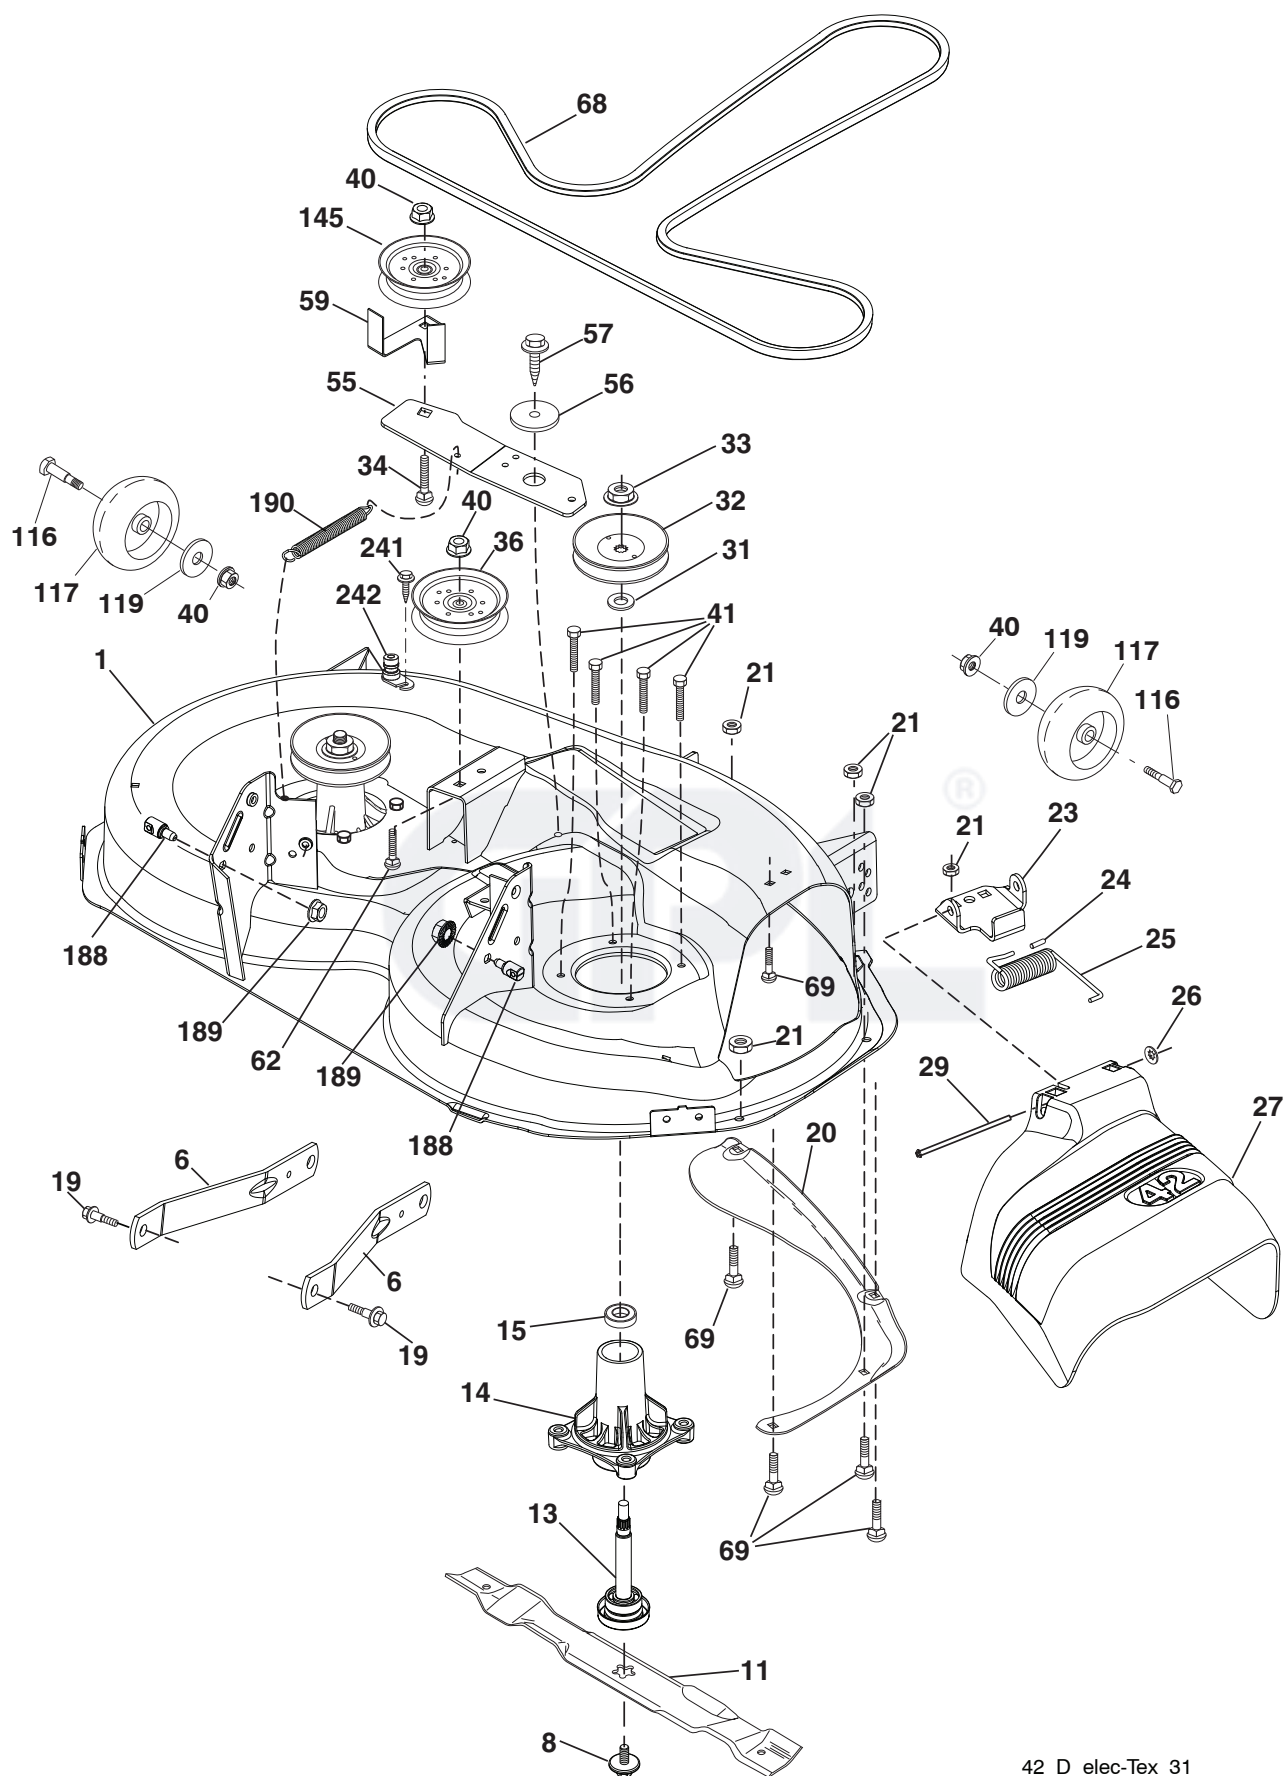

42\_D\_elec-Tex\_31


**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**MOWER DECK 44**

| KEY NO. | PART NO.     | DESCRIPTION                                                         | KEY NO. | PART NO.     | DESCRIPTION                                                                                                                               |
|---------|--------------|---------------------------------------------------------------------|---------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | 532 19 64-95 | Mower Deck Assembly, 42"                                            | 57      | 817 00 06-16 | Screw 3/8-16 x 1                                                                                                                          |
| 6       | 532 19 51-86 | Arm Susp. Rear                                                      | 59      | 532 14 10-43 | Guard TUV Idler                                                                                                                           |
| 8       | 532 19 30-03 | Bolt/Washer Asm 7/16-20 unf<br>(The following Blades are available) | 62      | 872 11 06-16 | Bolt Rdhd Sqnk 3/8-16 unc x 2                                                                                                             |
| 11      | 532 13 89-71 | Blade Mower 42" Hi-Lift<br>(for bagging and discharging)            | 68      | 532 14 49-59 | V-Belt, 42" Mower                                                                                                                         |
| 13      | 532 19 28-72 | Shaft Assembly, Mandrel                                             | 69      | 872 14 05-05 | Bolt, Carriage 5/16-18 x 5/8                                                                                                              |
| 14      | 532 18 72-81 | Housing, Mandrel                                                    | 116     | 532 12 48-42 | Bolt, Shoulder                                                                                                                            |
| 15      | 532 11 04-85 | Bearing, Ball, Mandrel                                              | 117     | 532 18 86-06 | Wheel, Gauge                                                                                                                              |
| 19      | 532 19 65-39 | Bolt, Shoulder                                                      | 119     | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga.                                                                                                                 |
| 20      | 532 15 97-70 | Baffle, Vortex                                                      | 145     | 532 19 31-97 | Pulley Idler                                                                                                                              |
| 21      | 873 68 05-00 | Nut                                                                 | 188     | 532 19 51-61 | Stud Fastner W/D Anti-Rotation                                                                                                            |
| 23      | 532 19 25-57 | Bracket, Deflector Mower 42"                                        | 189     | 873 90 05-00 | Nut Lock Hex Flange 5/16-18                                                                                                               |
| 24      | 532 10 53-04 | Cap, Sleeve 80 x 112 Blk Mower                                      | 190     | 532 19 72-51 | Spring Mower Drive                                                                                                                        |
| 25      | 532 19 70-26 | Spring, Torsion, Deflector                                          | 241     | 532 15 29-27 | Screw TT #10-32.5 3/8 Flg                                                                                                                 |
| 26      | 532 11 04-52 | Nut, Push Phos & Oil                                                | 242     | 532 41 55-98 | Port Washout                                                                                                                              |
| 27      | 532 40 30-04 | Shield, Deflector 42" Blk                                           | - -     | 532 19 28-70 | Mandrel Assembly (Includes hous-<br>ing, shaft assembly, and bear-<br>ing only - pulley/nut/washer and<br>blade bolt/washers not included |
| 29      | 532 13 14-91 | Rod, Hinge 42" 6 75 W/G                                             | - -     | 532 43 24-81 | Replacement Mower, Complete<br>(Std. deck Order separately gauge<br>wheel componants Key Nos. 116-<br>119)                                |
| 31      | 532 18 76-90 | Washer, Spacer Mower Vented                                         |         |              |                                                                                                                                           |
| 32      | 532 15 35-35 | Pulley, Mandrel                                                     |         |              |                                                                                                                                           |
| 33      | 532 40 02-34 | Nut, Toplock                                                        |         |              |                                                                                                                                           |
| 34      | 872 11 06-12 | Bolt Carr SH 3/8-16 x 1-1/2 Gr.5                                    |         |              |                                                                                                                                           |
| 36      | 532 19 73-79 | Pulley, Idler, Flat                                                 |         |              |                                                                                                                                           |
| 40      | 873 90 06-00 | Nut Lock 3/8-16                                                     |         |              |                                                                                                                                           |
| 41      | 584 95 39-01 | Bolt Hex Wshr                                                       |         |              |                                                                                                                                           |
| 55      | 532 43 71-10 | Arm, Idler                                                          |         |              |                                                                                                                                           |
| 56      | 532 19 90-92 | Spacer, Retainer                                                    |         |              |                                                                                                                                           |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm



**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**MOWER LIFT 45**

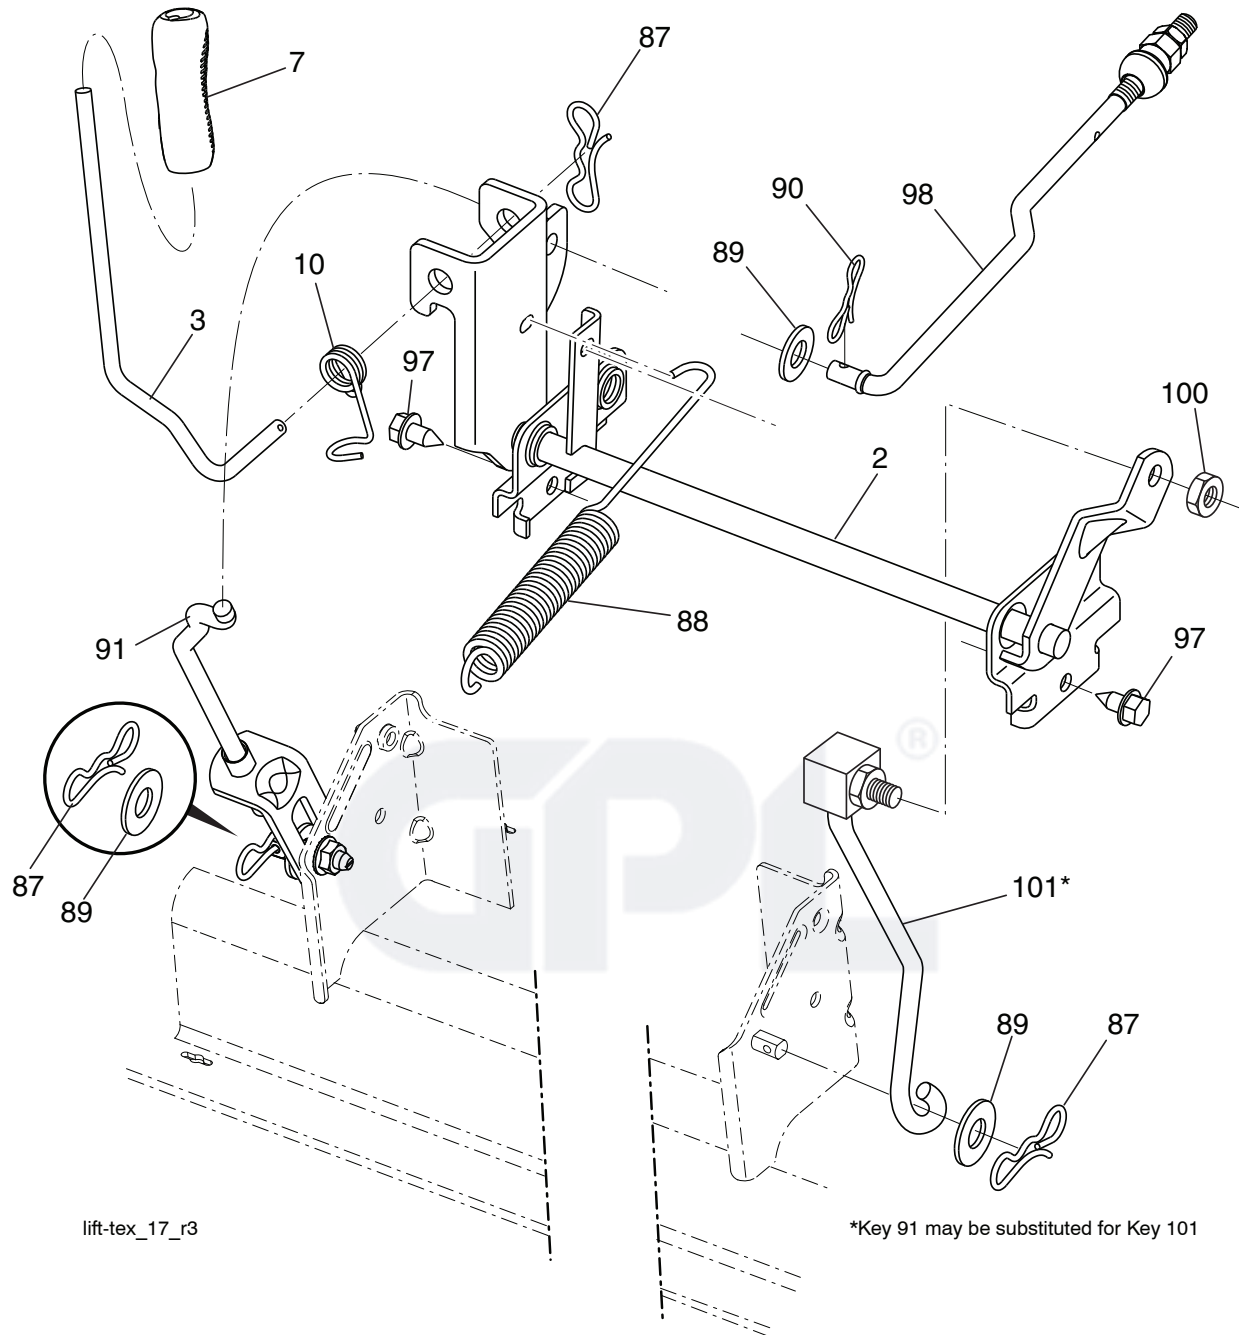


lift-tex\_17\_r3

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 2       | 532 42 20-27 | Shaft Asm., Lift               |
| 3       | 532 19 52-31 | Lever Lift Handle              |
| 7       | 532 41 15-55 | Grip, Lever                    |
| 10      | 532 19 63-14 | Spring Torsion                 |
| 87      | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock   |
| 88      | 532 41 07-10 | Spring Lift Assist             |
| 89      | 819 19 19-12 | Washer 17/32 x 1-3/16 x 12 Ga. |
| 90      | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock   |

| KEY NO. | PART NO.     | DESCRIPTION                 |
|---------|--------------|-----------------------------|
| 91      | 532 19 51-81 | Link Lift Susp Mower Rear   |
| 97      | 817 00 06-12 | Screw 3/8-16 x .75          |
| 98      | 532 19 52-70 | Link Lift Susp. Front Mower |
| 100     | 873 93 06-00 | Nut 3/8-16 unc              |
| 101     | 532 40 70-03 | Link Asm Lift FXD           |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LT2218A (96041010505), PRODUCT NO. 960 41 01-05**  
**SEAT ASSEMBLY 42**

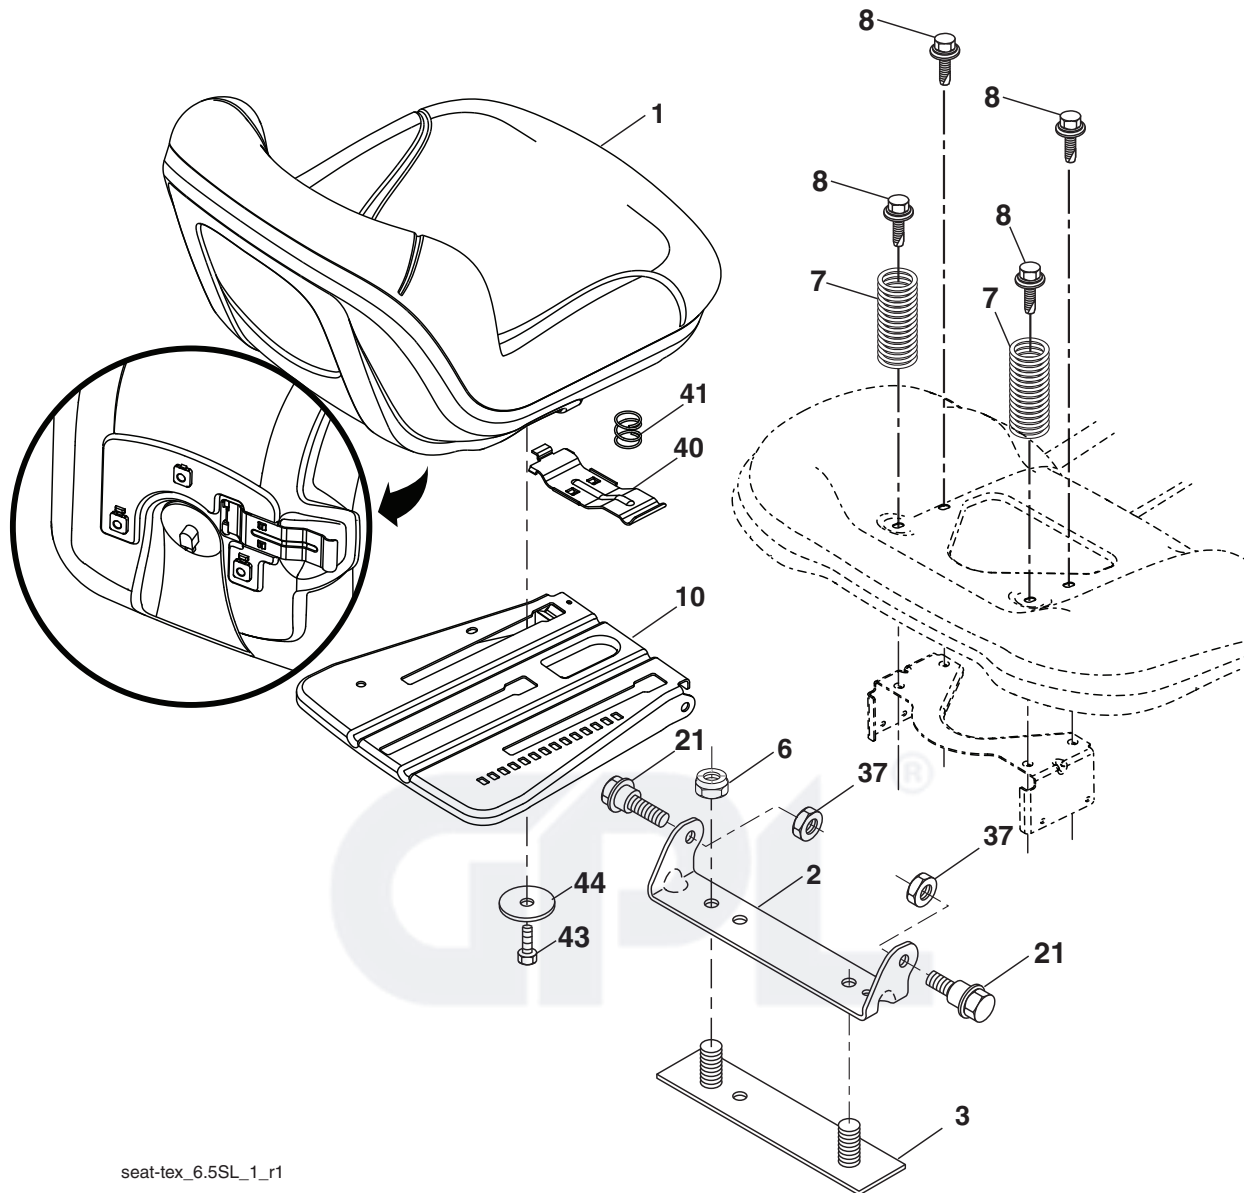

seat-tex\_6.5SL\_1\_r1

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 1       | 532 40 66-25 | Seat                          |
| 2       | 532 18 01-66 | Bracket Pivot Fender          |
| 3       | 532 14 06-75 | Strap, Asm Fender             |
| 6       | 873 80 06-00 | Nut, Lock W/Ins. 3/8-16 unc   |
| 7       | 532 12 41-81 | Spring, Seat Cprsn            |
| 8       | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 10      | 532 19 69-77 | Pan, Seat                     |
| 21      | 532 17 18-52 | Bolt, Shoulder 5/16-18        |
| 37      | 873 80 05-00 | Nut, Lock 5/16-18 unc         |

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 40      | 532 19 76-61 | Handle Slide Seat             |
| 41      | 532 19 82-00 | Spring Latch Seat             |
| 43      | 874 76 06-12 | Bolt 3/8-16 x 3/4             |
| 44      | 819 13 38-12 | Washer 13/32 x 2-3/8 x 12 Ga. |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

