


ILLUSTRATED PARTS LIST

MODEL NO. 96051002104

CUSTOMER CATALOG NO. LT2317 CMA


PRODUCT NO. 960 51 00-21

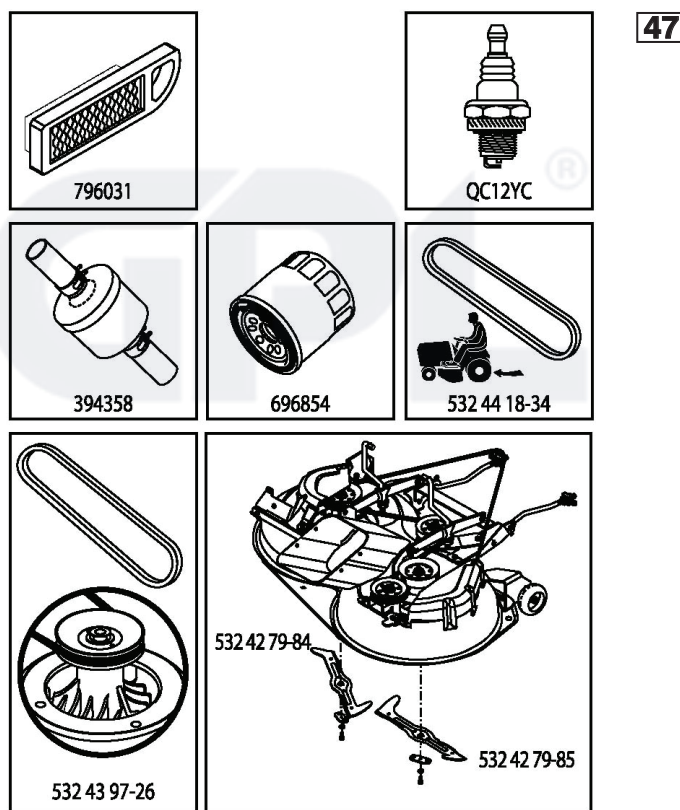

439833

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21


DECALS 27

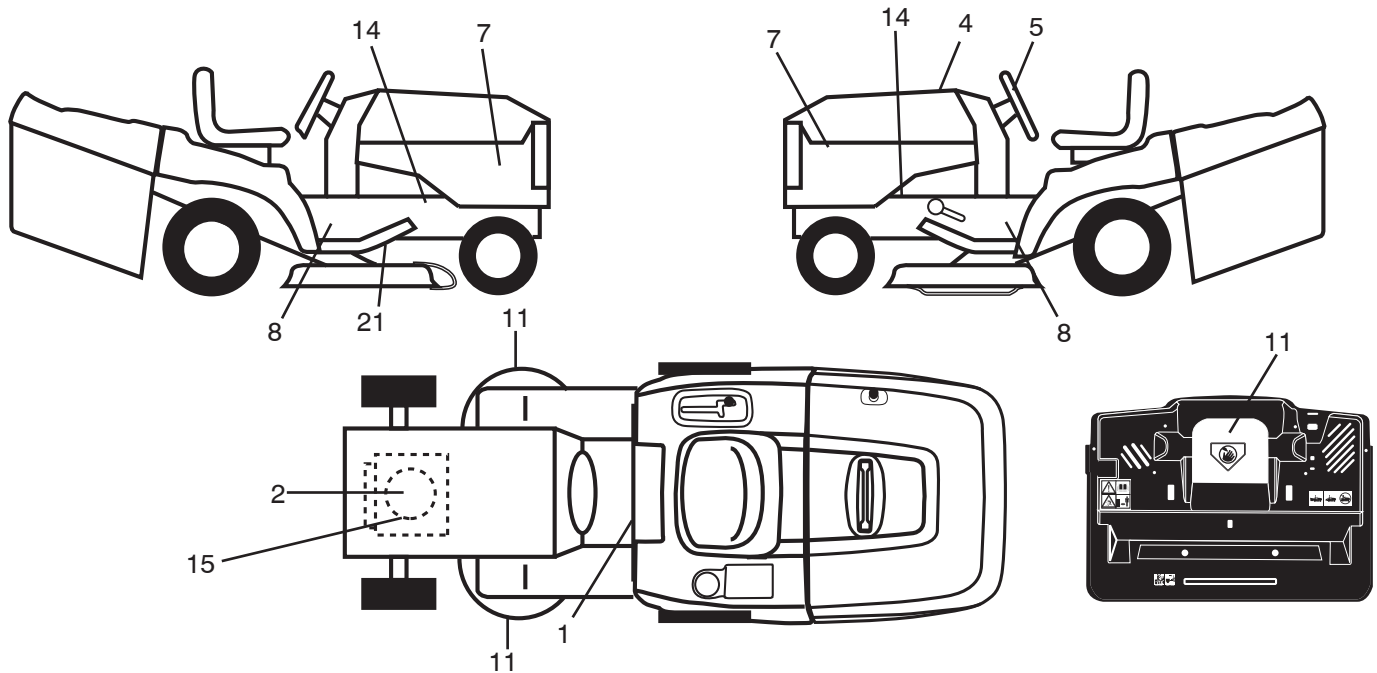

KEY NO.	PART NO.	DESCRIPTION
1	581 57 83-01	Decal Warning Sym
2	581 57 97-01	Decal Warning Eng. Sym.
4	532 43 98-33	Decal Replacement
5	587 73 15-01	Decal Wheel Steering
7	582 33 82-01	Decal Side Panel
8	581 57 98-01	Decal Warning Service Fire
11	581 57 91-01	Decal Cutfinger
14	581 57 96-01	Decal Chassis Hot Muffler
15	532 43 74-82	Decal Engine HP
21	532 44 11-89	Decal Hex Belt Sch 92 CRD
--	532 18 04-35	Decal, Backplate Symb.

KEY NO.	PART NO.	DESCRIPTION
--	532 44 46-19	Decal, Bypass
--	532 44 27-44	Decal, Battery Door
--	532 44 32-61	Decal, Inst. Mulch Plug
--	532 42 59-28	Pad Footrest RH
--	532 42 59-76	Pad Footrest LH
--	587 13 25-40	Manual Operator's (Euro)
--	587 13 25-50	Manual Operator's (Scand)
--	587 13 25-20	Manual Operator's (Ebloc)
--	587 13 25-30	Manual Operator's (Baltic)



WHEELS & TIRES

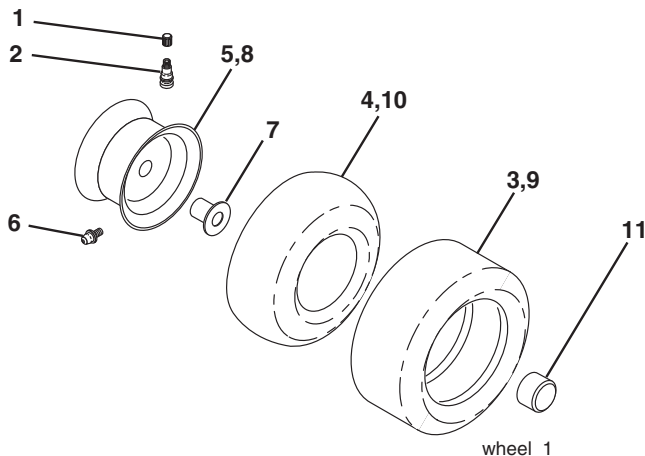

KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire Front 15 x 6-6
4	532 05 99-04	Tube Inner Front #35060
5	532 13 83-36	Rim Asm 6" Front Silver Service
6	532 12 49-57	Fitting Grease
7	532 12 49-59	Bearing Flange
8	532 13 83-37	Rim Asm 8" Rear Silver Service
9	532 42 05-31	Tire Rear 18 x 9.5-8
10	532 12 49-26	Tube Rear 9 5 x 8 Service
11	532 17 50-39	Cap Axle Blk 1 50 x 1 00
--	532 14 43-34	Sealant, Tire (10 oz. Tube)


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

SCH17

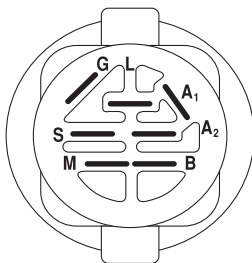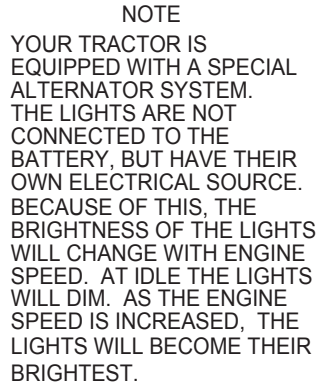


IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	
RUN/OVERRIDE	B+A1	
RUN	B+A1	L+A2
START	B + S + A1	

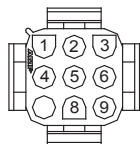

CHASSIS HARNESS
CONNECTOR (C1)
(MATING SIDE)

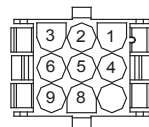

DASH HARNESS
CONNECTOR (C1)
(MATING SIDE)

WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE
CONNECTIONS

32




TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
ELECTRICAL 32

KEY NO.	PART NO.	DESCRIPTION
1	532 43 71-57	Battery
2	532 44 09-23	Screw Hex Head Cap M6 x 1.12 mm
16	532 17 61-38	Switch Interlock Push-In
21	532 40 02-52	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
25	581 48 98-01	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	581 48 98-02	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign.
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 42 10-02	Harness Ign. Dash
43	532 19 25-07	Solenoid
55	817 06 05-12	Screw Thdrol. 5/16-18 x 3/4 TYTT
71	532 44 08-20	Harness Ign. Chassis
79	532 17 52-42	Socket Asm. Bulb Twistlock
83	532 43 67-74	Nut Square M6 x 1.8.5 x 11 mm
87	532 42 10-60	Switch Interlock Clutch Cable
99	817 00 05-12	Bolt Hex Wsh Hd 5/16-18 x 3/4
102	532 40 44-54	Harness Pigtail
105	532 40 75-68	Switch Reversing
107	532 18 03-79	Switch Full Bagger Indicator
108	532 42 10-62	Switch Snapmount

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
CHASSIS AND ENCLOSURES 39

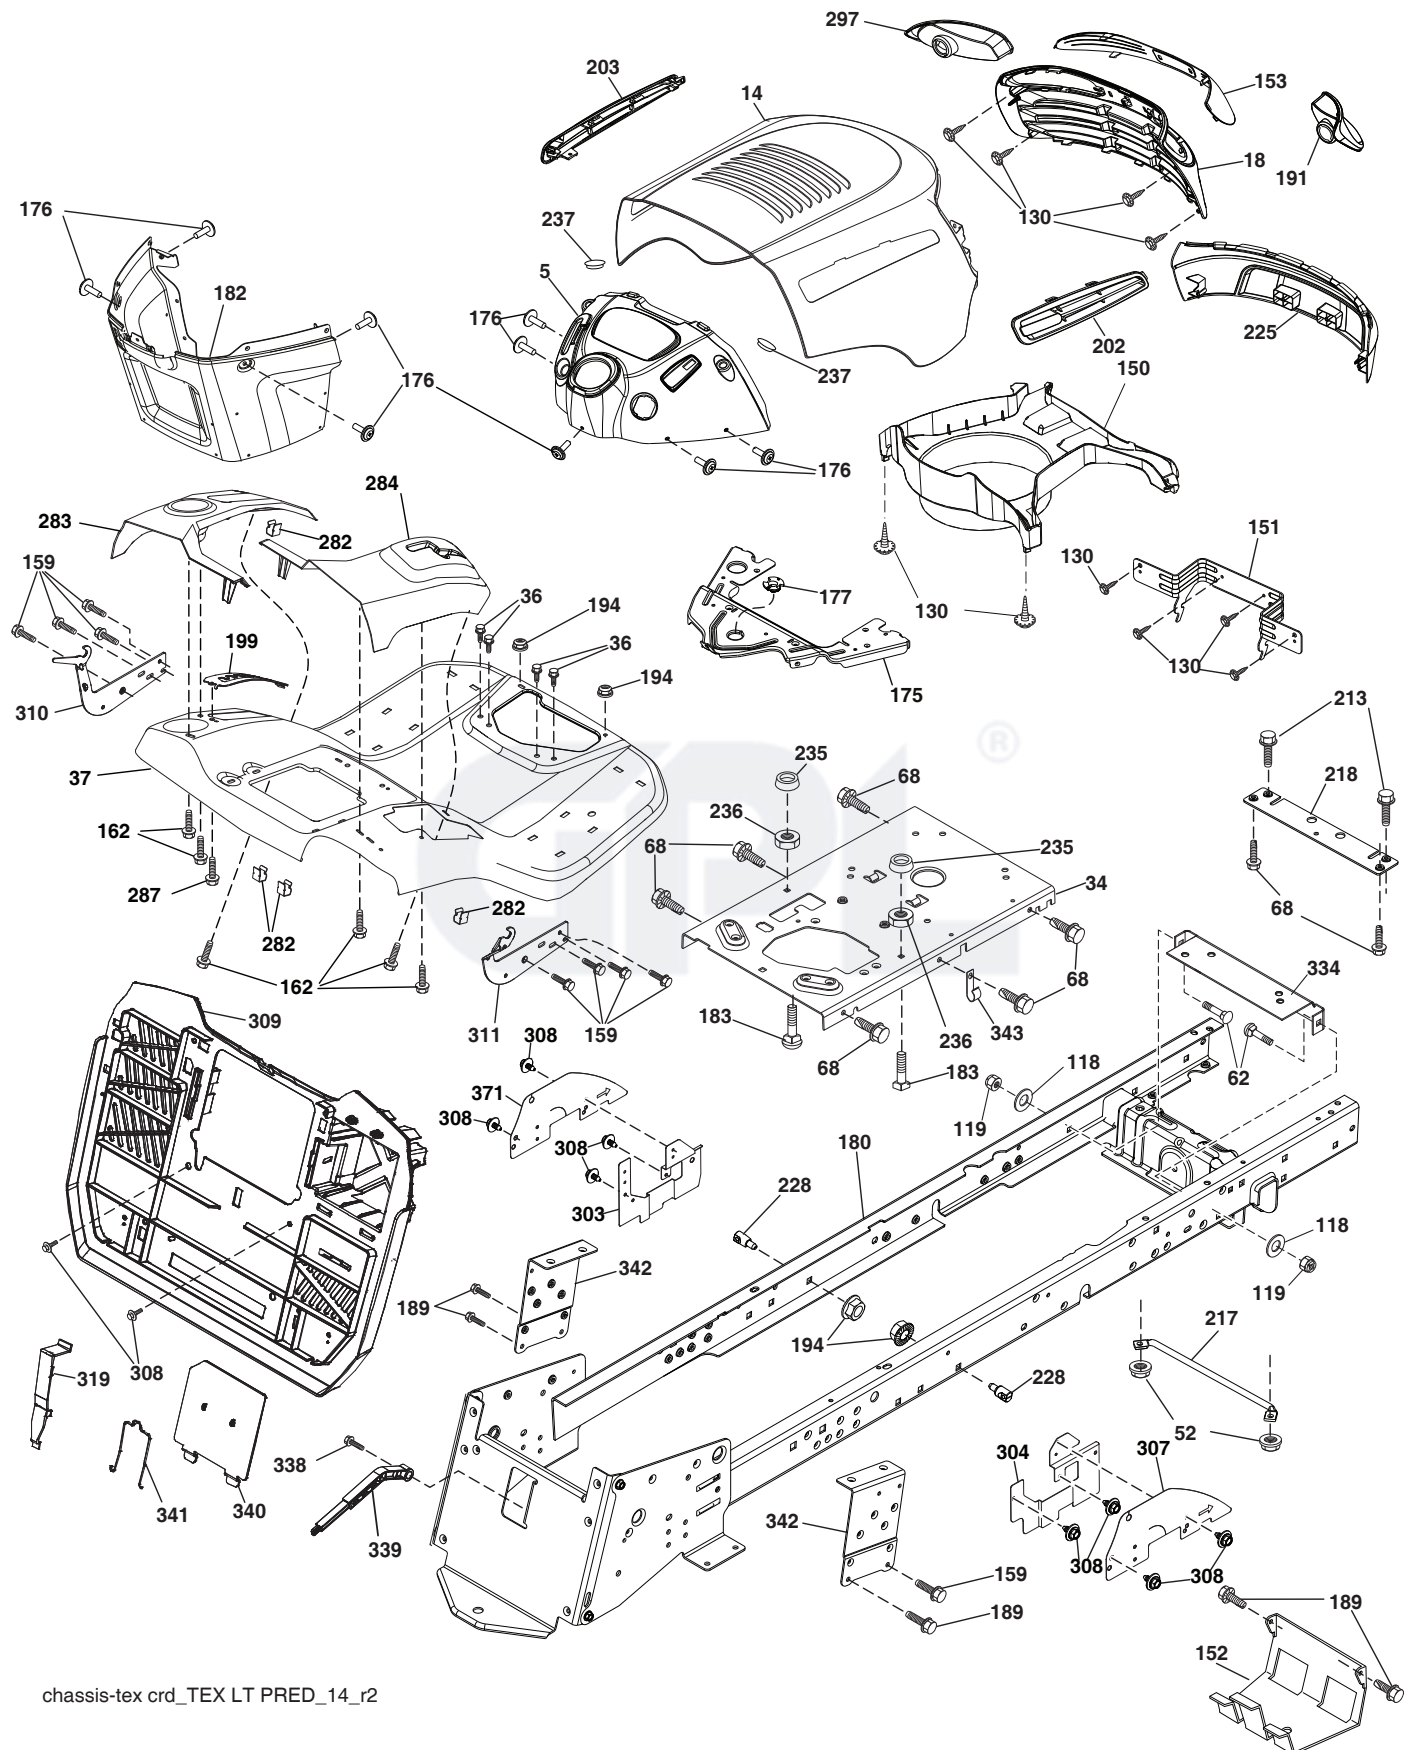

chassis-tex crd_TEX LT PRED_14_r2


TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21

CHASSIS AND ENCLOSURES **39**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
5	532 40 95-97	Dash	217	532 40 91-67	Rod Pivot Hood
14	532 44 12-87	Hood	218	532 19 63-95	X-Piece Hood Stop
18	532 42 65-11	Grille	225	589 03 29-01	Bumper Grille
34	580 91 09-01	Plate Engine	228	532 19 51-61	Stud Fastener
36	817 06 05-12	Screw 5/16-18 x 3/4	235	532 40 61-29	Spacer Fender
37	532 44 22-31	Fender	236	873 93 05 00	Nut Center Lock 5/16-18 unc
52	873 68 05-00	Nut Crownlock 5/16-18	237	532 40 37-04	Plug Mount Cargo
62	872 11 06-08	Bolt 3/8-16 x 1 Gr. 5	282	532 41 41-10	Clip Retainer
68	817 49 05-08	Screw Thdrol. 5/16-18 x 1/2	283	532 44 03-61	Console Deck Lift
118	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	284	532 44 12-92	Console Shift RH
119	873 68 06-00	Nut Crownlock CRD	287	817 60 04-06	Screw Hex Washead. 1/4-20 x 3/8
130	532 41 63-58	Screw #10 x .750 BOS Thread	297	532 40 18-27	Insert Reflective LH
150	532 40 02-67	Air Duct	303	587 49 31-02	Shield LH
151	532 18 75-68	Bracket Pivot	304	587 49 33-02	Shield RH
152	532 19 95-35	Shield Browning	307	587 52 74-01	Shield Upper RH
153	532 44 42-64	Lens	308	532 17 18-77	Bolt 5/16-18 unc x 3/4
159	817 00 06-12	Screw 3/8-16 x 3/4	309	501 18 83-01	Backplate
162	532 14 24-32	Screw Hex Wsh. Hi-Lo 1/4 x 1/2 unc	310	532 44 66-36	Bracket Hangbar Bag LH
175	532 19 94-72	Crossmember	311	532 44 66-37	Bracket Hangbar Bag RH
176	532 40 07-76	Screw 10-24 x 5/8	319	532 17 46-62	Bracket Actuator Bagger
177	532 19 52-28	Bushing Steering	334	532 44 25-37	Bracket Engine
180	581 18 71-01	Chassis	338	532 43 66-40	Bolt Shoulder
182	532 40 71-76	Dash Lower	339	532 43 66-41	Lever Bagger Full
183	874 52 05-20	Bolt 5/16-18 x 1-1/4	340	532 44 09-31	Door Battery Tray
189	817 00 05-12	Screw 5/16-18 x 3/4	341	582 06 08-01	Latch Batter Tray
191	532 41 65-02	Insert Reflective RH	342	532 43 59-38	Support Fender
194	873 90 05-00	Nut Lock Hex Flange 5/16-18	343	532 44 07-49	Clip
199	532 41 87-39	Plate Deck Lift	371	587 49 45-01	Shield Upper
202	588 99 35-01	Vent Side Hood RH			
203	588 99 35-02	Vent Side Hood LH			
213	874 76 05-12	Bolt Hex HD 5/16-18 unc 3/4			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
DRIVE 40

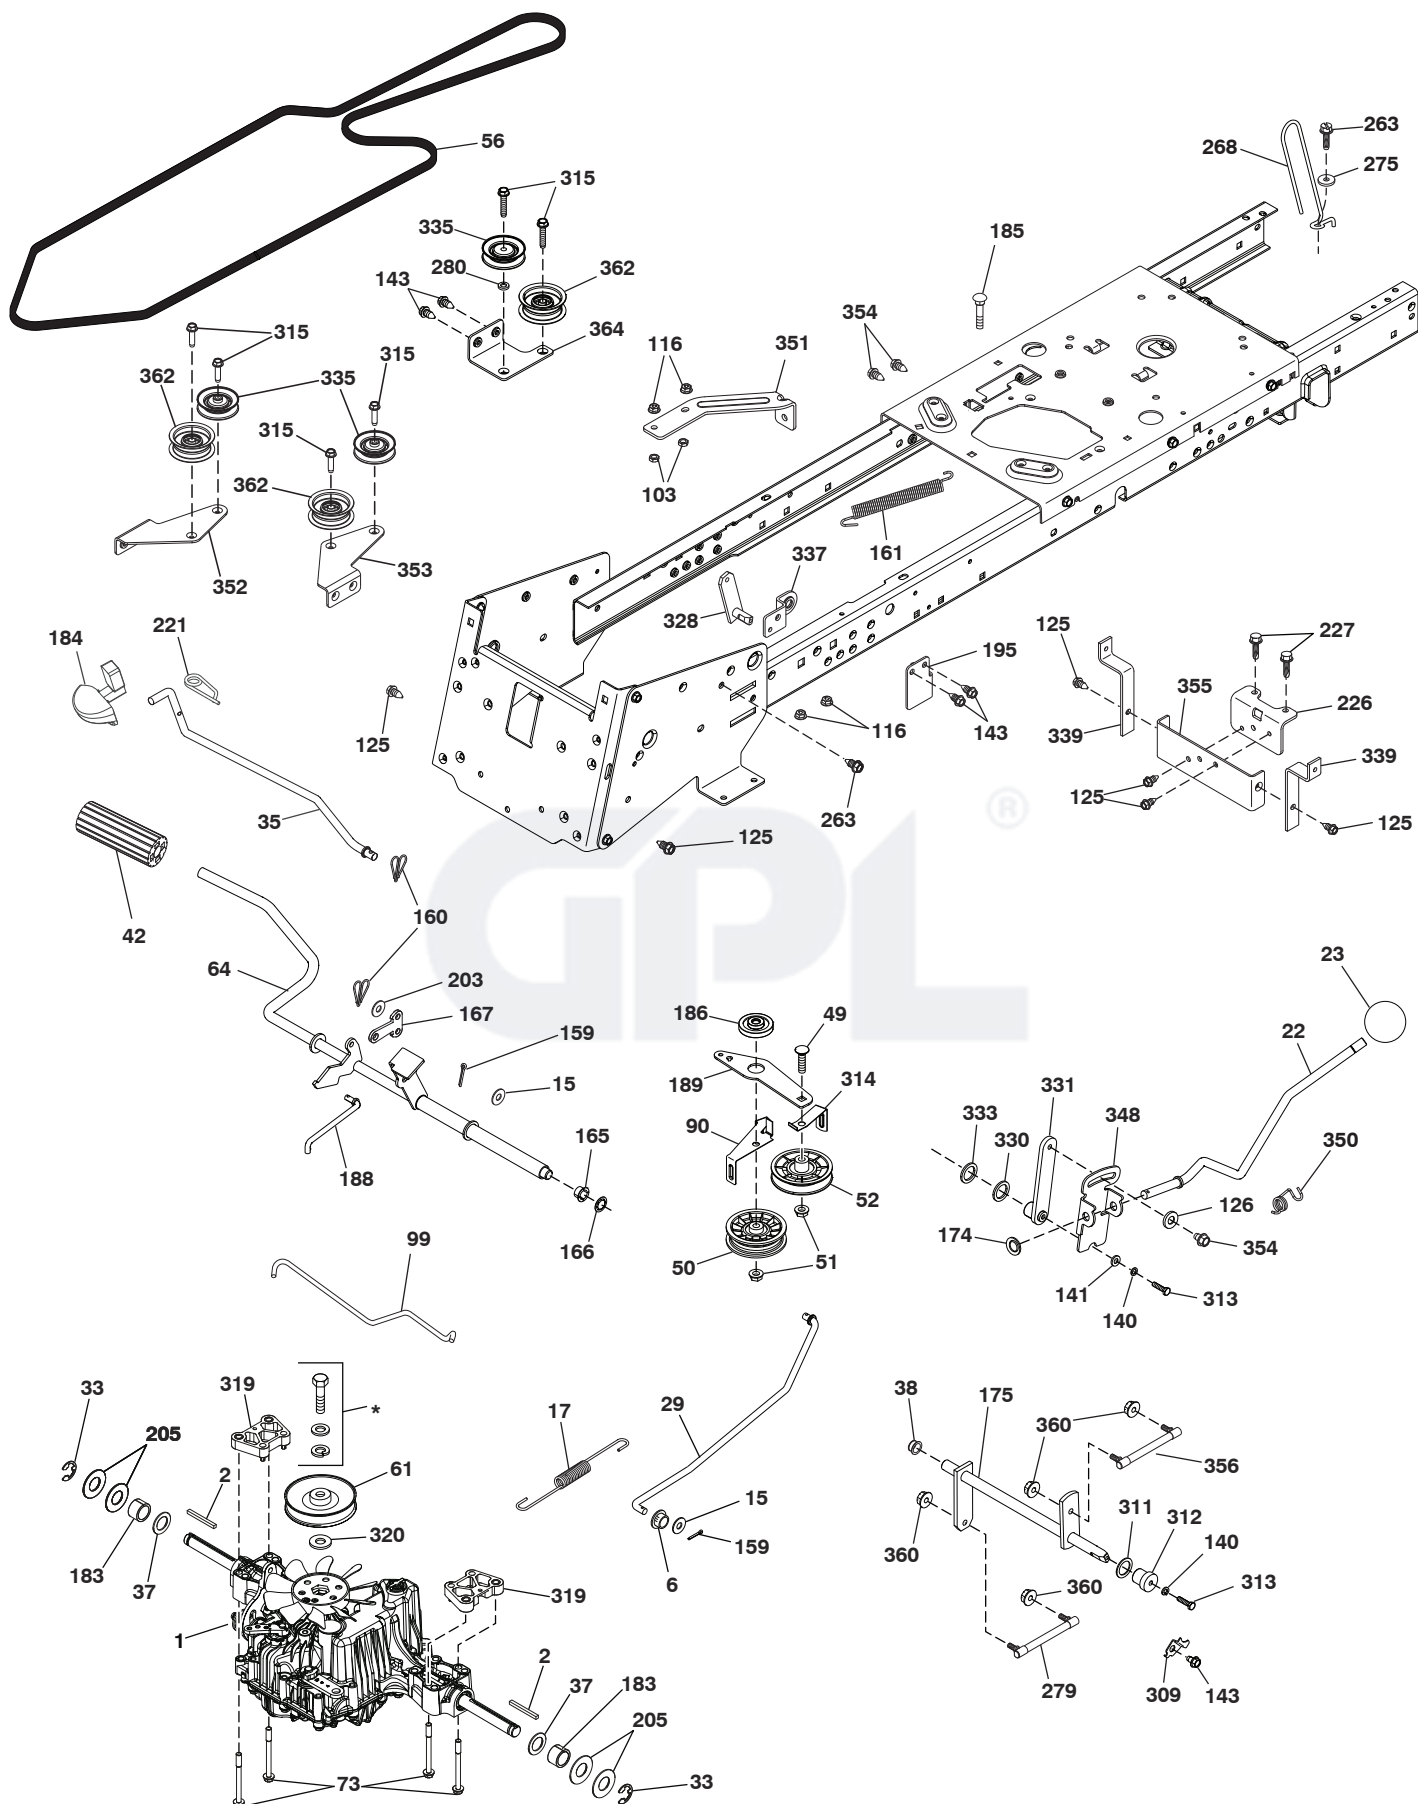


TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21

DRIVE **40**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Transaxle, Tufftorq K46DC (448355) (Order parts from transaxle manufacturer.)	188	582 21 70-01	Link Clutch Ground Drive, Long
2	532 12 35-83	Key Square	189	532 43 36-11	Bellcrank Ground Drive
6	532 12 42-08	Bushing Snap	195	580 45 69-01	Bracket Rod Brake
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	203	819 11 11-16	Washer 11/32 x 11/16 x 16
17	532 43 62-27	Spring, Brake	205	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
22	532 44 32-46	Rod Shift	221	532 40 31-87	Retainer Spring
23	532 13 05-64	Knob	226	532 40 15-64	Bracket Mount Torque
29	532 43 58-81	Rod, Brake	227	817 49 05-12	Screw Thdrol 5/16-18 x 3/4
33	812 00 00-01	Ring E	263	817 00 06-12	Screw Thdr 3/8-16 x 3/4
35	532 40 10-31	Rod, Brake, Park	268	532 18 24-02	Guard Muffler
37	532 18 89-67	Washer Hardened	275	819 13 16-14	Washer 13/32 x 1 x 14 Ga.
38	532 16 96-13	Nyliner Snap In	279	532 44 42-83	Link Shift
42	532 12 48-72	Cover, Foot Pedal	280	819 11 10-12	Washer 11/32 x 5/8
49	872 11 06-14	Bolt 3/8-16 x 1 3/4	309	532 16 55-81	Plate Fstnr. Cross
50	532 19 43-27	Pulley Idler Flat	311	532 16 98-45	Washer Nylon
51	873 90 06-00	Lock Nut 3/8-16	312	532 16 56-14	Hub Tapered
52	532 19 43-26	Idler V-Groove	313	874 78 04-16	Bolt Hex Fin 1/4-20 unc x 1 Gr. 5
56	532 44 18-36	V-Belt, Drive	314	532 44 47-13	Keeper Belt
61	532 43 77-88	Pulley Transaxle	315	817 58 05-20	Screw Thdrol 5/16-18 x 1.25
64	532 19 62-00	Shaft Asm. Pedal Brake Control	319	532 43 67-94	Spacer Transaxle
73	874 49 05-56	Bolt Hex 5/16-18 x 2-1/2 G5	320	532 18 76-90	Washer Spacer
90	532 44 36-05	Keeper Belt Clutching	328	532 43 57-58	Shaft Shift Front
99	532 44 39-47	Rod Spring Bypass	330	532 16 95-93	Washer Nyliner
103	873 35 05-00	Nut Hex Jam 5/16-18 unc	331	532 44 36-06	Hub Shift
116	873 90 05-00	Nut Lock Hex Flange 5/16-18	333	532 17 08-68	Washer Spring Wave
125	817 00 05-12	Screw 5/16-18 x 3/4	335	532 19 95-34	Idler V Pulley Grnd. Dr.
126	532 16 60-02	Washer Srrtd. 5/16 ID x 1 x .125	337	532 43 59-37	Bracket Support Shift
140	810 04 04-00	Washer Lock 1/4	339	532 43 68-67	Strap Torque
141	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.	348	532 44 36-07	Arm Clevis Rod
143	817 49 05-08	Screw Thdrol 5/16-18 x 1/2	350	532 44 50-20	Spring Torsion
159	876 02 04-12	Pin Cotter 1/8 x 3/4	351	532 43 69-98	Bracket Deck Sway
160	532 16 94-84	Retainer Clip	352	532 43 58-19	Bracket Idler
161	532 10 57-09	Spring, Return, Clutch	353	532 43 65-77	Bracket Idler RH
165	532 19 62-12	Nyliner	354	817 49 05-10	Screw 5/16-18 x 5/8
166	532 42 91-64	Nut Push .625	355	532 43 56-69	Bracket
167	532 40 52-57	Latch Brake Parking	356	532 44 64-41	Link Shift Cross Shaft
174	532 19 72-89	Nut Push	360	532 44 47-14	Nut 5/16-24
175	532 44 18-23	Shaft Asm Shift	362	532 43 68-12	Idler Flat
183	532 13 70-57	Spacer Axle	364	532 44 30-32	Bracket Idler
184	532 41 14-84	Handle Parking Brake			
185	872 11 06-22	Bolt 3/8-16 x 2-3/4			
186	532 19 43-21	Spacer Retainer			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
ENGINE 24

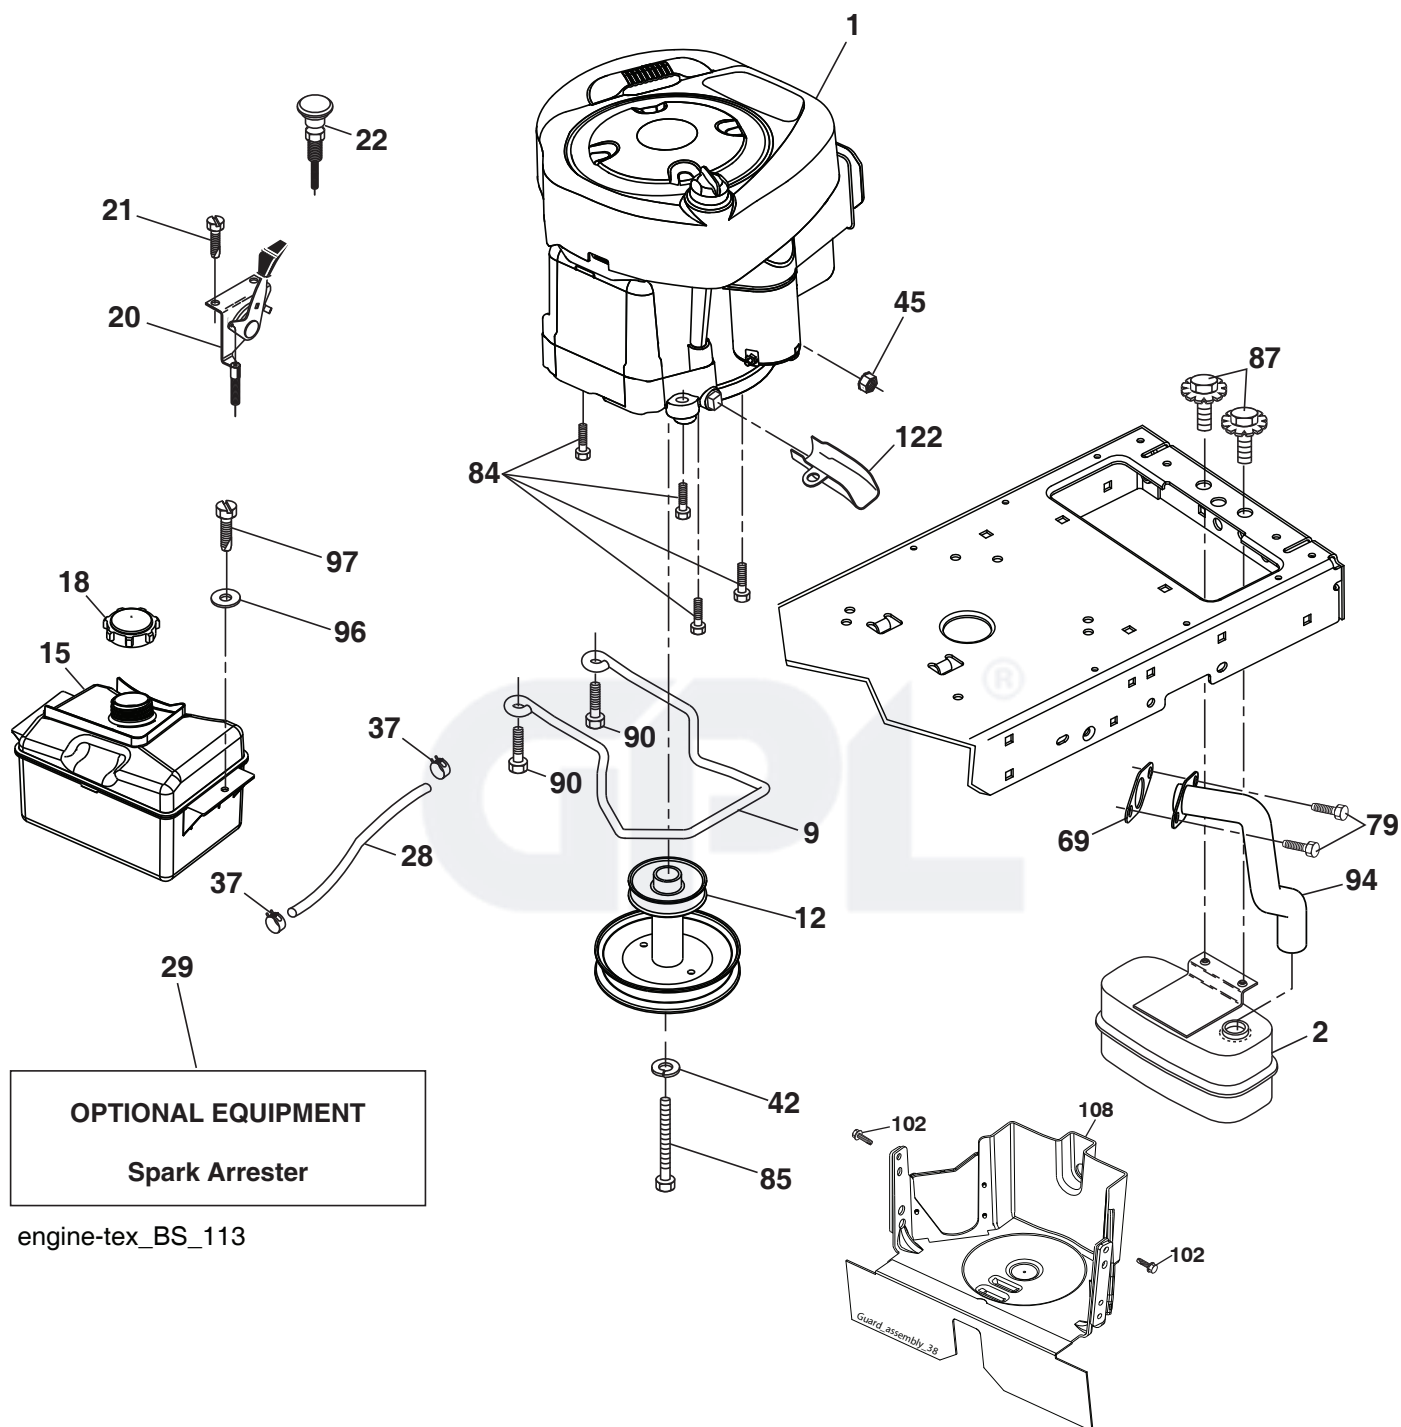

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21

ENGINE **24**


KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Engine Briggs Model 31R677-0002-B1 (585688401)(Order parts from engine manufacturer.)
2	532 44 67-60	Muffler
9	501 83 26-02	Keeper Belt Engine
12	586 47 85-01	Pulley Engine
15	581 28 99-01	Tank Fuel 1.5
18	532 43 02-20	Cap Fuel
20	532 18 38-97	Control Throttle
21	532 41 63-58	Screw #10 x 0.750 BOS Thread
22	532 19 49-81	Control Choke
28	532 13 70-40	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
42	810 04 07-00	Lock Washer Hvy. 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
69	532 16 52-91	Gasket
79	532 19 23-34	Screw Socket HD 5/16-18 x .75
84	817 06 06-20	Screw 3/8-16 x 1
85	532 17 39-37	Bolt Hex 7/16-20 x 4 x Gr. 5-1.5 Thr
87	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems.
90	817 00 06-16	Screw 3/8-16 x 1
94	581 88 09-01	Tube Exhaust
96	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
97	817 67 04-12	Screw 1/4-20 x 3/4
102	817 06 05-16	Screw 5/16-18 x 1
108	532 42 30-41	Cover Pulley
122	532 42 19-22	Extension Drain Oil

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
STEERING ASSEMBLY 41

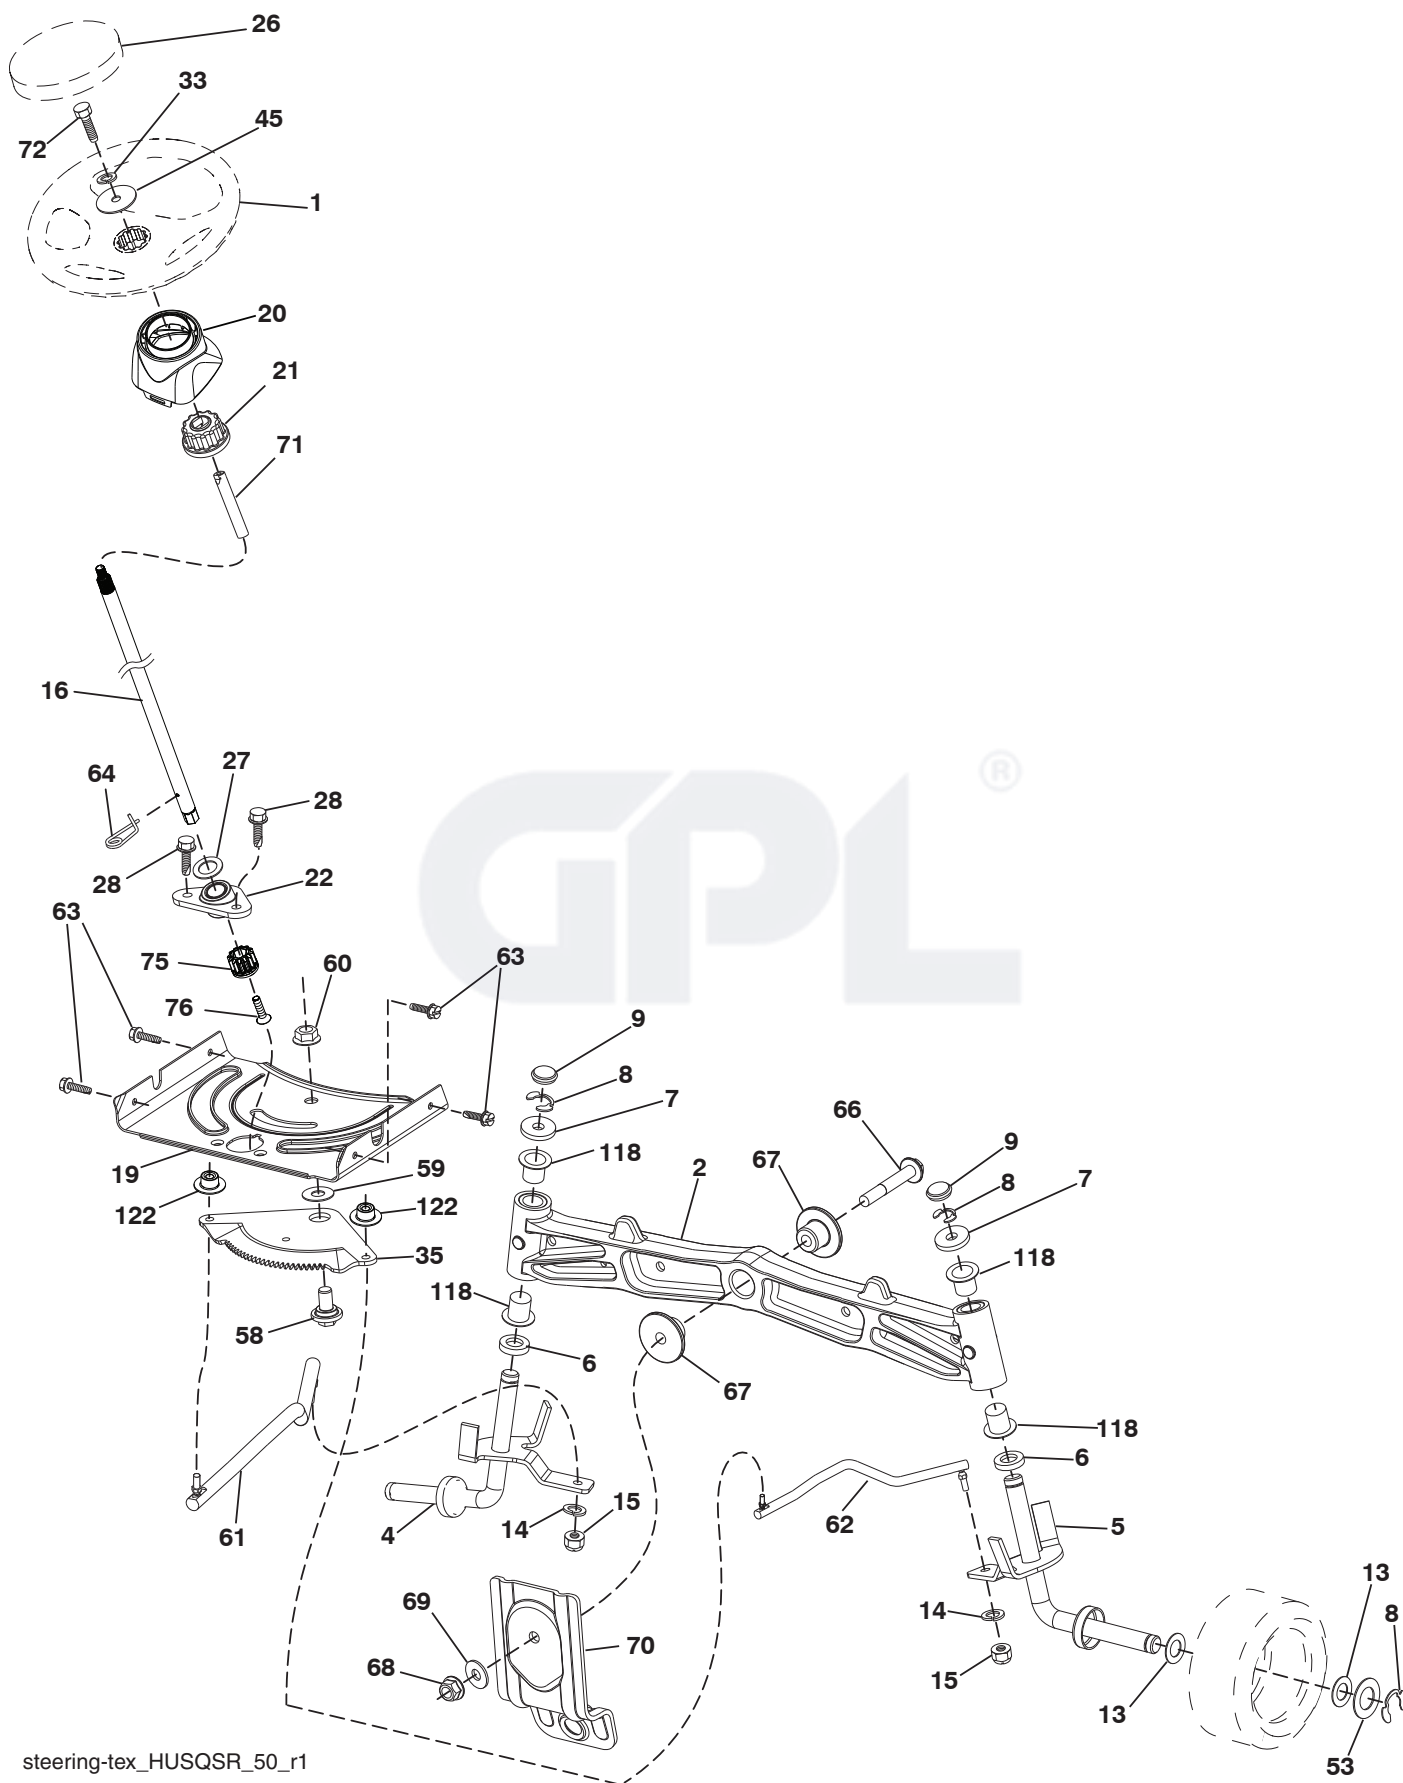


steering-tex_HUSQSR_50_r1

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
STEERING ASSEMBLY 41

KEY NO.	PART NO.	DESCRIPTION
1	532 42 41-46	Wheel, Steering Husq SR
2	532 41 35-91	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Hardened
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy. Hlcl. Spr. 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	585 86 92-02	Steering Shaft
19	532 19 47-29	Plate Steering
20	532 40 97-63	Boot, Steering
21	532 18 67-37	Adapter, Wheel Steering
22	585 02 98-02	Bearing
26	532 42 41-47	Insert, Wheel Steering Husq SR
27	819 21 16-16	Washer 21 x 32 x 1 x 16 Ga.
28	817 00 06-12	Screw 3/8-16 x 3/4
33	810 04 05-00	Washer Lock 5/16
35	532 19 47-32	Gear, Sector Plate
45	819 11 38-12	Washer 11/32 x 3/8 x 12 Ga.
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd. 7/16-14 x 3 Serr.
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	585 33 88-01	Bracket Deck Susp. Front
71	532 19 07-52	Shaft Extension Steering
72	532 42 89-82	Bolt Fin Hx 5/16-18 x 4 w/Patch
75	580 68 37-01	Pinion
76	580 68 36-01	Screw Head Sock
118	532 40 60-13	Bushing Axle
122	532 44 49-62	Cap Gear

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
MOWER DECK 44

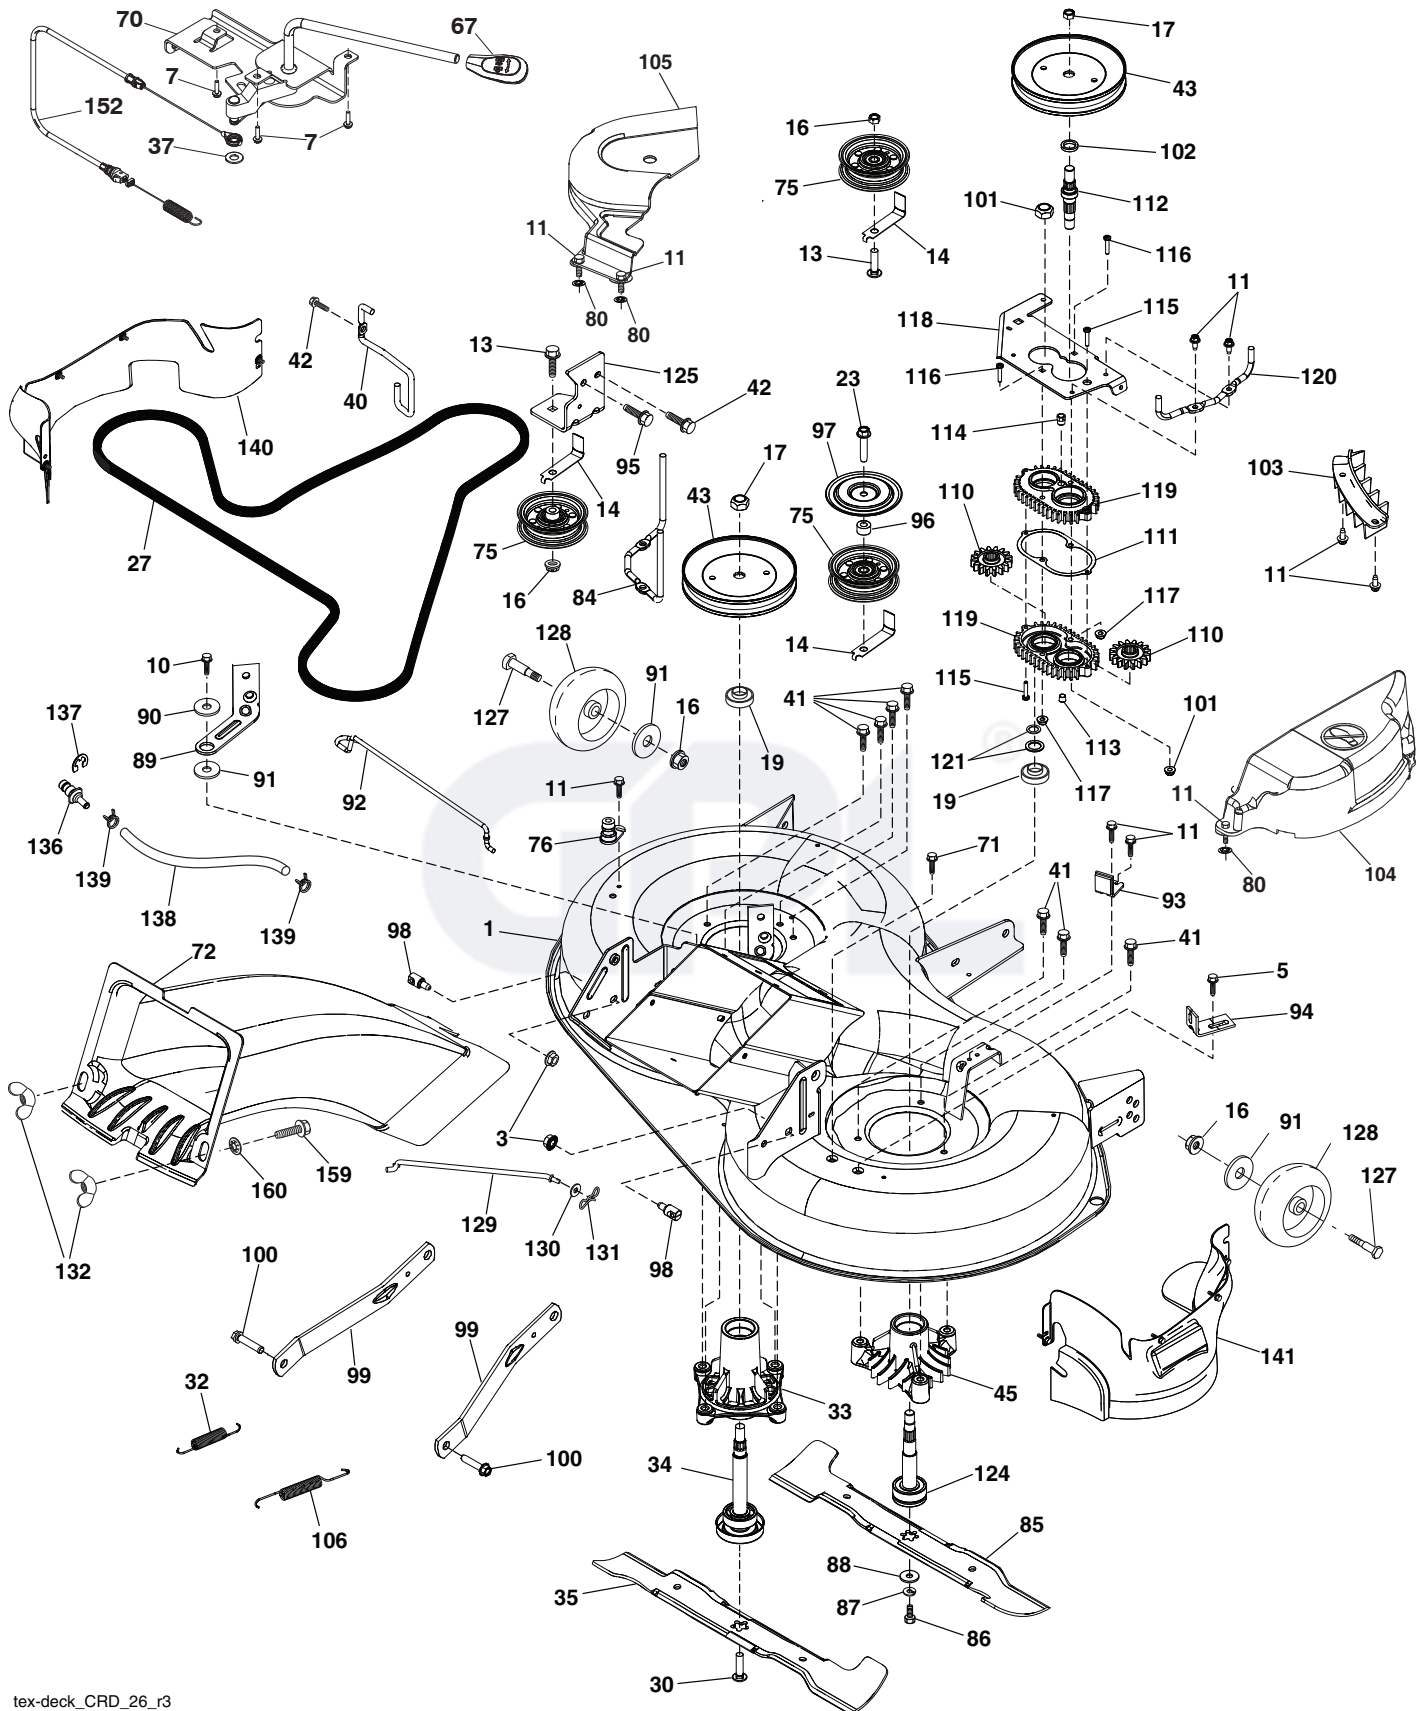

tex-deck_CRD_26_r3


TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21

MOWER DECK **44**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 43 69-70	Deck Weldment	105	532 43 87-44	Mandrel Cover LH
3	873 90 05-00	Nut Lock Hex Flange 5/16 - 18	106	532 19 32-16	Spring Brake Return
5	817 00 05-10	Bolt 5/16-18	110	587 93 48-01	Gear Output
7	532 41 63-58	Screw #10 x 0.750 BOS Thread	111	532 43 69-79	Gasket Gearcase
10	817 00 06-16	Screw 3/8-16x1 smgm1 tap	112	532 44 38-52	Shaft Gearcase
11	532 13 77-29	Screw Thd Roll 1/4 - 20 X 5/8	113	532 43 85-33	Plug Oil
13	872 11 06-12	Bolt Carr Sh 3/8 - 16 X 1 - 1/2 Gr. 5	114	588 17 05-01	Valve Relief
14	532 15 60-85	Keeper Belt Idler	115	818 03 10-16	Screw Torx #10-24 x 1
16	873 90 06-00	Nut Lock FIG 3/8 - 16 unc	116	872 11 04-14	Bolt 1/4-20 x 1.75 Gr. 5
17	532 40 02-34	Nut Flange Lock Top	117	873 90 04-00	Nut Hex Flange 1/4-20 unc
19	585 32 39-01	Bearing Mandrel	118	532 43 69-89	Arm Clutching
23	817 49 06-28	Screw Thdrol 3/8 - 16 X 1-3/4	119	532 43 81-66	Gearcase Subasm
27	532 43 97-26	V-Belt Drive	120	532 43 69-91	Keeper Belt RH
30	584 30 93-01	Screw Sems 7/16-20 x 1 Hex	121	532 43 69-85	Washer
32	532 40 18-72	Spring Return Deck	124	532 43 69-86	Non Greasable Mandrel Shaft
33	532 18 72-81	Housing Mandrel 4pt Service	125	532 44 04-20	Bracket Idler Chasses
34	587 25 65-01	Shaft Asm	127	532 19 34-06	Bolt Shoulder 3/8-16 x 3-5/8 Gr. 5
35	532 42 79-84	Blade Mower LH	128	532 17 48-73	Wheel Guage
37	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.	129	532 40 48-51	Rod Anti-Sway
40	532 19 72-58	Keeper Belt Engine LH	130	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
41	584 95 39-01	Bolt Hex Wsh Hd .313-18 x 1.19	131	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
42	817 00 05-12	Screw 5/16-18 x 3/4	132	532 17 88-99	Knob Handle
43	532 19 74-73	Pulley Mandrel	136	532 43 96-39	Washout Port Hookup
45	532 13 71-52	Housing Mandrel	137	812 00 00-29	Ring Klip
67	532 40 30-12	Handle Clutch Cable	138	532 44 07-43	Hose 3/8 Long 12"
70	532 40 12-46	Clutch Asm Manual LT Pred	139	532 44 07-42	Hose 3/8 Clamp
71	817 67 06-08	Screw Thdrol 3/8-16 x 1/2	140	501 57 94-01	Guard Asm LH
72	582 03 56-01	Chute Upper	141	501 57 93-02	Guard Asm. RH
75	532 13 14-94	Pulley Idler Flat	152	532 44 04-88	Cable Clutch Manual w/Spring
76	532 43 96-40	Washout Port	159	872 14 06-14	Bolt 3/8-16 x 1-3/4
80	532 42 30-62	Palnut 1/4	160	532 16 89-37	Nut Push
84	532 43 25-20	Keeper Belt LH Mandrel	- -	587 25 33-01	Mandrel Assembly (Includes Housing (key #33), Shaft Assembly (key #34), And Bearing Only (key #19)- Pulley/Nut/Washer And Blade Bolt/Washers Not Included)
85	532 42 79-85	Blade Mower RH	- -	532 44 81-32	Gear Case Kit. Use .75 oz. Shell 460 Oil. (Include Gear Output (key #110), Gasket Gearcase (key #111), Shaft Gearcase (key #112), Plug Oil (key #113), Vent Breather 1/8 NPT (key #114), Screw Torx (key #115), Gearcase Subasm (key #119).
86	532 18 17-13	Bolt 3/8-24 x 1.50 Gr. 8	- -	532 44 11-31	Replacement Mower Complete
87	810 03 06-00	Washer Lock Hvy 3/8			
88	532 14 02-96	Washer Hard Blade Mower Vented			
89	532 43 81-24	Arm Brake 97 LH			
90	532 19 90-92	Spacer Retainer			
91	819 13 20-12	Washer 13/32 x 1-1/4 x 12 Ga.			
92	532 43 69-93	Rod Brake			
93	532 43 81-25	Arm Brake RH			
94	532 19 72-50	Bracket Clutch Cable			
95	817 00 06-12	Screw 3/8-16 x 3/4			
96	532 40 02-71	Spacer			
97	532 18 20-61	Shield Idler Mower			
98	532 19 51-61	Stud Fastener			
99	532 19 51-86	Arm Suspension Mower Rear			
100	532 19 65-39	Bolt Shoulder			
101	873 68 09-00	Nut Crownlock 9/16 - 18 unc			
102	532 40 25-11	Spacer Bearing Swing Plate			
103	532 43 69-92	Guard Front Vent			
104	532 43 89-68	Mandrel Cover RH			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
MOWER LIFT 45

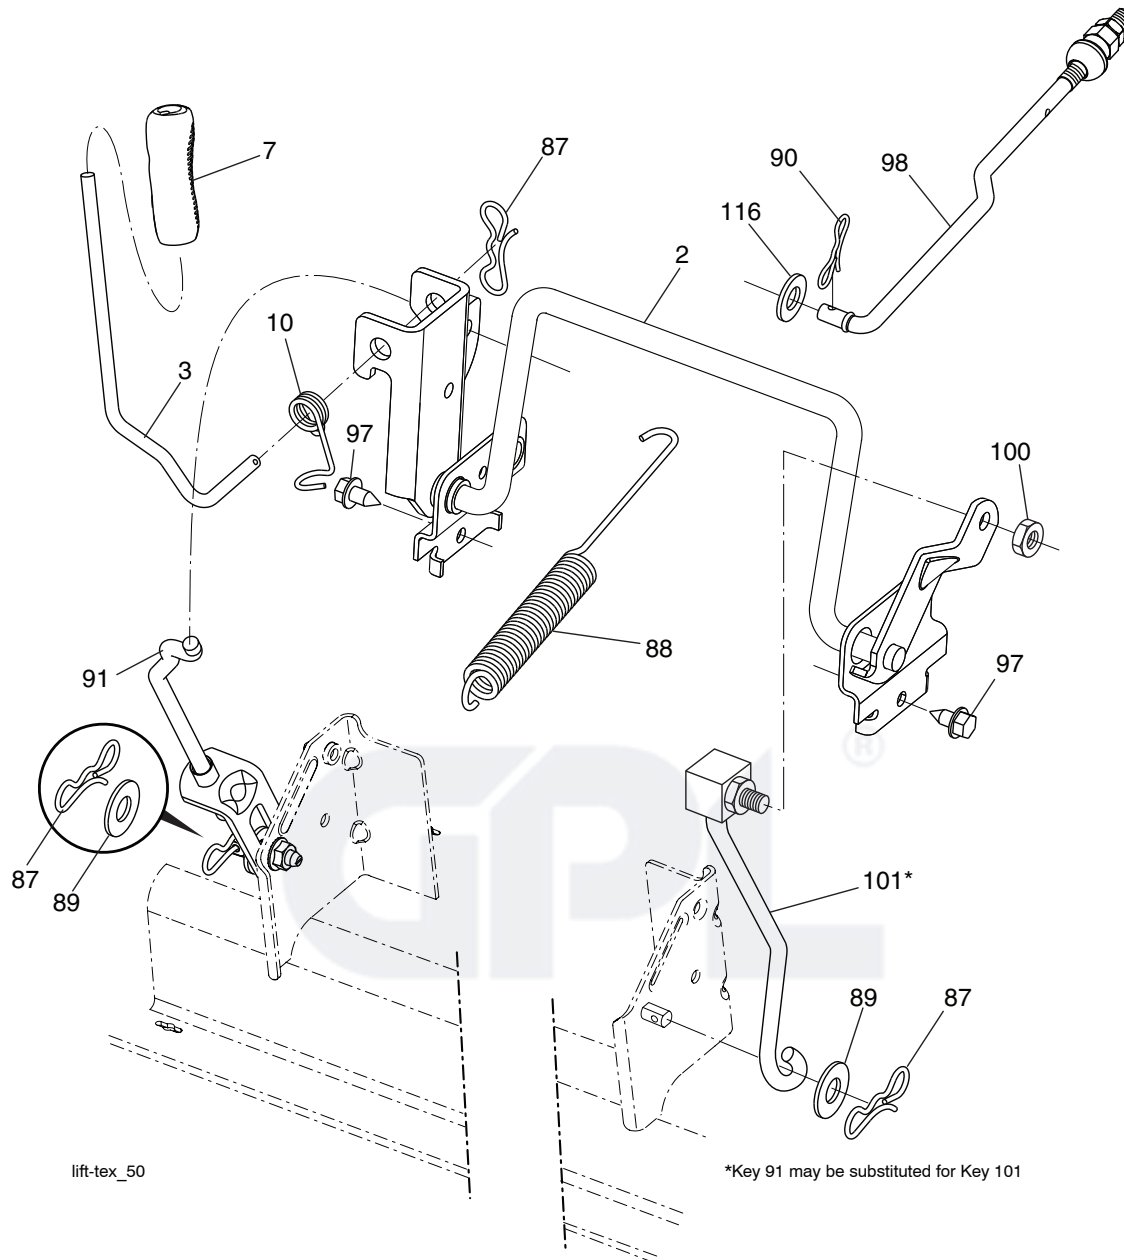


KEY NO.	PART NO.	DESCRIPTION
2	532 43 69-96	Deck Lift Weldment
3	532 19 52-31	Lever Asm., Lift RH
7	580 96 23-01	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 43 69-95	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	532 19 51-81	Link Lift Susp. Mower Rear

KEY NO.	PART NO.	DESCRIPTION
97	817 49 06-08	Screw 3/8-16 x 1/2
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Centerlock 3/8-16
101	532 40-70-03	Link Asm. Lift FXD
116	819 15 15-16	Washer 15/32 x 15/16 x 16 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
SEAT ASSEMBLY 42

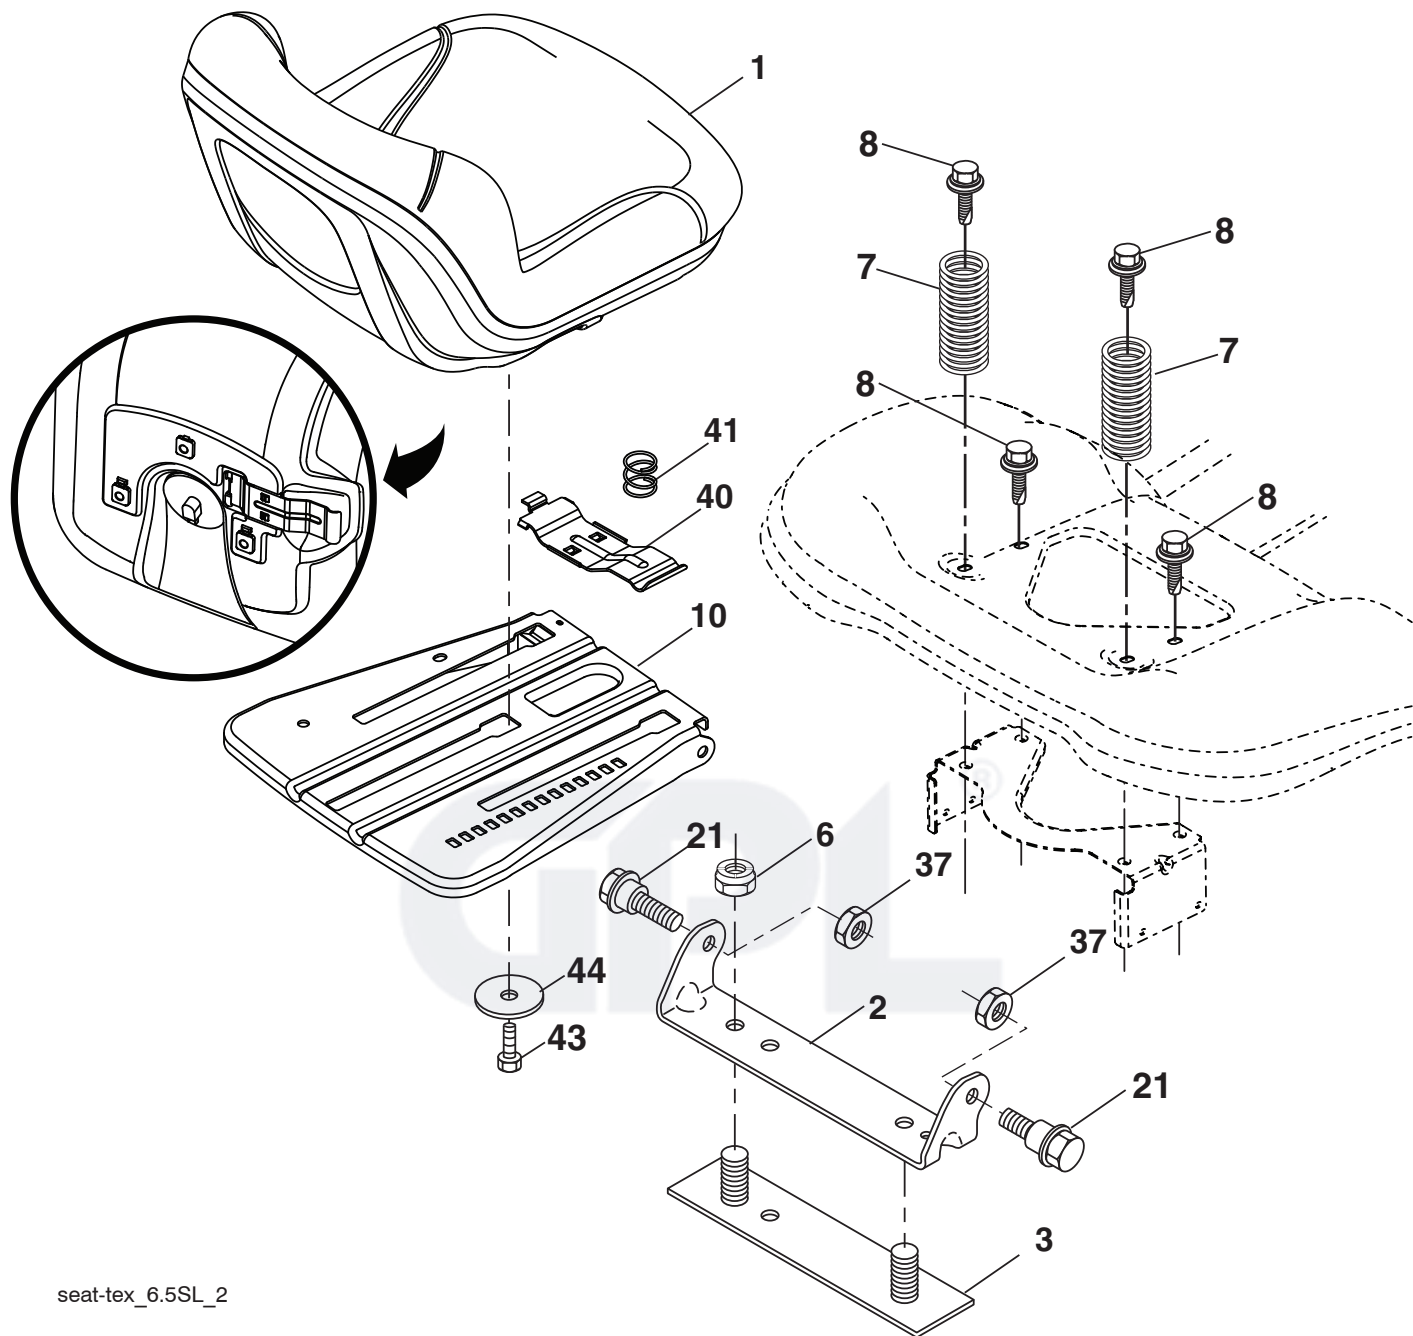


seat-tex_6.5SL_2

KEY NO.	PART NO.	DESCRIPTION
1	532 41 14-05	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm. Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	587 61 33-01	Spring, Seat Cprsn.
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems.
10	532 19 69-77	Pan, Seat
21	587 90 78-01	Bolt, Shoulder 5/16-18 x 5/8

KEY NO.	PART NO.	DESCRIPTION
37	873 80 05-00	Nut, Lock 5/16-18 unc
40	532 19 76-61	Handle
41	532 19 82-00	Spring
43	874 76 06-12	Bolt 3/8-16 unc x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

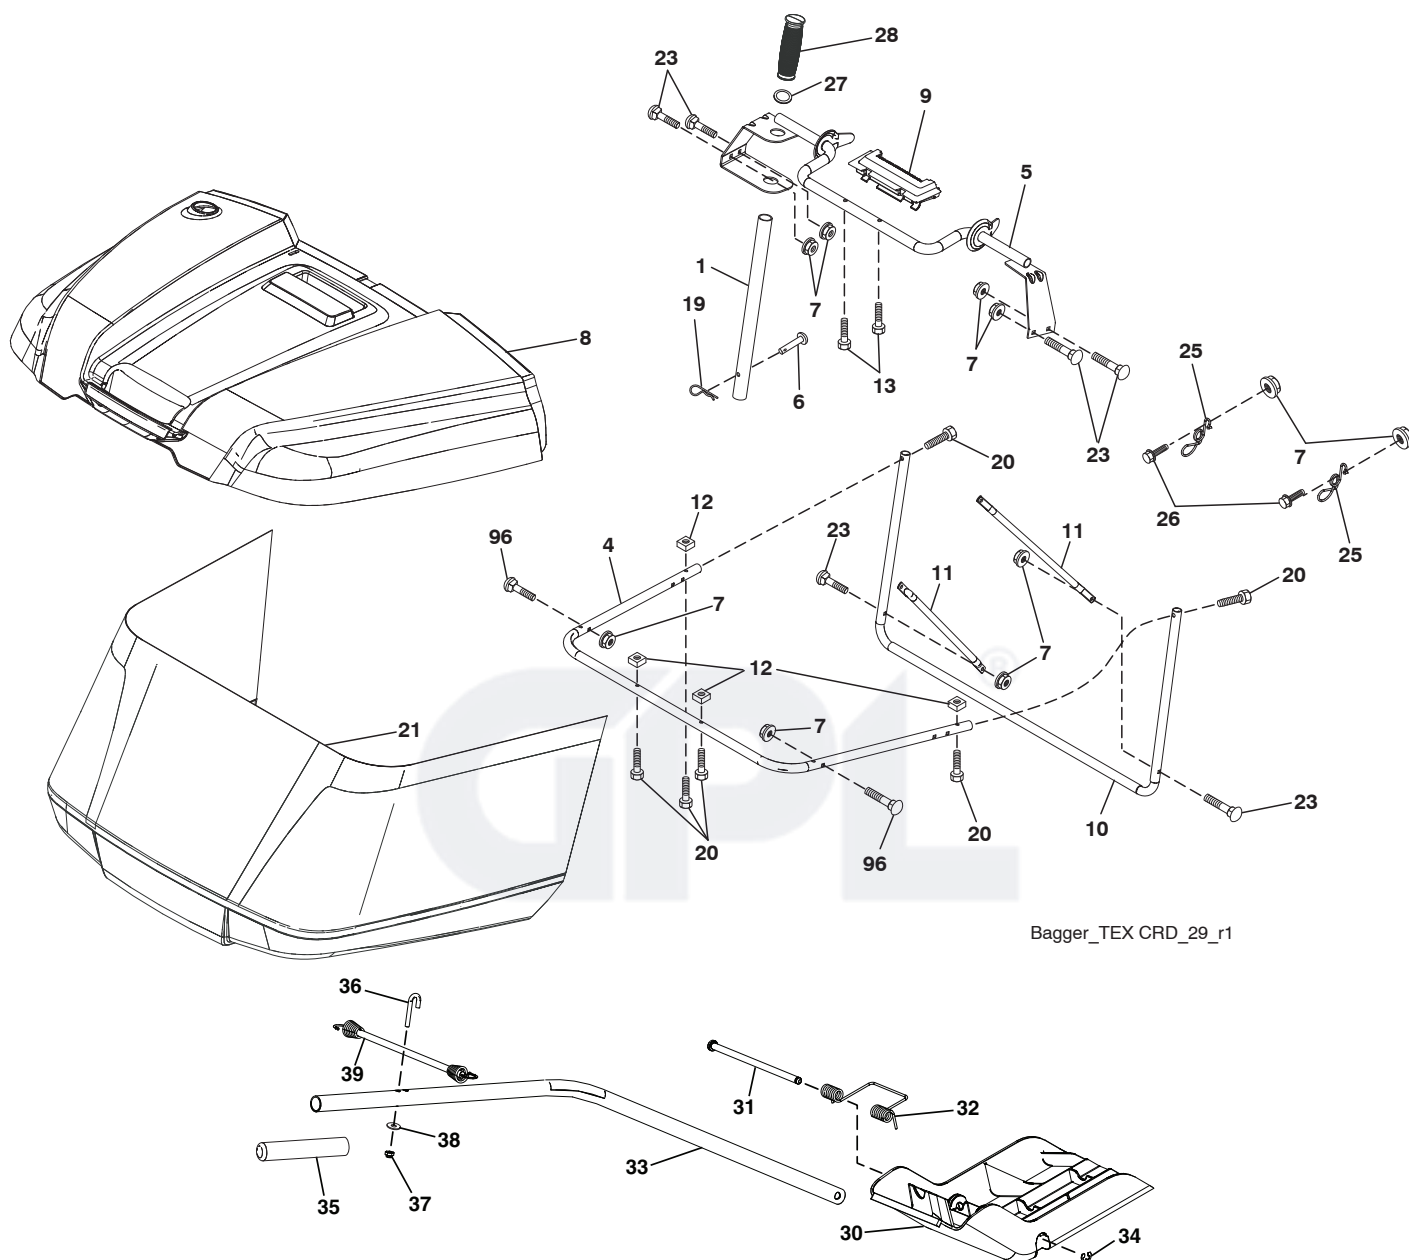

Bagger_TEX CRD_29_r1

TRACTOR - MODEL NO. LT2317 CMA (96051002104), PROD. NO. 960 51 00-21
BAGGER 46

KEY NO.	PART NO.	DESCRIPTION
1	532 42 86-10	Tube Handle Bagger
4	579 78 54-01	Frame Asm Bagger Top
5	532 41 76-32	Frame Asm Top Bagger
6	532 12 68-75	Rivet Drilled
7	873 90 04-00	Nut Hex Flange 1/4-20 unc
8	532 42 59-54	Cover Bagger
9	532 41 76-29	Insert Handle Bagger
10	532 43 67-70	Frame Front
11	532 43 67-71	Tubing Brace Bagger
12	532 42 17-93	Nut Square 1/4
13	532 42 17-80	Screw 1/4 x 1.150
19	532 19 42-08	Cotter Pin 5/16 Bow Tie
20	585 36 88-01	Screw Hex Cap 1/4-20 x 1.375 SHAK
21	532 44 83-07	Bag Asm
23	872 04 04-10	Bolt Carr. 1/4-20
25	532 42 16-14	Spring Latch Bagger
26	817 49 04-12	Screw
27	532 42 12-62	Grommet Rubber
28	532 16 57-87	Grip Handle Black
30	532 43 74-52	Plug Mulch
31	532 43 58-61	Pin Hinge
32	532 43 74-54	Spring Double Torsion
33	532 43 84-51	Shaft
34	532 43 79-88	E-ring
35	532 43 91-39	Grip Mulch
36	532 43 90-98	Bolt J
37	532 06 91-80	Nut Lock
38	819 07-08-18	Washer
39	532 43 92-42	Bungee
96	501 40 66-01	Screw Hex Cap 1/4-20 x 1.50

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

