


ILLUSTRATED PARTS LIST

MODEL NO. 96051004500


CUSTOMER CATALOG NO. LT2318CMA2

PRODUCT NO. 960 51 00 45

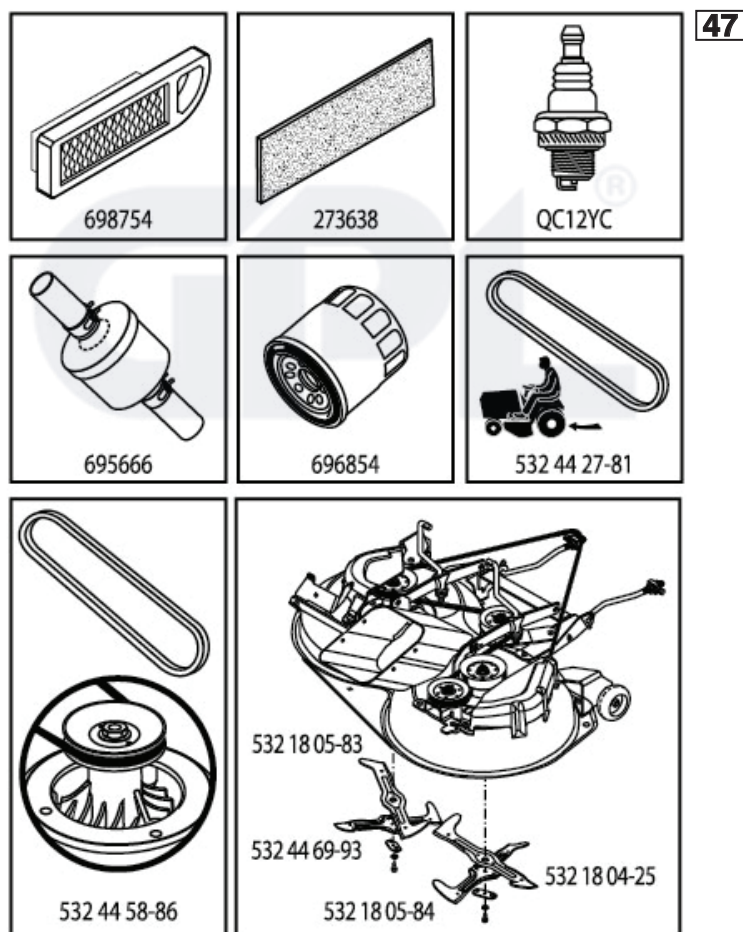

447617


TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
DECALS 27

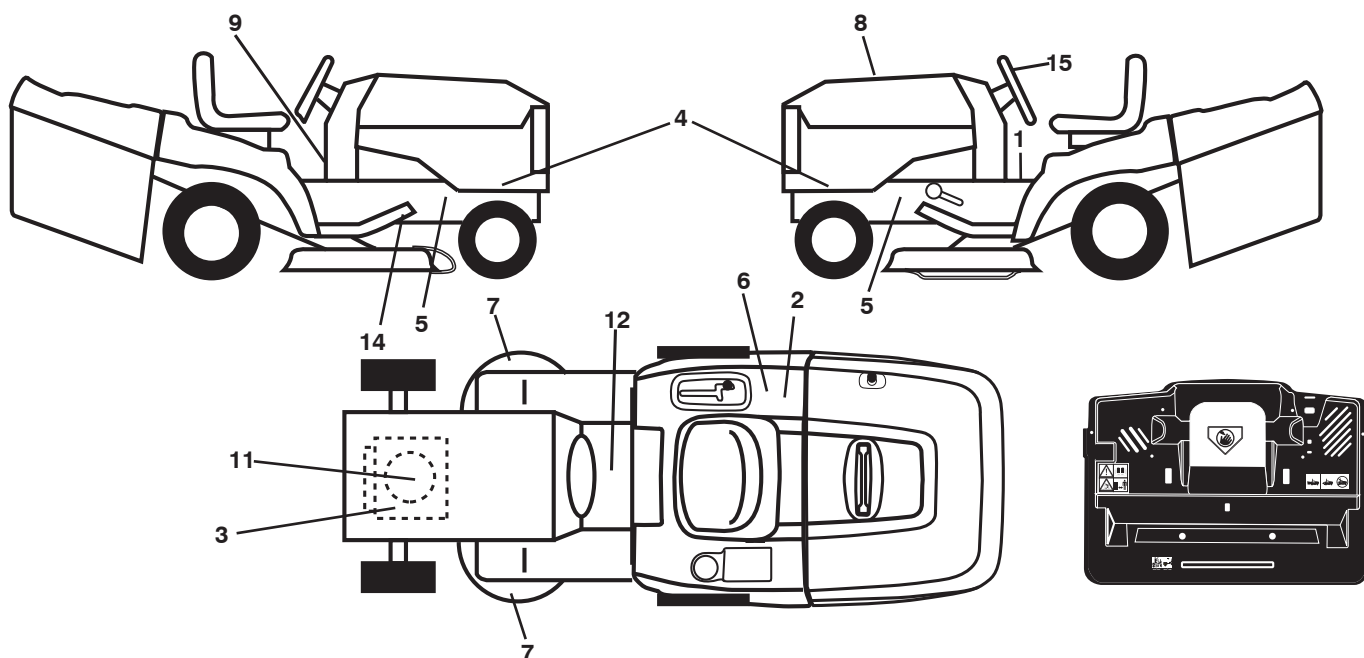

KEY NO.	PART NO.	DESCRIPTION
1	532 44 55-03	Decal, Operators Warning
2	532 43 26-41	Decal, Warn. Bagger Elect. Dump
3	532 19 68-41	Decal, Warning Eng. Symbols
4	532 44 75-96	Decal, Hood Panel
5	532 15 97-36	Decal, Chassis Hot Muffler
6	532 18 04-32	Decal, Fender 100 DB/CE
7	532 18 21-66	Decal, Cutfinger CE
8	532 44 76-17	Decal, Rpl.
9	532 44 02-47	Decal, Instruction MLCH/BG
11	532 43 74-93	Decal, Engine B&S

KEY NO.	PART NO.	DESCRIPTION
12	532 17 83-02	Decal Oper Cruise
14	532 44 11-89	Decal, Deck Belt Sch.
15	532 43 74-45	Decal, Steering
--	532 42 59-76	Pad, Footrest, LH
--	532 42 59-86	Pad, Footrest, RH
--	532 44 76-47	Manual Oper. Euro
--	532 44 76-48	Manual Oper. Scand
--	532 44 76-49	Manual Oper. E-Bloc
--	532 44 76-50	Manual Oper. Baltic

WHEELS AND TIRES



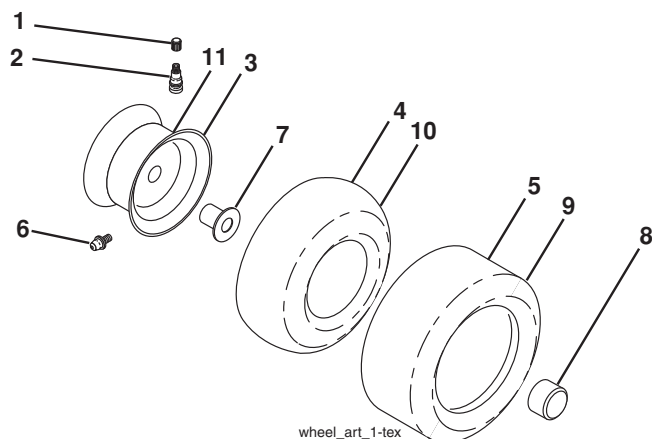


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 13 83-36	Rim Asm. 6" Front
4	532 05 99-04	Tube Front (Service Item Only)
5	532 10 62-22	Tire F T 15 x 6 0 - 6
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 17 50-39	Cap Axle Blk. 1 50 x 1 00
9	532 42 05-31	Tire R 18 x 9.5-8 Turf Saver LT
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 13 83-37	Rim Asm. 8" Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


SCHEMATIC 38

SCH25

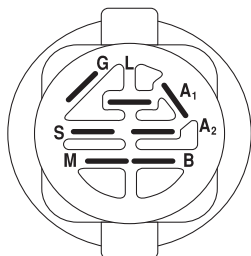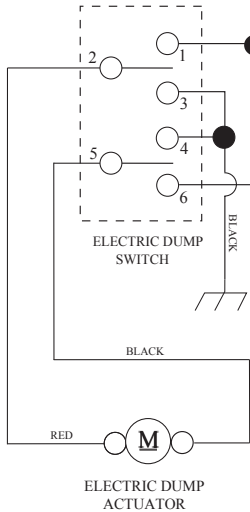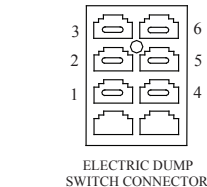

IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	
RUN/OVERRIDE	B+A1	
RUN	B+A1	L+A2
START	B + S + A1	



WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.


NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS



TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
ELECTRICAL 32

TC10S

With Service Minder Option



With Charge Indicator Option

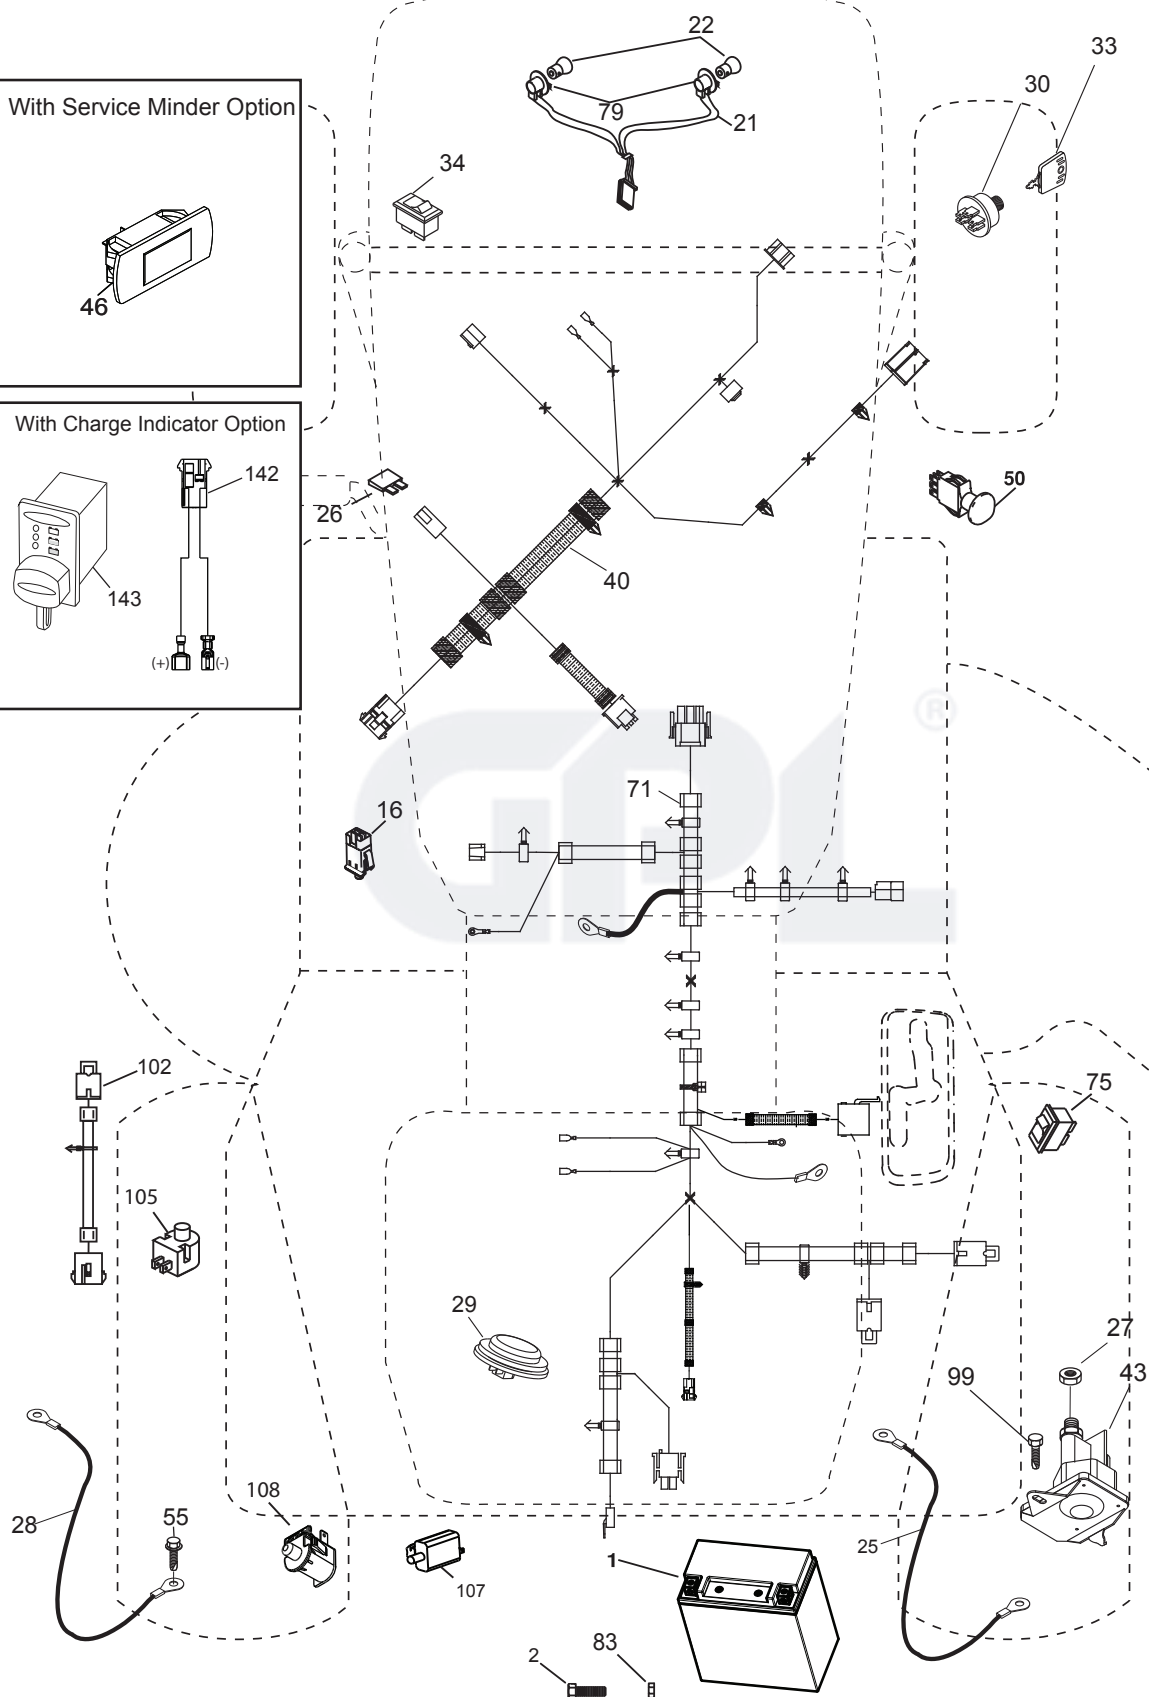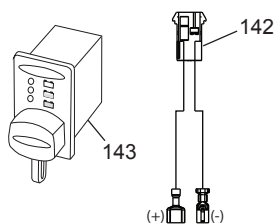


TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
ELECTRICAL 32

KEY NO.	PART NO.	DESCRIPTION
1	532 43 71-57	Battery
2	532 44 09-23	Screw Hex Hd Cap M6 x 1.12MM
16	532 17 61-38	Switch Interlock Push-In
21	532 40 02-52	Harness Light w/4152J
22	532 00 41-52	Bulb Light
25	532 44 13-82	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 44 13-83	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 44 80-36	Harness Ign. Dash/Lift
43	532 19 25-07	Solenoid
46	532 40 17-63	Gauge Serviceminder Hrmtr
50	532 17 46-51	Switch PTO
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4 TYTT
71	580 68 89-01	Harness Ignition Chassis/Lift
75	532 44 45-34	Switch Bag Dump
79	532 17 52-42	Socket Asm. Bulb
83	532 43 67-74	Nut Square M6 x 1.8.5 x 11MM
99	817 72 04-08	Screw 1/4-20 x 1/2
102	532 44 12-62	Harness Jumper
105	532 40 75-68	Switch Reverse
107	532 18 03-79	Switch Full Bagger
108	532 42 10-62	Switch Snapmount
142	532 44 80-57	Harness Jumper CTEK

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

CHASSIS AND ENCLOSURES 39



TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
CHASSIS AND ENCLOSURES 39

KEY NO.	PART NO.	DESCRIPTION
5	532 42 47-38	Dash
14	532 44 38-24	Hood
18	532 42 73-33	Grille
34	532 44 72-53	Plate Engine
36	817 06 05-12	Screw 5/16-18 x 3/4
37	532 44 13-39	Fender
52	873 68 05-00	Nut Crownlock 5/16-18
68	817 49 05-08	Screw Thdrol. 5/16-18 x 1/2
130	532 41 63-58	Screw #10 x .750 BOS Thread
150	584 86 29-01	Air Duct
151	532 44 54-94	Bracket Pivot
152	532 19 95-35	Shield Browning
153	532 42 47-17	Lens Bar
156	872 14 06-14	Bolt 3/8-16 unc x 1-3/4
159	817 00 06-12	Screw 3/8-16 x 3/4
162	532 14 24-32	Screw Hex Wsh. Hi-Lo 1/4 x 1/2 unc
171	532 44 12-89	Extension Bagger Full
175	532 19 63-04	Crossmember
176	532 40 07-76	Screw 10-24 x 5/8
177	532 19 52-27	Bushing Steering
178	532 19 97-82	Cargo Asm. Net
179	532 16 89-37	Nut Push
180	583 90 27-01	Chassis
182	532 43 89-67	Dash Lower
183	874 52 05-20	Bolt 5/16-18 x 1-1/4
189	817 00 05-12	Screw 5/16-18 x 3/4
194	873 90 05-00	Nut Lock Hex Flange 5/16-18
195	532 40 41-37	Plug Hole Dash Lower
198	532 44 15-52	Indicator Deck Lift
199	532 41 87-39	Plate Deck Lift
202	532 42 32-72	Side Vent RH
203	532 42 32-71	Side Vent LH

KEY NO.	PART NO.	DESCRIPTION
207	532 19 89-63	Bezel Grille RH
208	532 19 89-64	Bezel Grille LH
213	874 76 05-12	Bolt Hex HD 5/16-18 unc 3/4
217	532 40 91-67	Rod Pivot Hood
218	532 19 63-95	X-Piece Hood Stop
225	532 44 38-25	Bumper Grille
226	532 42 47-16	Logo
228	532 19 51-61	Stud Fastener
235	532 40 61-29	Spacer Fender
236	873 93 05 00	Nut Center Lock 5/16-18 unc
237	532 40 37-04	Plug Mount Cargo
282	532 41 41-10	Clip Retainer
283	532 44 76-71	Console Deck Lift
284	580 63 25-02	Console Shift RH
287	817 60 04-06	Screw Hex Wash. 1/4-20 x 3/8
308	532 17 18-77	Bolt 5/16-18 unc x 3/4
309	532 44 77-79	Backplate
319	532 44 68-76	Lever Bagger Presence
338	532 43 66-40	Bolt Shoulder
339	532 44 12-88	Lever Bagger Full
340	532 44 74-78	Door Battery Tray
342	532 43 59-38	Support Fender
343	532 44 07-49	Clip
344	532 43 89-70	Control EZ Mulch
345	532 44 06-39	Knob Oval
347	532 44 58-32	Subasm. Hitch Tow
348	532 44 49-26	Solenoid Cover
349	532 43 66-06	Bracket Support

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

This diagram illustrates the exploded view of a drive mechanism assembly, showing the relationship between various components. The main assembly consists of a central drive unit (1) connected to a pedal (56) via a series of linkages and pulleys. Key components include:

- Drive Unit (1):** The central motor or actuator.
- Pedal (56):** The large, curved component at the top left.
- Linkages and Pulleys:** Various components (e.g., 27, 335, 342, 359, 362, 363, 364) that transmit motion from the pedal to the drive unit.
- Mounting Brackets and Plates:** Components like 116, 161, 196, and 197 that provide structural support and alignment.
- Fasteners:** Numerous screws (e.g., 125, 143, 160, 185, 206, 207, 213, 221, 226, 227, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400) and pins (e.g., 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400) used for assembly.

The diagram is a technical drawing showing the exploded view of a drive mechanism assembly. It includes a central drive unit (1) and a pedal (56) connected by a series of linkages and pulleys. The assembly is shown in a disassembled state to illustrate the relationship between the various components. The components are labeled with numbers, and the diagram is a technical drawing showing the exploded view of a drive mechanism assembly. It includes a central drive unit (1) and a pedal (56) connected by a series of linkages and pulleys. The assembly is shown in a disassembled state to illustrate the relationship between the various components. The components are labeled with numbers, and the diagram is a technical drawing showing the exploded view of a drive mechanism assembly.

drive-TeXCrd-Gen2_K46_pedal_6_r3

TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
DRIVE 40

KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Transaxle, Tufftorq K46DF (446488) (Order parts from transaxle manufacturer.)
2	532 12 35-83	Key Square
6	532 12 40-28	Bushing
17	532 43 62-27	Spring, Brake
26	532 19 96-79	Spring Return
27	817 49 06-08	Screw Thdrol 3/8-16 x 1/2
29	532 44 27-95	Rod, Brake
30	819 13 16-16	Washer 13/32 x 1 x 16 Ga.
33	812 00 00-01	Ring E
35	583 86 45-01	Rod, Brake, Park
37	532 18 89-67	Washer Hard. .793 x 1.637 x 0.60
38	532 16 96-13	Nyliner Snap In
42	532 12 48-72	Cover, Foot Pedal
49	872 11 06-14	Bolt Rdhd 3/8-16 unc x 1-3/4 Gr. 5
50	532 19 43-27	Idler Flat
51	873 90 06-00	Lock Nut 3/8-16
52	532 19 43-26	Idler V-Groove
56	532 44 27-81	V-Belt, Drive
61	532 44 51-51	Pulley Transaxle
64	532 19 78-65	Shaft Asm.
73	874 49 05-44	Bolt Hex Flghd 5/16-18 Gr. 5
90	532 44 36-05	Keeper Belt Clutching
92	874 76 05-20	Bolt Fin. Hex 5/16-18 unc x 1.25
99	532 44 39-47	Rod Bypass
103	873 35 05-00	Nut
116	873 90 05-00	Nut Lock Hex Flange 5/16-18
125	817 00 05-12	Screw 5/16-18 x 3/4
140	810 04 04-00	Washer Lock Hvy. Helical 1/4
143	817 49 05-08	Screw Thdrol 5/16-18 x 1/2 TYTT
159	876 02 04-12	Pin Cotter 1/8 x 3/4
160	532 16 94-84	Retainer Clip
161	532 10 57-09	Spring, Return, Clutch
163	532 44 27-93	Rod Control
166	532 42 91-64	Nut Push .625
167	532 40 52-57	Latch Brake Parking
175	532 42 93-59	Shaft Shift Tapered
183	532 13 70-57	Spacer Axle
184	532 44 14-55	Handle Parking Break
185	872 11 06-22	Bolt Rdhd 3/8-16 unc x 2-3/4 Gr. 5
186	532 19 43-21	Spacer Retainer
188	532 19 43-23	Link Clutch Ground Drive

KEY NO.	PART NO.	DESCRIPTION
189	532 43 36-11	Bellcrank Grounddrive
195	532 43 58-65	Bracket Brake Rod
196	817 00 06-16	Screw 3/8-16 x 1
197	532 19 58-04	Link Clutch Anti-Rotation
203	819 11 11-16	Washer 11/32 x 11/16 x 16 Ga.
205	532 12 17-48	Washer 25/32 x 1-5/8 16 Ga.
206	532 19 78-67	Bracket Mount Latch
207	532 19 78-68	Latch Control
208	532 19-78-69	Gear Sector Control Cruise
209	532 19 95-92	Rod Control Cruise
210	532 40 09-80	Rocket Asm Pedal
211	532 12 01-83	Bearing Nylon
213	532 40 31-19	Knob Control Cruise
214	532 42 12-63	Pedal Forward Pad
215	532 41 94-82	Pedal Reverse Pad
221	532 40 31-87	Retainer Spring Clip
222	879 21 20-10	Washer 21/32 x 1-1/4
226	532 40 15-64	Bracket Mount
227	817 49 05-12	Screw
279	532 44 42-83	Link Asm.
280	819 11 10-12	Washer 11/32 x 5/8 x 12 Ga.
309	532 16 55-81	Plaste Fstnr
311	532 16 98-45	Washer Nylon
312	532 16 56-14	Hub Tapered Round
313	874 78 04-16	Bolt Hex Fin 1/4-20 x 1 Gr. 5
314	532 44 47-13	Belt Keeper
315	817 58 05-20	Screw Thdrol 5/16-18 x 4.25
335	532 19 95-34	Pulley V-Idler
339	532 43 68-67	Strap Torque K46 CRD Tex
342	532 18 26-82	Keeper Belt 2.5
351	532 43 69-98	Bracket 97
352	532 43 56-45	Bracket Idler CRD Tex
355	532 43 56-69	Strap Torque K46
359	817 49 06-10	Screw Hxwh. Thdr. 3/8-16 x 5/8
360	532 44 47-14	Nut Hex Centerlock 5/16-24 unf
362	532 43 68-12	Idler Flat 2.25"
363	532 44 27-80	Spacer 343 x 63 x .62
364	532 44 30-32	Bracket Idler

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

engine-tex_bs-2cyl_88



**TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
ENGINE 24**

KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Engine B&S Model No. 405577-2220-B1 (438697)(Order parts from engine manufacturer.)
2	532 14 97-23	Muffler
9	532 19 43-20	Keeper Belt Engine
11	532 40 00-08	Clutch Electric
12	532 40 50-97	Pulley Engine
15	532 43 08-25	Tank Fuel 2.0
18	532 43 02-20	Cap Fuel
20	532 17 83-85	Control Throttle
21	532 41 63-58	Screw #10 x 0.750 BOS Thread
22	532 19 15-96	Control Choke
28	532 13 70-40	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
41	532 12 61-97	Washer 1-1/2 OD x 15/32 ID x .250
42	810 04 07-00	Lock Washer Hvy. 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
62	532 43 40-17	Shield Heat Muffler
69	532 16 53-91	Gasket
70	581 88 11-01	Exhaust Tube LH
71	581 88 10-01	Exhaust Tube RH
79	532 18 39-06	Screw Socket HD 5/16-18 x 1
84	817 06 06-20	Screw 3/8-16 x 1-1/4
85	532 17 39-37	Bolt Hex 7/16-20 x 4 x Gr. 5-1.5 Thr
87	532 17 18-77	Bolt 5/16-18 x 3/4
90	817 00 06-16	Screw 3/8-16 x 1
96	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
97	817 67 04-12	Screw 1/4-20 x 3/4
122	532 42 19-22	Extension Drain Oil

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

This technical diagram illustrates the exploded view of a steering knuckle assembly. The components are numbered as follows:

- Top Components:** 26 (Upper control arm), 51 (Pin), 45 (Pin), 1 (Steering knuckle), 20 (Hub), 21 (Nut).
- Lower Components:** 16 (Lower control arm), 13 (Pin), 28 (Pin), 22 (Pin), 64 (Pin), 63 (Pin), 57 (Pin), 19 (Pin), 59 (Pin), 122 (Pin), 35 (Pin), 58 (Pin), 61 (Pin), 4 (Pin), 14 (Pin), 15 (Pin), 69 (Pin), 68 (Pin), 70 (Pin).
- Central Components:** 9 (Pin), 8 (Pin), 7 (Pin), 118 (Pin), 2 (Pin), 67 (Pin), 66 (Pin), 9 (Pin), 8 (Pin), 7 (Pin), 118 (Pin), 6 (Pin), 5 (Pin), 14 (Pin), 15 (Pin), 13 (Pin), 8 (Pin), 53 (Pin).

The diagram includes a large 'GPL' watermark in the background.

TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
STEERING ASSEMBLY 41

KEY NO.	PART NO.	DESCRIPTION
1	532 42 41-46	Wheel, Steering
2	532 41 35-91	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Hardened
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy. Hlcl. Spr. 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 19 47-46	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 42 47-40	Boot, Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 42 05-37	Supt., Strg. Lower
26	532 42 41-47	Insert, Wheel Steering
28	817 00 06-12	Screw 3/8-16 x 3/4
35	532 19 47-32	Gear, Sector Plate
45	819 18 38-12	Washer 9/16 ID x 2-3/8 OD 12 GZIN
51	873 94 08-00	Nut Hex Jam Toplock 1/2-20 unf
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd. 7/16-14 x 3 Serr.
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front
118	532 40 60-13	Bushing
122	532 44 49-62	Cap Gear Sector

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


44



TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
MOWER DECK 44

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 44 77-38	Deck Weldment	102	532 40 25-11	Spacer Bearing Swing Plate
2	532 42 30-62	Palnut 1/4	104	581 71 40-01	Mandrel Cover RH
3	873 90 05-00	Nut Lock Hex Flange 5/16 - 18	105	532 44 47-55	Mandrel Cover LH
5	817 00 05-10	Bolt 5/16-18	110	532 41 53-56	Gear Output
11	532 13 77-29	Screw Thd Roll 1/4 - 20 X 5/8	111	532 43 69-79	Gasket Gearcase
13	872 11 06-12	Bolt Carr Sh 3/8 - 16 X 1-1/2 Gr. 5	112	532 44 38-52	Shaft Gearcase Adapter
14	532 15 60-85	Keeper Belt Idler	113	532 43 85-33	Plug Oil
16	873 90 06-00	Nut Lock FIG 3/8 - 16 unc	114	532 43 85-34	Valve Relief
17	532 40 02-34	Nut Flange Lock Top	115	818 03 10-16	Screw Torx #10-24 x 1
18	532 18 76-90	Washer Spacer Mandrel	116	872 11 04-14	Bolt 1/4-20 x 1.75 Gr. 5
19	532 11 04-85	Bearing Ball Mandrel	117	873 90 04-00	Nut Hex Flange 1/4-20 unc
20	532 17 39-84	Screw Thread Roll	118	532 44 32-32	Arm Clutching
23	817 49 06-28	Screw Thdrol 3/8 - 16 X 1-3/4	119	532 43 81-66	Gearcase Subasm
27	532 44 58-86	V-Belt Drive	120	532 44 32-36	Keeper Belt RH
32	532 44 62-05	Spring Drive	121	532 43 69-85	Washer
33	532 18 72-81	Housing Mandrel 4pt Service	124	532 43 69-86	Non Greasable Mandrel Shaft
34	532 19 28-72	Shaft Asm Mndrl N/Greaseable38	125	532 44 04-20	Bracket Idler Chassis
35	532 18 05-83	Blade Mower LH	127	532 19 34-06	Bolt Shoulder 3/8-16 x 3-5/8 Gr. 5
36	532 19 30-03	Bolt/Washer Asm 7/16 - 20 unf	128	532 17 48-73	Wheel Gauge
42	817 00 05-12	Screw 5/16-18 x 3/4	129	532 44 32-37	Rod Anti-Sway
43	532 44 32-39	Pulley Mandrel	130	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
45	532 13 71-52	Housing Mandrel	131	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
72	532 44 39-03	Chute Upper	132	532 17 88-99	Knob Handle
75	532 13 14-94	Pulley Idler Flat	143	532 43 81-97	Door Mulch
76	532 41 55-98	Washout Port	144	532 43 58-61	Pin Hinge
84	532 44 32-35	Keeper Belt LH Mandrel	145	532 43 79-88	E-Ring 5/16"
85	532 18 05-84	Blade Mower RH	146	532 44 58-96	Spring
86	532 18 17-13	Bolt 3/8-24 x 1.50 Gr. 8	154	532 19 98-55	Screw Thd Roll 1/4-20 x 1/2
87	810 03 06-00	Washer Lock Hvy. 3/8	156	532 44 69-95	Weldment Adapter Blade
88	532 14 02-96	Washer Hard	157	532 44 69-93	Blade Mower LH
91	819 13 20-12	Washer 13/32 x 1-1/4 x 12 Ga.	158	532 18 04-25	Blade Mower RH
94	532 19 72-50	Bracket Clutch Cable	- -	532 19 28-70	Mandrel Assembly (Includes Housing, Shaft Assembly, And Bearing Only - Pulley/Nut/Washer And Blade Bolt/Washers Not Included)
95	817 00 06-12	Screw 3/8-16 x 3/4	- -	532 44 73-16	Replacement Mower Complete
96	532 40 02-71	Spacer	NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm		
97	532 18 20-61	Shield Idler Mower			
98	532 19 51-61	Stud Fastener			
99	532 19 51-86	Arm Suspension Mower Rear			
100	532 19 65-39	Bolt Shoulder			
101	873 68 09-00	Nut Crownlock 9/16 - 18 unc			

TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
MOWER LIFT 45

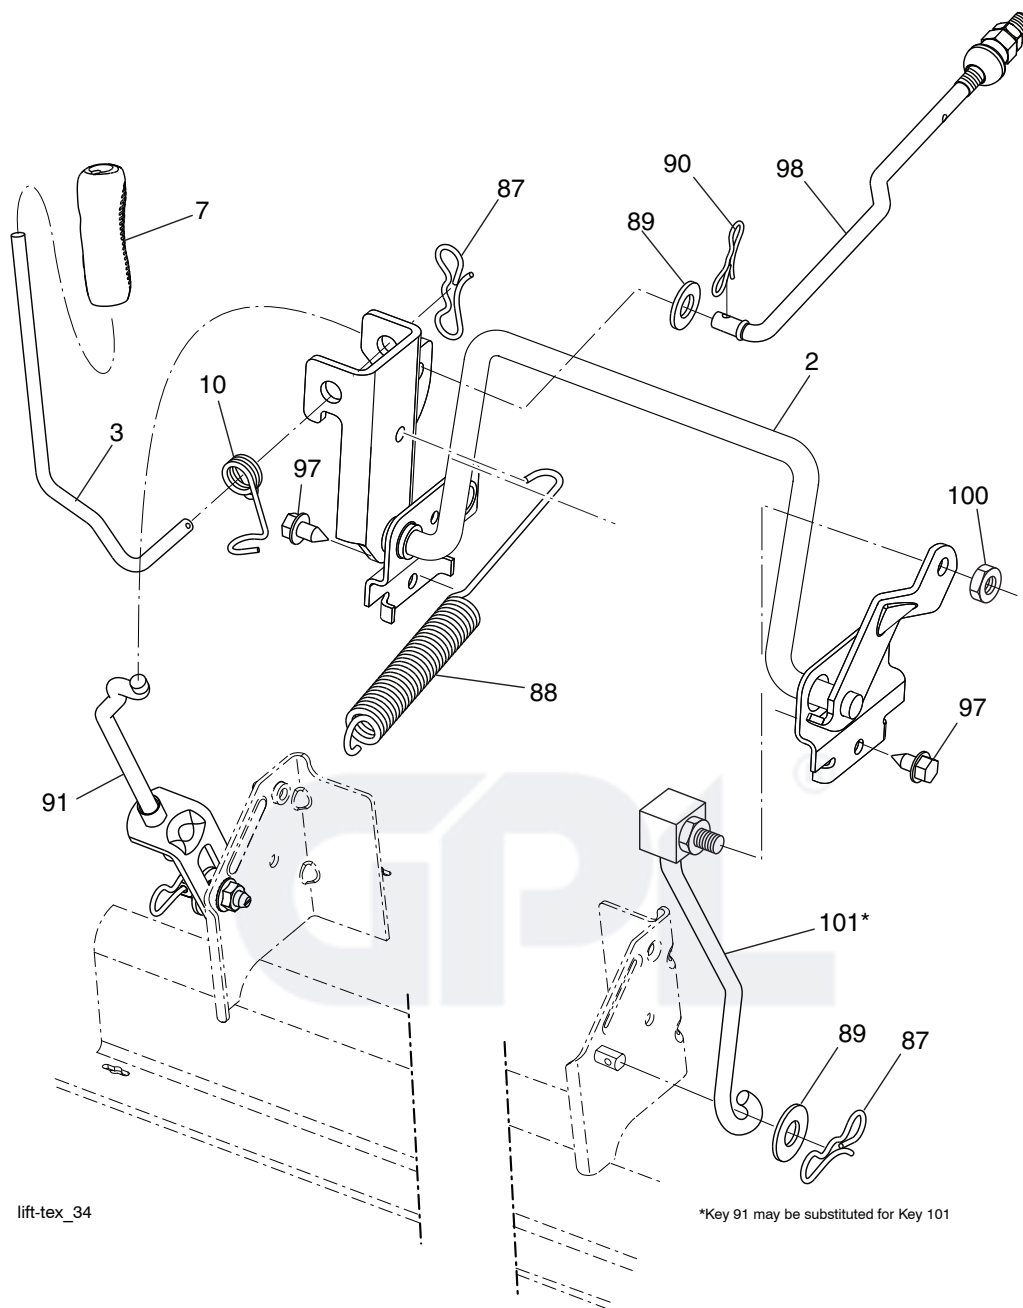


KEY NO.	PART NO.	DESCRIPTION
2	532 43 69-96	Deck Lift Weldment
3	532 19 52-31	Lever Asm., Lift RH
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 44 54-96	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock

KEY NO.	PART NO.	DESCRIPTION
91	532 19 51-81	Link Lift Susp. Mower Rear
97	817 49 06-08	Screw 3/8-16 x 1/2
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Centerlock 3/8-16
101	532 40-70-03	Link Asm. Lift FXD

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
SEAT ASSEMBLY 42

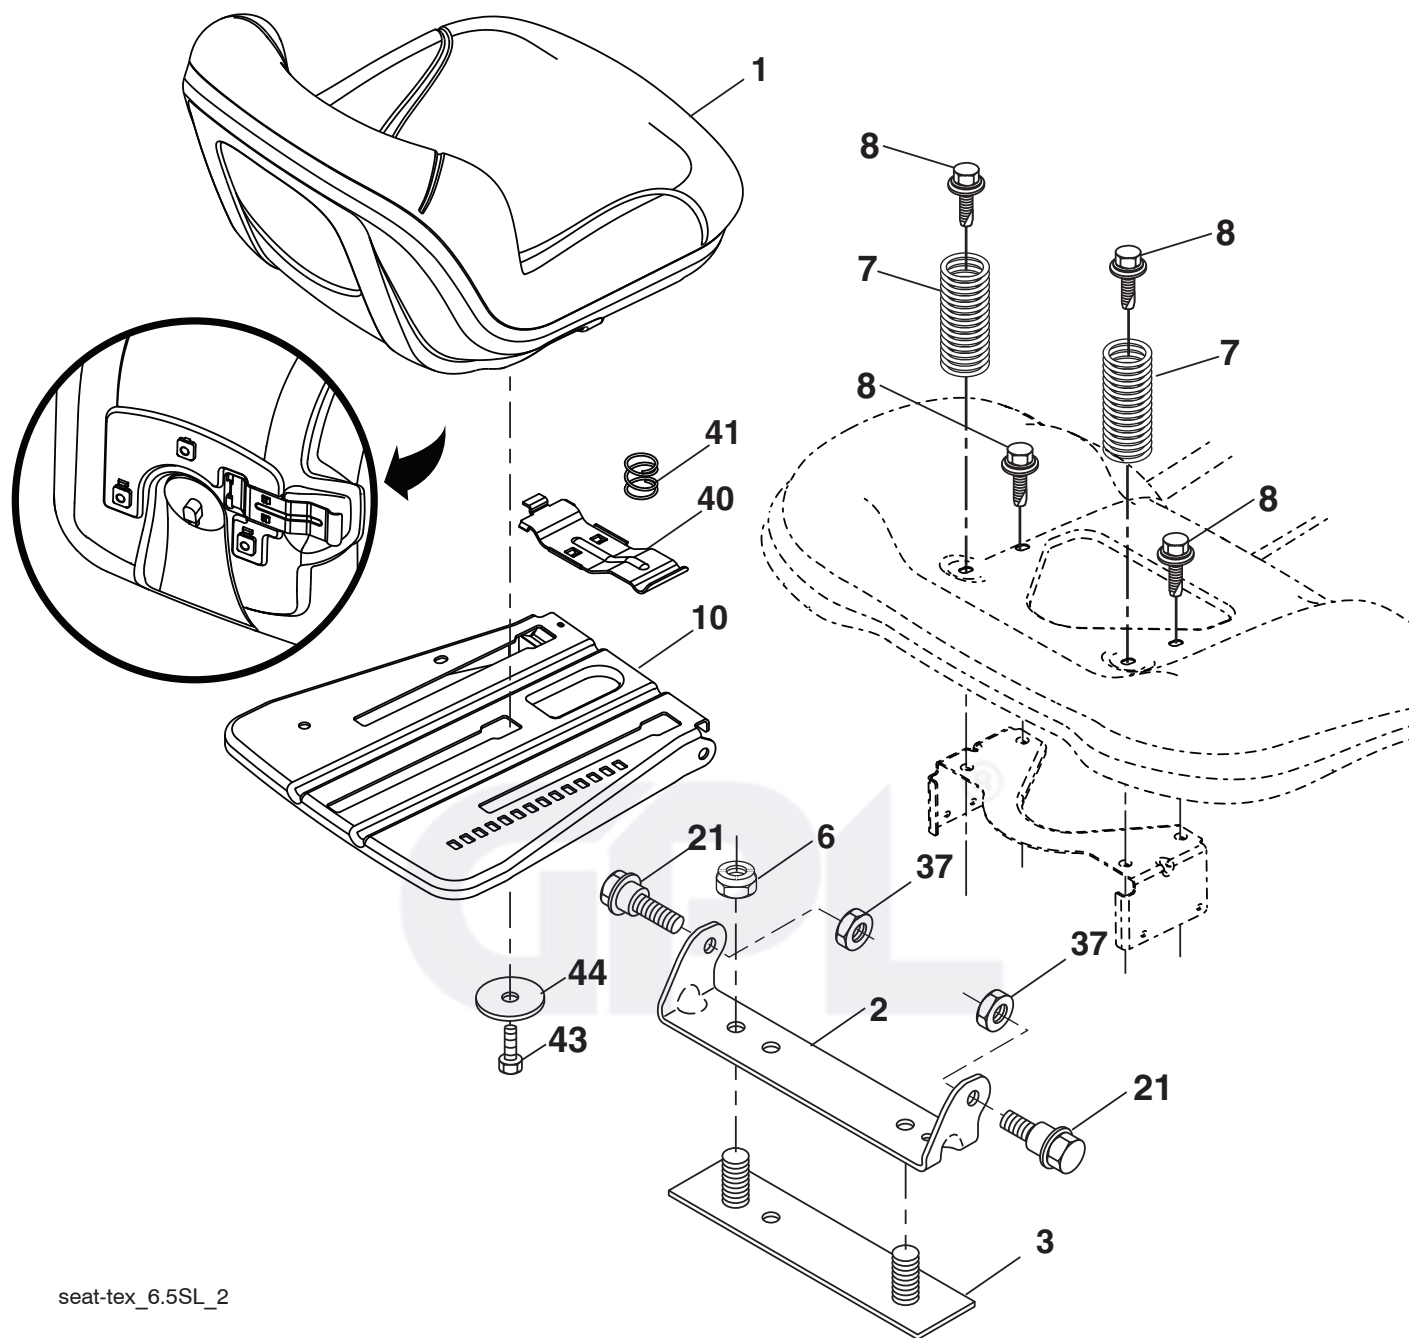


seat-tex_6.5SL_2

KEY NO.	PART NO.	DESCRIPTION
1	532 40 66-25	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm. Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn.
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems.
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt, Shoulder 5/16-18

KEY NO.	PART NO.	DESCRIPTION
37	873 80 05-00	Nut, Lock 5/16-18 unc
40	532 19 76-61	Handle
41	532 19 82-00	Spring
43	874 76 06-12	Bolt 3/8-16 unc x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
BAGGER **46**

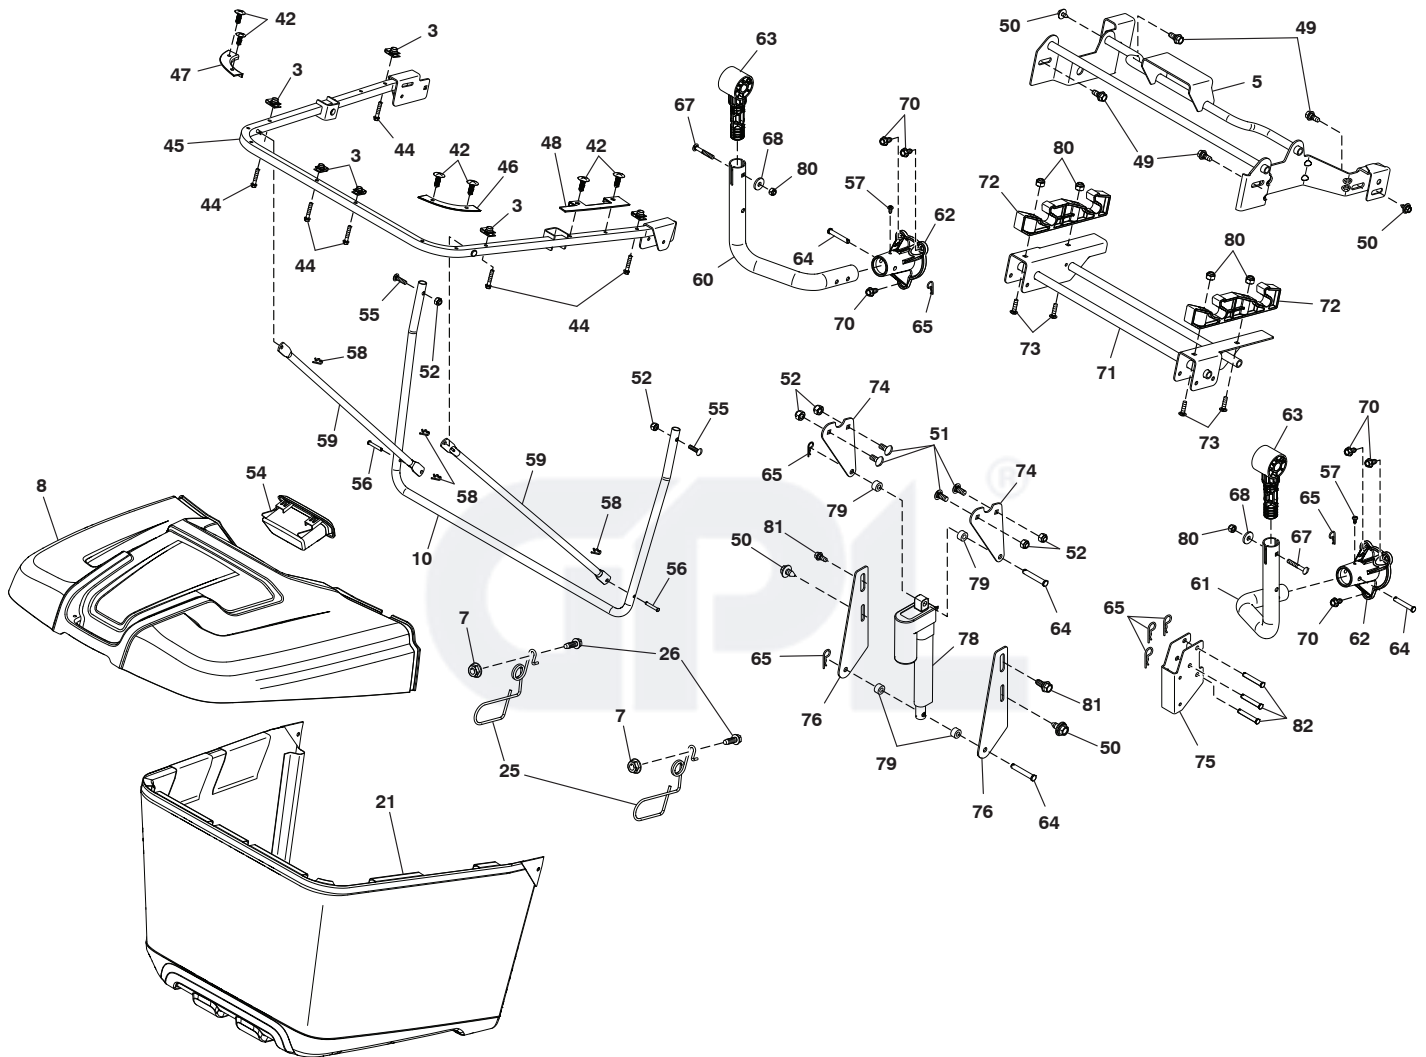

ElecBagger_TexCRD-Gen2_2

TRACTOR - - MODEL NO. LT2318CMA2 (96051004500), PRODUCT NO. 960 51 00 45
BAGGER 46

KEY NO.	PART NO.	DESCRIPTION
3	532 17 48-14	Clip
5	532 44 52-48	Bagger Cross Tube
7	873 90 04-00	Nut Hex Flange 1/4-20 unc
8	532 44 50-17	Bagger Top
10	532 44 37-55	Frame Front
21	532 44 41-90	Bag Assembly
25	532 44 55-28	Spring Latch Bagger
26	817 49 04-12	Screw Hex Thdrol 1/4-20 x 3/4
42	532 44 04-28	Clip
44	532 19 96-87	Bolt 1/4-20
45	532 44 37-54	Upper Frame
46	532 44 55-41	Bag Corner Close Out RH
47	532 44 40-79	Bag Corner Close Out LH
48	532 44 40-80	Top Bagger Side Close Out
49	532 17 18-73	Bolt Shoulder 5/16-18
50	532 17 18-77	Bolt 5/16-18 x 3/4 W/Sems
51	872 11 05-06	Bolt 5/16 x 18 x 3/4
52	873 80 05-00	Nut Lock Hex W/Ins 5/16-18 unc
54	532 44 75-43	Bagger Top Front Handle
55	872 14 05-12	Bolt 5/16-18 x 1-1/2
56	532 42 03-06	Pin Clevis .183 x 1.26
57	532 19 98-55	Screw 1/4-20 Panhead
58	532 08 51-79	Clip Retainer
59	532 44 47-63	Bagger Sprd Tube
60	532 44 41-05	Bagger Support Tube LH
61	532 44 41-06	Bagger Support Tube RH
62	532 44 45-42	Bracket Support
63	532 44 41-11	Bagger Pivot Elec Dump
64	532 43 04-22	Pin Clevis .375 x 2.375
65	532 12 47-88	Retainer Spring 1"
67	872 11 05-18	Bolt Carriage
68	819 11 16-10	Washer 11/32 x 1.00 x 10 Ga.
70	817 00 06-12	Screw 3/8-16 x 3/4
71	532 44 52-38	Bagger Support Pivot
72	532 44 52-36	Bagger Catch Bracket
73	872 11 05-10	Bolt Carriage 5/16-18 X 1-1/4 Gr. 5
74	532 44 52-43	Upper Clevis Bracket
75	532 44 52-45	Lower Mounting Bracket
76	532 44 52-44	Lower Clevis Bracket
78	532 44 52-57	Actuator Elec Dump
79	532 44 73-68	Spacer .375 x .75 x .4375
80	873 90 05-00	Nut Lock Hex Flange 5/16-18
81	532 17 01-65	Bolt Shoulder 5/16-18
82	877 10 12-36	Clevis Pin 0.375 x 2.000

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

