

# YT155

**Spare parts**

**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**


**Repuestos**

**Reservdelar**

**GPL®**

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
ELECTRICAL

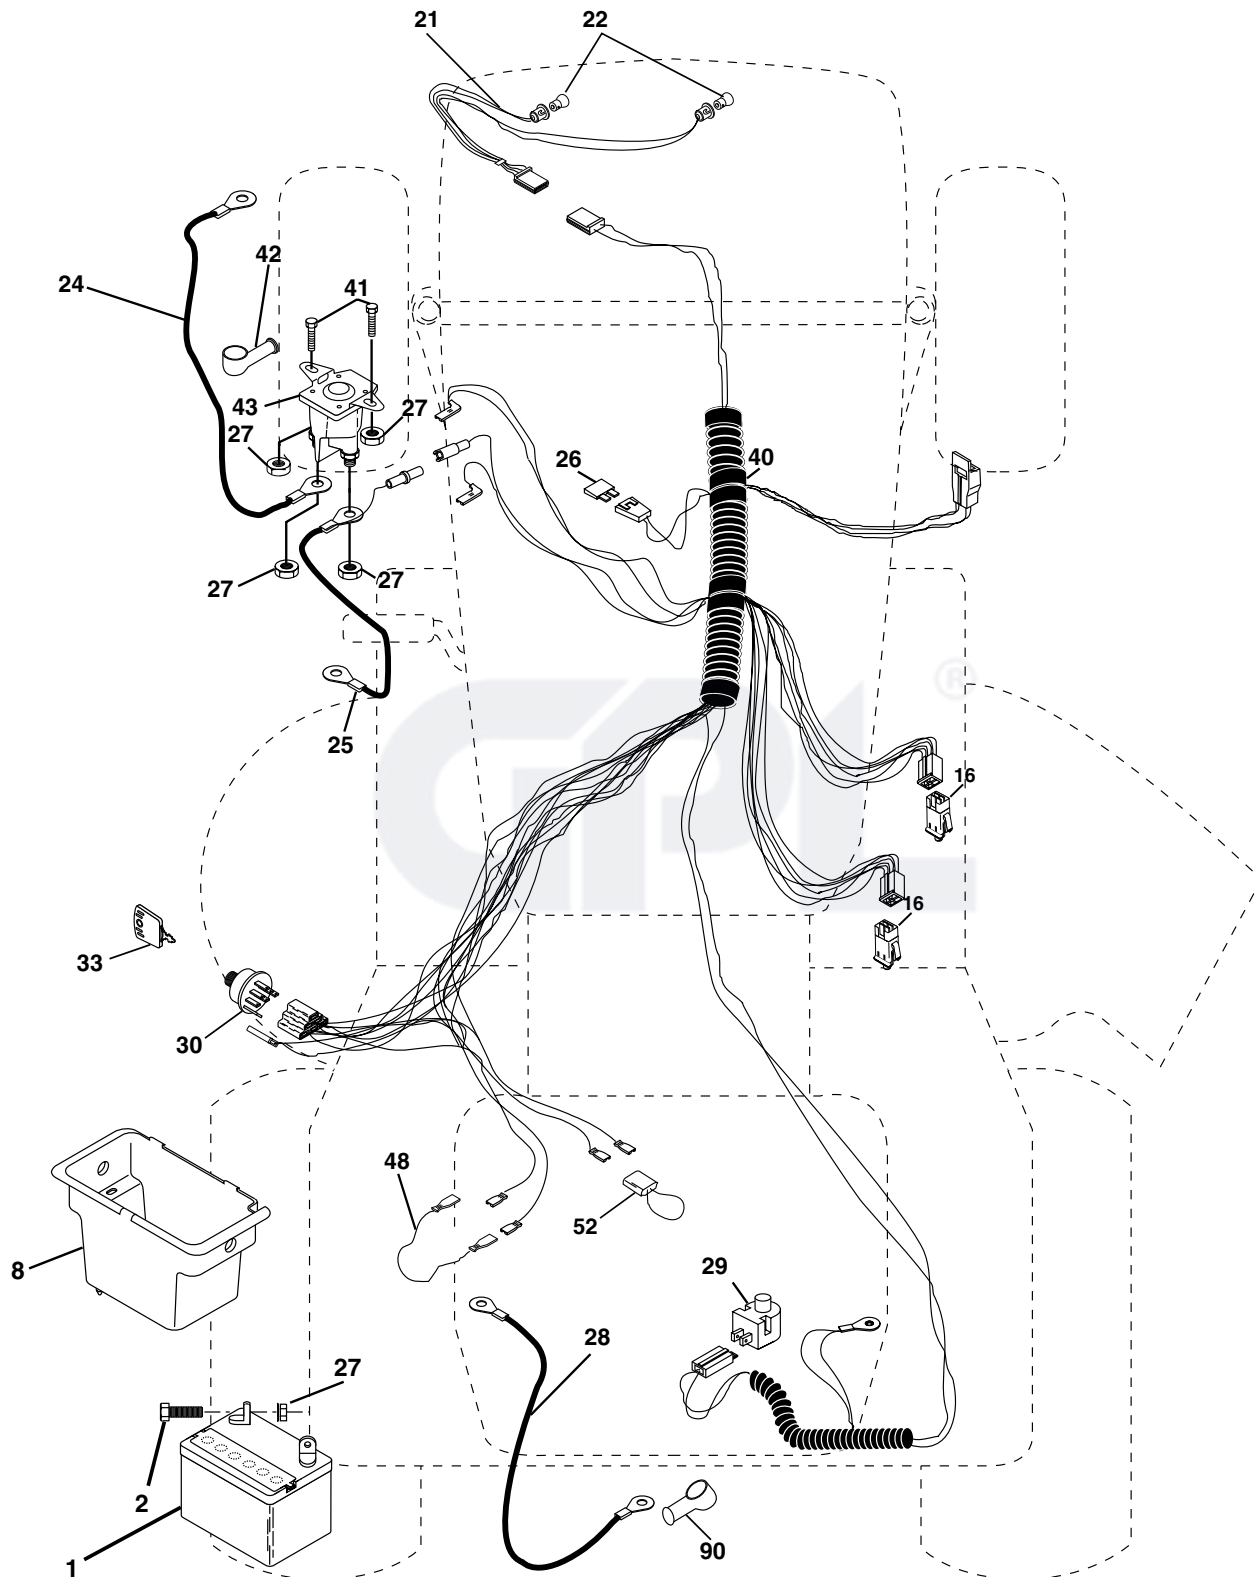

# REPAIR PARTS


TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
ELECTRICAL

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                          |
|------------|--------------|--------------------------------------|
| 1          | 532 16 34-65 | Battery                              |
| 2          | 874 76 04-12 | Bolt Hex Hd 1/4-20unc X 3/4          |
| 8          | 532 17 66-89 | Box Battery                          |
| 16         | 532 17 61-38 | Switch Interlock Push-In             |
| 21         | 532 16 61-81 | Harness Asm Light W/4152j            |
| 22         | 532 00 41-52 | Bulb Light #1156                     |
| 24         | 532 12 47-80 | Cable Battery 6 Ga 11" red           |
| 25         | 532 14 61-47 | Cable Battery 6 Ga 44" red w/16 wire |
| 26         | 532 17 51-58 | Fuse 20 AMP                          |
| 27         | 873 51 04-00 | Nut Keps Hex 1/4-20 Unc              |
| 28         | 532 12 47-73 | Cable Ground 6 Ga 12" black          |
| 29         | 532 12 13-05 | Switch Plunger Nc Gray               |
| 30         | 532 17 55-66 | Switch Ign                           |
| 33         | 532 14 04-01 | Key Ign Molded Generic               |
| 40         | 532 17 97-20 | Harness ign                          |
| 41         | 871 11 04-08 | Bolt Blk Fin Hex 1/4 - 20 x 1/2      |
| 42         | 532 13 15-63 | Cover Terminal Red                   |
| 43         | 532 17 88-61 | Solenoid                             |
| 48         | 532 14 08-44 | Adapter Ammeter Rectangular          |
| 52         | 532 14 19-40 | Protection Wire Loop                 |
| 90         | 532 18 04-49 | Cover Terminal Battery               |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
CHASSIS AND ENCLOSURES

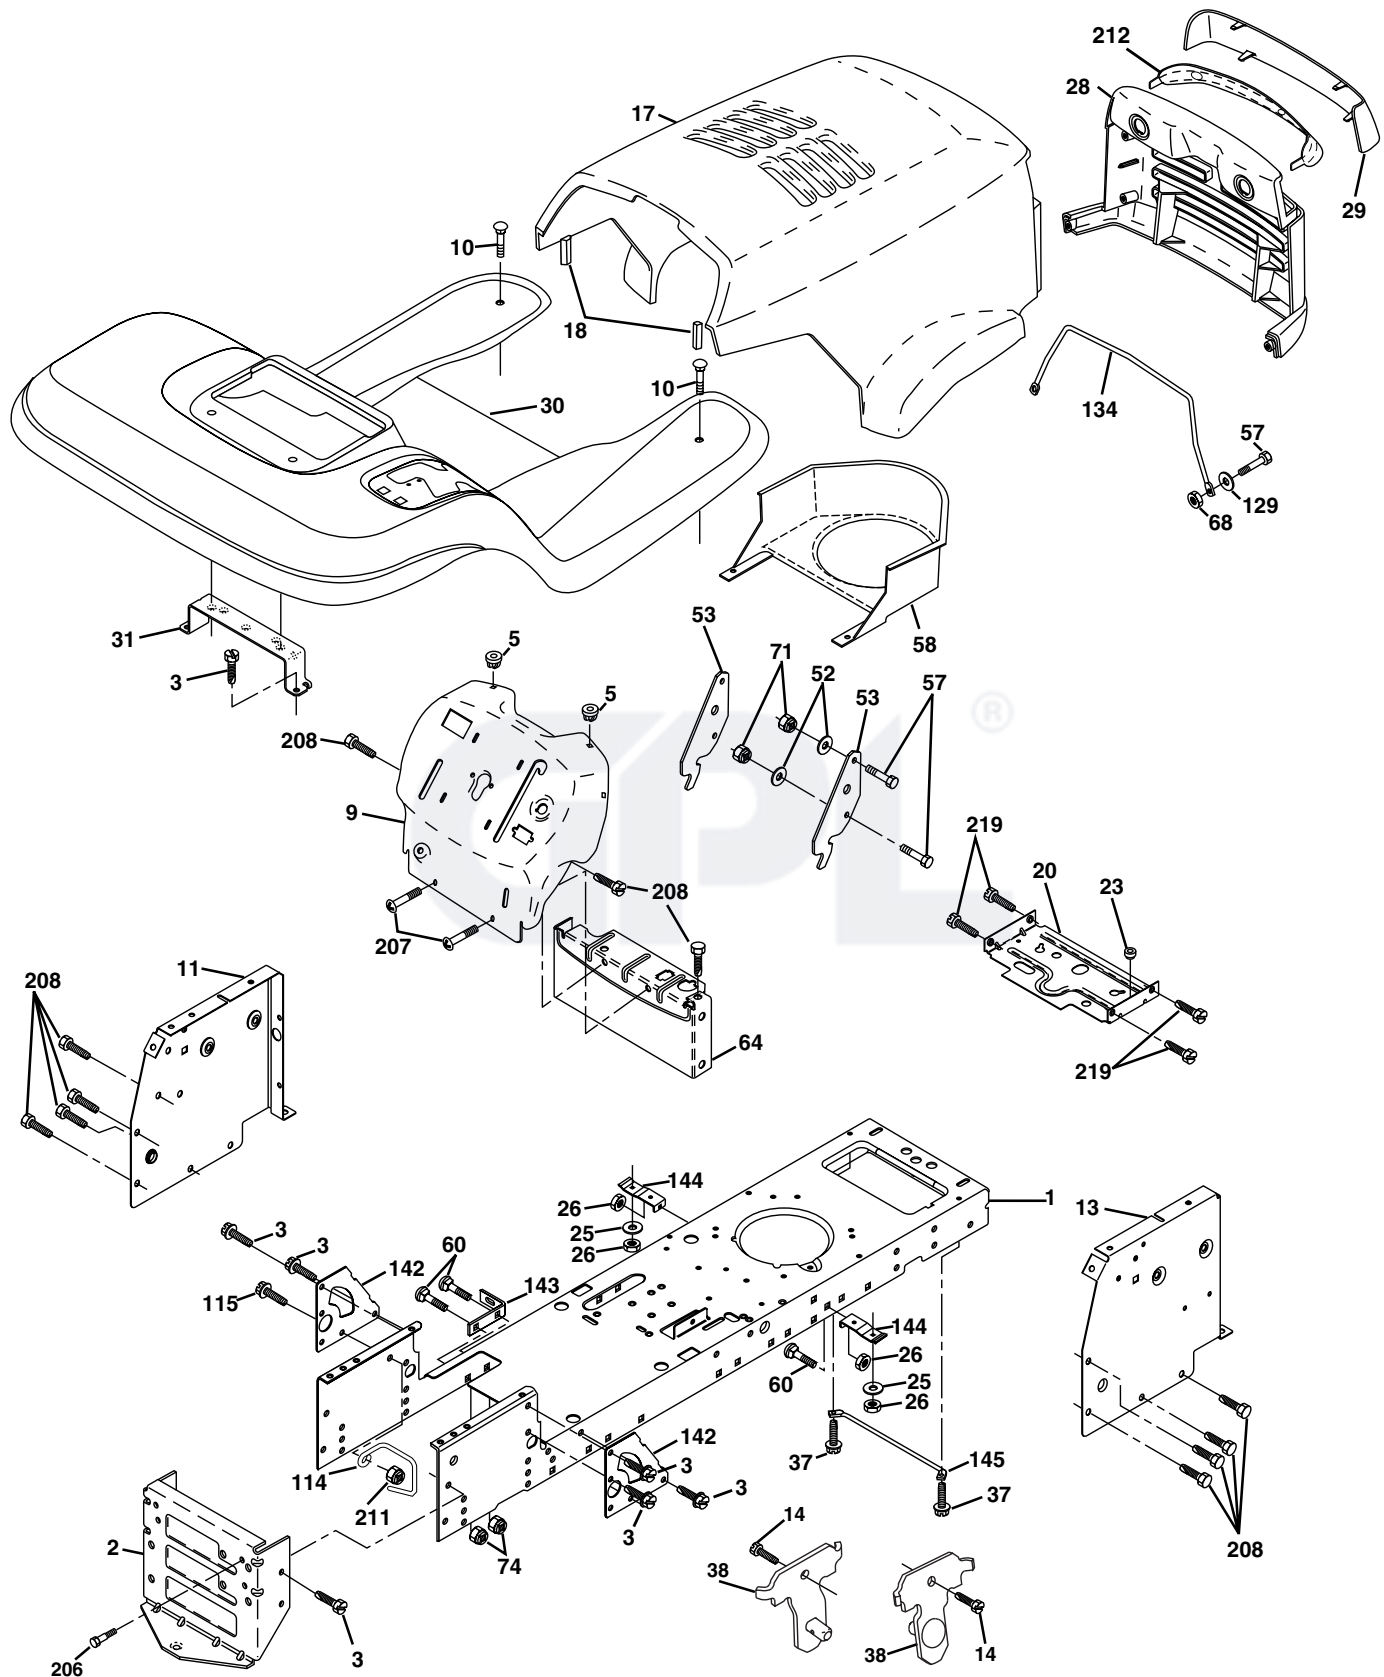

# REPAIR PARTS


## TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63 CHASSIS AND ENCLOSURES

| KEY NO. | PART NO.            | DESCRIPTION                           |
|---------|---------------------|---------------------------------------|
| 1       | 532 17 46-19        | Chassis Stamping                      |
| 2       | 532 17 65-54        | Drawbar                               |
| 3       | 817 06 06-12        | Screw 3/8-16x3/4                      |
| 5       | 532 15 52-72        | Bumper Hood/Dash                      |
| 9       | 532 17 18-53        | Dash P/L                              |
| 10      | 872 14 06-08        | Bolt Carriage 3/8-16 x 1              |
| 11      | <b>532 17 49-96</b> | Panel Dash Lh                         |
| 13      | <b>532 17 21-06</b> | Panel Dash Rh                         |
| 14      | 817 49 06-08        | Screw Thdrol 3/8-16 x 1/2             |
| 17      | 532 16 53-78        | Hood LT/PL Husqvarna                  |
| 18      | 532 12 69-38        | Bumper Hood                           |
| 20      | 532 18 06-79        | Plate Mtg Battery Fuel Tank Fr        |
| 23      | 532 12 40-28        | Bushing                               |
| 25      | 819 13 13-12        | Washer 13/32 X 13/16 X 12 Ga          |
| 26      | 873 80 06-00        | Nut Lock Hex W/Ins 3/8-16 UNC         |
| 28      | 532 16 53-79        | Grille LT/PL Husqvarna                |
| 29      | 532 16 53-80        | Lens LT/PL Husqvarna                  |
| 30      | 532 18 05-07        | Fender Footrest STLT Pnt              |
| 31      | 532 13 99-76        | Bracket Support Fender                |
| 37      | 817 49 05-08        | Screw Thdrol 6/16-18 x 1/2 TYT        |
| 38      | 532 17 57-10        | Bracket, Asm. Pivot, Mower Rear       |
| 52      | 819 09 14-16        | Washer 9/32 x 7/8 x 16 Ga.            |
| 53      | 532 15 00-67        | Bracket Pnt. Pick off LT/PL Husqvarna |
| 57      | 874 78 04-12        | Bolt Hex 1/4-20 x 3/4                 |
| 58      | 532 15 01-27        | Air Duct Engine P/L                   |
| 60      | 872 14 06-06        | Bolt Rdhd Sqnk 3/8-16UNC x 3/4        |
| 64      | 532 15 47-98        | Dash Lower STLT                       |
| 68      | 873 51 04-00        | Nut Keps Hex 1/4-20 UNC               |
| 71      | 873 68 04-00        | Nut Crownlock 1/4-20 UNC              |
| 74      | 873 68 06-00        | Nut Crownlock 3/8-16 UNC              |
| 114     | 532 15 81-12        | Keeper Belt Rear Lh STL               |
| 115     | 817 06 06-20        | Screw 3/8-16 x 1-1/4                  |
| 129     | 819 09 10-16        | Washer 9/32 x 5/8 x 16 Ga.            |
| 134     | 532 16 02-19        | Rod Support Hood LT/PL Husq.          |
| 142     | 532 17 57-02        | Plate Reinforcement STLT              |
| 143     | 532 15 49-66        | Bracket Swaybar Chassis               |
| 144     | 532 17 55-82        | Bracket Pnt Footrest STLT             |
| 145     | 532 15 65-24        | Rod Pivot Chassis/Hood                |
| 206     | 532 17 01-65        | Bolt Shoulder 5/16-18 TT              |
| 207     | 817 67 05-08        | Screw Thdrol 5/16-18 x 1/2            |
| 208     | 817 67 06-08        | Screw Thdrol 3/8-16 x 1/2             |
| 211     | 532 14 52-12        | Nut Hexflange Lock                    |
| 212     | 532 15 61-95        | Insert Lens Reflective                |
| 219     | <b>817 00 05-12</b> | Screw 5/16-18 x 3/4                   |
| --      | 532 00 54-79        | Plug Button                           |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
DRIVE

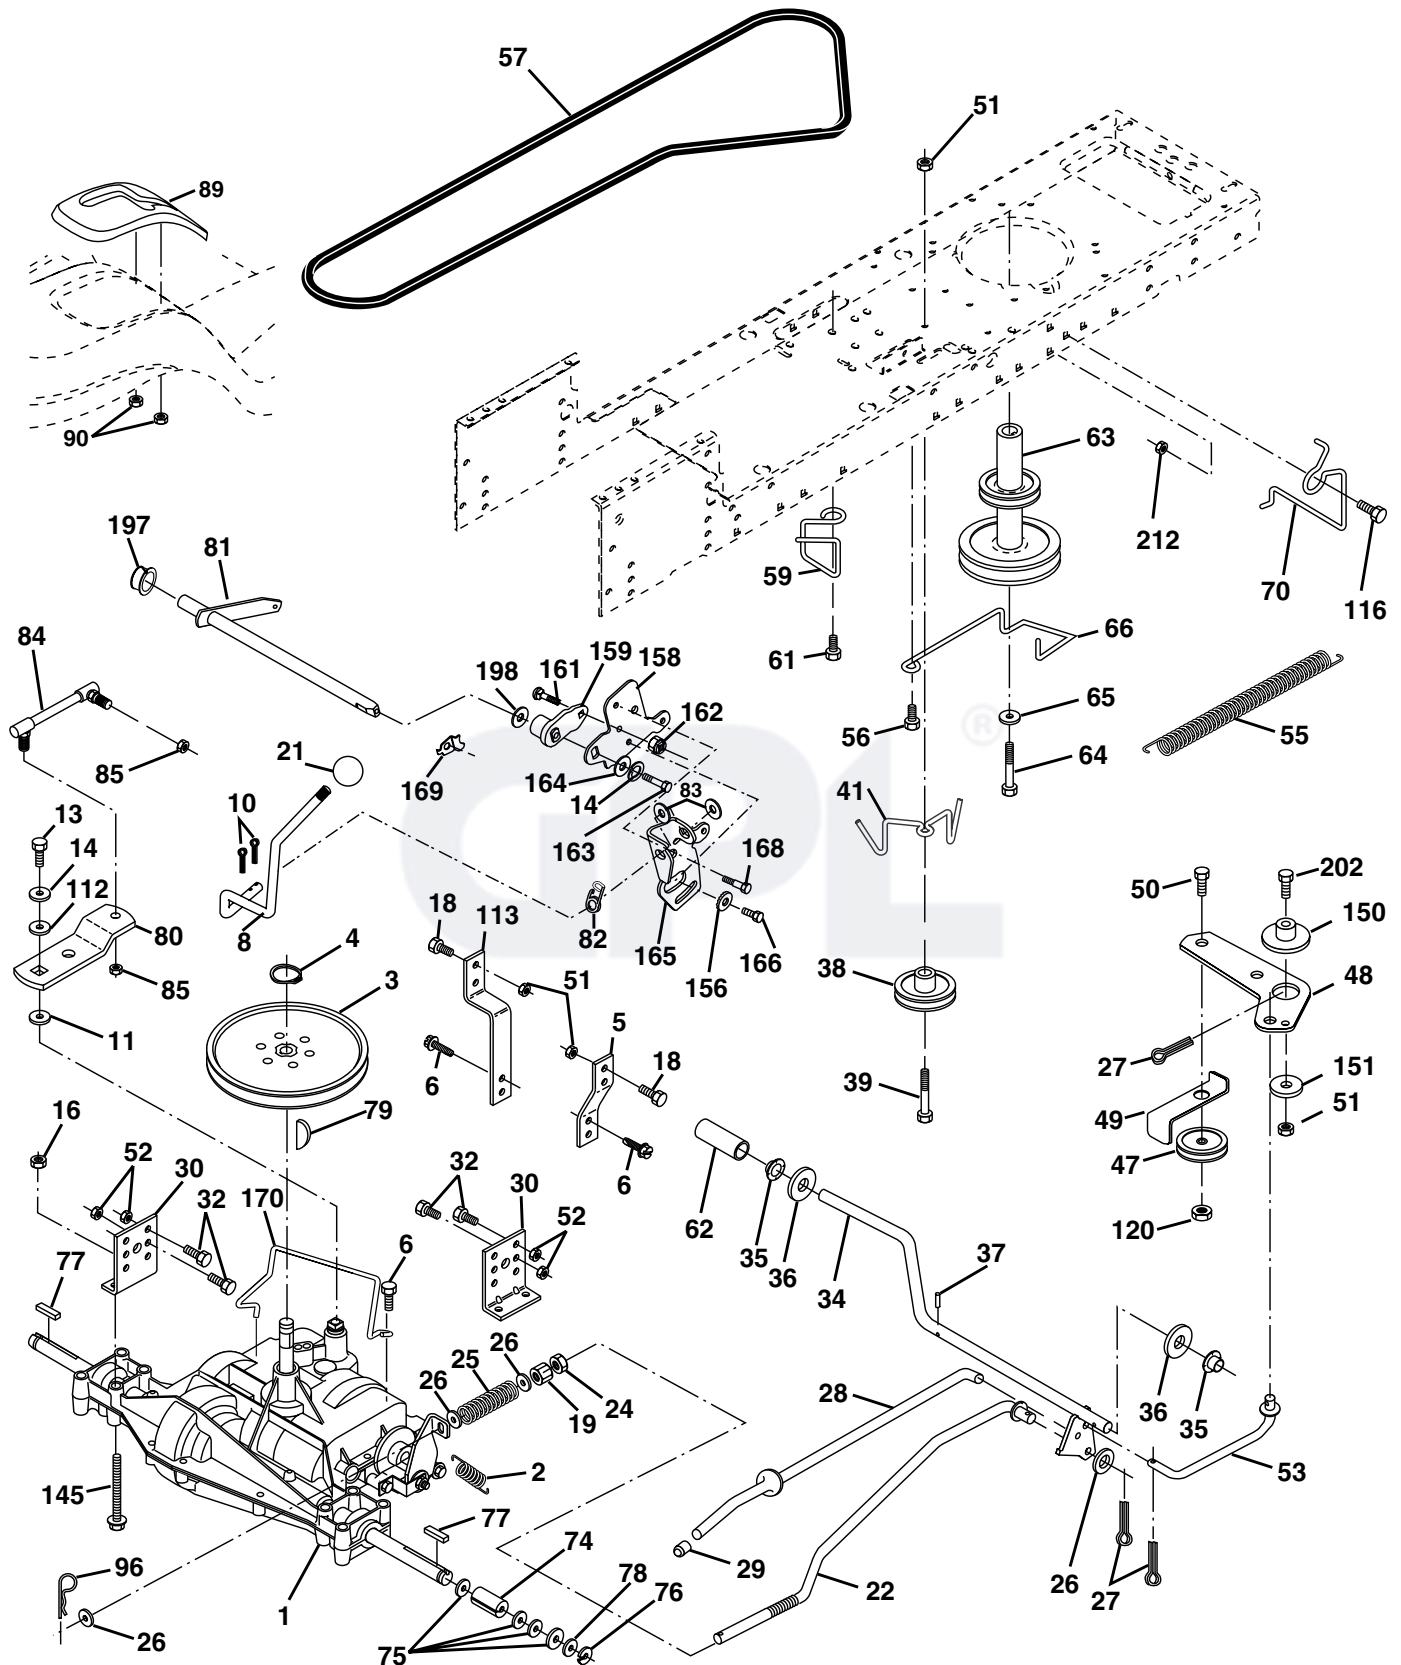

# REPAIR PARTS


**TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
DRIVE**

| KEY NO. | PART NO.     | DESCRIPTION                                                              | KEY NO. | PART NO.            | DESCRIPTION                       |
|---------|--------------|--------------------------------------------------------------------------|---------|---------------------|-----------------------------------|
| 1       | -----        | Transaxle Peerless 206-545C<br>(Order parts from transaxle manufacturer) | 62      | 532 12 35-33        | Cover Pedal                       |
| 2       | 532 14 66-82 | Spring Return Brake T/a Zinc                                             | 63      | <b>532 18 02-19</b> | Engine Pulley                     |
| 3       | 532 12 36-66 | Pulley Transaxle 18"tires                                                | 64      | 871 17 07-64        | Bolt Hex 7/16-20 x 4              |
| 4       | 812 00 00-28 | Ring Retainer #5100-62                                                   | 65      | 810 04 07-00        | Washer Lock Hvy Hlcl Spr 7/16     |
| 5       | 532 12 15-20 | Strap Torque 30 Degrees                                                  | 66      | 532 15 47-78        | Keeper Belt Engine F-Proof        |
| 6       | 817 06 05-12 | Screw 5/16-18 X 3/4                                                      | 70      | <b>532 18 02-18</b> | Guide Belt Mower Drive RH         |
| 8       | 532 16 58-66 | Rod Shifter                                                              | 74      | 532 13 70-57        | Spacer Axle                       |
| 10      | 876 02 04-16 | Pin Cotter 1/8 X 1 Cad                                                   | 75      | 532 12 17-49        | Washer 25/32 X 1 1/4 X 16 Ga      |
| 11      | 532 10 57-01 | Washer Plate Shf 388 Sq Hole                                             | 76      | 812 00 00-01        | E-ring #5133-75                   |
| 13      | 874 55 04-12 | Bolt 1/4-28 Unf Gr 8 W/Patch                                             | 77      | 532 12 35-83        | Key Square 2 0 X 1845/ 1865       |
| 14      | 810 04 04-00 | Washer Lock Hvy Helical 1/4                                              | 78      | 532 12 17-48        | Washer 25/32 X 1-5/8 X 16 Ga      |
| 16      | 873 80 05-00 | Nut Lock Hx w/Ins 5/16-18 UNC PL                                         | 79      | 532 12 50-96        | Key Woodruff                      |
| 18      | 874 78 06-16 | Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5                                        | 80      | 532 14 50-90        | Arm Shift Transaxle               |
| 19      | 873 80 06-00 | Nut Lock 3/8-16 Unc                                                      | 81      | 532 16 55-92        | Shaft Asm Cross                   |
| 21      | 532 12 12-74 | Knob Duckhead 1/2-13 Plstc Thd.<br>Blk                                   | 82      | 532 16 57-11        | Spring Torsion T/a                |
| 22      | 532 13 08-04 | Rod Brake Blk Zinc 26 840                                                | 83      | 819 17 12-16        | Washer 17/32 X 3/4 X 16 Ga        |
| 24      | 873 35 06-00 | Nut Hex Jam 3/8-16 Unc                                                   | 84      | 532 16 62-31        | Link Transaxle                    |
| 25      | 532 10 68-88 | Spring Rod Brake 2 00 Zinc                                               | 85      | 532 15 03-60        | Nut Nylock 1/4 - 28               |
| 26      | 819 13 13-16 | Washer 13/32 X 13/16 X 16 Ga                                             | 89      | 532 16 65-61        | Console Shift 6sp                 |
| 27      | 876 02 04-12 | Pin Cotter 1/8 X 3/4 Cad                                                 | 90      | 532 12 43-46        | Nut Self-thd Wsh-hd 1/4 Zinc      |
| 28      | 532 17 57-65 | Rod Brake Parking LT/YT                                                  | 96      | 532 12 47-88        | Retainer Spring 1" Zinc/Cad       |
| 29      | 532 07 16-73 | Cap Brake Parking                                                        | 112     | 819 09 12-10        | Washer 9/32 x 3/4 x 10 Ga.        |
| 30      | 532 16 95-92 | Bracket Mtg Transaxle                                                    | 113     | 532 12 72-85        | Strap Torque Lt                   |
| 32      | 874 76 05-12 | Bolt Hex Hd 5/16-18unc X 3/4                                             | 116     | 872 14 06-08        | Bolt Rd Sq Neck 3/8-16 x 1        |
| 34      | 532 17 55-78 | Shaft Asm Pedal Foot                                                     | 120     | 873 90 06-00        | Nut Lock Flg 3/8-16               |
| 35      | 532 12 01-83 | Bearing Nylon Blk 629 Id                                                 | 145     | 874 49 05-40        | Bolt Hex 5/16-18FLGHD             |
| 36      | 819 21 16-16 | Washer 21/32 X 1 X 16 Ga                                                 | 150     | 532 17 54-56        | Spacer Retainer                   |
| 37      | 532 12 49-63 | Pin Roll 3/16 X 1"                                                       | 151     | 819 13 32-10        | Washer 13/32 x 2 x 10 Ga.         |
| 38      | 532 17 91-14 | Pulley Idler Flat                                                        | 156     | 532 16 60-02        | Washer Srrtd 5/16 ID x 1 .125     |
| 39      | 874 76 06-48 | Bolt Fin Hex 3/8-16 Unc x 3                                              | 158     | 532 16 55-89        | Bracket Shift Mount               |
| 41      | 532 17 55-56 | Keeper Belt Idler                                                        | 159     | 532 16 54-94        | Hub Tapered Flange Shift LT       |
| 47      | 532 12 77-83 | Pulley Idler V Groove Plastic                                            | 161     | 872 14 04-06        | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5  |
| 48      | 532 15 44-07 | Bellcrank Clutch Grnd Drw STL                                            | 162     | 873 68 04-00        | Nut Crownlock 1/4-20 Unc          |
| 49      | 532 12 32-05 | Retainer Belt Style Spring                                               | 163     | 874 78 04-16        | Bolt Hex Fin 1/4-20 Unc x 1 Gr. 5 |
| 50      | 874 76 06-24 | Bolt Hex Hd 3/8-16unc X 1-1/2                                            | 164     | 819 09 10-10        | Washer 5/8 x .281 x 10 Ga.        |
| 51      | 873 68 06-00 | Nut Crownlock 3/8-16 Unc                                                 | 165     | 532 16 56-23        | Bracket Pivot Lever               |
| 52      | 873 68 05-00 | Nut Crownlock 5/16-18 Unc                                                | 166     | 532 16 68-80        | Screw 5/16-18 x 5/8               |
| 53      | 532 10 57-10 | Link Clutch 7 66                                                         | 168     | 532 16 54-92        | Bolt Shoulder 5/16-18 x .561      |
| 55      | 532 10 57-09 | Spring Return Clutch 6 75                                                | 169     | 532 16 55-80        | Plate Fastening LT                |
| 56      | 817 06 06-20 | Screw 3/8-16 x 1-1/4                                                     | 170     | 532 17 83-94        | Keeper Belt Transaxle             |
| 57      | 532 13 08-01 | V-Belt Ground Drive 95 25 42"                                            | 197     | 532 16 96-13        | Nyliner Snap-In 5/8" ID           |
| 59      | 532 16 96-91 | Keeper Belt Span Ctr                                                     | 198     | 532 16 95-93        | Washer Nyl 7/8 ID x .105" Hyd Crd |
| 61      | 817 12 06-14 | Screw 3/8-16x.875                                                        | 202     | 872 11 06-14        | Bolt Carr Sh 3/8-16 x 1-3/4 Gr. 5 |
|         |              |                                                                          | 212     | 532 14 52-12        | Nut Hex Flange Lock               |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
STEERING ASSEMBLY

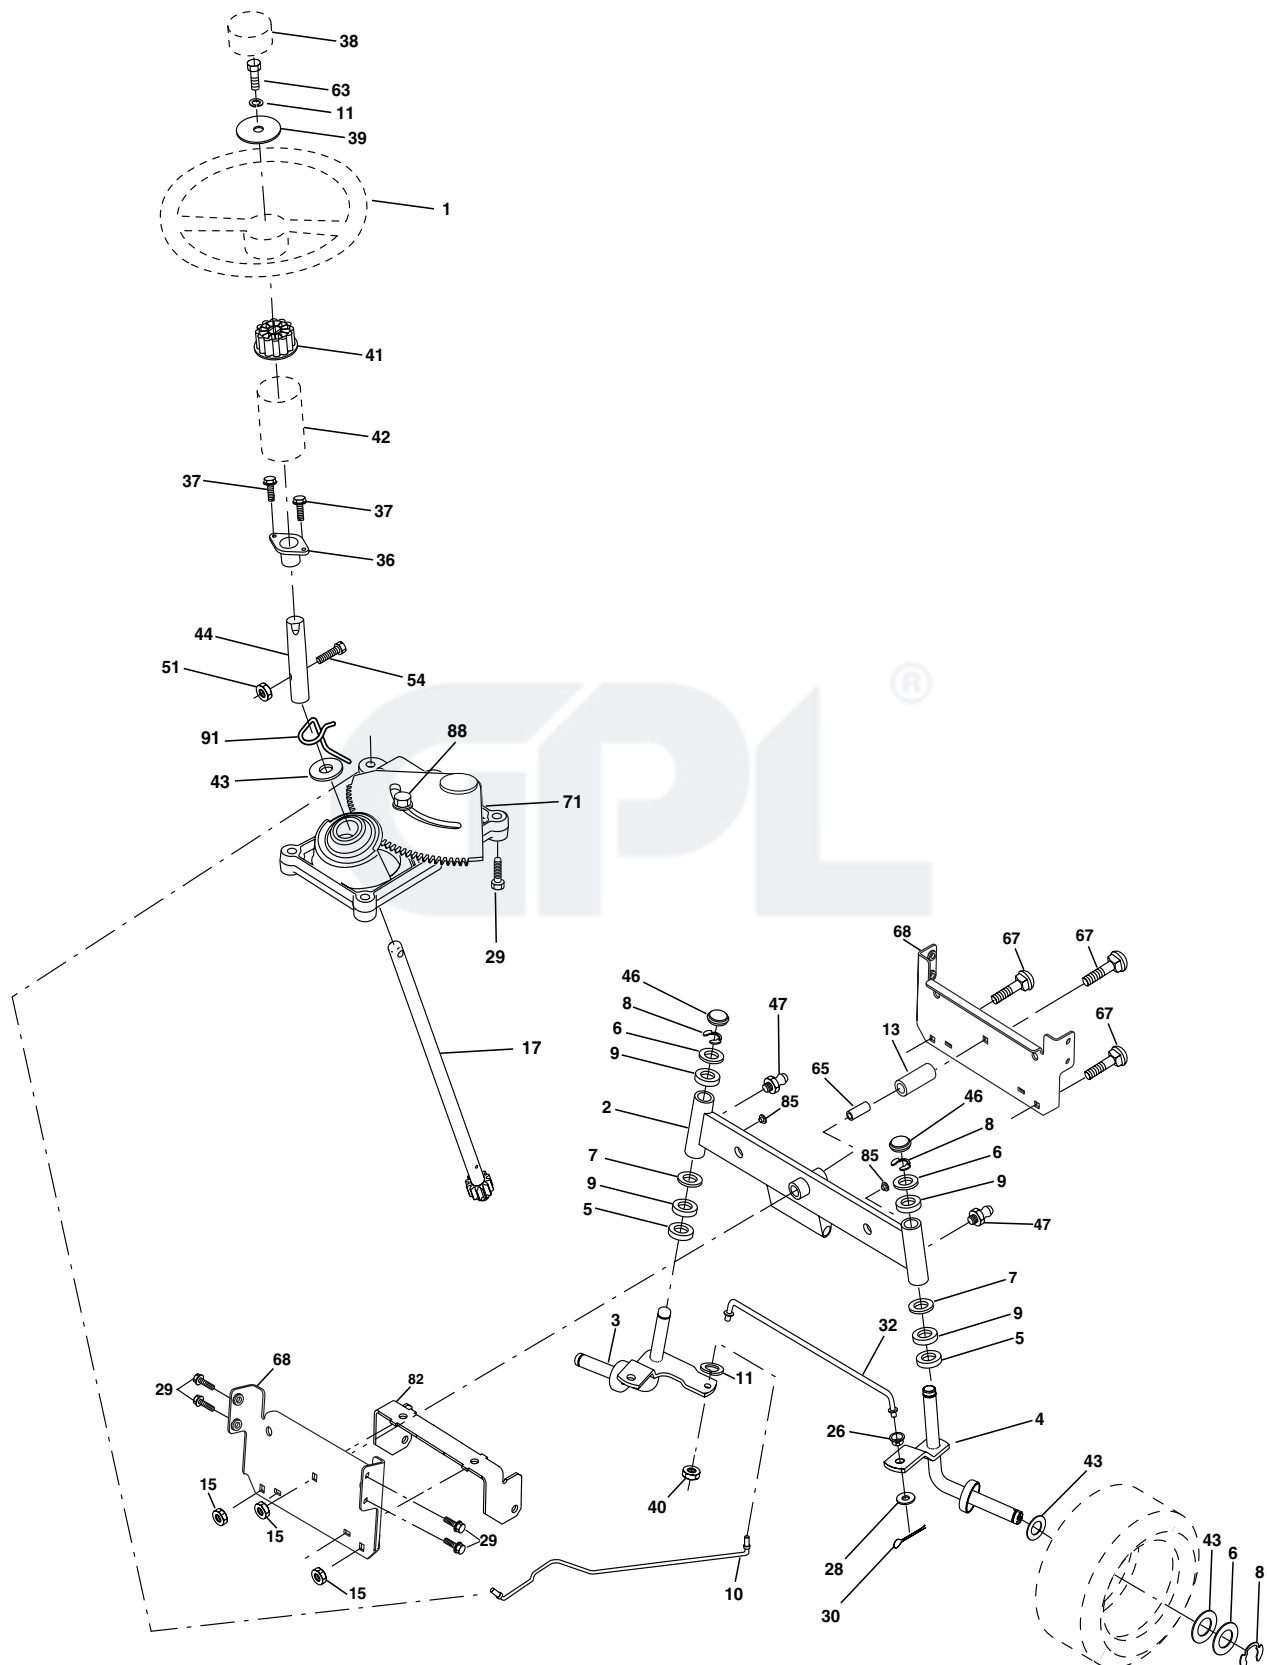



# REPAIR PARTS


## TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63 STEERING ASSEMBLY

| KEY NO. | PART NO.     | DESCRIPTION                      |
|---------|--------------|----------------------------------|
| 1       | 532 16 66-27 | Wheel Steering                   |
| 2       | 532 17 51-31 | Axle Asm STMP Dropped STL        |
| 3       | 532 16 98-40 | Spindle Asm LH                   |
| 4       | 532 16 98-39 | Spindle Asm RH                   |
| 5       | 532 12 49-31 | Bearing Race Thrust Harden       |
| 6       | 532 12 17-48 | Washer 25/32 X 1-5/8 X 16 Ga     |
| 7       | 819 27 20-16 | Washer 27/32 X 1-1/4 X 16 Ga     |
| 8       | 812 00 00-29 | Ring Klip #t5304-75              |
| 9       | 532 12 49-37 | Bearing Col Strg Blk             |
| 10      | 532 17 51-21 | Link Drag                        |
| 11      | 810 04 06-00 | Washer Lock Hvy Hlcl Spr 3/8     |
| 13      | 532 13 65-18 | Spacer Brg Axle Front            |
| 15      | 532 14 52-12 | Nut Hex Flange Lock              |
| 17      | 532 17 78-76 | Shaft Asm Strg                   |
| 26      | 532 12 68-47 | Bushing Link Drag Blk LR         |
| 28      | 819 13 14-16 | Washer 13/32 X 7/8 X 16 Ga       |
| 29      | 817 06 06-12 | Screw 3/8-16x3/4                 |
| 30      | 876 02 04-12 | Pin Cotter 1/8 X 3/4 Cad         |
| 32      | 532 13 04-65 | Rod Tie Wire Form 19 75 Mech     |
| 36      | 532 15 50-99 | Bushing Strg                     |
| 37      | 532 15 29-27 | Screw                            |
| 38      | 532 16 66-26 | Insert Cap Strg                  |
| 39      | 819 13 24-11 | Washer 13/32 X 1-1/2 x 11        |
| 40      | 532 12 47-01 | Lock nut                         |
| 41      | 532 15 99-45 | Adaptor Wheel Strg               |
| 42      | 532 16 96-34 | Boot Steering Shaft              |
| 43      | 532 12 17-49 | Washer 25/32 X 1 1/4 X 16 Ga     |
| 44      | 532 15 37-20 | Extension Steering Shaft LR/LT   |
| 46      | 532 12 12-32 | Cap Spindle Fr Top Blk           |
| 47      | 532 12 48-36 | Fitting Grease                   |
| 51      | 873 80 05-00 | Nut Lock Hex w/Ins 5/16-18       |
| 54      | 874 78 05-20 | Bolt Fin Hex 5/16-18 Unc x 1-1/4 |
| 63      | 874 78 06-16 | Bolt Fin Hex 3/8-16unc x 1 Gr. 5 |
| 65      | 532 16 03-67 | Spacer Brace Axle                |
| 67      | 872 14 06-18 | Bolt Rdhd Sqnk 3/8-16 x 2-1/4    |
| 68      | 532 16 98-27 | Axle, Brace                      |
| 71      | 532 17 51-46 | Steering Asm.                    |
| 82      | 532 16 98-35 | Bracket Susp Chassis Front       |
| 85      | 532 13 38-35 | Fastener Christmas Tree          |
| 88      | 532 17 51-18 | Bolt Shoulder 7/16-20 Unc        |
| 91      | 532 17 55-53 | Clip Steering                    |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm.

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
SEAT ASSEMBLY

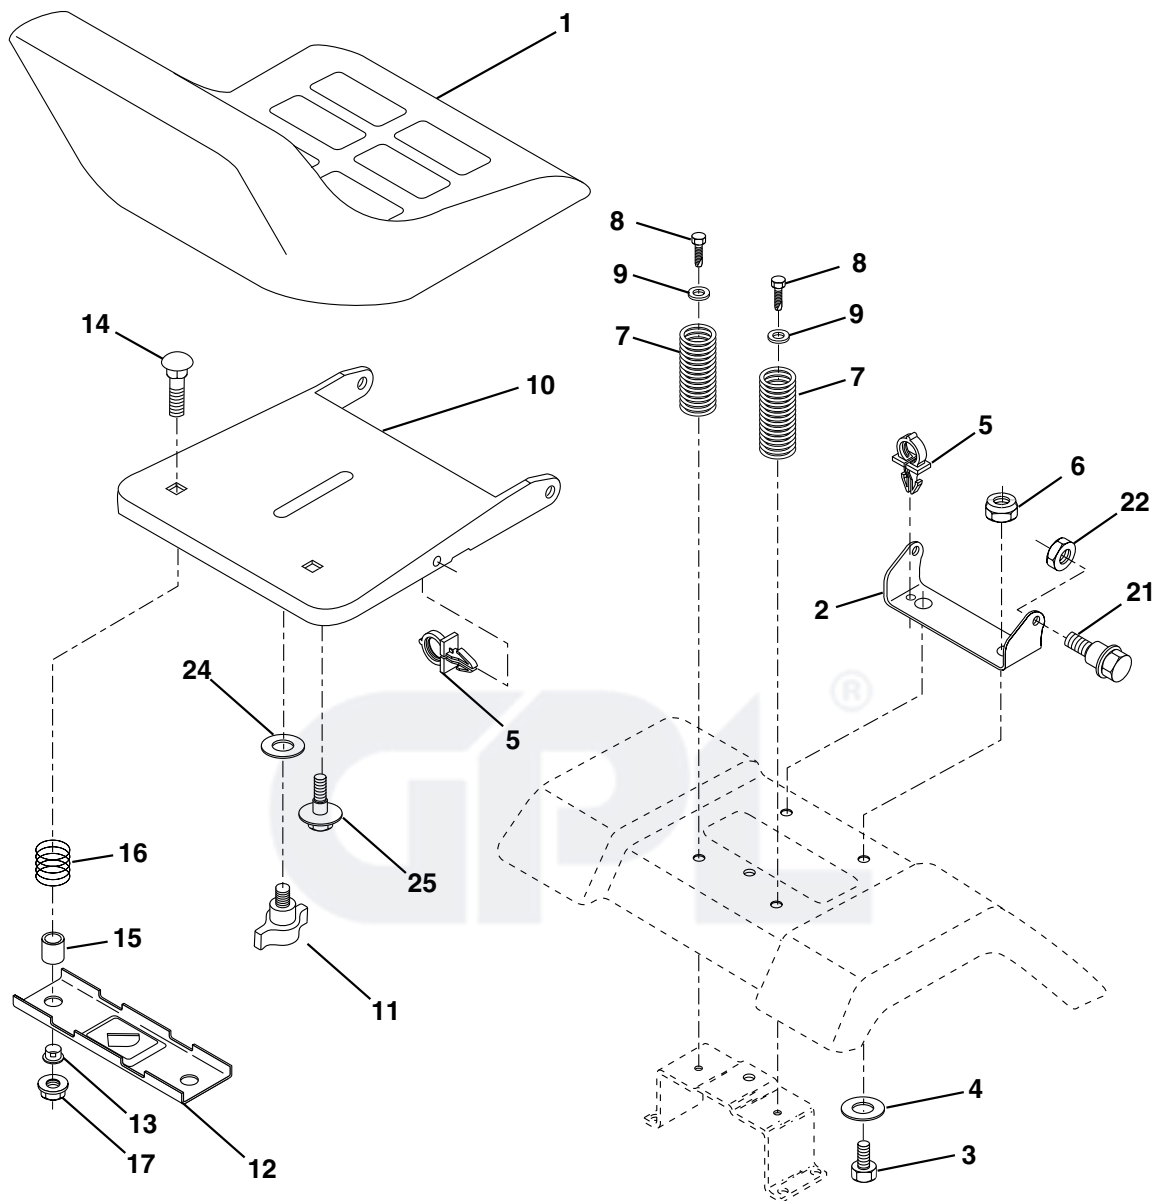


| KEY NO. | PART NO.            | DESCRIPTION                    |
|---------|---------------------|--------------------------------|
| 1       | 532 14 08-39        | Seat                           |
| 2       | 532 14 05-51        | Bracket Pivot Seat 8 720       |
| 3       | 871 11 06-16        | Bolt Fin Hex 3/8-16UNC x 1     |
| 4       | 819 13 16-10        | Washer 13/32 x 1 x 10 Ga       |
| 5       | 532 14 50-06        | Clip Push-In                   |
| 6       | 873 80 06-00        | Nut Lock 3/8-16 Unc            |
| 7       | 532 12 41-81        | Spring Seat Cprsn 2 250 Blk Zi |
| 8       | 817 00 06-16        | Screw 3/8-16 x 1-1/2           |
| 9       | 819 13 16-14        | Washer 13/32 x 1 x 14 Ga.      |
| 10      | <b>532 18 24-93</b> | Pan Seat                       |
| 11      | 532 16 63-69        | Knob Seat                      |

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 12      | 532 12 12-46 | Bracket Mounting Switch        |
| 13      | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id     |
| 14      | 872 05 04-12 | Bolt Rdhd Sht Nk 1/4-20 x1-1/2 |
| 15      | 532 13 43-00 | Spacer Split 28 x 96 Yel Zinc  |
| 16      | 532 12 12-50 | Spring Cprsn 1 27 Blk Pnt      |
| 17      | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr 5 Zinc |
| 21      | 532 17 18-52 | Bolt Shoulder 5/16-18 UNC-2A   |
| 22      | 873 80 05-00 | Nut Hex Lock W/Ins 5/16-18     |
| 24      | 819 17 19-12 | Washer 17/32 x 1-3/16 x 12 Ga. |
| 25      | 532 12 70-18 | Bolt Shoulder 5/16-18 x 62     |

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm

# REPAIR PARTS


TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
DECALS

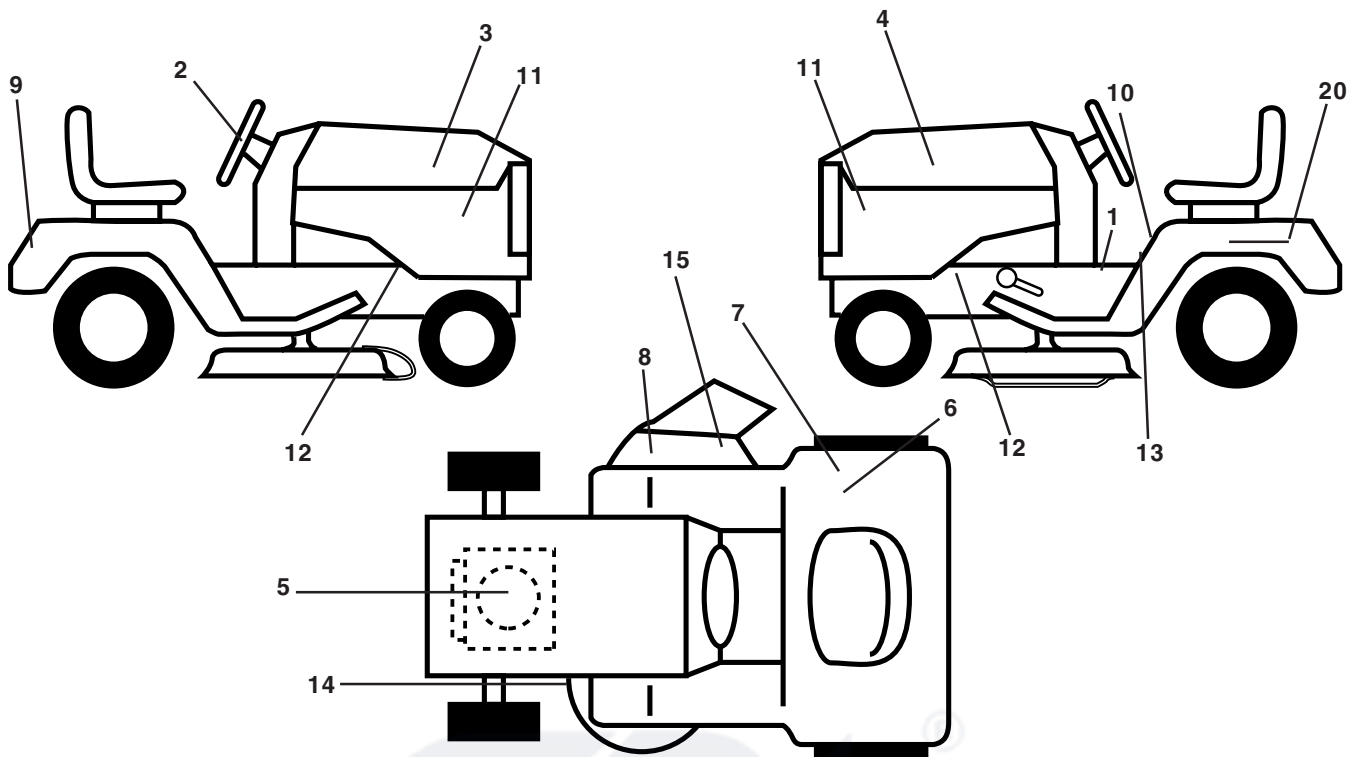

| KEY NO. | PART NO.            | DESCRIPTION                 |
|---------|---------------------|-----------------------------|
| 1       | 532 14 08-37        | Decal Saddle Parking        |
| 2       | 532 17 05-64        | Decal Wheel Steering        |
| 3       | 532 17 96-63        | Decal Hood RH               |
| 4       | 532 17 96-64        | Decal Hood LH               |
| 5       | 532 18 04-34        | Decal HP Engine             |
| 6       | <b>532 18 04-32</b> | Decal 100 DBA               |
| 7       | 532 14 54-37        | Decal Europe Stand CE       |
| 8       | <b>532 18 21-66</b> | Decal Mower Cut/Finger      |
| 9       | 532 15 06-17        | Decal Fender Husq           |
| 10      | 532 14 54-98        | Decal Read Owner's Man Syms |
| 11      | 532 15 97 13        | Decal Panel Side B & S Logo |
| 12      | 532 15 97-36        | Decal Chassis Hot Muffler   |

| KEY NO.                                          | PART NO.            | DESCRIPTION                    |
|--------------------------------------------------|---------------------|--------------------------------|
| 13                                               | 532 15 97-37        | Decal Brake/Clutch Symbol LT   |
| 14                                               | 532 16 03-96        | Decal V-Belt Schematic         |
| 15                                               | 532 17 91-28        | Decal Deck "B" 42"             |
| 20                                               | 532 14 50-05        | Decal Bat Dan/Psn              |
| --                                               | 532 17 12-84        | Pad Footrest LH STLT           |
| --                                               | 532 17 12-85        | Pad Footrest RH STLT           |
| --                                               | 532 13 83-11        | Decal Handle Lft Height Adjust |
| --                                               | <b>532 16 25-98</b> | Decal Draw Bar Load Limit      |
| --                                               | <b>532 18 25-21</b> | Manual Operator's (Euro)       |
| --                                               | <b>532 18 25-22</b> | Manual Operator's (Scand)      |
| --                                               | 532 16 25-98        | Decal Drawbar Load Limit       |
| Available accessories not included with tractor: |                     |                                |
| --                                               | MK420               | Mulch Kit w/Blades             |
| --                                               | CE42                | Grass Catcher                  |

## WHEELS & TIRES

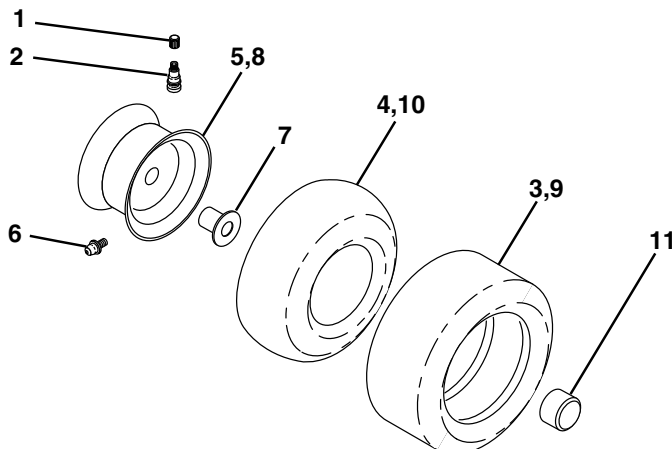


| KEY NO. | PART NO.     | DESCRIPTION                       |
|---------|--------------|-----------------------------------|
| 1       | 532 05 91-92 | Cap Valve Tire                    |
| 2       | 532 06 51-39 | Stem Valve                        |
| 3       | 532 10 62-22 | Tire F Ts 15 X 60 - 6 Service     |
| 4       | 532 05 99-04 | Tube Front (Service Item Only)    |
| 5       | 532 13 83-36 | Rim Asm 6"front                   |
| 6       | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7       | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8       | 532 13 83-37 | Rim Asm 8"rear                    |
| 9       | 532 12 20-82 | Tire R Ts 20 x 10-8 C Service     |
| 10      | 532 12 49-26 | Tube Rear (Service Item Only)     |
| 11      | 532 17 50-39 | Cap Axle Blk 1 50 X 1 00          |
| --      | 532 14 43-34 | Sealant, Tire (10 oz. Tube)       |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
ENGINE

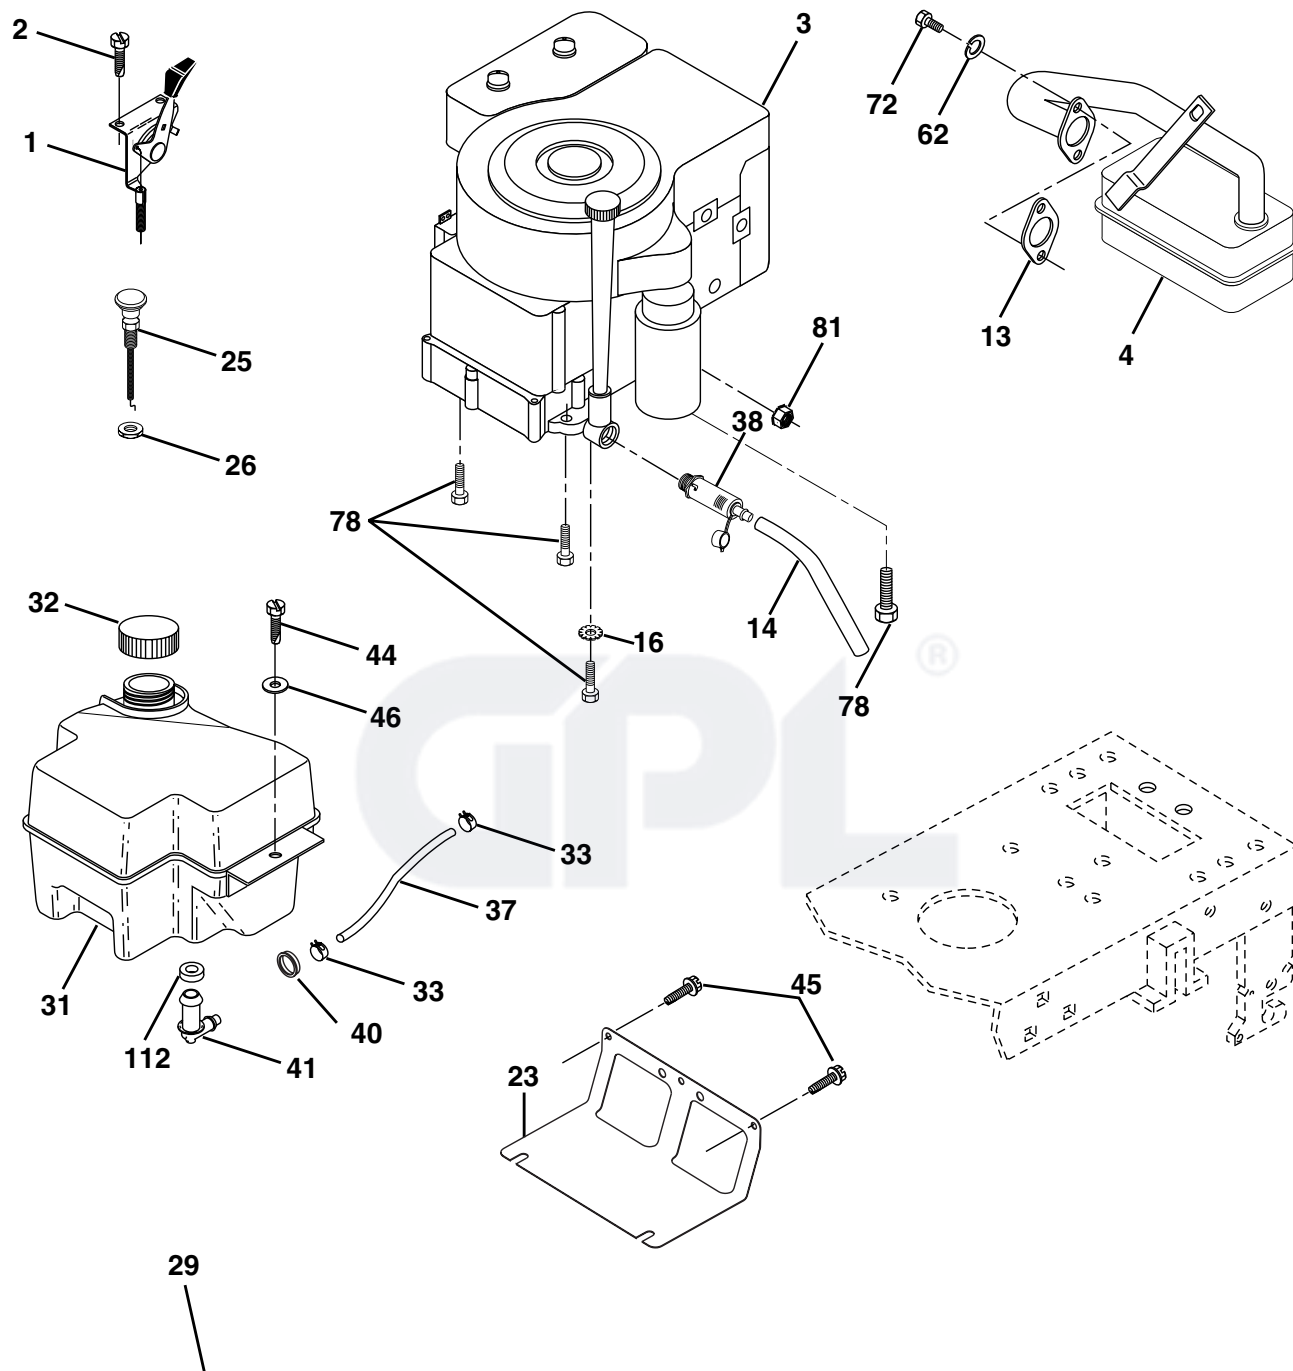

**OPTIONAL EQUIPMENT**  
**Spark Arrester**

# REPAIR PARTS


TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
ENGINE

| KEY NO.       | PART NO.     | DESCRIPTION                                                           |
|---------------|--------------|-----------------------------------------------------------------------|
| Correction: 2 | 817 72 04-08 |                                                                       |
| 1             | 532 17 05-51 | Control Th/ch Flag                                                    |
| 2             | 817 72 04-80 | Screw Hex Thd Cut 1/4-20x5/8 T                                        |
| 3             | -----        | Engine, Briggs Model 31G777<br>(Order parts from engine manufacturer) |
| 4             | 532 13 73-52 | Muffler LT B&S 15 HP IC OHV                                           |
| 13            | 532 16 52-91 | Gasket                                                                |
| 14            | 532 14 84-56 | Tube Drain Oil Easy                                                   |
| 16            | 811 05 06-00 | Washer Lock Ext Tooth 3/8                                             |
| 23            | 532 16 98-37 | Shield Browning/Debris Guard                                          |
| 25            | 532 18 09-45 | Control Choke                                                         |
| 26            | 873 92 06-00 | Nut Keps 3/8-24 Unf                                                   |
| 29            | 532 13 71-80 | Kit Spark Arrestor (Flat Scrn)                                        |
| 31            | 532 18 06-45 | Tank Fuel Front 2 00                                                  |
| 32            | 532 14 05-27 | Cap Asm Fuel W/sym Vented                                             |
| 33            | 532 12 34-87 | Clamp Hose Black                                                      |
| 37            | 532 13 70-40 | Line Fuel 20"                                                         |
| 38            | 532 14 83-15 | Plug Drain Oil Easy                                                   |
| 40            | 532 12 40-28 | Bushing Snap                                                          |
| 41            | 532 13-92-77 | Stem Tank Fuel                                                        |
| 44            | 817 67 04-12 | Screw Hexwsh Thdrol 1/4-20x3/4                                        |
| 45            | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4                                        |
| 46            | 819 09 14-16 | Washer 9/32 X 7/8 X 16 Ga                                             |
| 62            | 810 04 05-00 | Washer Lock Hvy Hlcl Spr 5/16                                         |
| 72            | 871 07 05-12 | Screw Hexhd Cap 5/16-18x 3/4                                          |
| 78            | 817 06 06-20 | Screw 3/8-16x1-1/4                                                    |
| 81            | 873 51 04-00 | Nut Keps Hex 1/4-20 Unc                                               |
| 112           | 532 12 49-52 | Bushing                                                               |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
MOWER DECK

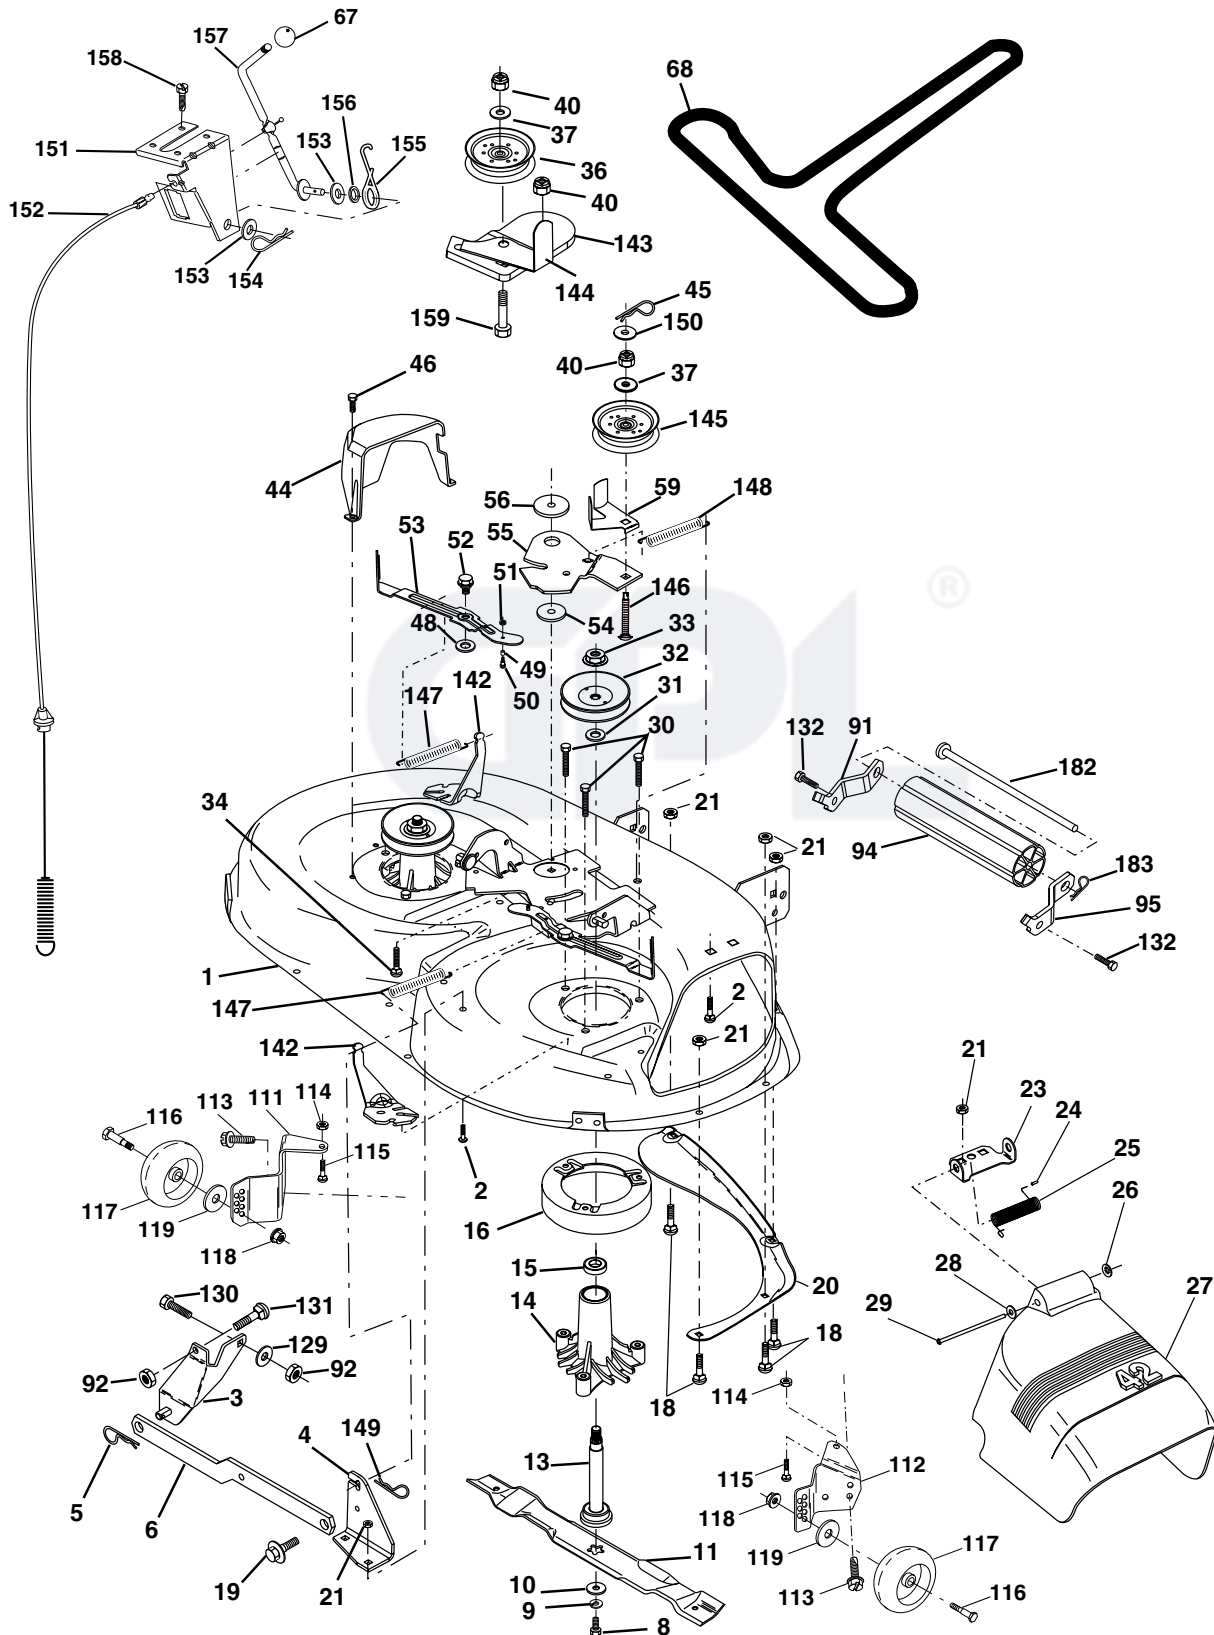

# REPAIR PARTS

**TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63**  
**MOWER DECK**


| KEY NO. | PART NO.            | DESCRIPTION                    | KEY NO. | PART NO.            | DESCRIPTION                                                                               |
|---------|---------------------|--------------------------------|---------|---------------------|-------------------------------------------------------------------------------------------|
| 1       | 532 16 58-92        | Deck Asm MWR 42"weldment       | 67      | 532 10 69-32        | Knob Rd 3/8-16 Plstc Thds Blk                                                             |
| 2       | 872 14 05-06        | Bolt Rdhd Sqnk 5/16-18unc X3/4 | 68      | <b>532 18 02-15</b> | V-Belt Secondary                                                                          |
| 3       | 532 13 80-17        | Bracket Asm Fr Sway Bar 38/42  | 91      | 532 18 05-32        | Bracket Roller Nose LH                                                                    |
| 4       | 532 16 54-60        | Bracket Asm Deck 42"sway Bar   | 92      | 873 80 06-00        | Nut Lock Hex W/Ins 3/8-16 Unc                                                             |
| 5       | 532 12 46-70        | Retainer Spring                | 94      | 532 13 22-64        | Roller Nose 38 & 42                                                                       |
| 6       | 532 17 80-24        | Bar Sway Deck                  | 95      | 532 18 05-33        | Bracket Roller Nose RH                                                                    |
| 8       | 532 85 08-57        | Bolt 3/8 - 24 X 1.25 Gr 8      | 111     | 532 17 92-92        | Bracket Wheel Gauge LH 42" Deck                                                           |
| 9       | 810 03 06-00        | Washer Lock Hvy 3/8            | 112     | 532 17 92-93        | Bracket Gauge Wheel RH 42" Deck                                                           |
| 10      | 532 14 02-96        | Washer Hard Blade Mower        | 113     | 817 06 05-10        | Screw 3/8-16 x .625                                                                       |
| 11      | 532 13 84-98        | Blade Mower                    | 114     | 873 51 05-00        | Nut Keps 5/16-18 UNC                                                                      |
| 13      | 532 13 76-45        | Shaft Asm W/lower Bearing      | 115     | 872 11 05-05        | Bolt Carriage 5/16-UNC x 1/2                                                              |
| 14      | 532 12 87-74        | Housing Mandrel Vented         | 116     | 532 12 48-42        | Bolt Shoulder                                                                             |
| 15      | 532 11 04-85        | Bearing Ball Mandrel           | 117     | 532 16 57-46        | Wheel Gauge Blk                                                                           |
| 16      | 532 17 44-93        | Stripper Mower                 | 118     | 873 93 06-00        | Nut Centerlock 3/8-16 UNC                                                                 |
| 18      | 872 14 05-05        | Bolt Rdhd Sqnk 5/16-18 X 5/8   | 119     | 819 12 14-14        | Washer 3/8 x 7/8 x 14 Ga.                                                                 |
| 19      | 532 13 28-27        | Bolt Shoulder                  | 129     | 819 13 13-12        | Washer 13/32 x 13/16 x 12 Ga.                                                             |
| 20      | 532 15 97-70        | Baffle Vortex 42               | 130     | 874 78 06-16        | Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5                                                         |
| 21      | 873 68 05-00        | Nut Crownlock 5/16-18 UNC      | 131     | 872 14 06-08        | Bolt Rdhd Sqnk 3/8-16 x 1                                                                 |
| 23      | <b>532 17 75-63</b> | Bracket Deflector Mower 42"    | 132     | 817 06 06-12        | Screw 3/8-16 x .75                                                                        |
| 24      | 532 10 53-04        | Cap Sleeve 80x 112 Blk Mower   | 142     | 532 16 58-90        | Arm Spring Brake Mower                                                                    |
| 25      | 532 12 37-13        | Spring Torsion Deflector 2 52  | 143     | 532 15 71-09        | Bracket arm Idler 42"                                                                     |
| 26      | 532 11 04-52        | Nut Push Phos & Oil            | 144     | 532 15 86-34        | Keeper Belt 42" Clutch Cable                                                              |
| 27      | 532 17 18-59        | Shield Deflector Mower 42" Blk | 145     | 532 16 58-88        | Pulley Idler Flat                                                                         |
| 28      | 819 11 10-16        | Washer 11/32 X 5/8 X 16 Ga     | 146     | 532 17 19-77        | Bolt Carriage Idler                                                                       |
| 29      | 532 13 14-91        | Rod Hinge 42"6 75 Wlg          | 147     | <b>532 17 97-48</b> | Spring Extension                                                                          |
| 30      | 532 17 39-84        | Screw Thdrol Washer Head       | 148     | 532 16 90-22        | Spring Return Idler                                                                       |
| 31      | 532 12 99-63        | Washer Spacer Mower Vented     | 149     | 532 16 58-98        | Retainer Spring Yellow                                                                    |
| 32      | 532 15 35-35        | Pulley Mandrel 42/44/50        | 150     | 819 09 12-16        | Washer 9/32 x 3/4 x 16 Ga.                                                                |
| 33      | 532 17 83-42        | Nut 9/16 Toplock Flng Oil Dip  | 151     | 532 16 96-70        | Bracket Clutch Cable                                                                      |
| 34      | 872 11 06-14        | Bolt Rdhd 3/8-16uncx1-3/4 Gr5  | 152     | <b>532 18 15-55</b> | Cable Clutch 42"                                                                          |
| 36      | 532 13 14-94        | Pulley Idler Flat 3 060        | 153     | 532 16 96-74        | Washer Flat 3/8" Type B                                                                   |
| 37      | 819 13 13-16        | Washer 13/32 X 13/16 X 16      | 154     | 532 16 96-75        | Spring Retainer                                                                           |
| 40      | 873 68 06-00        | Nut Crownlock 3/8-16 UNC       | 155     | 532 16 96-71        | Spring Retention Cltch Cab                                                                |
| 44      | 532 14 00-88        | Guard Mandrel LH Black         | 156     | 532 16 96-72        | Spacer Clutch Cable                                                                       |
| 45      | 532 12 47-88        | Spring Retainer 1" Zinc/cad    | 157     | 532 16 96-69        | Rod Clutch Cable 3/8"                                                                     |
| 46      | 532 13 77-29        | Screw Hex Thd Cut 1/4-20x5/8 T | 158     | 817 72 04-08        | Screw Hex Thd Cut 1/4-20 x 1/2                                                            |
| 48      | 532 13 39-44        | Washer Hardened Smaller        | 159     | 872 14 06-14        | Bolt Rdhd Sqn 3/8-16 UNC x 1-3/4                                                          |
| 49      | 532 17 42-84        | Roller Asm Cam Follower 42"dec | 182     | 532 17 91-26        | Rod Roller Nose Standard                                                                  |
| 50      | 532 13 13-40        | Bolt Shldr 10-24 Zinc Gr 5 42" | 183     | 532 16 35-52        | Retainer Spring                                                                           |
| 51      | 532 06 91-80        | Nut Lock #10-24 Unc            | --      | 532 13 07-94        | Mandrel Asm Service (Includes Housing, Shaft and Shaft Hardware Only-Pulley Not Included) |
| 52      | 532 13 98-88        | Bolt Shoulder 5/16-18 Unc Blkz | --      | <b>532 18 13-85</b> | Replacement Mower, Complete                                                               |
| 53      | 532 13 18-45        | Arm Asm Pad Brake              |         |                     |                                                                                           |
| 54      | 532 13 39-43        | Washer Hardened                |         |                     |                                                                                           |
| 55      | 532 15 50-46        | Arm Idler 42"mower LT/YT       |         |                     |                                                                                           |
| 56      | 532 16 57-23        | Spacer Retainer Mower          |         |                     |                                                                                           |
| 59      | 532 14 10-43        | Guard TUV Idler                |         |                     |                                                                                           |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm



# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
MOWER LIFT

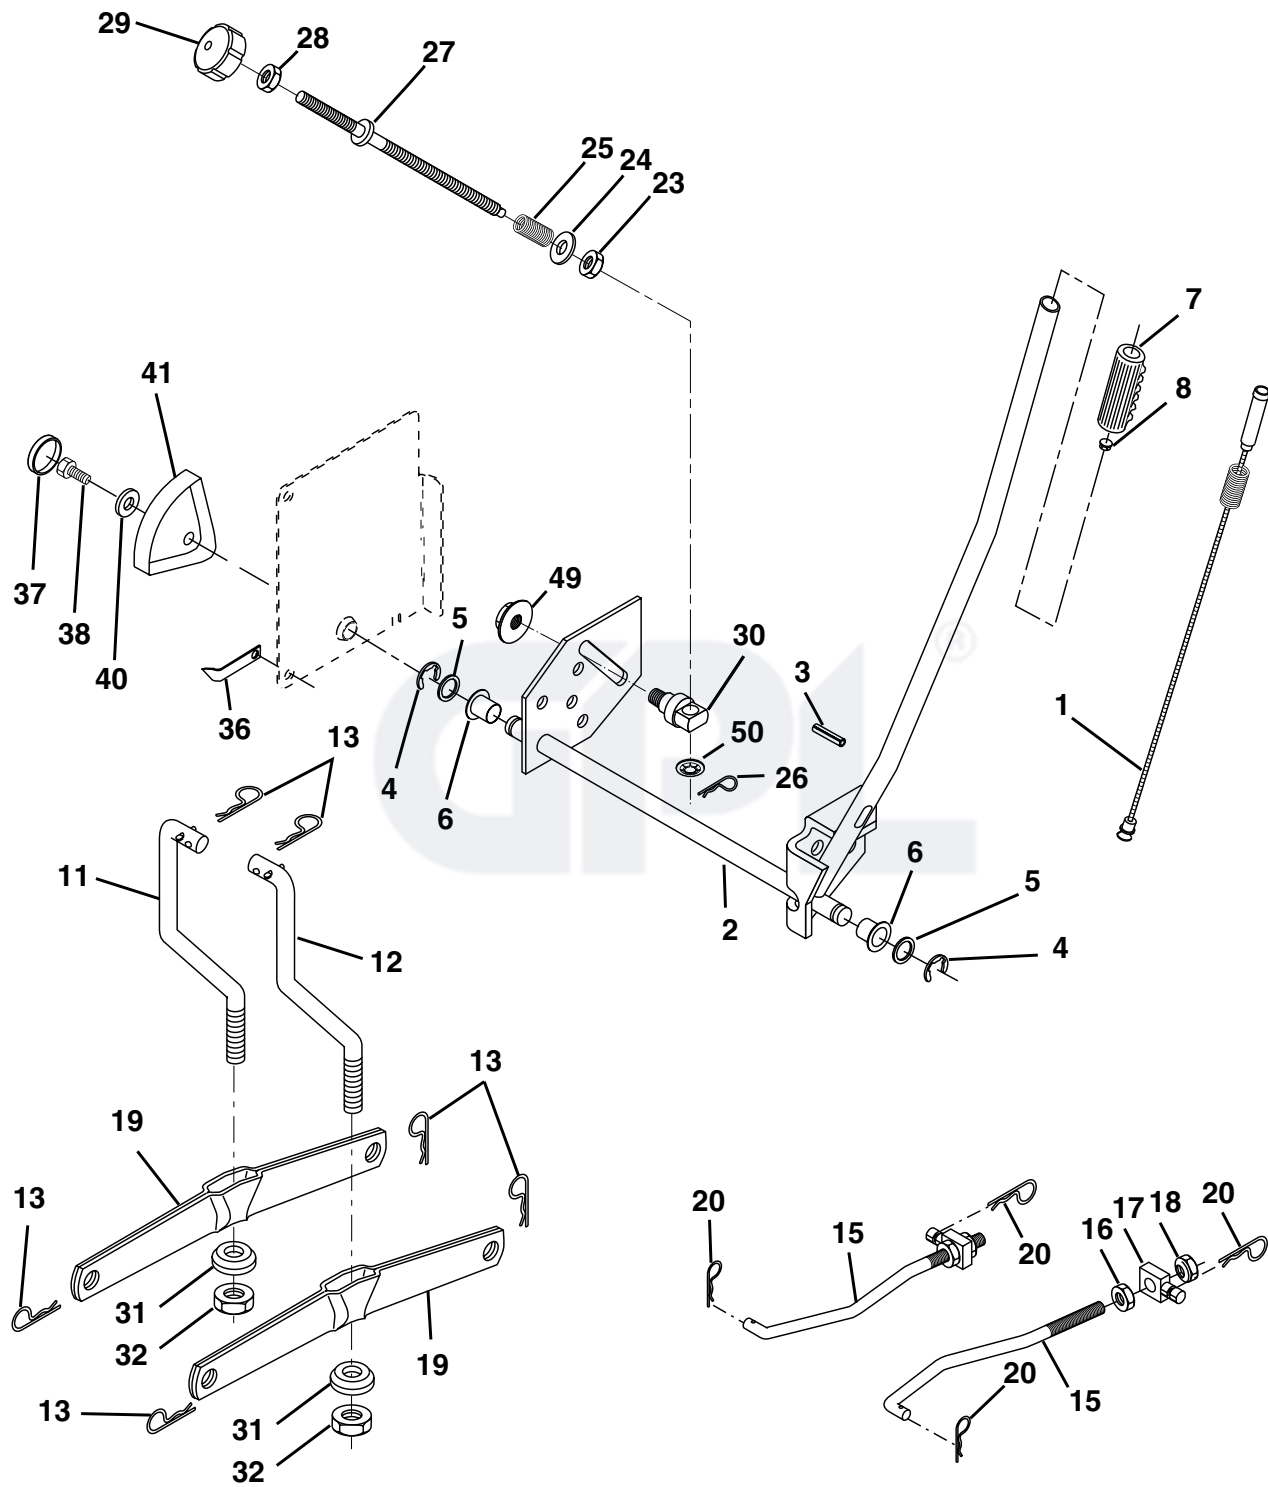




# REPAIR PARTS

TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63  
MOWER LIFT

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 1       | 532 15 94-60 | Wire Asm Inner W/plunger 17 32 |
| 2       | 532 15 94-71 | Shaft Asm Lift LH Inf Hgt P/L  |
| 3       | 532 10 57-67 | Pin Groove 1 500 Zinc          |
| 4       | 812 00 00-02 | E Ring #5133-62                |
| 5       | 819 21 16-21 | Washer 21/32 X 1 X 21 Ga       |
| 6       | 532 12 01-83 | Bearing Nylon Blk 629 Id       |
| 7       | 532 12 56-31 | Grip Handle                    |
| 8       | 532 12 45-26 | Button Plunger                 |
| 11      | 532 13 98-65 | Link Lift LH                   |
| 12      | 532 13 98-66 | Link Lift RH                   |
| 13      | 532 12 46-70 | Retainer Spring                |
| 15      | 532 17 32-88 | Link Front                     |
| 16      | 873 35 08-00 | Nut Jam Hex 1/2-13 Unc         |
| 17      | 532 17 56-89 | Trunnion Blk Zinc              |
| 18      | 873 80 08-00 | Nut Lock W/wsh 1/2-13unc       |
| 19      | 532 13 98-68 | Arm Suspension Rear            |
| 20      | 532 16 35-52 | Retainer Spring                |
| 23      | 532 11 08-07 | Nut Special                    |
| 24      | 819 13 10-16 | Washer 13/32 X 5/8 X 16 Ga     |
| 25      | 532 12 48-74 | Spring 2-1/8"                  |
| 26      | 532 16 94-84 | Retainer Clip                  |
| 27      | 532 12 69-71 | Rod Adj Lift Zinc 7 49 Wrk Lg  |
| 28      | 873 35 06-00 | Nut Hex Jam 3/8-16 Unc         |
| 29      | 532 13 80-57 | Knob Inf 3/8-16 Unc Blk W/sym  |
| 30      | 532 15 02-33 | Trunnion Inf Height            |
| 31      | 532 16 98-65 | Bearing pvt. Lift              |
| 32      | 873 54 06-00 | Nut Crownlock 3/8-24           |
| 36      | 532 15 50-97 | Pointer pnt Height Ind.        |
| 37      | 532 12 39-35 | Plug hole Blk 1.485/1.515 Dia  |
| 38      | 817 06 05-16 | Screw 5/16-18 x 1 Smgml Tap/R  |
| 40      | 819 11 24-10 | Washer 11/32 x 1-1/2 10 Ga     |
| 41      | 532 15 50-98 | Indicator Height               |
| 49      | 532 14 52-12 | Nut Hex Flange Lock            |
| 50      | 532 11 04-52 | Push Nut                       |


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YT155 (HEYT155L) PRODUCT NO. 954 17 00-63 SCHEMATIC

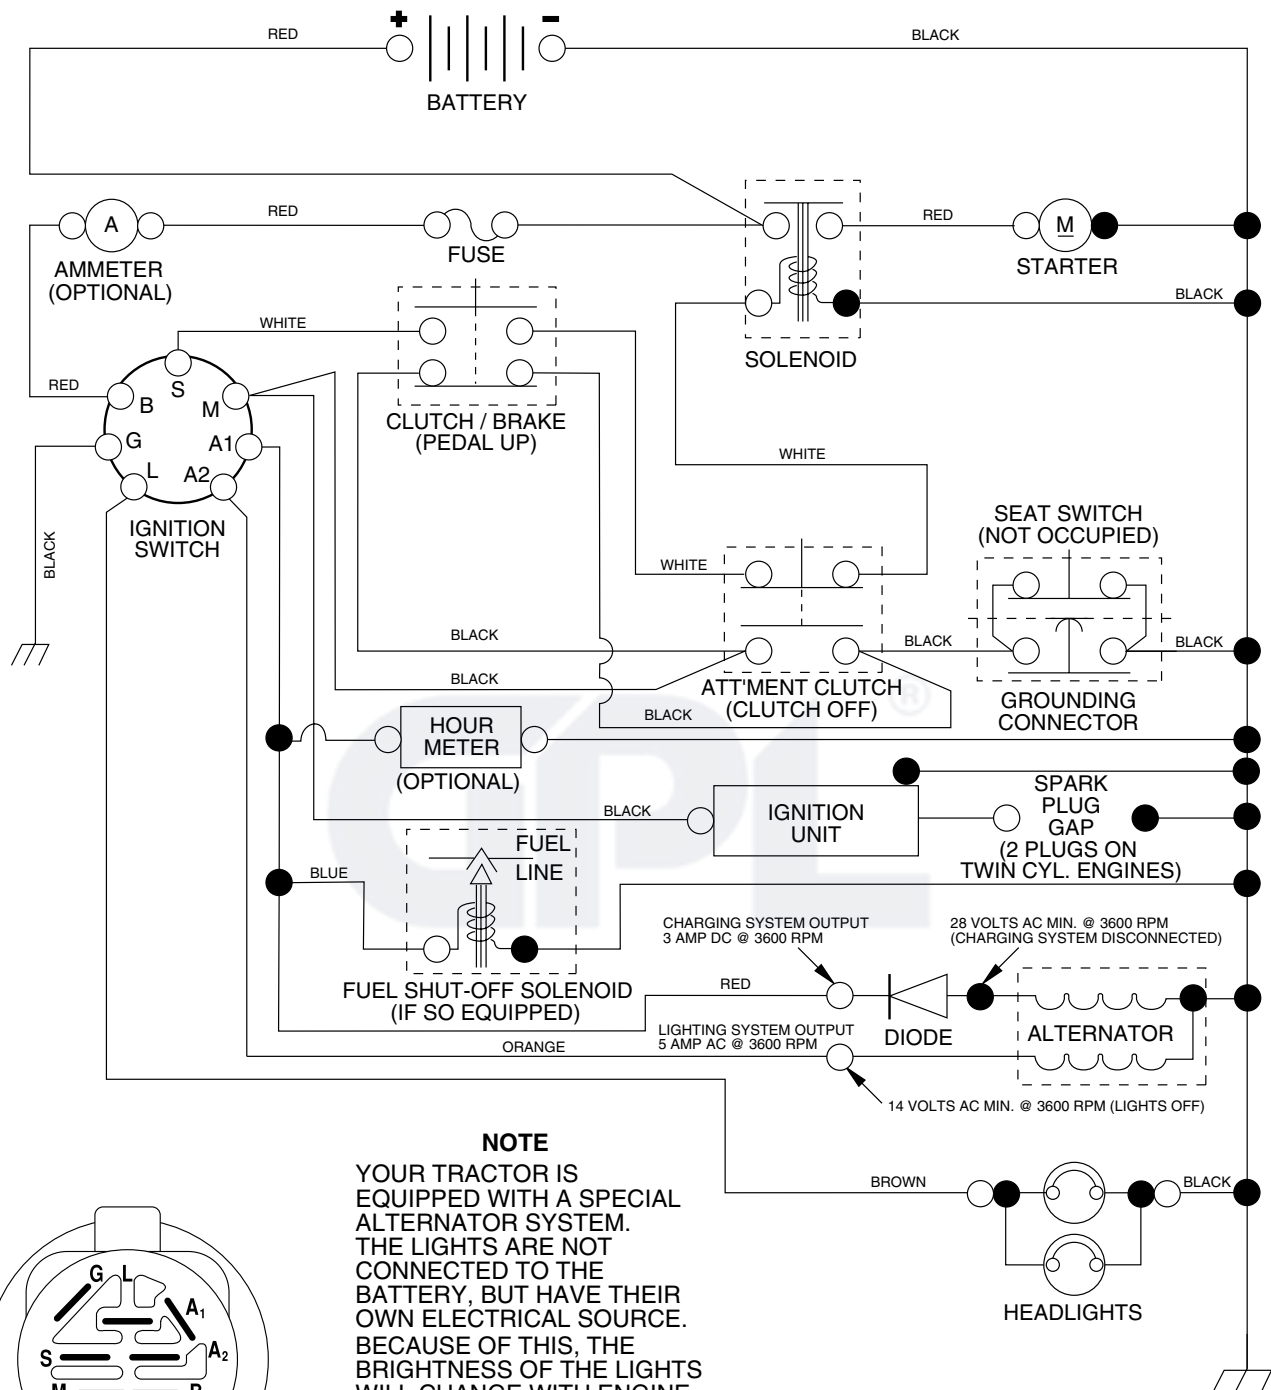

## NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

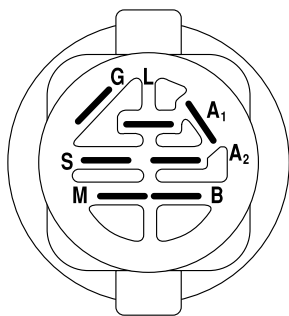

IGNITION SWITCH

| POSITION  | CIRCUIT    | "MAKE" |
|-----------|------------|--------|
| OFF       | M+G+A1     | NONE   |
| RUN/LIGHT | B+A1       | A2+L   |
| RUN       | B+A1       | NONE   |
| START     | B + S + A1 | NONE   |

## WIRING INSULATED CLIPS

**NOTE:** IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS