

ILLUSTRATED PARTS LIST


MODEL NUMBER R 53SV

PRODUCT NUMBER 961 41 01-93

MFG. ID. NUMBER 96141019306



HUSQVARNA ROTARY LAWN MOWER - - MODEL NO. R 53SV (96141019306) PRODUCT NO. 961 41 01-93

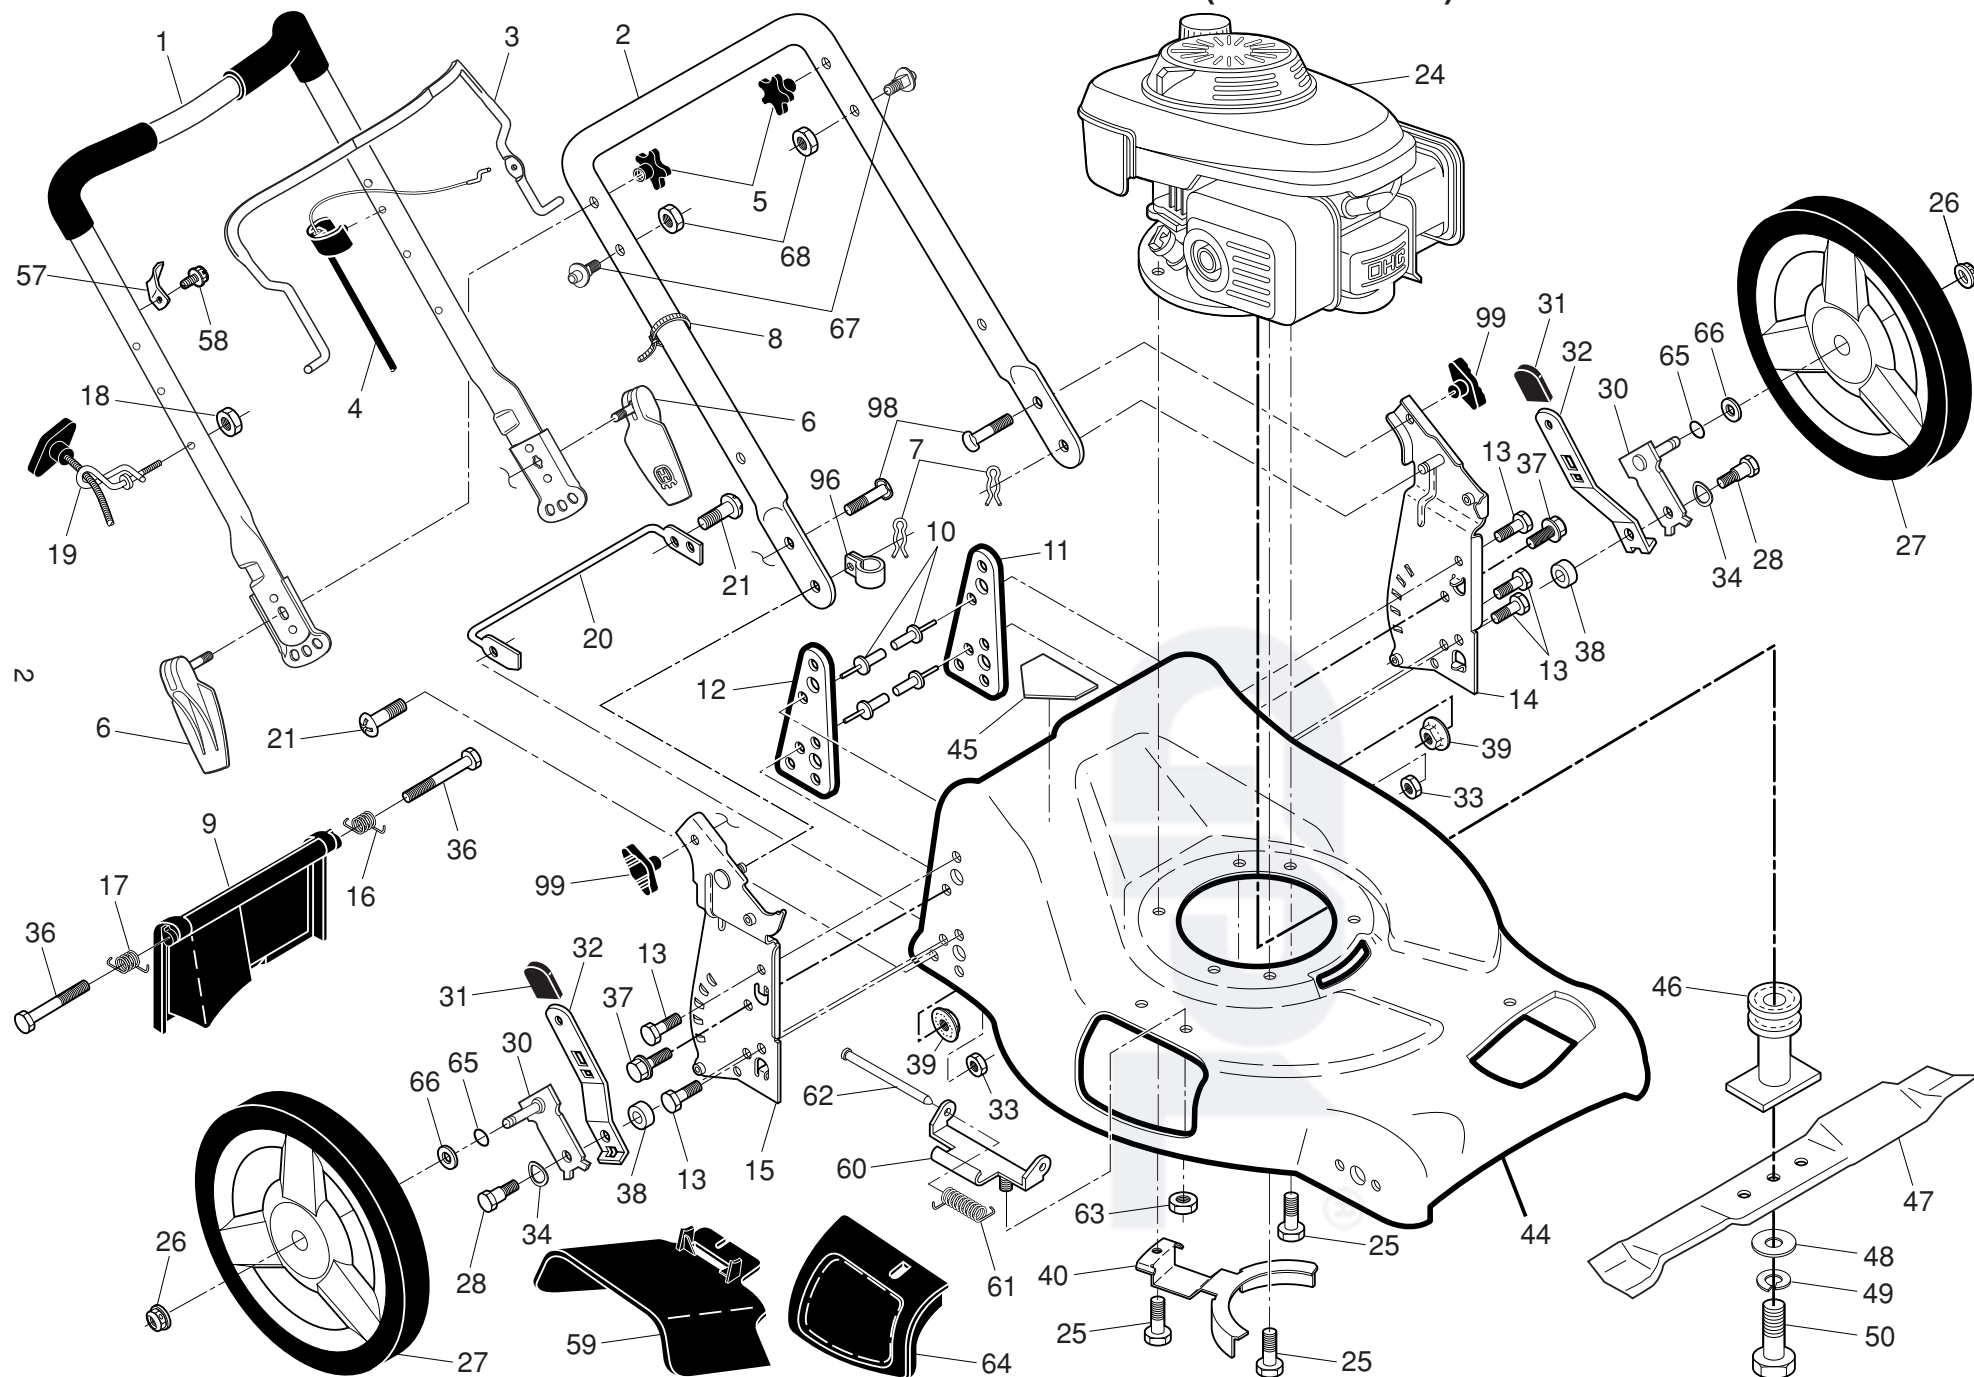


HUSQVARNA ROTARY LAWN MOWER - - MODEL NO. **R 53SV** (96141019306) PRODUCT NO. 961 41 01-93

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 42 05-77	Upper Handle (Includes Foam Grip)	36	532 18 41-93	Bolt
2	532 43 97-19	Lower Handle	37	874 78 05-12	Thread Cutting Screw w/Sems 5/16-18 x 3/4
3	532 42 68-12	Control Bar	38	532 40 16-29	Spacer
4	532 41 53-50	Engine Zone Control Cable	39	532 15 53-77	Nut, Hex, Flanged 5/16-18
5	532 18 23-98	Knob, Handle, Star	40	532 43 50-59	Belt Keeper
6	532 43 06-79	Knob, Handle, Quick-Adjust	44	532 40 80-16	Lawn Mower Housing (Includes Key Numbers 10, 11, 12 and 45)
7	532 05 17-93	Hairpin Cotter	45	532 18 21-66	Danger Decal
8	532 06 64-26	Wire Tie	46	532 43 22-79	Blade Adapter / Pulley
9	532 40 69-85	Rear Door Assembly	47	532 19 93-77	Blade 21"
10	532 12 84-15	Pop Rivet	48	532 85 10-74	Hardened Washer
11	532 41 05-40	Support Bracket, LH	49	532 85 02-63	Helical Washer 3/8-24 x 1-3/8 Grade 8
12	532 41 05-42	Support Bracket, RH	50	532 85 10-84	Hex Head Machine Screw 3/8-24 x 1-3/8 Grade 8
13	817 06 04-10	Screw 1/4-20 x 5/8	57	532 43 00-34	Upstop Bracket
14	532 43 45-50	Handle Bracket Assembly, LH	58	532 17 88-48	Screw, Hex Washer Head #10-16 x 5/8
15	532 43 45-49	Handle Bracket Assembly, RH	59	532 18 55-82	Discharge Deflector
16	532 40 54-17	Spring, Rear Door, LH	60	532 17 57-35	Hinge Bracket Assembly
17	532 40 54-18	Spring, Rear Door, RH	61	532 19 30-00	Spring, Hinge
18	532 13 20-04	Locknut, Hex 1/4-20	62	532 17 56-50	Rod, Hinge
19	532 19 47-88	Rope Guide	63	873 80 04-00	Locknut, Hex 1/4-20
20	532 43 61-19	Foot Guard, C.E.	64	532 18 55-76	Mulcher Door
21	817 49 04-16	Screw, Self-Tapping, Hex Head 1/4-20 x 1/2	65	532 19 74-80	O-Ring
24	- - -	Engine, Honda, Model Number GCV160-AS3H2 (order parts from engine manufacturer)	66	532 08 83-48	Washer, Flat
25	532 15 04-06	Hex Head Thread Rolling Screw 3/8-16 x 1-1/8	67	532 19 92-55	Stud
26	532 40 91-49	Hex Flange Nut	68	532 75 11-53	Nut, Hex
27	532 41 08-15	Wheel & Tire Assembly, Rear, 12"	96	532 19 79-91	Clip, Cable
28	532 40 16-38	Shoulder Bolt 5/16-18 x .33	98	872 25 05-05	Bolt, Carriage
30	532 41 31-41	Axle Arm Assembly, Rear	99	532 19 19-38	Knob, Handle, Standard
31	532 70 10-37	Selector Knob	--	532 18 21-91	Decal, Warning (not shown)
32	532 40 98-89	Selector Spring	--	532 41 88-34	Operator's Manual, European
33	873 80 05-00	Nut, Hex 5/16-18	--	532 41 88-31	Operator's Manual, Scandinavian
34	532 40 16-30	Washer, Curved, Cylindrical	--	532 41 88-33	Operator's Manual, East Bloc
			--	532 41 88-32	Operator's Manual, Baltic

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.

HUSQVARNA ROTARY LAWN MOWER - - MODEL NO. R 53SV (96141019306) PRODUCT NO. 961 41 01-93

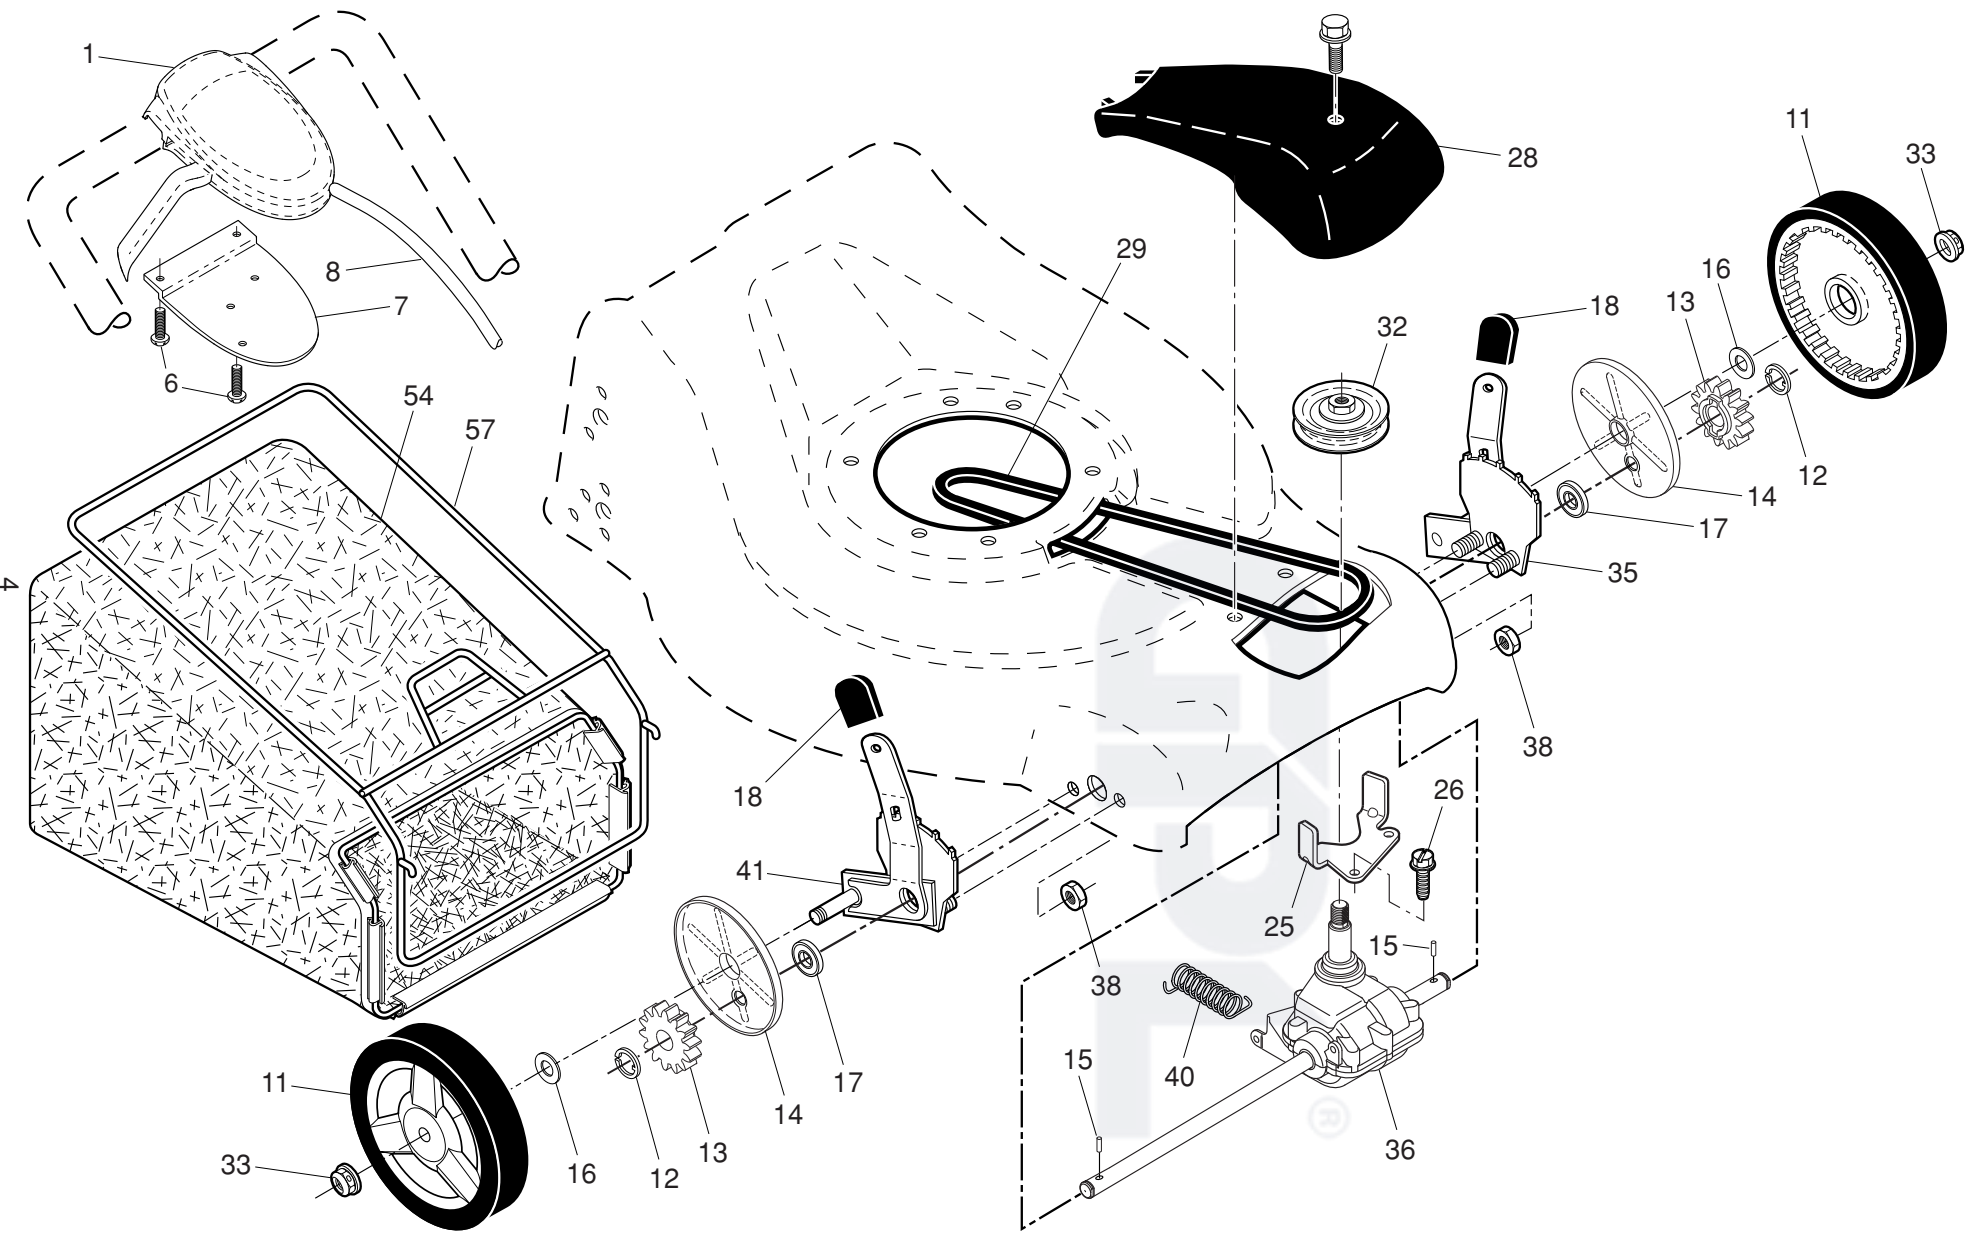

HUSQVARNA ROTARY LAWN MOWER - - MODEL NO. R 53SV (96141019306) PRODUCT NO. 961 41 01-93

KEY NO.	PART NO.	DESCRIPTION
1	532 42 56-61	Drive Control Assembly
6	532 18 16-98	Screw
7	532 40 07-23	Mounting Bracket, Drive Control
8	532 40 62-59	Cable, Drive Control
11	532 41 10-81	Wheel & Tire Assembly
12	812 00 00-58	E-Ring
13	532 40 38-49	Pinion
14	532 18 94-03	Dust Cover
15	532 40 48-45	Pawl, Drive
16	532 06 77-25	Washer 1/2 x 1-1/2 x .134
17	532 19 10-39	Bearing, Wheel Adjuster
18	532 70 10-37	Selector Knob
25	532 43 17-11	Belt Keeper
26	532 16 34-09	Screw, Hi-Lo Thread #12 x 5/8

KEY NO.	PART NO.	DESCRIPTION
28	532 43 26-64	Drive Cover Assembly (Includes Mounting Screw and Pushnut)
29	532 19 41-49	V-Belt
32	532 44 32-62	Pulley, Drive
33	532 40 91-48	Locknut, Hex
35	532 43 84-85	Kit, Wheel Adjuster, LH (Includes Knob and Bearing)
36	532 40 48-33	Gear Case Assembly, Complete
38	873 80 04-00	Locknut 1/4-20
40	532 40 65-58	Spring
41	532 43 84-86	Kit, Wheel Adjuster, RH (Includes Knob and Bearing)
54	532 40 19-03	Grassbag Assembly
57	532 41 19-50	Frame, Grassbag

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.